
FLEXSTEEL®

Power Reclining Loveseat with Console & Power Headrests

IMPORTANT NOTE


Read these instructions carefully and familiarize yourself with each procedure before assembling the furniture. Check that you have all the component parts and familiarize yourself with each part before proceeding.

Take all the fittings out of the plastic bad and separate them into groups. Ensure you have enough space to lay out all the parts before assembly. To prevent damage to the parts, we recommend that you assemble the unit on a soft, level surface.

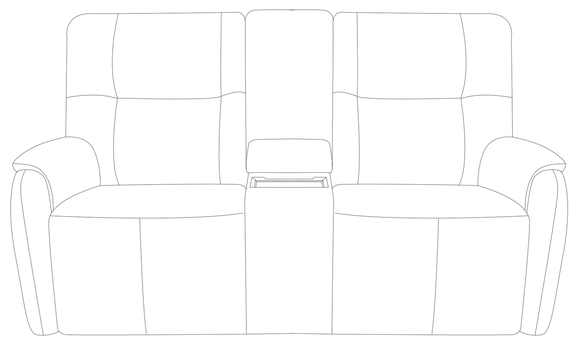


Part List

A. Back
2 pieces

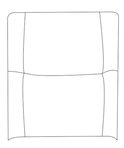

B. Seat
1 piece

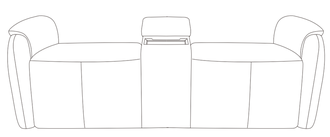

C. Sofa Transformer
(90° Elbow Plug)
1 piece



D. Console Back
1 piece




E. Wireless Charge Transformer
(Straight Plug)
1 piece



F. Bolts
2 pieces



G. Handle
2 pieces



H. Washer
2 pieces



Assembly Instructions

STEP 1

Detach the Transformer (C E) and Console Back (D) from the bottom of the seat. (See Figure 1.)

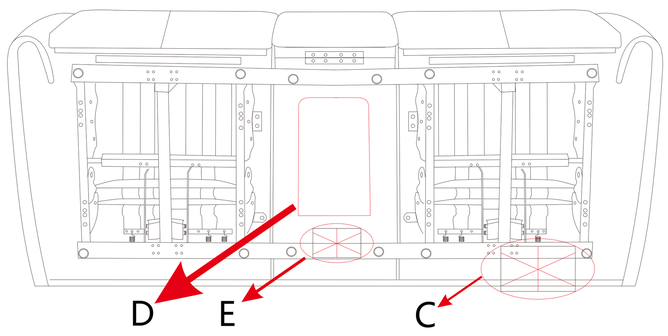


Figure 1

STEP 2

Detach the hardware (F G H) from Console Back (D), then fit the Bolts (F) in the nuts of console back. Attach the console back to console, fix the bolts tightly by handle with washer.
Attach the Backs (A) to the Seat (B). Ensure the latches fit well.
(See Figure 2.)

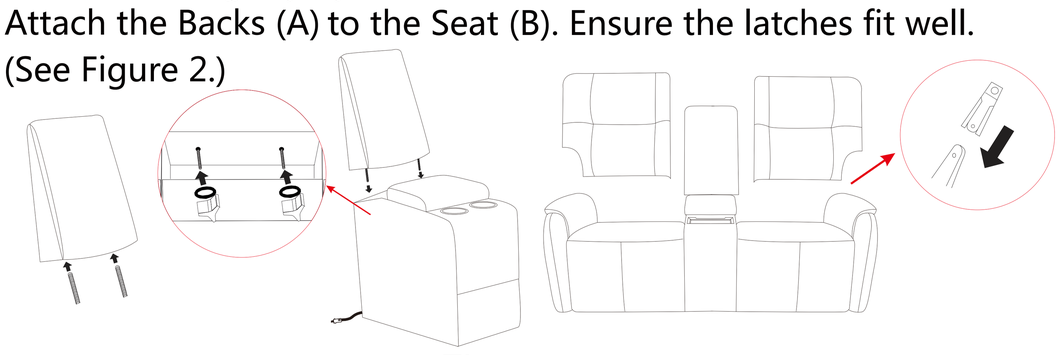


Figure 2

STEP 3

Zip the black fabric on bottom of Back (A) with back of Seat (B). (See Figure 3.)

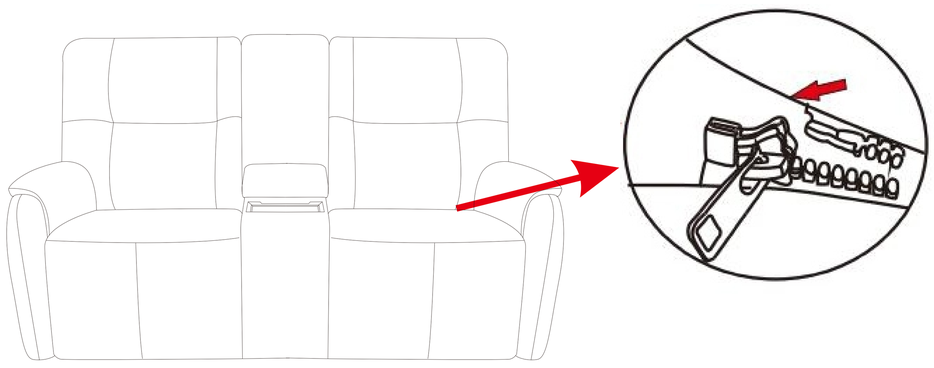


Figure 3

STEP 4

Flip up the back flap, connect the headrest cable. (See Figure 4.)

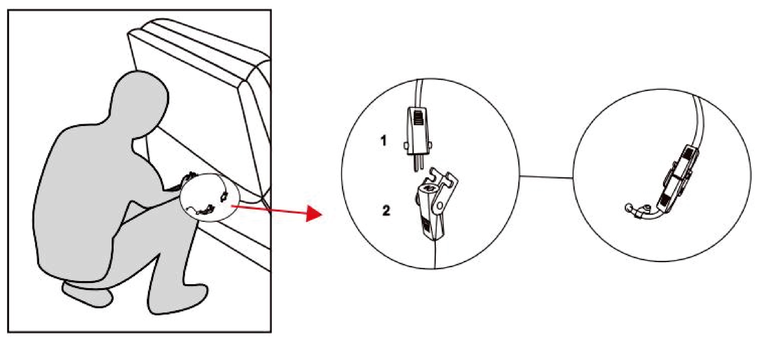


Figure 4

STEP 5

Connect the wireless charge cable to Transformer (E).
Plug the Transformer (C) into the power port at the bottom right.
Plug the Transformer (C E) into a nearby outlet. (See Figure 5.)

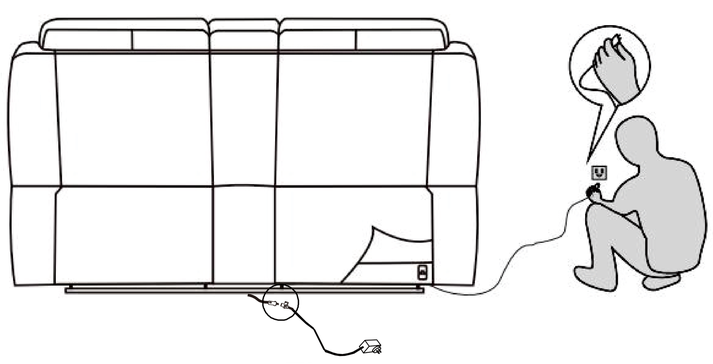


Figure 5

STEP 6

Fasten the back flaps to the bottom of the furniture. (See Figure 6.)

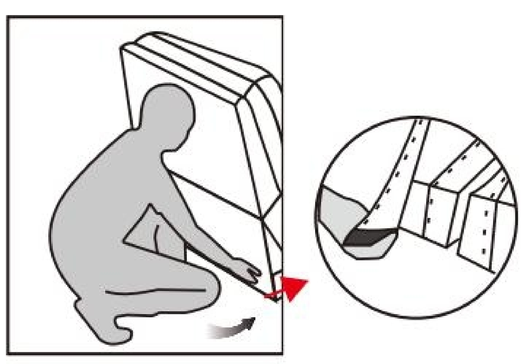


Figure 6

Disassembly Instructions

Unzipping the zip between Back (A) and Seat (B), then disconnect the headrest cable.
Pull up the spring leaf in bracket, then lift Back (A) up. (See Figure 7.)

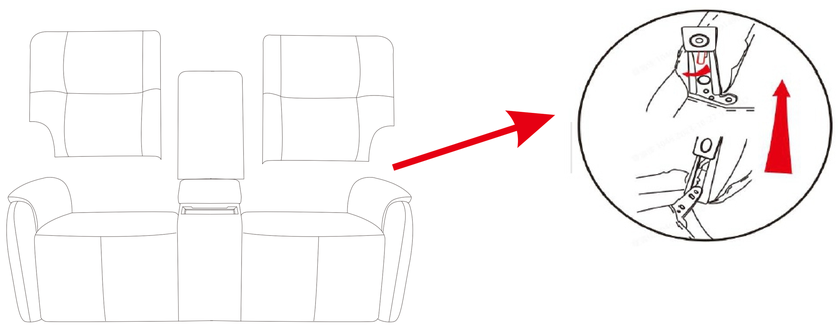


Figure 7

IMPORTANT NOTE

- To avoid any risk of suffocation to children or pets, dispose of all plastic bags immediately.
- To ensure proper performance, occasionally check for loose hardware and tighten as needed.
- If the reclining functions are not working properly, check for loose cable connections before contacting the retailer.