
INSTALLATION INSTRUCTIONS

Wall Mount Tub Filler Rough Valve

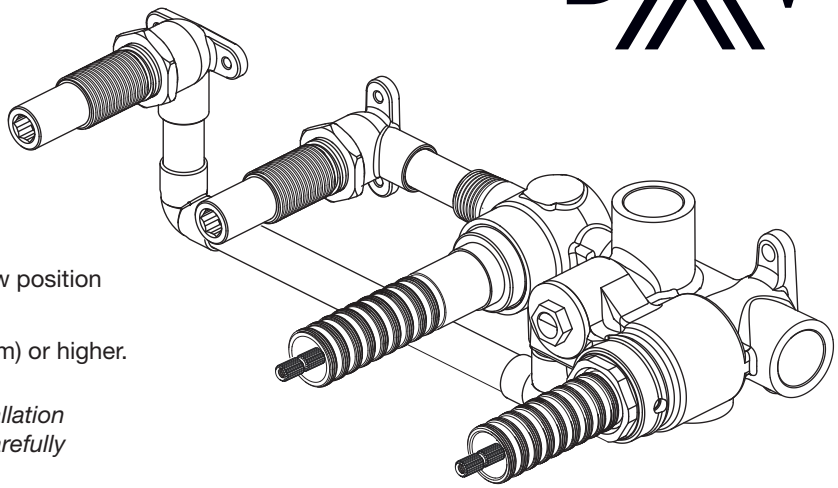

Model: D35000981.191

*If designated with an “S”, the valve offers shared flow position between adjacent outlets.

For use with shower heads rated at 6.8 L/min (1.8 gpm) or higher.


Thank you for selecting DXV. To ensure that your installation proceeds smoothly, please read these instructions carefully before you begin.

RECOMMENDED TOOLS AND MATERIALS

Most of the procedures require the use of common tools and materials, which are available from hardware and plumbing supply stores. It is essential that the tools and materials be on hand before work has begun.



Channel Locks



Tubing Cutter



Adjustable Wrench




Teflon Tape



Flat Blade Screwdriver (provided)

ROUGHING-IN DIMENSIONS:

• Connections are: 1/2" NPT

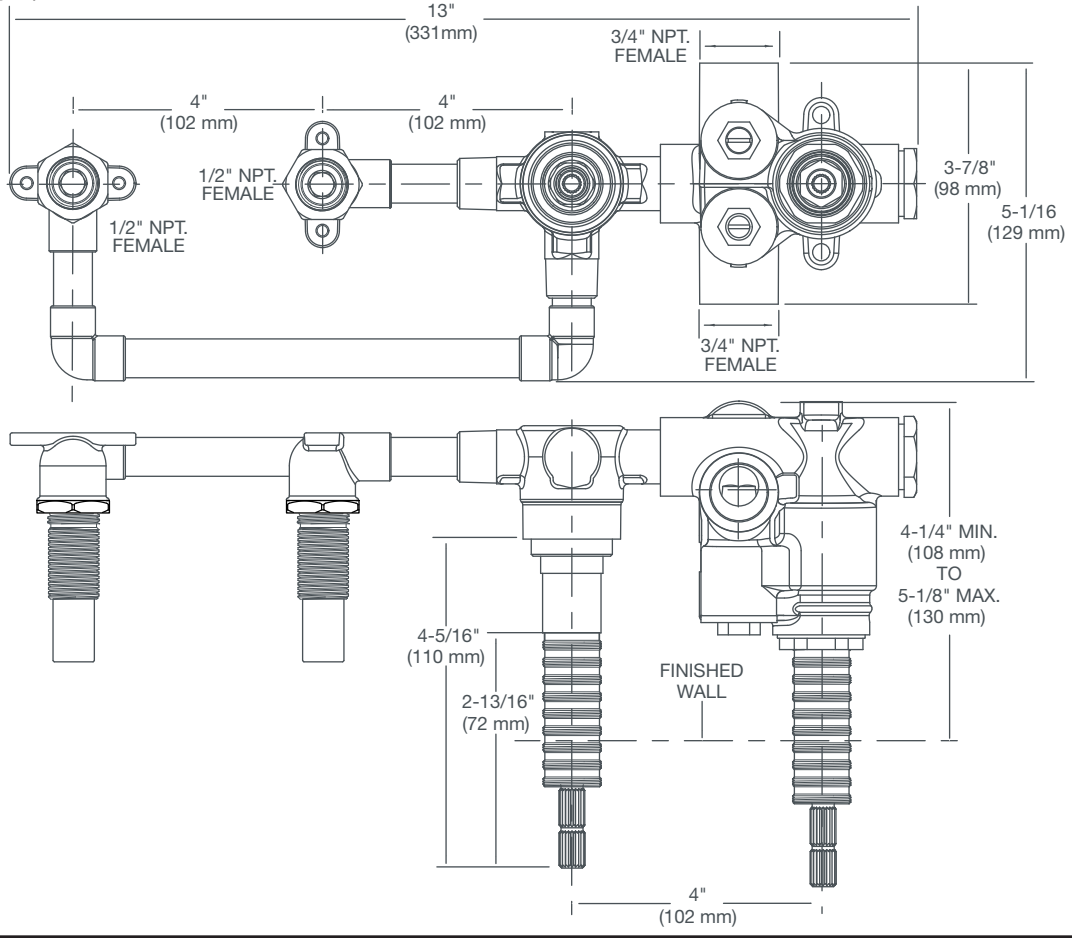

SAVE FOR FUTURE USE


Product names listed herein are trademarks of AS America, Inc.
© AS America, Inc. 2017

M965861 Rev. 1.0 (11/17)

1 ROUGHING-IN THE VALVE

CAUTION **DO NOT SOLDER NEAR THE VALVE. DAMAGE TO THE SEALS MAY OCCUR. DO NOT SEAL ANY OUTLETS. THIS DIVERTER CANNOT BE USED AS A STOP VALVE.**

- Prepare water supplies per ROUGHING-IN DIMENSIONS. Make sure the finished wall is between the minimum and maximum rough dimension.
- Install VALVE at indicated height and depth. Make sure the “hot inlet” (RED) is on the lower side and the “cold inlet” (BLUE) is on the upper side.
- Connect the hot and cold water supplies. Assemble all connecting pipes. Flush lines to remove any dirt. Connections are 1/2" NPT.
- Assemble the connection pipes to the MIXED OUTLETS of the VALVE.
- If the CHECK STOPS **(1,2)** were removed during installation, ensure the hot and cold CHECK STOPS **(1,2)** are not reversed. The hot CHECK STOP **(1)** has a red top and the cold CHECK STOP **(2** has a blue top.
- To flush lines, remove the CHECK STOPS **(1,2)** and run water. If desired, the TEMPERATURE CONTROL UNIT can be removed. Reinstall CHECK STOPS **(1,2)**.
- Beware of Freezing. No water should remain in the MIXING VALVE if freezing is a possibility. Remove the CHECK STOP **(1,2)** to completely drain the MIXER UNIT **(1)**.

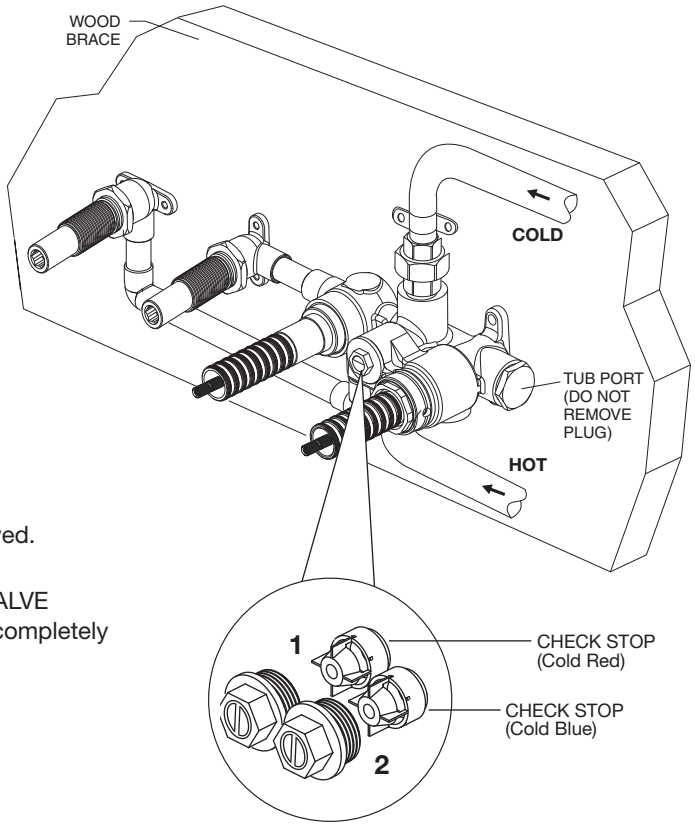

2 INNER AND OUTER SPINE ADJUSTMENT

Note: Inner Spline and Outer Tube should only be cut after they’re removed from the valve.


1. Mark a position where the outer TUBE **(1)** needs to be cut.Remove by unthreading.

2. After cutting, replace outer TUBE **(1)** by threading it back onto the valve firmly.

3. Mark the position of the inner SPLINE **(2)** and unthread by using a Flat Head Screw Driver (Provided).

4. Cut to the necessary length and install inner Spline back onto the valve.


Note: The inner Spline needs to be replaced in the same rotary position for the handle to be installed in a neutral position.

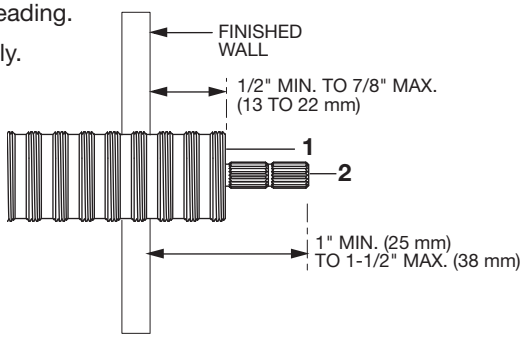

3 ADJUST HOT LIMIT STOP

*By restricting HANDLE rotation and limiting the amount of hot water allowed to mix with the cold, the HOT LIMIT SAFETY STOP **(1)** reduces risk of accidental scalding. To set the maximum hot water temperature of your faucet, all you need to do is adjust the setting on the HOT LIMIT SAFETY STOP **(1)**.*

- Use a flat blade screwdriver to pry free the HOT LIMIT SAFETY STOP **(1)**. Pull forward and rotate counterclockwise one tooth to reduce maximum hot water temperature. The maximum temperature is nominally factory set to 120ºF. The temperature variation is approximately 4ºF per tooth. Always check water temperature maximum before completing the installation.

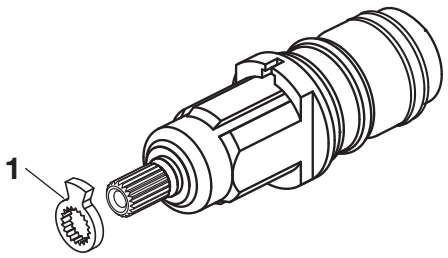


M965861 Rev. 1.0 (11/17)

Wall Mount Tub Filler
Rough Valve

MODEL NUMBER

D35000981.191

1	**M970403-0070A**	HANDLE EXTENSION FOR DIVERTER
2	**M970412-0070A**	NUT CAP FOR DIVERTER
3	**M970420-0070A**	CARTRIDGE FOR DIVERTER
4	**M970415-0070A**	THERMO CARTRIDGE
5	**M970409-0070A**	HANDLE EXTENSION FOR THERMO
6	**M970416-0070A**	CARTRIDGE NUT
7	**M970418-0070A**	CHECK STOP
8	**M970417-0070A**	CHECK VALVE KIT

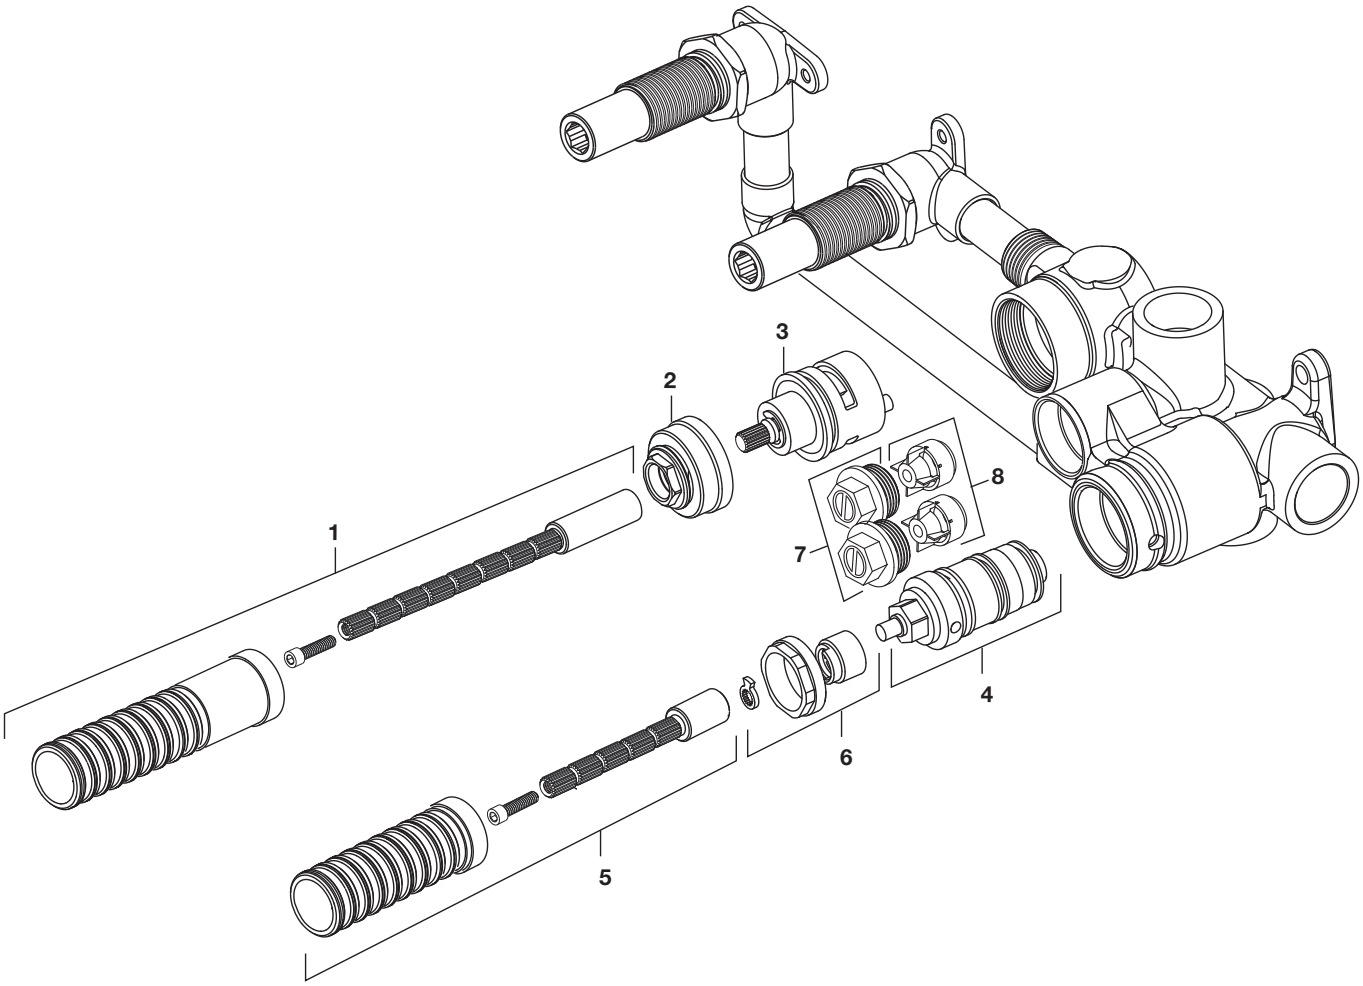

In the United States:
DXV
One Centennial Avenue
Piscataway, New Jersey 08855
Attention: Director of Customer Care

For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 227-2734
www.DXV.com

In Canada:
DXV
5900 Avebury Road
Mississauga, Ontario
L5R 3M3
Canada

Toll Free: 1-800-387-0369
Local: 905-306-1093
Fax: 1-800-395-1498
www.DXV.ca

In Mexico:
DXV
Via Morelos 330
Col. Santa Clara Coatitla
Ecatepec, Estado de México 55540

Toll Free: 01-800-8391200
www.DXV.mx