


SONY®

Wireless Speaker  
Enceinte sans fil

Reference Guide    Guide de référence    Guía de referencia

LinkBuds Speaker    Model, Modèle: YY7863E

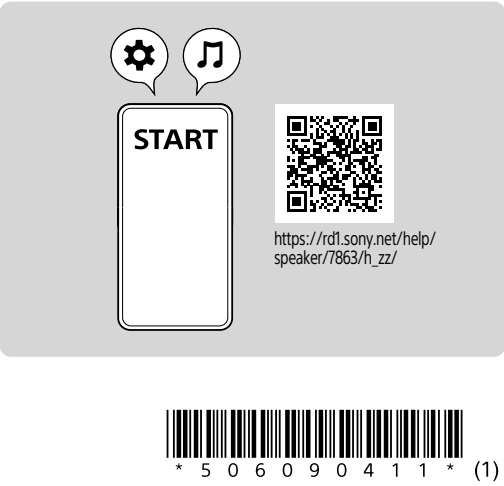

5-060-904-11(1)  
©2024 Sony Corporation  
Printed in China / Imprimé en Chine  
<https://www.sony.net/>

FOR CUSTOMERS IN CANADA (INCLUDING IN THE PROVINCE OF QUEBEC)  
ALL INSTRUCTIONS AND STATEMENTS WHICH ARE NECESSARY FOR  
CANADIAN CUSTOMERS ARE PROVIDED IN ENGLISH AND FRENCH.  
OTHER INSTRUCTIONS AND STATEMENTS NOT PROVIDED IN ENGLISH  
AND FRENCH ARE NOT FOR CANADIAN CUSTOMERS (INCLUDING IN THE  
PROVINCE OF QUEBEC).  
POUR LES CLIENTS AU CANADA (Y COMPRIS DANS LA PROVINCE DE  
QUÉBEC)  
TOUTES LES INSTRUCTIONS ET DÉCLARATIONS NÉCESSAIRES POUR LES  
CLIENTS CANADIENS SONT FOURNIES EN ANGLAIS ET EN FRANÇAIS. LES  
AUTRES INSTRUCTIONS ET ÉNONCÉS NON FOURNIS EN ANGLAIS ET EN  
FRANÇAIS NE SONT PAS DESTINÉS AUX CLIENTS CANADIENS (Y COMPRIS  
AU QUÉBEC).  
PARA CLIENTES EN CANADÁ (INCLUIDA LA PROVINCIA DE QUEBEC)  
TODAS LAS INSTRUCCIONES Y DECLARACIONES NECESARIAS PARA LOS  
CLIENTES CANADIENSES SE PROPORCIONAN EN INGLÉS Y FRANCÉS.  
OTRAS INSTRUCCIONES Y DECLARACIONES NO PROPORCIONADAS EN  
INGLÉS Y FRANCÉS NO ESTÁN DESTINADAS A CLIENTES CANADIENSES  
(INCLUIDA LA PROVINCIA DE QUEBEC).

English    Wireless Speaker

Model: YY7863E

The term "product" in this document refers to the unit or its accessories.

### Owner's Record

Record the model and serial numbers in the spaces provided below and  
store them safely.  
Refer to them whenever you call your Sony dealer regarding this  
product.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

The model and serial numbers to be recorded are located in the  
following places.  
• Model No.: the bottom of the unit  
• Serial No.: the inner surface of the cap on the rear side of the unit



CAUTION: To avoid deterioration of the water-resistant performance,  
make sure that the cap is closed completely when using the unit.

The nameplate and important information concerning safety are  
attached in the following locations:  
• the bottom of the unit

Do not install the product in a confined space, such as a bookcase or  
built-in cabinet.

Do not expose the batteries (battery pack or batteries installed) to  
excessive heat, such as sunshine, fire or the like, for a long time.  
Do not subject the batteries to extreme low temperature conditions that  
may result in overheating and thermal runaway.  
Do not dismantle, open, or shred secondary batteries.  
In the event of a secondary battery leaking, do not allow the liquid to  
come in contact with the skin or eyes. If contact has been made, wash  
the affected area with copious amounts of water and seek medical  
advice.  
Secondary batteries need to be charged before use. Always refer to  
the manufacturer's instructions or product manual for proper charging  
instructions.  
After extended periods of storage, it may be necessary to charge and  
discharge the secondary batteries several times to obtain maximum  
performance.  
Dispose of properly.

**Charging this unit**  
Connect the USB AC adaptor to this unit using the USB Type-C® cable,  
then connect the USB AC adaptor to an AC outlet.

### DISPOSAL OF RECHARGEABLE BATTERIES

You can help preserve our environment by returning your used  
rechargeable batteries to a collection and recycling location nearest  
you.

For more information regarding recycling of rechargeable batteries, visit  
[www.sony.com/ecotrade](http://www.sony.com/ecotrade)

Caution: Do not handle damaged or leaking rechargeable batteries.

#### For customers in the U.S.A.

You are cautioned that any changes or modifications not expressly  
approved in this manual could void your authority to operate this  
unit.

NOTE:  
This unit has been tested and found to comply with the limits  
for a Class B digital device, pursuant to Part 15 of the FCC Rules.  
These limits are designed to provide reasonable protection against  
harmful interference in a residential installation. This unit generates,  
uses, and can radiate radio frequency energy and, if not installed  
and used in accordance with the instructions, may cause harmful  
interference to radio communications.  
However, there is no guarantee that interference will not occur in a  
particular installation. If this unit does cause harmful interference to  
radio or television reception, which can be determined by turning  
the unit off and on, the user is encouraged to try to correct the  
interference by one or more of the following measures:  
• Reorient or relocate the receiving antenna.  
• Increase the separation between the unit and receiver.  
• Connect the unit into an outlet on a circuit different from that to  
which the receiver is connected.  
• Consult the dealer or an experienced radio/TV technician for help.

This unit must not be co-located or operated in conjunction with  
any other antenna or transmitter.

**If you have any questions about this product:**  
**Visit:** <https://www.sony.com/electronics/support>  
**Contact:** Sony Customer Information Service Center at 1-800-222-  
7669

Supplier's Declaration of Conformity  
Trade Name: SONY  
Model: YY7863E  
Responsible Party: Sony Electronics Inc.  
Address: 16535 Via Esprillo, San Diego, CA 92127 U.S.A.  
Telephone Number: 858-942-2230

This device complies with part 15 of the FCC Rules. Operation is  
subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) this device must accept any interference received, including  
interference that may cause undesired operation.

#### For customers in Canada

This unit contains licence-exempt transmitter(s)/receiver(s) that  
comply with Innovation, Science and Economic Development  
Canada's licence-exempt RSS(s). Operation is subject to the  
following two conditions:  
(1) This unit may not cause interference; and  
(2) This unit must accept any interference, including interference  
that may cause undesired operation of the unit.

This unit complies with FCC/ISED radiation exposure limits set forth  
for an uncontrolled environment and meets the FCC radio frequency  
(RF) Exposure Guidelines and RSS-102 of the ISED radio frequency (RF)  
Exposure rules. This unit should be installed and operated keeping the  
radiator at least 20 cm or more away from person's body.

This product has magnet(s) which may interfere with pacemakers,  
programmable shunt valves for hydrocephalus treatment, or other  
medical devices. Do not place this product close to persons who use  
such medical devices. Consult your doctor before using this product if  
you use any such medical device.

Never insert the USB plug when the main unit or charging cable is wet.  
If the USB plug is inserted while the main unit or charging cable is wet,  
a short circuit may occur due to liquid (tap water, seawater, soft drink,  
etc.) or foreign matter on the main unit or charging cable, and cause  
abnormal heat generation or malfunction.

### About the Voice Guidance

#### IMPORTANT

**The voice guidance for this unit is only available in English.**  
The voice guidance can be heard from the unit in the following  
situations:  
• When entering pairing mode: "Pairing"  
• During pairing mode: "Pairing"  
• When pressing the BATTERY button to check the battery power while  
the unit is turned on: "Battery fully charged" / "Battery care mode, fully  
charged, Battery about 90%" / "Battery about 80%" / "Battery about  
60%" / "Battery about 40%" / "Battery about 20%"  
• Battery remaining capacity is 20% or lower: "Low battery"  
• When the remaining battery power falls to the level where the unit is  
unable to start: "Battery is empty" is output and then the unit turns  
off.  
• When a Stereo Pair mode connection is established  
Output from left channel speaker: "Left"  
Output from right channel speaker: "Right"  
• When the unit determines that a Stereo Pair cannot be formed: "The  
Stereo Pair is not available. Please open the Sound Connect and  
update the speaker software."  
• Sound Connect app's service linkage setting is off: "Launch the Sound  
Connect to activate Service Link."  
• When the music service app is not launched: "App assigned to the  
Quick Access is not launched on the mobile device."  
• When the music service app is not assigned to the Quick Access key:  
"The Quick Access is not set. Please open the Sound Connect and  
check the Quick Access settings."

#### Licenses

- This product contains software that Sony uses under a licensing  
agreement with the owner of its copyright. We are obligated to  
announce the contents of the agreement to customers under  
requirement by the owner of copyright for the software. Please  
access the following URL and read the contents of the license.  
<https://rd1.sony.net/help/speaker/sl/24/>
- This product is protected by certain intellectual property rights  
of Microsoft Corporation. Use or distribution of such technology  
outside of this product is prohibited without a license from  
Microsoft or an authorized Microsoft subsidiary.
- Services offered by third parties may be changed, suspended,  
or terminated without prior notice. Sony does not bear any  
responsibility in these sorts of situations.



## Notes on water resistant feature (Read before using the unit)

The supplied accessories are not water resistant.

### On water resistant performance of the unit


With the cap securely closed, this unit has a water resistant performance  
equivalent to IPX4, which is a "protection against ingress of water" rating  
defined by IEC 60529 "Degrees of protection provided by enclosures (IP  
Code)" for electrical equipment.  
• The supplied accessories and the connectors of this unit (USB) are not  
water resistant. To reduce the risk of fires or electric shocks, do not  
expose the unit to water or droplets while using any connectors (USB) .

Note that malfunctions as a result of water immersion or dust  
intrusion caused by misuse by the customer are not covered by the  
warranty.

### To maintain water resistant performance

Carefully note the precautions below to ensure proper use of the unit.  
• This unit does not have a design that is resistant to water pressure. Do  
not put the unit in the water or directly under the water gushing out of  
the faucet to avoid a malfunction.  
• Do not pour high-temperature water or blow hot air from a hair dryer  
or any other appliance on the unit directly. Also never use the unit  
in a place subject to high temperatures, such as in a sauna or near a  
heat source.

**CAUTION** : Handle the cap with care. The cap plays a very  
important role in maintenance of the water resistant performance.  
When using the unit, make sure that the cap is closed completely. When  
closing the cap, be careful not to allow foreign objects inside. If the cap  
is not closed completely the water resistant performance may  
deteriorate and may cause a malfunction of the unit as a result of water  
entering the unit.

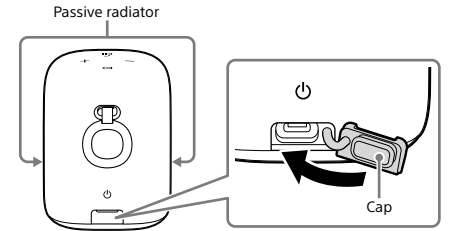

## Precautions

### On placement

- To eliminate the risk of malfunctions, avoid the following locations  
when placing or leaving this unit.
  - A place subject to high temperatures, such as under direct sunlight  
or lighting equipment, near a heat source, or in a sauna
  - Inside a vehicle with the windows closed (especially in  
summertime)
  - A place exposed to hot air, such as from a hair dryer
- Place this unit on a flat, level surface. When placed on a sloped  
surface, the unit may fall over or fall off the surface due to its  
own vibration, resulting in injuries, malfunctions, or performance  
degradation.
- This unit is not anti-magnetic. Keep objects susceptible to magnetism  
(recorded tapes, watches, cash cards and credit cards with magnetic  
coding, etc.) away from the unit. When you carry around the unit, keep  
this in mind as well.

### How to care for the unit

Although the fabric part of the unit has water repellent treatment  
applied, you can use the unit more comfortably and for a longer period  
of time by following the maintenance procedure below.  
• If the surface becomes dirty, wipe the surface using a soft, dry cloth or  
a cloth soaked in water or lukewarm water and wrung well. Depending  
on the type of dirt, it may not be possible to remove it.

#### Note

- If the surface of the unit gets dirty, do not use detergent, thinner,  
benzine, alcohol, etc. to clean the unit because it will affect the water  
repellent function of the fabric part of the unit.

### On BLUETOOTH® communications

- Microwaves emitting from a BLUETOOTH device may affect the  
operation of electronic medical devices. Turn off this unit and other  
BLUETOOTH devices in the following locations, as it may cause an  
accident:
  - in hospitals, near priority seating in trains, locations where  
inflammable gas is present, near automatic doors, or near fire  
alarms.

### Other notes

- When placed in an extremely hot or cold environment, the unit  
stops battery charging for safety reasons. When the battery is kept  
charging itself for an extended period of time, the unit may stop  
battery charging as well. In such a case, make sure that the ambient  
temperature is within the operating temperature range (5 °C - 35 °C  
(41 °F - 95 °F)), unplug and plug the USB cable, and then charge the  
battery all over again.
- Even if you do not intend to use the unit for a long time, charge  
the battery to its full capacity once every 6 months to maintain its  
performance.
- If you have any questions or problems concerning this unit that are  
not covered in this manual, please consult your nearest Sony dealer.

## Trademarks

- Microsoft and Windows are registered trademarks or trademarks of  
Microsoft Corporation in the United States and/or other countries.
- The BLUETOOTH® word mark and logos are registered trademarks  
owned by Bluetooth SIG, Inc. and any use of such marks by  
Sony Group Corporation and its subsidiaries is under license.
- USB Type-C® and USB-C® are registered trademarks of  
USB Implementers Forum.

All other trademarks and registered trademarks are trademarks or  
registered trademarks of their respective holders. In this manual, ™ and  
® marks are not specified.

## Specifications

### Wireless Speaker (YY7863E)

#### Amplifier section

POWER OUTPUT AND TOTAL HARMONIC DISTORTION:  
With 4 Ω load driven, from 100 Hz - 10 000 Hz; rated 3 W minimum  
RMS power, with no more than 1% total harmonic distortion from  
250 mW to rated output.

#### BLUETOOTH section

Frequency band  
2.4 GHz band (2.400 0 GHz - 2.483 5 GHz)

#### General

Power  
DC 5 V 3.0 A (using a commercially-available USB AC adaptor capable  
of delivering an output current of 3.0 A) or, using built-in lithium-ion  
battery  
Power consumption\*  
Approx. 7.5 W (while charging the built-in lithium-ion battery)  
When BLUETOOTH standby mode is set to on: 0.3 W or less  
When BLUETOOTH standby mode is set to off: 0.3 W or less  
Operating temperature  
5 °C - 35 °C (41 °F - 95 °F)  
Dimensions (approx.) (w/h/d)  
Including projecting parts and controls  
Wireless Speaker: 84 mm × 110 mm × 90 mm (3.4 in × 4.3 in × 3.6 in)  
Wireless Speaker with the Charging cradle: 84 mm × 120 mm × 90 mm  
(3.4 in × 4.7 in × 3.6 in)  
Mass (approx.)  
Including battery  
Wireless Speaker: 520 g (1 lb 3 oz)  
Wireless Speaker with the Charging cradle: 590 g (1 lb 5 oz)

### Included items

Wireless Speaker (1)  
USB Type-C® cable (USB-A to USB-C® / Max. 1.5 A) (1)  
A charging cable exclusively designed for the unit. Do not use the  
cable for any other purposes.  
Strap (1) (attached to the unit)  
Charging cradle (1)  
Documents (1 set)

\* When using a USB AC adaptor capable of delivering an output current  
of 1.5 A.

### System requirements for charging battery using USB

Using a commercially-available USB AC adaptor capable of delivering  
an output current of 3.0 A or 1.5 A.  
Use of a USB AC adaptor capable of delivering an output current  
of 3.0 A reduces the battery charging time.  
When using a USB AC adaptor with an output current of 3.0 A,  
be sure to use a USB Type-C® cable that conforms to the USB  
standard and supports an output current of 3.0 A.  
The supplied USB cable supports an output current of up to 1.5 A.

Design and specifications are subject to change without notice.

Français    Enceinte sans fil

Modèle : YY7863E

Le terme « produit » dans ce document désigne l'appareil ou ses  
accessoires.

### Fiche du propriétaire

Inscrivez les numéros de modèle et de série dans les espaces prévus  
ci-dessous et rangez-les en toute sécurité.  
Donnez cette référence chaque fois que vous appelez votre revendeur  
Sony concernant ce produit.

N° de modèle \_\_\_\_\_

N° de série \_\_\_\_\_

Les numéros de modèle et de série se trouvent aux emplacements  
suivants.

- N° de modèle : le bas de l'appareil
- N° de série : à l'intérieur du capuchon à l'arrière de l'appareil



ATTENTION : pour éviter la détérioration des performances de résistance  
à l'eau, assurez-vous que le capuchon est complètement fermé lorsque  
vous utilisez l'appareil.

La plaque signalétique et les informations importantes concernant la  
sécurité sont fixées aux endroits suivants :  
• le bas de l'appareil

N'installez pas le produit dans un espace clos, comme une bibliothèque  
ou une armoire encastrée.

N'exposez pas les piles (bloc-batterie ou piles installées) à une chaleur  
excessive, telle que le soleil, un feu ou autre, pendant une longue  
période.  
Ne soumettez pas les batteries à des conditions de température  
extrêmement basses qui pourraient entraîner une surchauffe et un  
emballement thermique.  
Ne démontez pas, n'ouvrez pas et ne détruisez pas les batteries  
rechargeables.  
En cas de fuite d'une batterie rechargeable, ne laissez pas le liquide  
entrer en contact avec la peau ou les yeux. Si un contact a été établi,  
lavez la zone touchée avec de grandes quantités d'eau et consultez un  
médecin.  
Les batteries rechargeables doivent être chargées avant d'être utilisées.  
Reportez-vous toujours aux instructions du fabricant ou au manuel du  
produit pour obtenir des instructions de chargement pertinentes.

Après de longues périodes de stockage, il peut être nécessaire de  
charger et de décharger les batteries rechargeables plusieurs fois pour  
obtenir une performance maximale.  
Mettez au rebut correctement.

### Chargement de l'appareil

Branchez l'adaptateur CA USB à l'appareil à l'aide du câble USB Type-C®,  
puis branchez l'adaptateur CA USB à une prise secteur.

### MISE AU REBUT DES ACCUMULATEURS RECHARGEABLES

Vous pouvez aider à préserver l'environnement en rapportant les  
accumulateurs usagés dans un point de collection et recyclage le plus  
proche de chez vous.

Pour plus d'informations sur le recyclage des accumulateurs, visitez  
[www.sony.com/ecotrade](http://www.sony.com/ecotrade)

Avertissement : Ne pas utiliser des accumulateurs rechargeables qui  
sont endommagés ou qui fuient.

#### Pour les clients aux États-Unis

Vous êtes prévenu que tout changement ou modification non  
approuvés expressément dans ce manuel pourrait annuler votre droit  
d'utilisation de cet appareil.

#### REMARQUE :

Cet appareil a été testé et déclaré comme conforme aux limitations  
d'un appareil numérique de classe B, conformément à la section 15  
des règles de la FCC. Ces limitations sont conçues pour fournir une  
protection raisonnable contre les interférences nuisibles dans une  
installation résidentielle. Cet appareil génère, utilise et peut diffuser  
une énergie sous forme de fréquence radio et, s'il n'est pas installé  
et utilisé conformément aux instructions, pourrait provoquer des  
interférences nuisibles pour les communications radio.  
Cependant, il n'existe aucune garantie que des interférences ne  
se produiront pas dans une installation particulière. Si cet appareil  
provoque des interférences nuisibles pour la réception radio ou  
télévision, qui peuvent être détectées en mettant sous et hors  
tension l'appareil, l'utilisateur est encouragé à essayer de corriger  
ces interférences par l'une ou plusieurs des mesures suivantes :  
• Réorienter ou repositionner l'antenne de réception.  
• Augmenter la distance entre l'appareil et le récepteur.  
• Brancher l'appareil sur une prise murale d'un circuit différent de  
celui sur lequel le récepteur est branché.  
• Consulter le revendeur ou un technicien radio/télévision qualifié  
pour obtenir de l'aide.

Cet appareil ne doit pas être installé au même endroit ni fonctionner  
en association avec une autre antenne ou un autre émetteur.

**Pour tout renseignement sur ce produit :**  
**Consultez :** <https://www.sony.com/electronics/support>  
**Contactez :** Centre d'information et de service après-vente Sony au  
1-800-222-7669

Déclaration de conformité du fabricant  
Dénomination commerciale : SONY  
Modèle : YY7863E  
Partie responsable : Sony Electronics Inc.  
Adresse : 16535 Via Esprillo, San Diego, CA 92127 États-Unis  
Numéro de téléphone : 858-942-2230

Cet appareil est conforme à la section 15 des règles de la FCC. Le  
fonctionnement est soumis aux deux conditions suivantes :  
(1) Cet appareil ne doit pas provoquer d'interférence nuisibles et  
(2) cet appareil doit accepter toute interférence reçue, y compris  
une interférence qui pourrait provoquer un fonctionnement non  
désiré.

#### Pour les clients au Canada

L'émetteur/récepteur exempt de licence contenu dans la  
présente unité est conforme aux CNR d'Innovation, Sciences  
et Développement économique Canada applicables aux deux  
conditions suivantes :  
1) l'unité ne doit pas produire de brouillage ;  
2) l'utilisateur de l'unité doit accepter tout brouillage radioélectrique  
subi, même si le brouillage est susceptible d'en compromettre le  
fonctionnement.

Cet appareil est conforme aux limites d'exposition aux rayonnements  
énoncées pour un environnement non contrôlé et respecte les règles  
les radioélectriques (RF) de la FCC lignes directrices d'exposition et  
d'exposition aux fréquences radioélectriques (RF) CNR-102 de l'ISDE. Cet  
appareil doit être installé et utilisé en gardant une distance de 20 cm ou  
plus entre le radiateur et le corps humain.

Ce produit comporte un ou des aimants qui peuvent perturber les  
stimulateurs cardiaques, les valves de dérivation programmables pour le  
traitement de l'hydrocéphalie ou d'autres appareils médicaux. Ne placez  
pas ce produit près de personnes utilisant ce type d'appareil médical.  
Consultez votre médecin avant d'utiliser ce produit si vous utilisez ce  
type d'appareil médical.

N'insérez jamais la fiche USB lorsque l'appareil principal ou le câble de  
charge est humide. Si vous insérez la fiche USB quand l'appareil principal  
ou le câble de charge est humide, vous risquez de provoquer un court-  
circuit à cause du liquide (eau du robinet, eau de mer, soda, etc.) ou de  
la présence d'un corps étranger sur l'appareil principal ou le câble de  
charge, ce qui génère une chaleur anormale ou un dysfonctionnement.

### À propos du guidage vocal

#### IMPORTANT

**Le guidage vocal pour cet appareil est uniquement disponible en  
anglais.**

Le guidage vocal peut se faire entendre en provenance de l'appareil  
dans les situations suivantes :

- Lorsque l'appareil passe en mode de jumelage : « Pairing » (Jumelage)
- En mode de couplage : « Pairing » (couplage)
- Lorsque vous appuyez sur le bouton BATTERY pour vérifier la  
puissance de la batterie alors que l'appareil est allumé : « Battery  
fully charged » (Batterie entièrement chargée) / « Battery care mode,  
fully charged, Battery about 90% » (Mode maintenance de la batterie,  
entièrement chargée, Batterie à environ 90%) / « Battery about 80% »  
(Batterie à environ 80%) / « Battery about 60% » (Batterie à environ  
60%) / « Battery about 40% » (Batterie à environ 40%) / « Battery about  
20% » (Batterie à environ 20%)
- La capacité restante de la batterie est de 20% ou moins : « Low  
battery » (batterie faible)
- Lorsque la puissance restante de la batterie atteint un niveau tel que  
l'appareil ne peut pas démarrer : « Battery is empty » (Batterie vide) est  
émis, puis l'appareil s'éteint.
- Lorsqu'une connexion de Couplage Stéréo est établie  
Sortie de l'enceinte côté gauche : « Left » (gauche)  
Sortie de l'enceinte côté droit : « Right » (droite)
- Lorsque l'appareil détermine qu'un Couplage Stéréo ne peut pas  
être réalisé : « The Stereo Pair is not available. Please open the Sound  
Connect and update the speaker software. » (Le Couplage Stéréo  
n'est pas disponible. Veuillez ouvrir Sound Connect et mettre à jour le  
logiciel de l'enceinte.)
- Le réglage de liaison de service de l'application Sound Connect est  
désactivé : « Launch the Sound Connect to activate Service Link. »  
(Lancez Sound Connect pour activer la Liaison de Service.)
- Lorsque l'application de service de musique n'est pas lancée : « App  
assigned to the Quick Access is not launched on the mobile device. »  
(L'application associée à l'Accès Rapide n'est pas lancée sur l'appareil  
mobile.)
- Lorsque l'application de service de musique n'est pas associée à la  
touche Accès Rapide : « The Quick Access is not set. Please open the  
Sound Connect and check the Quick Access settings. » (L'Accès Rapide  
n'est pas défini. Veuillez ouvrir Sound Connect et vérifier les réglages  
de l'Accès Rapide.)

#### Licences

- Ce produit contient des logiciels utilisés par Sony dans le cadre  
d'un contrat de licence conclu avec le propriétaire de ses droits  
d'auteur. Nous sommes tenu d'annoncer le contenu du contrat  
aux clients, conformément à l'accord passé avec le propriétaire  
des droits d'auteur du logiciel. Veuillez cliquer sur le lien et lire le  
contenu de la licence.  
<https://rd1.sony.net/help/speaker/sl/24/>
- Ce produit est protégé par certains droits de propriété  
intellectuelle de Microsoft Corporation. L'utilisation ou la  
distribution de ce type de technologie en dehors de ce produit  
est interdite sans une licence de Microsoft ou d'une filiale  
autorisée de Microsoft.
- Les services proposés par des tiers peuvent être modifiés,  
suspendus ou clôturés sans avis préalable. Sony n'assume  
aucune responsabilité dans ce genre de situation.

