
ZLINE

ATTAINABLE **LUXURY®**

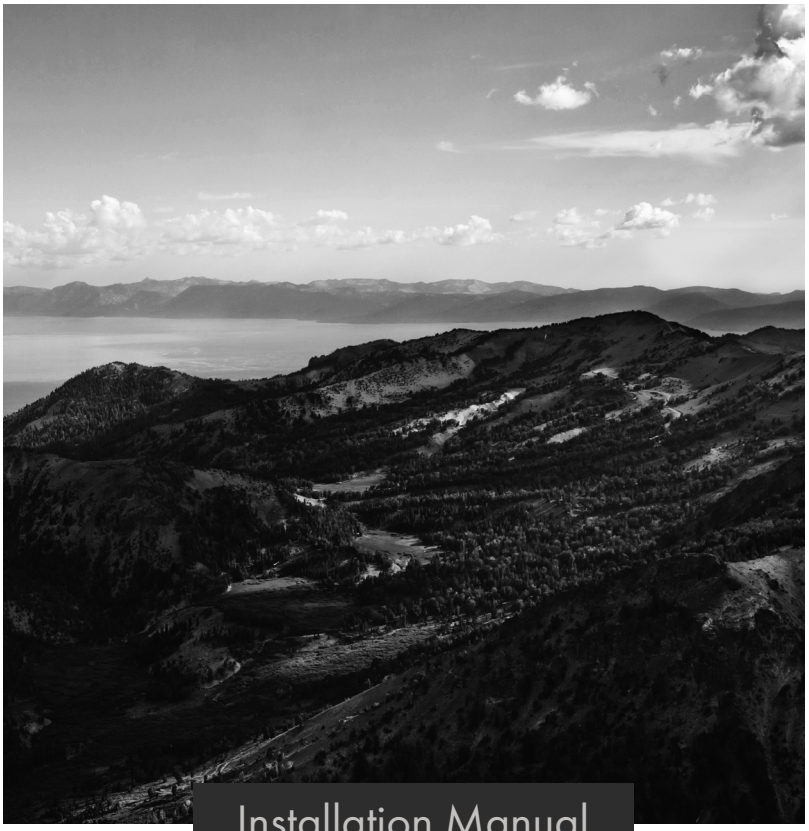

Installation Manual

INDUCTION RANGE TOPS
SINRT MODELS

zlinekitchen.com



ZLINE Kitchen and Bath provides Attainable Luxury, where the kitchen and bath of your dreams is never out of reach. Through our unique designs and unparalleled quality, we're dedicated to providing you an elevated experience in the heart of your home. With an endless selection of features and finishes, our inspiration is your reality.

ZLINE
ATTAINABLE **LUXURY**®



ZLINE is fueled by a passion for innovation—a relentless pursuit of bringing the highest end luxury designs and professional features into everyone's homes.

Because we continually strive to improve our products, we may change specifications and designs without prior notice.

Scan the QR code to view the most up-to-date version of the Installation Manual and User Manual.

⚠ WARNING: This product can expose you to chemicals including nickel, which is known to the State of California to cause cancer. For more information, go to www.P65Warnings.ca.gov.

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS 1

Installation Safety 6

Cooktop Safety 7

Ventilation Safety 9

BEFORE INSTALLATION. 10

Tools and Additional Parts Needed (Not Included) 10

INSTALLATION 11

Product Specifications 11

Electrical Safety 13

Dimensions and Clearances. 15

Installation Procedure 17

WARRANTY 19

IMPORTANT SAFETY INSTRUCTIONS



WARNING:

- Never Operate the Top Surface Cooking Section of this Appliance Unattended.
- Failure to follow this warning statement could result in fire, explosion, or burn hazard that could cause property damage, personal injury, or death.
- If a fire should occur, keep away from the appliance and immediately call your fire department. DO NOT ATTEMPT TO EXTINGUISH AN OIL/GREASE FIRE WITH WATER.



ATTENTION:

- Ne faites jamais fonctionner la surface de cuisson, sur le dessus de cet appareil, sans surveillance.
- Le non-respect de cette mise en garde pourrait entraîner un incendie, une explosion ou un risque de brûlure et ainsi causer des dommages matériels, des blessures ou la mort.
- Si l'appareil prend feu, tenez-vous à l'écart et appelez immédiatement votre service des incendies. NE TENTEZ JAMAIS D'ÉTEINDRE UN FEU DE GRAISSE OU D'HUILE EN L'ASPERGEANT D'EAU.

IMPORTANT SAFETY INSTRUCTIONS



WARNING: NEVER cover any slots, holes or passages in the oven bottom or cover an entire rack with materials such as aluminum foil. Doing so blocks airflow through the oven and may cause carbon monoxide poisoning. Aluminum foil linings may also trap heat, causing a fire hazard.



AVERTISSEMENT: Ne JAMAIS recouvrir une fente, un trou ou une conduite dans le fond du four ni recouvrir entièrement une grille d'un matériau comme du papier d'aluminium. Un tel revêtement bloque la circulation d'air dans le four, ce qui peut entraîner un empoisonnement au monoxyde de carbone. De plus, le papier d'aluminium peut emprisonner la chaleur, ce qui risque de provoquer un incendie.

IMPORTANT SAFETY INSTRUCTIONS

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC DECLARATION OF CONFORMITY	
Unique Identifier	
Product Description	ZLINE Induction Range
Model Number	SINRT30-A1, SINRT36-A1, SINRT48-A1
Trade Name	ZLINE
FCC Compliance Statement	
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.	
This device complies with Part 18 of the FCC Rules.	
Responsible Party – U.S. Contact Information	
Company:	ZLINE Kitchen and Bath, LLC
Address:	350 Parr Circle Reno, NV 89509
Telephone or internet contact information:	1-614-777-5004 contact@zlinekitchen.com

IMPORTANT SAFETY INSTRUCTIONS

- Before beginning installation, please read and follow these important instructions for the safety of your home and the people living in it.
- The manufacturer will not be responsible for any damage to property or to persons caused by incorrect installation, improper use of the appliance, or failure to heed the warnings listed.
- The manufacturer reserves the right to make changes to its products when considered necessary and useful, without affecting the essential safety and operating characteristics.
- This appliance has been designed for non-commercial, domestic use only.
- Please observe all local, state, and national codes and ordinances. Please ensure the range top is properly grounded. The plug should always be accessible.
- The installer should leave these instructions with the consumer who should retain for local inspectors' use and for future reference.
- In Massachusetts, installation must be performed by a Massachusetts licensed installer.
- This manual does not cover all possible conditions that may occur during installation and/or operation. Always contact a qualified service technician or the manufacturer about problems you may not understand.
- The installation of appliance designed for manufactured (mobile) home installation must conform with the Manufactured Home Construction and Safety Standard, Title 24CFR, Part 3280 [formerly the Federal Standard for Mobile Home Construction and Safety, Title 24, HUD (Part280)] or with local codes where applicable.

IMPORTANT SAFETY INSTRUCTIONS

IMPORTANT SAFETY ALERTS



DANGER: When you see this symbol in the instructions, it indicates a hazardous situation which, if not avoided, could result in death or serious injury.



WARNING: When you see this symbol in the instructions, it indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.



Installation and service on this product must be performed by a qualified installer or servicer. Ask the manufacturer to recommend a qualified technician and authorized repair service in your area.



USE CARE WHEN UNPACKING THE PRODUCT

- Remove all tape and packaging before using the appliance.
- Carefully dispose of the product's shipping box, plastic bags, and all other packing materials after the appliance is unpacked.
- Boxes covered with rugs, bedspreads, sheets, or other materials can become air-tight chambers. Never allow children to play with packaging material.
- Remove all staples from the box. Staples can cause cuts and destroy finishes if they come in contact with other appliances or furniture.
- Do not remove the model/serial plate attached to the appliance; doing so will not only void the product warranty, it will limit the ability for future service to be conducted on the range top in an effective manner.

IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION SAFETY

- Do not repair or replace any part of the appliance unless specifically recommended in this manual. All other servicing should be done only by a qualified technician. This may reduce the risk of personal injury and damage to the appliance.



Always disconnect power when servicing this product, especially for larger-scale repairs impacting important appliance functionality; failure to do so increases the risk of fire, explosion, injury, or death.

- Examples of a qualified person include:
  - Licensed heating personnel
  - Authorized service personnel
- Observe all governing codes and ordinances.
- If the appliance is located near a window, NEVER hang long curtains or paper blinds on that window. They could blow over the cooking surface and ignite, potentially causing a fire hazard.
- Ensure the kitchen or room where the appliance is installed is well ventilated by keeping the air intakes open and in good working order and/or by installing a ventilation range hood above the unit. It's recommended a hood is installed between 30" and 36" (762 mm and 914 mm) above the cooktop to allow for optimal air flow.



An air curtain or other overhead range/range top hood, which operates by blowing downward airflow onto the range top, shall not be used/installed in conjunction with this range top.

- If the appliance is used intensively for a long time, the effectiveness of the ventilation will have to be increased, for example by opening a window or increasing the power of the range hood operating above.
- Flammable materials and liquids should not be stored on the appliance or near surface units. This includes paper, plastic, and cloth items, as well as cookbooks, plastic ware, and towels. Do not store explosives such as aerosol cans on or near the appliance. Flammable materials may explode and result in fire or property damage.
- Keep the appliance area clear and free from combustible materials, gasoline, and other flammable vapors and liquids.
- Flammable materials should not be stored near surface units.

IMPORTANT SAFETY INSTRUCTIONS



STATE OF CALIFORNIA PROPOSITION 65 WARNINGS

- The California Safe Drinking Water and Toxic Enforcement Act requires the Governor of California to publish a list of substances known to the state to cause birth defects or other reproductive harm and requires businesses to warn customers of potential exposure to such substances.



COOKTOP SAFETY

- Children should not be left alone or unattended in the area where the appliance is in use. Do not allow children to climb, play, sit, or stand on or around any part of the appliance. Children climbing on the appliance to reach items could be seriously burned or injured. Children climbing on the appliance to reach items could be seriously burned or injured.
- DO NOT TOUCH THE COOKING SURFACE, BURNERS, OR ANY AREAS NEAR THEM. Cooking surface or other parts of the range top may be hot.
- Areas near cooking surface or throughout the appliance may become hot enough to cause burns. During and after use, do not touch, or let clothing or other flammable materials touch, these areas until they have had sufficient time to cool.
- Do not wear loose-fitting or hanging garments while using the appliance. Do not let clothing or other flammable materials contact hot surfaces.
- Smother grease fires with a pan lid, or use baking soda, a dry chemical, or foam-type extinguisher. Use an extinguisher ONLY if:
  - You have a Class A, B, or C extinguisher and you know how to operate it.
  - The fire is small and contained in the area where it is started.
  - The fire department is being/has been called.
  - You can fight the fire with your back to an exit.
- When heating fat or grease, watch it closely. Fat or grease may catch fire if allowed to become too hot.
- Do not heat unopened food containers. Buildup of pressure may cause the container to burst and result in injury.
- Stepping, leaning, or sitting on this appliance can result in serious injuries and also damage the appliance.
- Know which knob controls which surface burner. Visually check that the element is on.

IMPORTANT SAFETY INSTRUCTIONS

- Clean the appliance regularly to keep all parts free of grease that could catch fire. Exhaust fan ventilation range hoods and grease filters should be kept clean. Do not allow grease to accumulate on hoods or filters. Greasy deposits in the fan could catch fire.
- When cooking food, turn the hood fan on. Refer to hood manufacturer's instructions for cleaning and operation.
- Do not use aluminum foil to line any part of the appliance. Use aluminum foil only to cover food during cooking. Improper use of these liners may result in risk of electric shock or fire. Use of aluminum foil on any part of the range top may void the manufacturer's warranty.
- Always use proper pot/pan and cookware sizes. This appliance is equipped with surface units of different sizes. Select cookware with flat bottoms large enough to cover the surface unit.
- The range top will not tip during normal use.
- NEVER leave the cooking surface unattended, especially at high settings.
- DO NOT use pots/pans that are unstable or easily tipped. Select cookware with flat bottoms that are large enough to cover burners. To avoid spillovers, make sure cookware is large enough to contain the food properly. This will save cleaning time and prevent hazardous accumulations of food that could ignite.
- Pot/pan handles should be turned inward and not extend over adjacent cooking surface. To reduce the risk of burns, ignition of flammable materials, and spillage, handles of pots and pans should be positioned so that they are turned inward and do not extend over adjacent cooking surface.
- Use only dry pot holders or oven mitts—moist or damp pot holders on hot surfaces may result in burns from steam. DO NOT let pot holders come near open burners when lifting cookware. DO NOT use a towel or other bulky cloth instead of a pot holder.
- Do not use decorative surface burner covers:
  - If a burner is accidentally turned on, the decorative cover will become hot and possibly melt.
  - You will not be able to see that the burner is on.
  - Burns will occur if the hot covers are touched.
  - Damage may also be done to the appliance or burners because the covers may cause overheating.
  - Air will be blocked from the burner and cause problems.

IMPORTANT SAFETY INSTRUCTIONS



VENTILATION SAFETY

- The appliance should have proper ventilation in order to keep the unit operating properly and maintain the temperature of immediate surroundings. Do not obstruct flow of ventilation air.
- Observe all governing codes and ordinances, and check your local building codes as they may vary from the general rules outlined in this manual.
- It is the installer's responsibility to comply with installation clearances specified on the model/serial rating plate, in addition to within this Installation Manual.
- The appliance should be located for convenient use in the kitchen; recessed installations must provide complete enclosure of the sides and rear of the range top.
- To eliminate risk of burns or fire by reaching overheated surface units, cabinet storage space located above the range top should be avoided. This risk can be further reduced by installing a range hood or microwave hood combination that projects horizontally a minimum of 5" (127 mm) beyond the bottom of the cabinets.
- If a ventilation range hood is installed with appropriate ducting, maintain a 30" (762 mm) minimum clearance between the cooking surface and bottom of the hood.
- Always turn on the ventilation range hood when the range top is in use.
- Avoid placing cabinetry directly above the appliance when possible. If cabinetry is used above the cooking surface, use cabinets no more than 13" (330 mm) deep.
- Contact a service technician and/or a qualified floor covering installer to check that wall coverings, countertops, and cabinets located around the appliance can withstand at least 200 °F (93 °C).



Explosion hazard conditions will exist unless you perform ALL of the following; failure to do so can result in death, explosion, or fire.

BEFORE INSTALLATION


TOOLS AND ADDITIONAL PARTS NEEDED (NOT INCLUDED)

- Tape measure
- Phillips head screwdriver
- Level
- Drill
- Drill bits
- Marker or pencil
- NOTE: See the "Electrical Safety" section of this manual for further information and guidance on the additional parts a qualified installer will need to perform this installation.


INSTALLATION

PRODUCT SPECIFICATIONS


30" (762 mm) models:

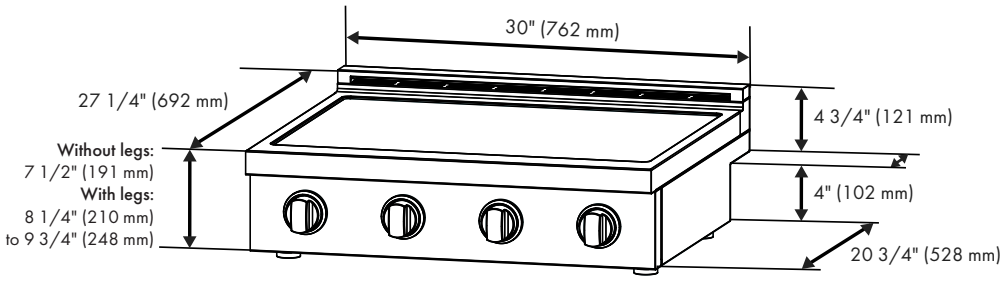

36" (914 mm) models:

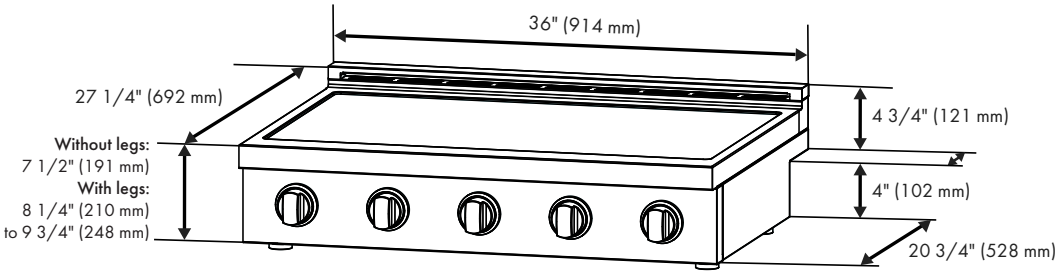

48" (1219 mm) models:

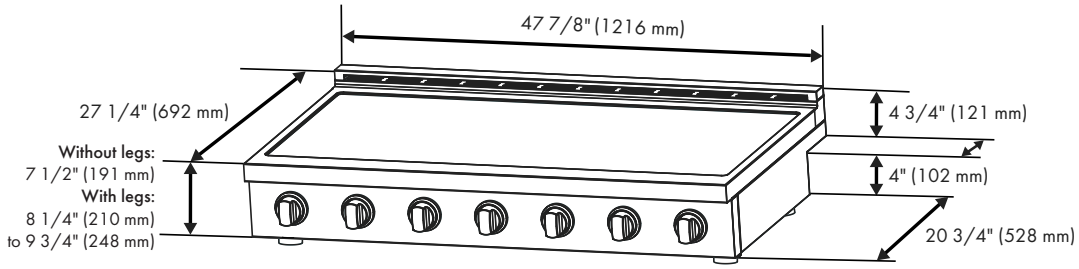


* **NOTE:** The legs can be adjusted by roughly 1 1/2" (38 mm) depending on your preferred height.


INSTALLATION

PRODUCT SPECIFICATIONS


30" (762 mm) models:

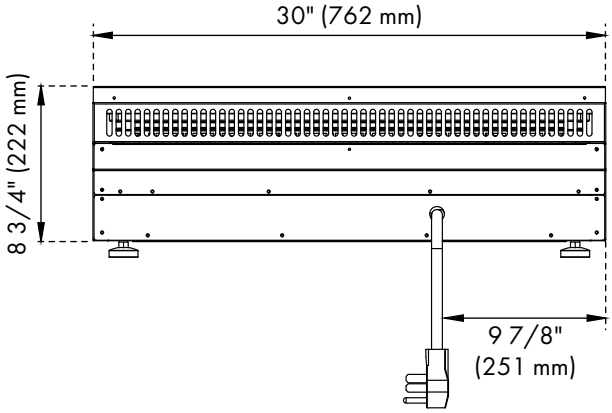

36" (914 mm) models:

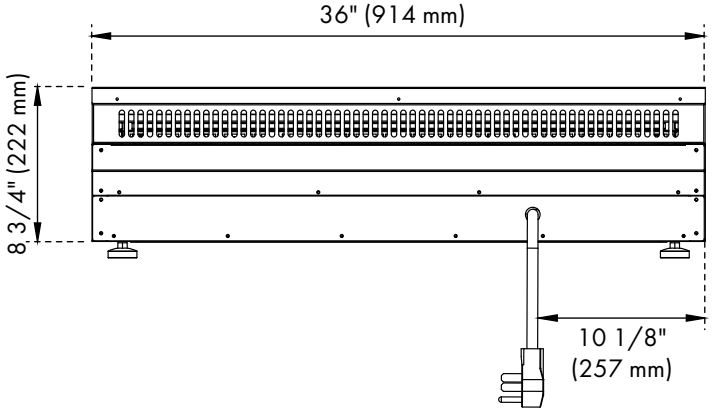

48" (1219 mm) models:

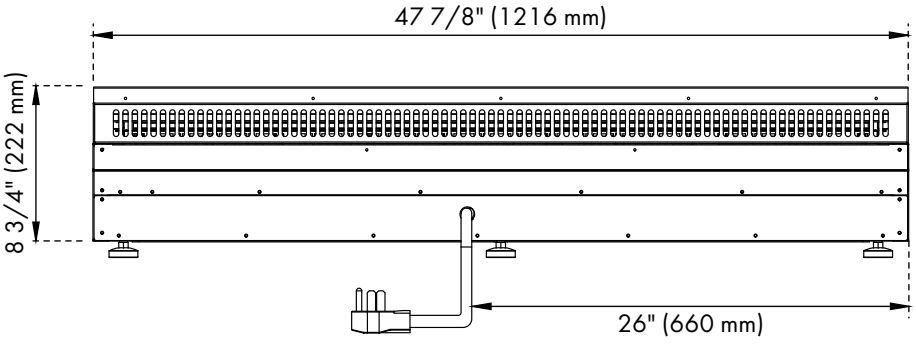

INSTALLATION

ELECTRICAL SAFETY



DANGER

ELECTRIC SHOCK HAZARD

- Failure to follow these instructions can result in death, fire, or electrical shock.
- Any additions, changes, or conversions required to properly operate this appliance must be made by a qualified service technician in accordance with the manufacturer's instructions and all codes and requirements of the local governing authority.
- Failure to follow the instructions could result in serious injury or property damage. The qualified agency performing this work assumes responsibility for the conversion.
- DO NOT operate this appliance using a 2-prong or 3-prong adapter. DO NOT use an extension cord. If a 2- or 3-prong wall receptacle is the only available outlet, it is the responsibility of the consumer to have it replaced with a properly grounded 4-prong wall receptacle installed by a qualified electrician.
- A GFI shall be used if required by NFPA-70 (National Electric Code), federal/state/local laws, or local ordinances. ZLINE Kitchen and Bath LLC will NOT warranty any problems resulting from faulty GFI outlets.
- Severe shock or damage to the range top may occur if the appliance is not installed by a qualified installer or electrician.

ELECTRICAL REQUIREMENTS*			
Range Top Series	Electrical Supply	Circuit	Wattage
SINRT30 series models	240 VAC, 60 Hz	40 A	7.6 KW
SINRT36 series models		50 A	11.6 KW
SINRT48 series models			12.5 KW

* The National Electric Code calculation for Electrical Load is less than the Total Connected Electrical Load listed on the model/serial rating plate.



WARNING

Range tops are equipped with a 4-prong NEMA 14-50P plug for your protection against shock hazard and should be plugged directly into a properly grounded receptacle. Do not cut this plug.



CAUTION

Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation. Verify proper operation after servicing.

This appliance must be supplied with the proper voltage and frequency, and connected to an individual, properly grounded, branch circuit protected by a circuit breaker or time-delay fuse. The breaker or fuse should be at a minimum 40 amp for 30" models and 50 amp for 36" and 48" models (larger amp breaker/fuse acceptable).

INSTALLATION

RANGE TOP PLACEMENT

- The measurements on the next page must be used. Given dimensions are minimum clearances from combustible surfaces.
- Working areas adjacent to the appliance should have 18" (457 mm) minimum clearance between countertop and cabinet bottom (see diagram on the next page for reference).
- All openings in the wall or floor where appliance will be installed must be sealed.
- A grounded electrical supply is required. See "Electrical Safety" on page 13 for requirements and additional safety precautions.
- Reference the diagram on the next page for the appropriate locations for electrical hookups. Electrical cord length for all range tops and sizes is 71" (1803 mm).
- The range top should only be installed below ducted ventilation hoods. Do not install with a downdraft ventilation system.

WARNING **The range top may not sit flush to the back wall if the electrical connections are installed outside of these dimensions.**


WARNING **It is the responsibility of the installer to ensure the appliance is properly adjusted at the time of installation. Situations caused by improper adjustments or improper installation are not covered under warranty.**

WARNING **Items of interest to children should not be placed in cabinets above the range top. Children climbing on the range top to reach items could be seriously injured or burned.**


INSTALLATION

DIMENSIONS AND CLEARANCES


Side View

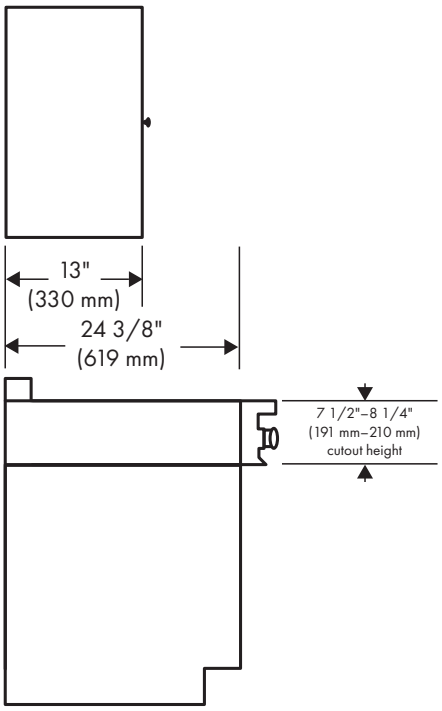

Front View

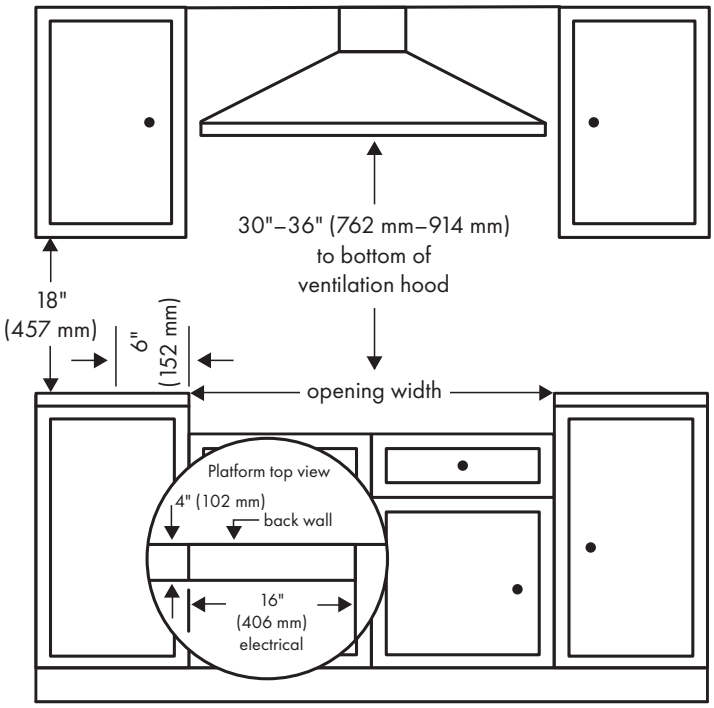

- Make sure the wall coverings, countertop and cabinets around the appliance can withstand heat up to 200 °F (93 °C) generated by the appliance.
- Cabinet opening dimensions that are shown must be used. Given dimensions are minimum clearances.
- Working areas adjacent to the range top should have 18" (457 mm) minimum clearance between countertop and cabinet bottom.

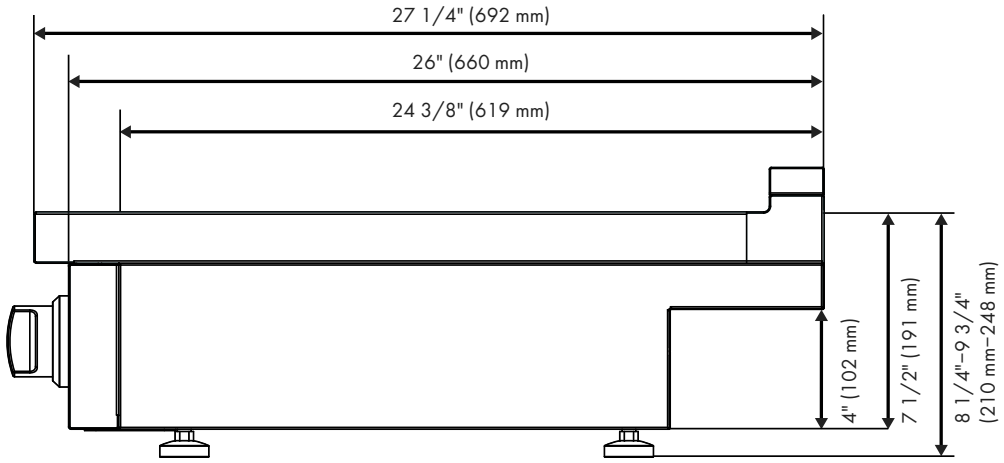

INSTALLATION

RECOMMENDED CABINET CUT-OUT DIMENSIONS

Cut the opening in the countertop. To ensure accuracy, it is best to make a template for the opening. Make sure the sides are parallel and that rear and front cuts are exactly perpendicular to the sides. Observe all minimum clearances.

RANGE TOP SERIES	WIDTH	DEPTH	HEIGHT
30" (762 mm) models	30" (762 mm)	24 3/8" (619 mm)	7 1/2" H (minimum)–9 3/4" H (maximum)* 191 mm H (minimum)–248 mm H (maximum)*
36" (914 mm) models	36" (914 mm)		
48" (1219 mm) models	47 7/8" (1216 mm)		

* Height is not including the exhaust. Height can be between 8 1/4"–9 3/4" (210 mm–248 mm) if the legs are kept on.

WARNING **The use of cabinets for storage above the appliance may result in a potential fire hazard. Combustible items may ignite; metallic items may become hot and cause burns. If cabinet storage is necessary, the risk can be reduced by installing a range hood that projects horizontally a minimum of 5" (127 mm) beyond the bottom of the cabinets.**


This range top includes cabinet mounting brackets. These brackets are provided to assist installers in securing the appliance to surrounding cabinetry when needed, depending on the installation conditions. The brackets are not required for all installations. They may be used when:


- Additional stabilization is desired
- The countertop or cabinet opening allows excessive movement
- The installer determines that local conditions require extra support
- If the unit is properly supported by the countertop and installed in a snug, level cutout, bracket use may not be necessary.

INSTALLATION


INSTALLATION PROCEDURE

1. Carefully place the range top into the prepared countertop cutout. Ensure that the unit sits fully and evenly in the opening.
2. Verify level and alignment. Check that the range top is level from front to back and side to side. Confirm that the front edge is aligned and square with the countertop.
3. Attach the mounting bracket to the range top. Locate the designated mounting holes on the underside of the appliance. Align the slotted end of the bracket with the holes. Using the provided screw, secure the bracket to the range top.

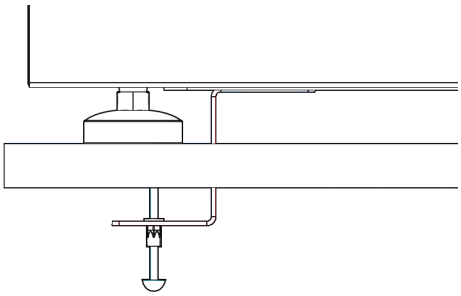

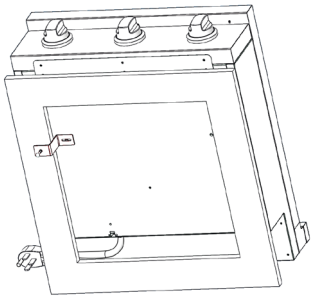


4. Secure the bracket to the support structure. With the bracket now attached to the appliance, drive a screw through the remaining hole in the bracket and into the supporting cabinetry or structural support beneath the unit. Ensure the screw is fully tightened and the bracket is firmly anchored.

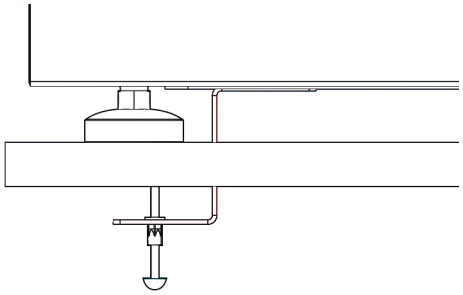


INSTALLATION

RANGE TOP KNOBS

- To install knobs, hold each in the "OFF" position and carefully push them straight onto the switch mechanisms protruding from the front of the cooktop until snug.
- SINRT30 models have 4 knobs.
- SINRT36 models have 5 knobs.
- SINRT48 models have 7 knobs.

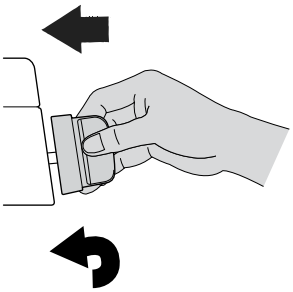

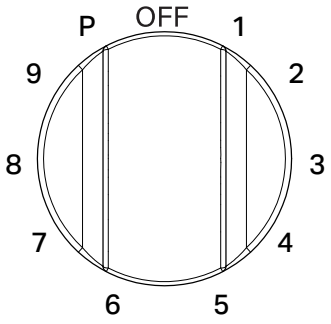

Surface Burner Knob

FINISH INSTALLATION

- Plug the range top's NEMA 14-50 electrical cord into a properly grounded 4-prong outlet.

WARNING **The electrical socket must be easily accessible with the appliance installed. In all cases, the power supply lead must be positioned so that it does not reach a temperature of 122 °F (50 °C) above the room temperature at any point.**

- Using a level, check that the range top is even with the countertop and level, or uneven baking may result.

NOTE: The installer should leave these instructions with the consumer who should retain for local inspectors' use and for future reference. Installers and consumers should refer to the User Manual for additional safety measures, operation tips, and troubleshooting.

WARRANTY

COVERAGE

ZLINE Kitchen and Bath ("ZLINE") induction range tops have a one year parts and service warranty.

ZLINE warranty periods begin from the original date of product delivery and solely cover the original purchaser of the product, delivered new and in its original carton. The limited warranty covers all parts and labor for necessary repairs if any part of the product, or the product itself, proves to be defective in materials or workmanship. The product must be deemed serviceable via troubleshooting with the ZLINE Customer Experience team. All service on ZLINE products under warranty must be performed by ZLINE-approved and ZLINE-certified service providers unless otherwise specified by ZLINE. Service will be provided during normal business hours. Products must be unobstructed and accessible to the service provider at the time of service. ZLINE's liability is limited to the original purchase price of the product. Additional injuries, losses, damages, or other inconveniences caused by product malfunction or defects in materials are not covered under the terms of this warranty.

TERMS

ZLINE warranties apply only to the original purchaser of a ZLINE product installed for normal residential use. This is defined as a single-family, residential dwelling in a non-commercial setting. Any warranty claim stemming from installation, operation, or any other use within a commercial setting is not covered under this limited warranty. Commercial settings include, but are not limited to: schools, churches, hotels, restaurants, vacation rentals such as Airbnb, daycare centers, private clubs, fire stations, common areas in multi-family dwellings, nursing homes, food service locations, and institutional food service locations such as hospitals or correctional facilities.

WARRANTY

This warranty is non-transferable and will not under any circumstance be extended based on the date of installation — the warranty period takes effect from the date of delivery and only covers the original purchaser. The warranty applies only to products installed in the contiguous United States and the District of Columbia. Failure to secure certified warranty service per these terms will result in a forfeiture of the remaining warranty. Out-of-pocket payments will not be reimbursed unless prior approval is received from ZLINE and/or ZLINE-certified service contract partners. Unapproved out-of-pocket payments for service will not be reimbursed. All warranty procedures must be followed to maintain warranty coverage.

If a product qualifies within the service window provided under these warranty terms, and ZLINE is unable to repair the product or a defective part of the product after a reasonable number of attempts, ZLINE reserves the right to offer to replace the defective part or the product or provide the original purchaser a full refund of the purchase price of the product (not including installation, removal, or other charges that were not included in the original purchase price). The original purchaser of the product must provide the original proof of purchase, including the purchase date, when filing a claim to obtain replacement parts, service, or refunds. Additionally, the original purchaser of the product must provide the serial number of the product when filing a claim to obtain replacement parts, service, or refunds.

This warranty shall not apply to any ZLINE product in which the original factory serial number has been removed, altered, or cannot be readily determined for any reason. Further, ZLINE is not responsible for damage resulting from, but not limited to: shipment, delivery, or improper installation; negligence or improper maintenance, misuse, or abuse of the product; unauthorized alteration, modification, or tampering with the product; accident, fire, floods, pest infestations, pandemics, natural disasters, or any other unpreventable or unexplained acts of nature, commonly referred to as “acts of God”; flare-up fires or damages caused by improper electric supply, electrical line current, voltage, or power surges; and service to correct installation not in accordance with the instructions contained in ZLINE’s product manuals and/or with local government codes.

WARRANTY

This warranty does not apply to aesthetic damage, scratches, or natural wear caused by normal use; second-hand, open box products, or products purchased from an unauthorized retailer; and damages or issues stemming from alteration or tampering with the range top, including, but not limited to, painting any portion of the product's interior or exterior and cutting the supplied power cord to manually hardwire the product.

In the event service is dispatched, and it is discovered that the reported issue is not covered under warranty based on the disclaimers above, the customer will be responsible for all service fees. Failure to pay these fees will result in the forfeiture of remaining warranty coverage.

Information contained within ZLINE's installation and user manuals, in addition to product information included on ZLINE's website and all related digital listings, do not cover every possible condition and situation that may occur during the installation or operation of ZLINE products.

ZLINE reserves the right to make changes at any time to its products when considered safe, necessary, and useful. Always check the ZLINE website for the most up-to-date version of its product manuals: www.zlinekitchen.com/pages/manuals.


Do not install or operate any ZLINE product if it has missing or broken parts or if it arrives damaged due to shipping. If ZLINE products arrive damaged, contact ZLINE Customer Experience at 1-614-777-5004 for help. Failure to report a damaged appliance prior to installation or operation may void the warranty.

ZLINE disclaims responsibility for damage or injury caused by improper installation or use of any of its products. ZLINE is under no obligation, by law or otherwise, to provide concessions, including repairs, prorates, rebates, discounts, or replacements, once the warranty has expired.

WARRANTY

SERIAL NUMBER LOCATION

Please write down the model number (highlighted in the image below as the “SKU”) and serial number of your appliance. Both numbers are located on the rating tag located on the right front edge of your range top. Do not remove permanently affixed labels, warnings, or plates from the product. This will void the warranty. You may also consider attaching your receipt or proof of purchase to this manual.

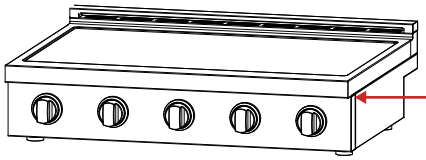

Appliance Tag



WARRANTY

SERVICE

For warranty service, please contact our Customer Service team at 1-614-777-5004 or visit www.zlinekitchen.com/contact to utilize our online Customer Experience Portal.

Scan the QR code to view the most up-to-date version of our Installation Manual and User Manual.

Need to purchase a part or accessory for your ZLINE product? Visit www.zlineparts.com, ZLINE's official parts distribution partner.

1.0.2

zlinekitchen.com

1-614-777-5004

contact@zlinekitchen.com

ZLINE

ATTAINABLE **LUXURY**®