COASTER®
FINE FURNITURE

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

Fine Furniture for every stage of life

106591
Dining Table

REVISION 0: 11/18/2015
REVISION 1: 08/02/2016
REVISION 2: 12/01/2017
REVISION 3: 07/13/2020

ITEM : **106591**

COASTER FINE FURNITURE

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS :

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING !

1. Don't attempt to repair or modify parts that are broken or defective.Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

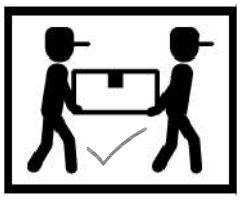

ASSEMBLY TIME | 15 MINUTES

PARTS IDENTIFICATION

AN	TOP	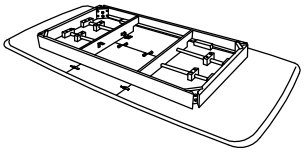	1PC
BN	LEG		4PCS

HARDWARE IDENTIFICATION

1	ALLEN WRENCH (M5 x 65mm - BLK)		1PC
2	BOLT (M8 x 80mm - RBW)		8PCS
3	LOCK WASHER (5/16" - RBW)		8PCS
4	FLAT WASHER (5/16" - RBW)		8PCS

NOTE :

Phillips head screw driver is required in the assembly process ; However, manufacturer not provide this item.

ITEM : **106591**

ASSEMBLY INSTRUCTIONS

STEP 1

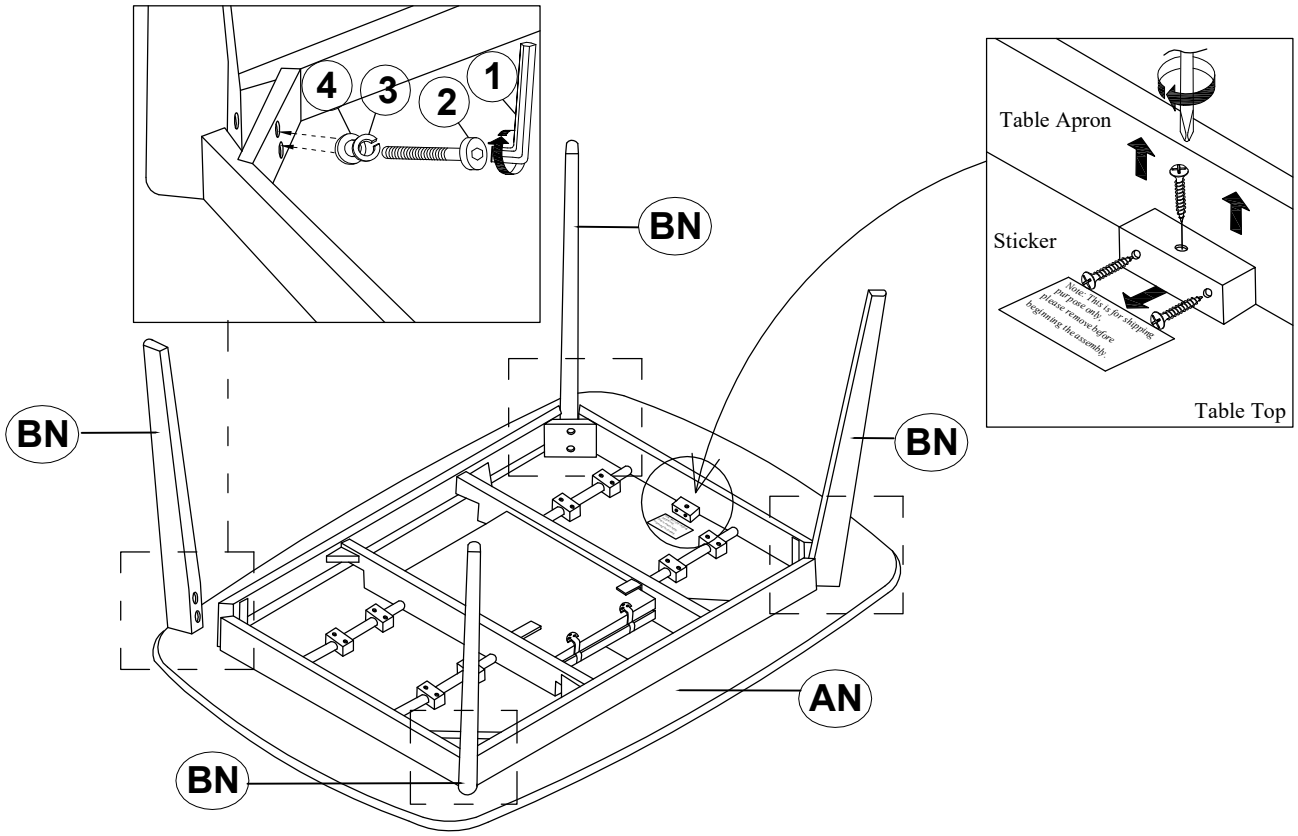

STEP 2

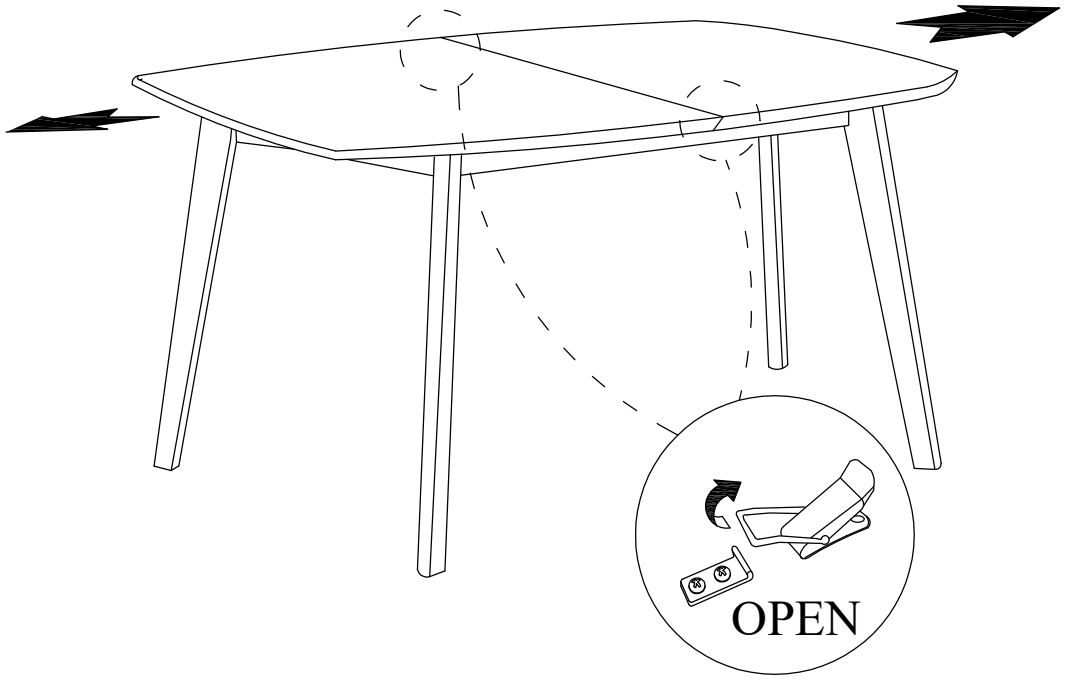

ITEM : **106591**

ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE

STEP 3

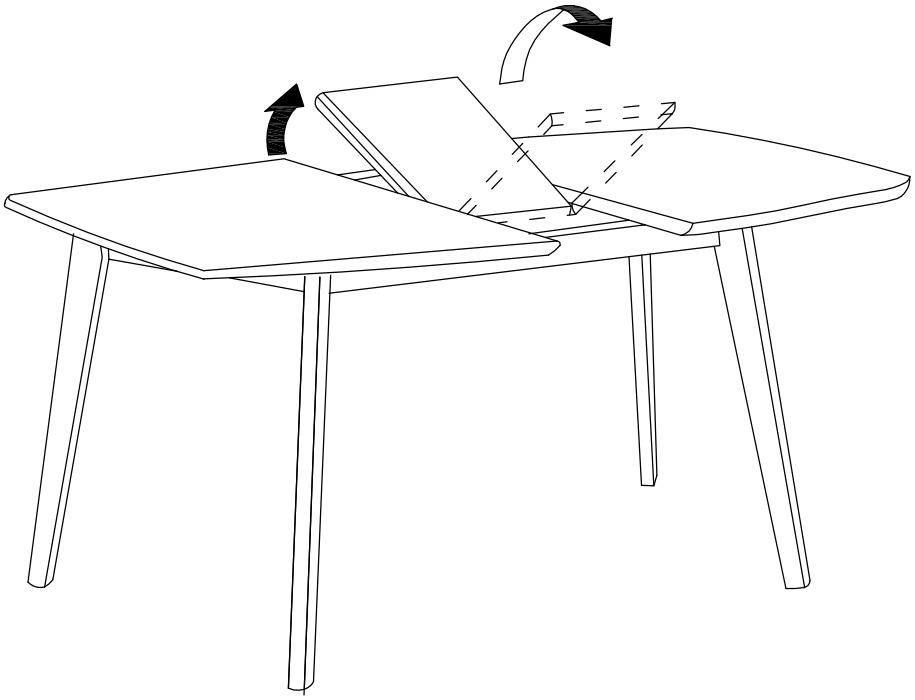

STEP 4

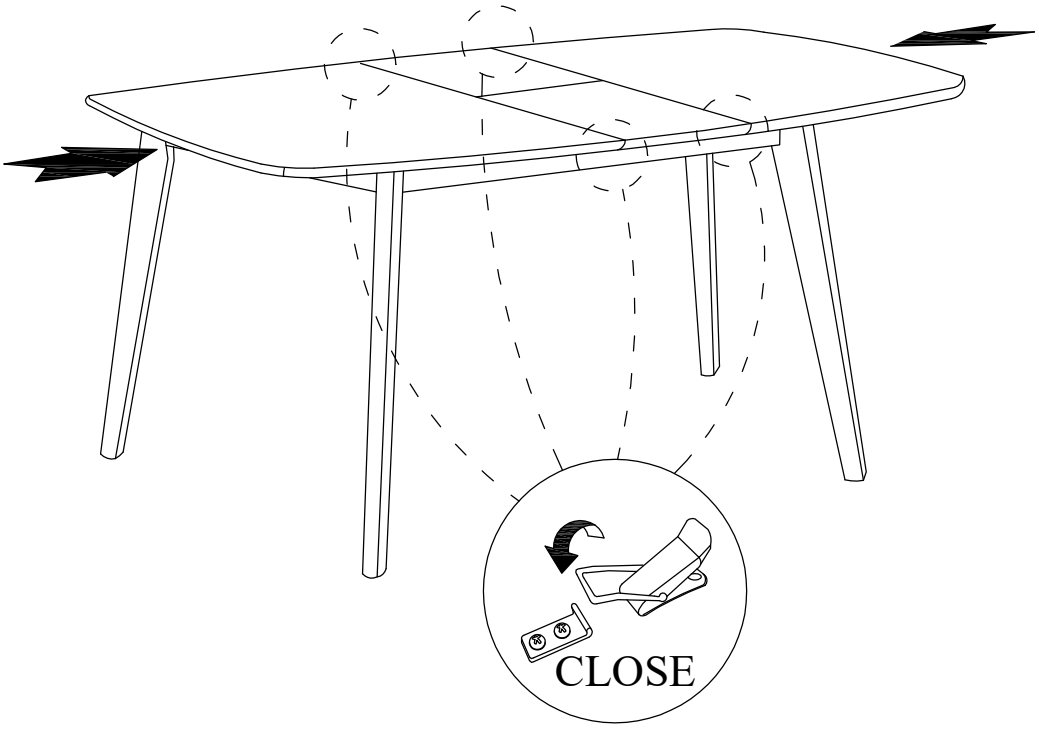

ITEM : **106591**

ASSEMBLY INSTRUCTIONS

COASTER
FINE FURNITURE

STEP 5

COMPLETE

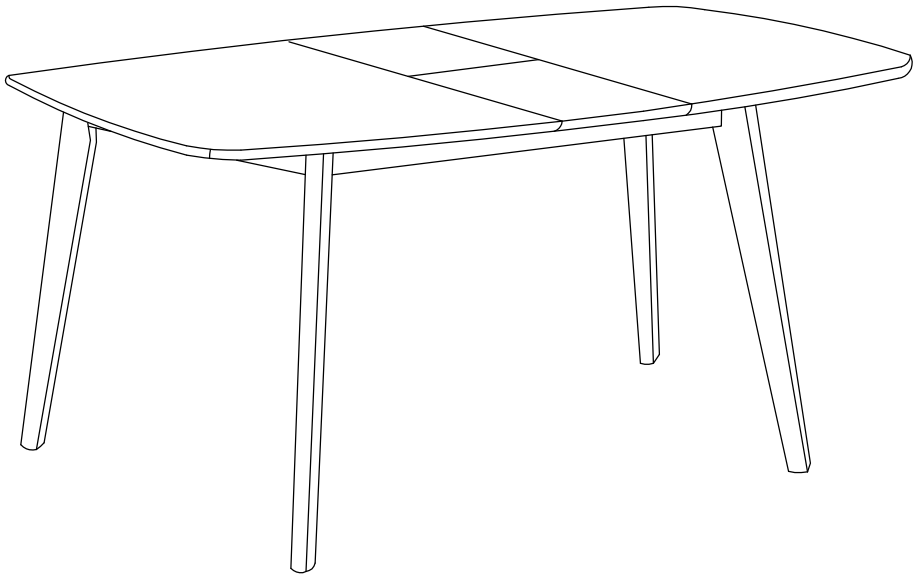

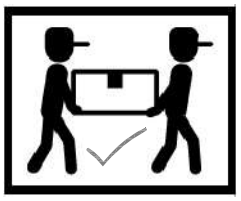

ITEM : **106591**

COASTER
FINE FURNITURE

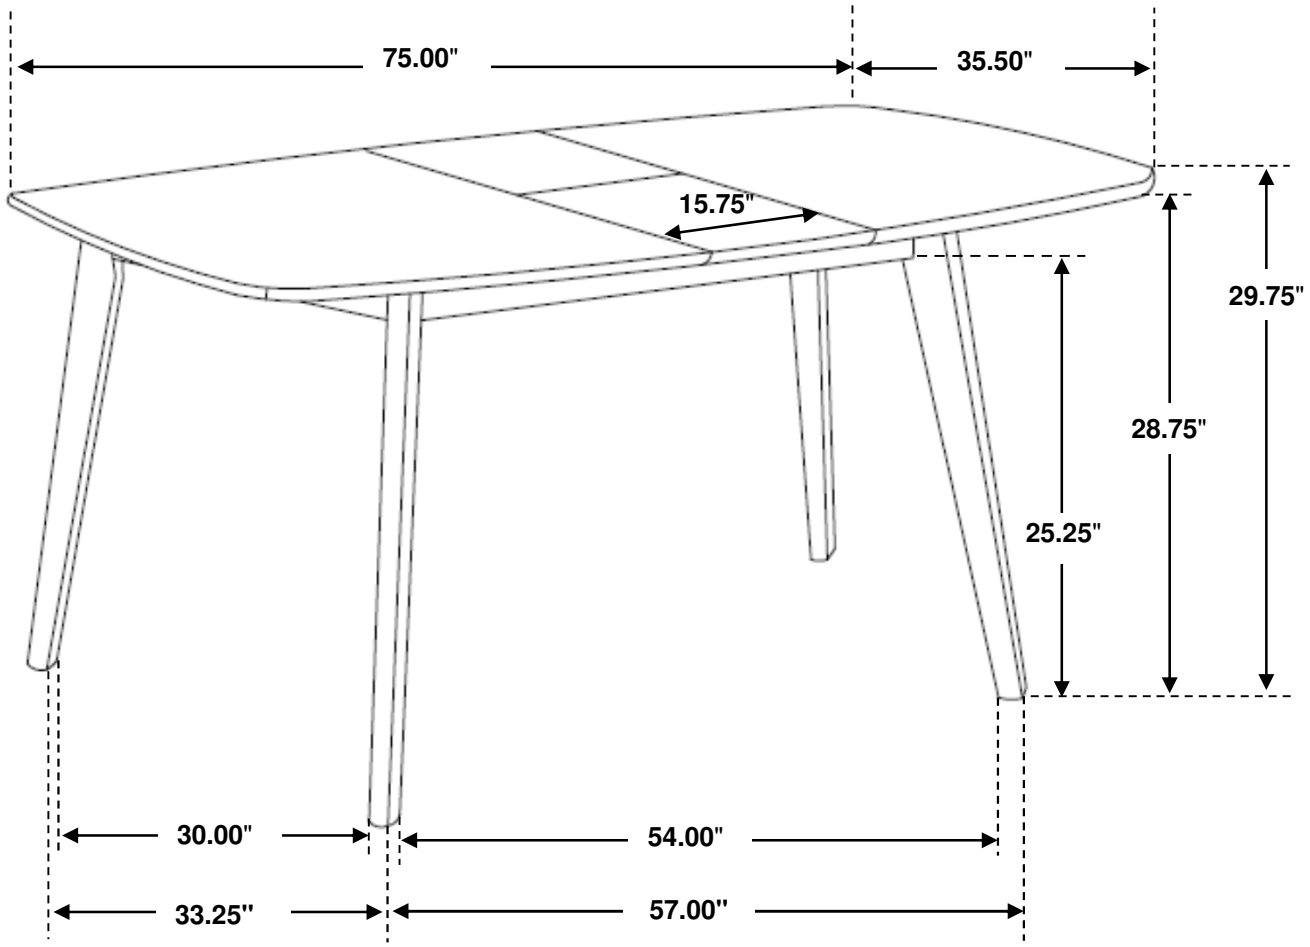

Note: Dimension tolerance ±5%

COASTER®
FINE FURNITURE

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

Fine Furniture for every stage of life

106592
Dining Side Chair

REVISION 0: 11/08/2015
REVISION 1: 12/01/2017
REVISION 2: 02/25/2020

ITEM : **106592**

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS :

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING !

1. Don't attempt to repair or modify parts that are broken or defective.Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

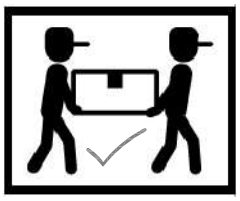

ASSEMBLY TIME | 10 MINUTES

PARTS IDENTIFICATION

AN	UPPER LEG FRAME		1PC
BN	LOWER LEG FRAME		1PC
CN	SEAT AND BACK	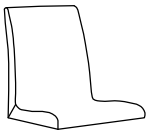	1PC
DN	WOOD CLEAT		2PCS

HARDWARE IDENTIFICATION

1	ALLEN WRENCH (M4 x 110mm - BLK)		1PC
2	BOLT (M6 x 70mm - RBW)		4PCS
3	LOCK WASHER (1/4" - BLK)		4PCS
4	FLAT WASHER (M6 x 13mm - RBW)		4PCS
5	PAN HEAD SCREW (M4 x 30mm-BLK)		8PCS
6	ALLEN HEAD SCREW (M7 X 50MM ZB(10#) - ZB)		1PCS

NOTE :
Phillips head screw driver is required in the assembly process.However,manufacturer does not provide this item.
Quantities shown are for one chair.

ITEM : **106592**

ASSEMBLY INSTRUCTIONS

STEP 1

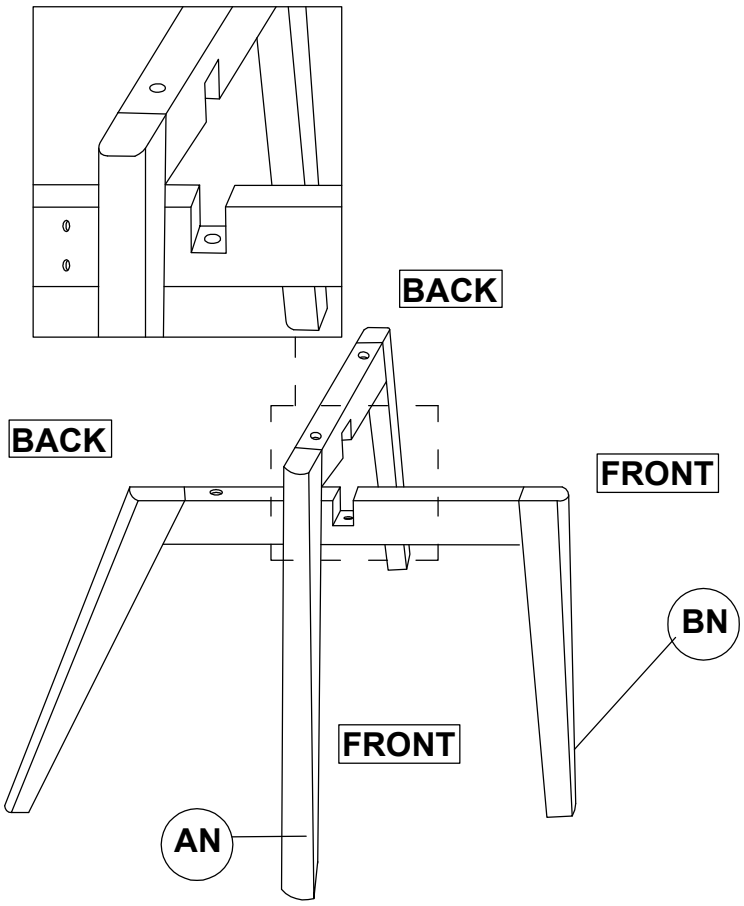

STEP 2

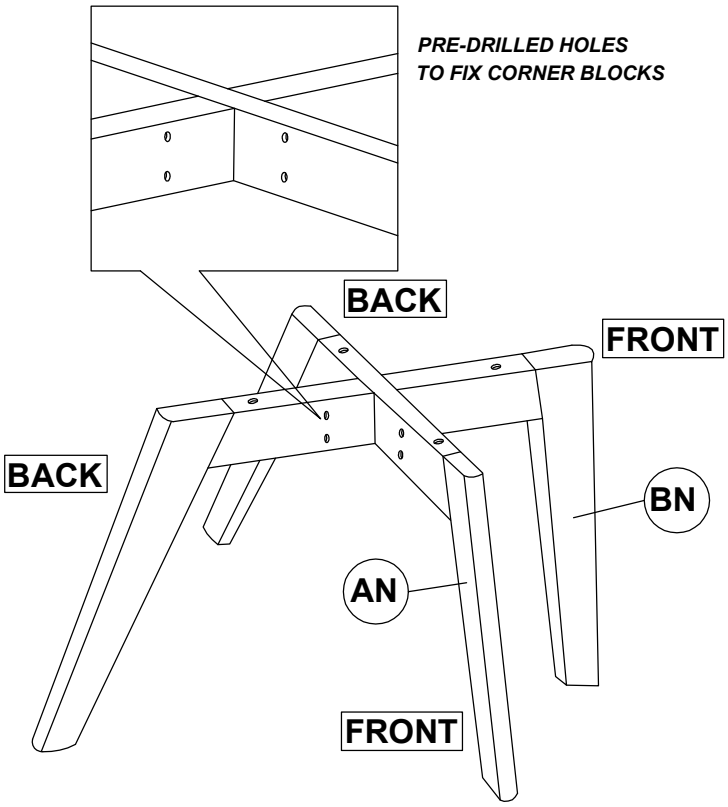

ITEM : **106592**

ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE

STEP 3

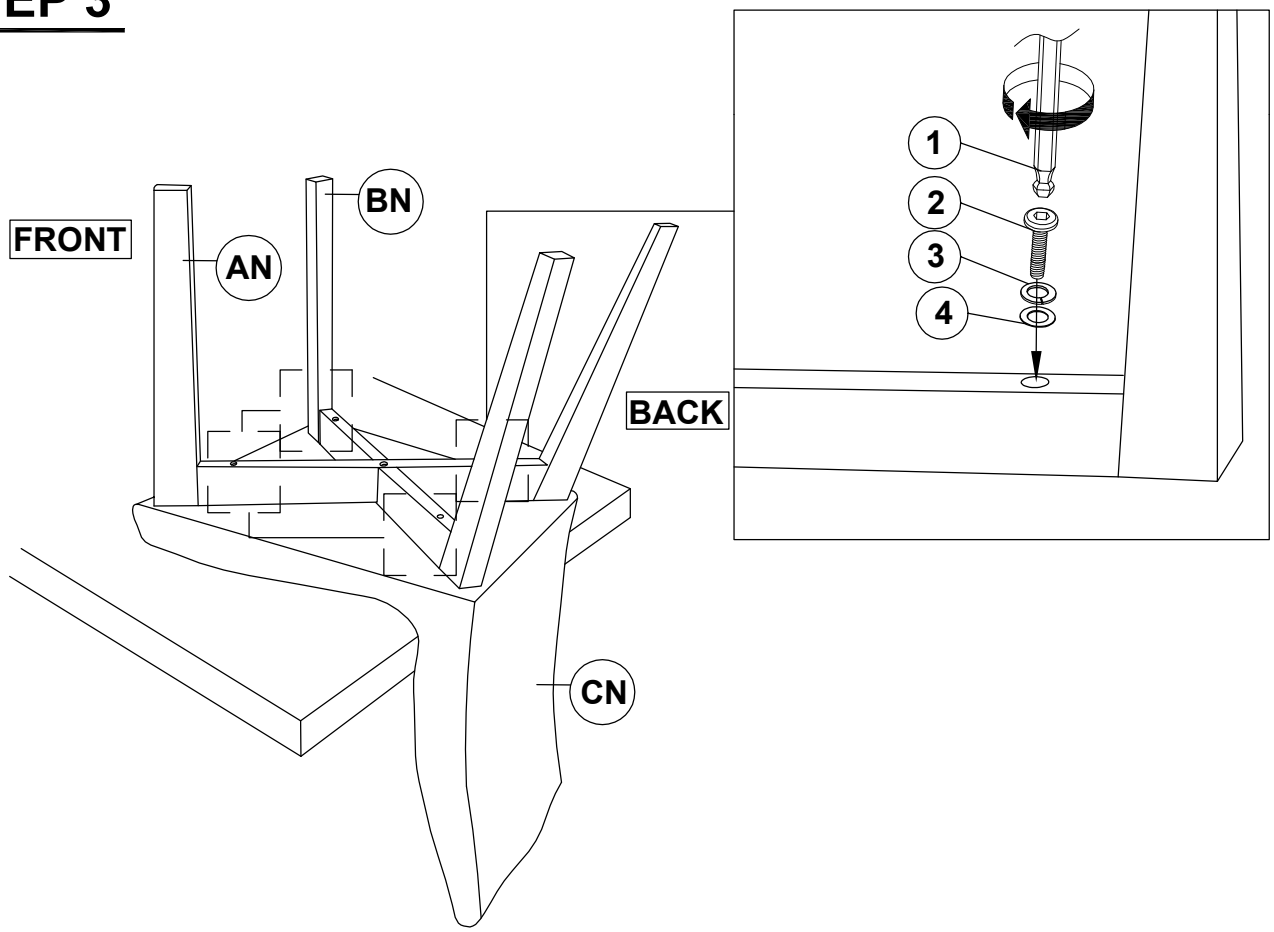

STEP 4

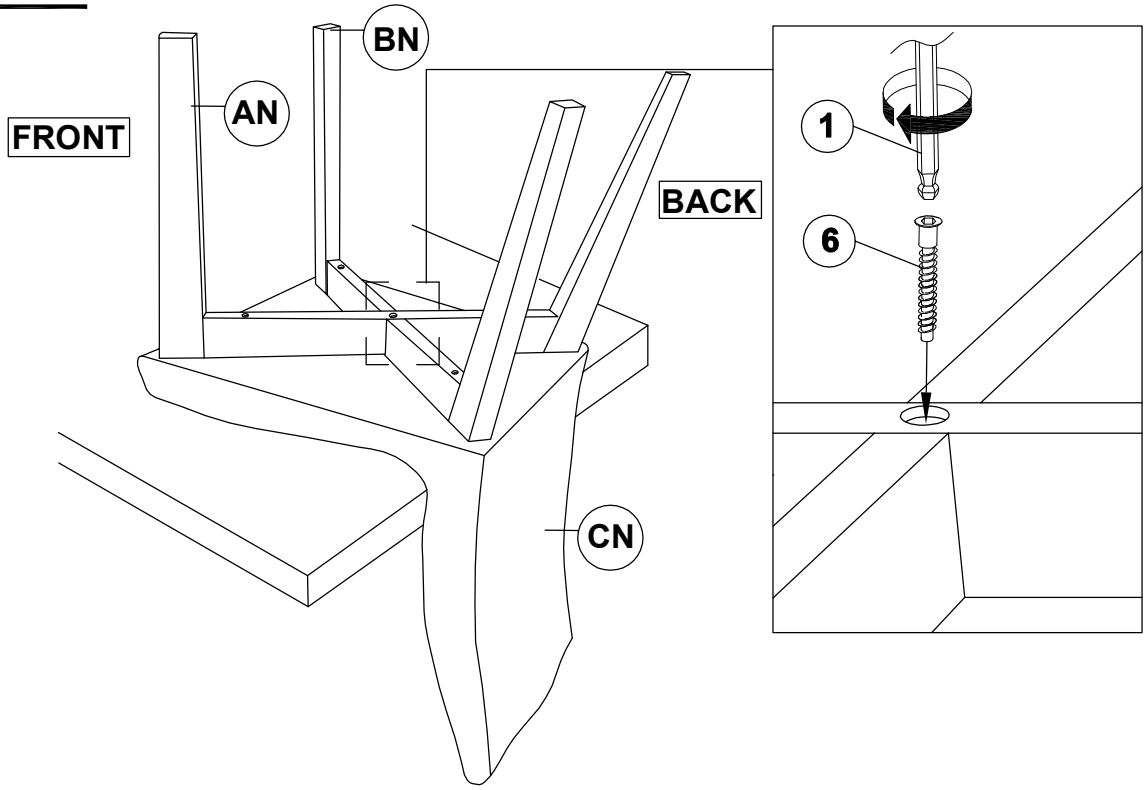

ITEM : **106592**

ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE

STEP 5

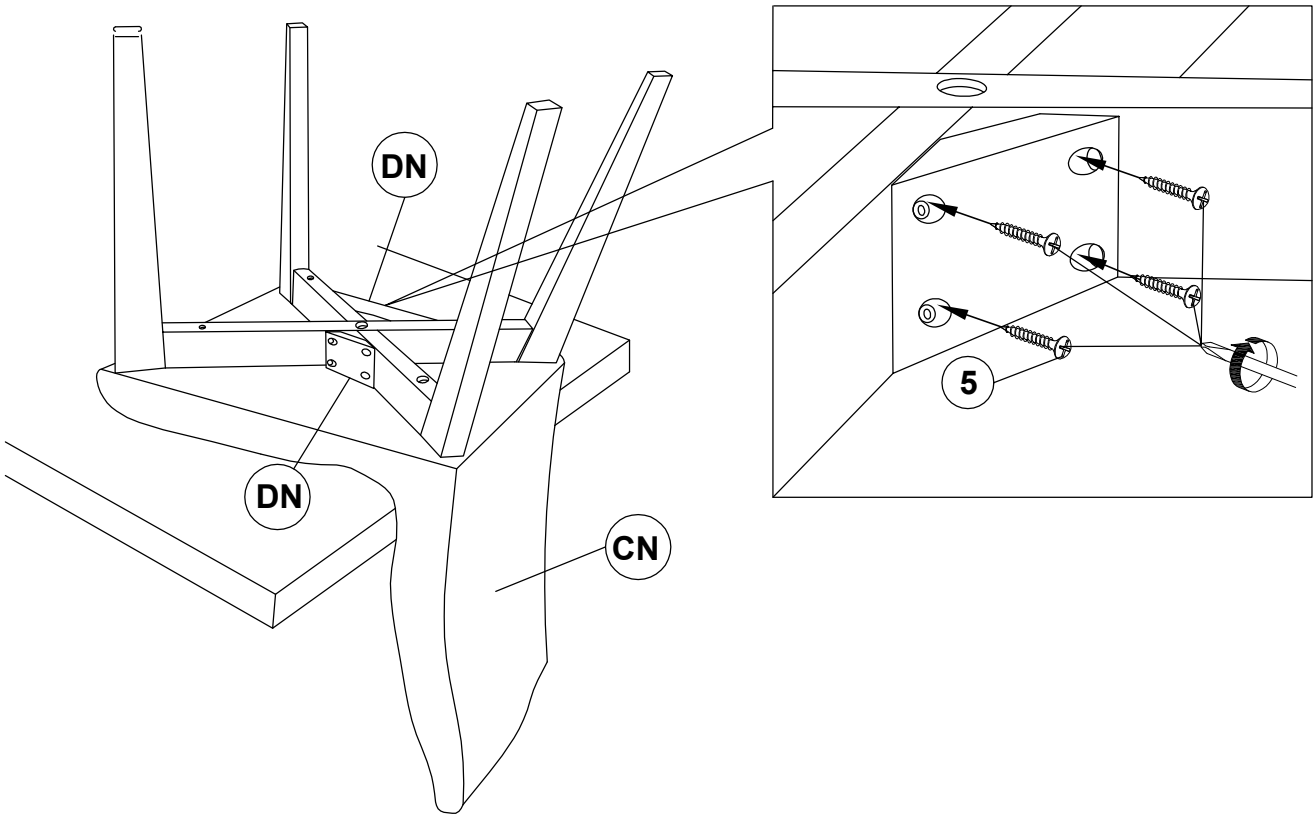

STEP 6

COMPLETE

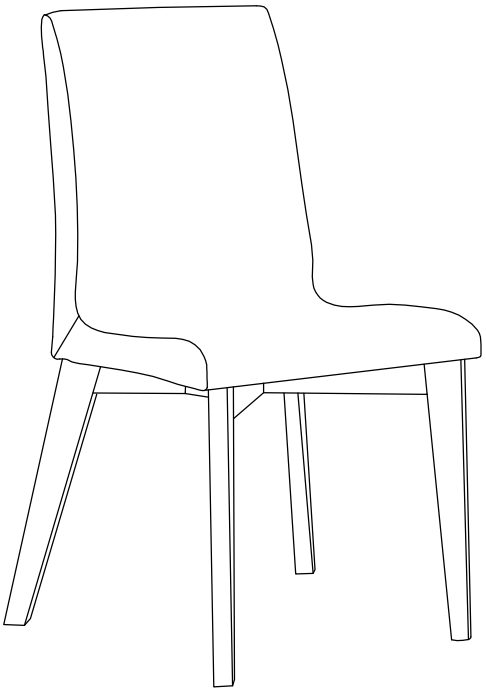

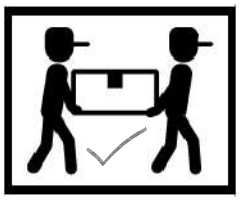

ITEM : **106592**

COASTER FINE FURNITURE

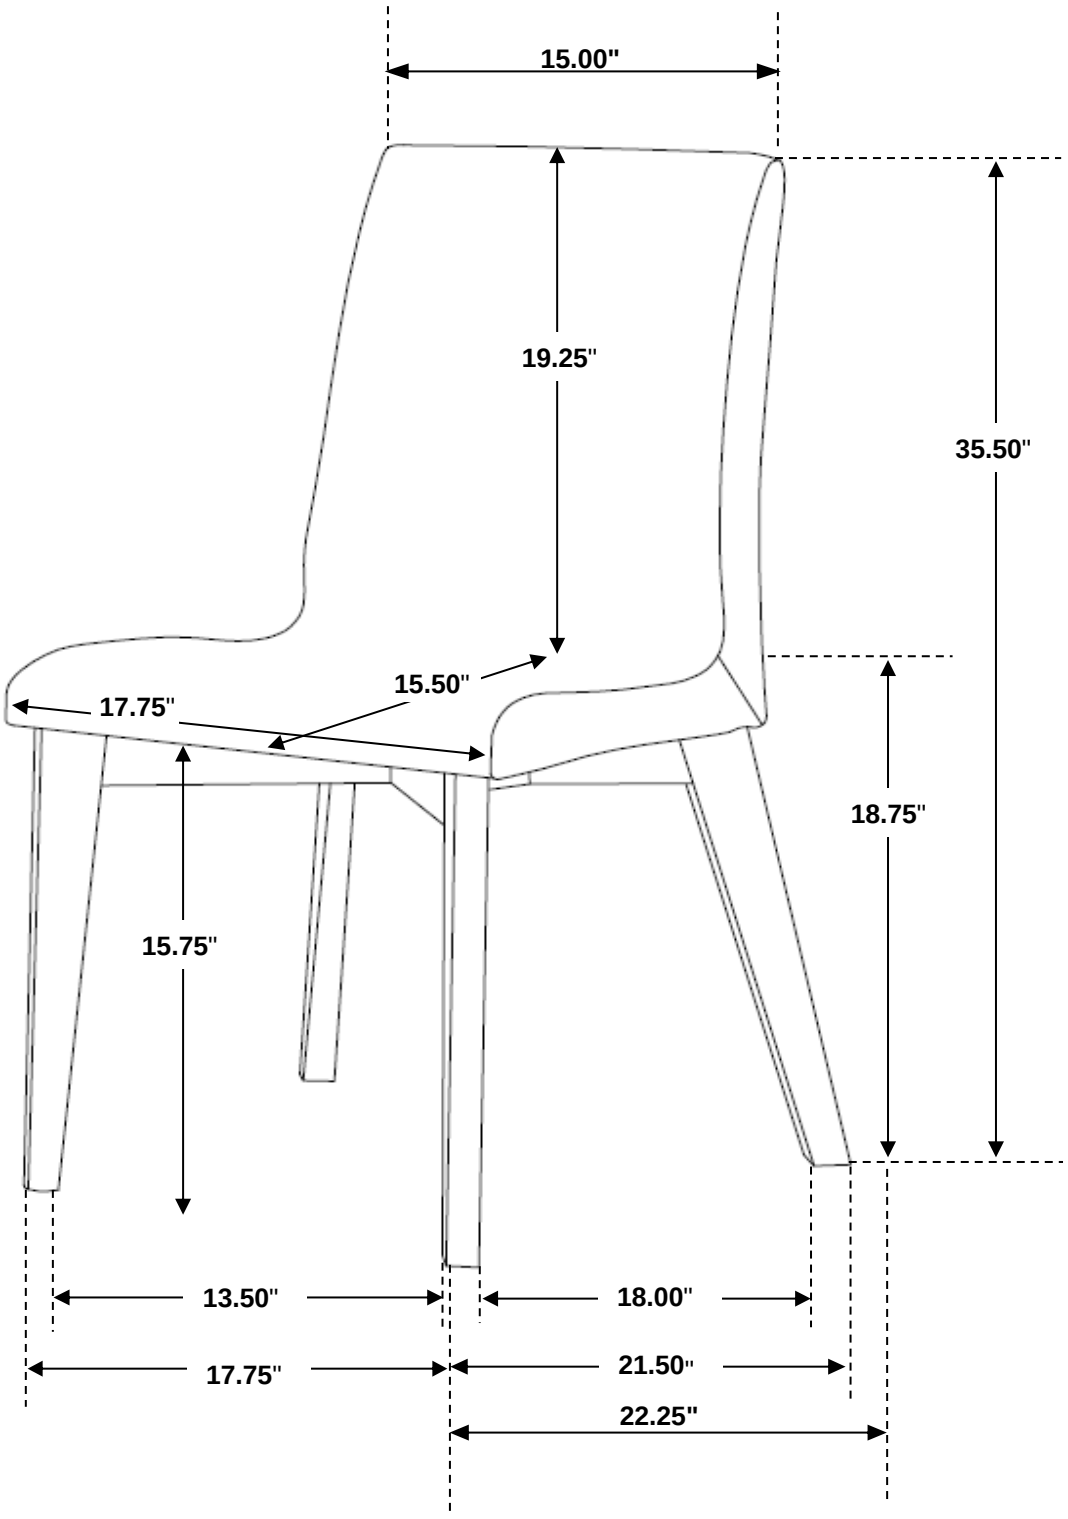

Note: Dimension tolerance ±5%