

QUICK START GUIDE CROSLEY® TOP LOAD WASHING MACHINE

OPERATING INSTRUCTIONS

⚠️WARNING

Fire Hazard

Never place items in the washer that are dampened with gasoline or other flammable fluids.

No washer can completely remove oil.

Do not dry anything that has ever had any type of oil on it (including cooking oils).

Doing so can result in death, explosion, or fire.

**WARNING:** To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS, located in your appliance’s Owner’s Manual, before operating this appliance.

Step 1. Add HE detergent


**NOTE:** See the “Adding Laundry Products” section for more information on adding HE detergent, fabric softener, and/or bleach.

Designed to use only HE High Efficiency detergents.



Step 2. Load clothes


For best results, load garments in loose heaps evenly around the basket wall.

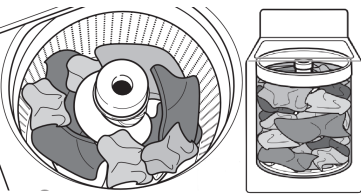


Step 3. Press power to turn on the washer



Step 4. Select the desired cycle for your load\*

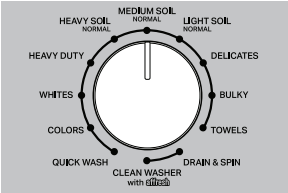

Step 5. Adjust cycle settings and select additional options\*

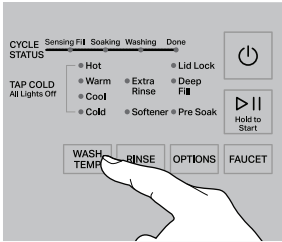

Step 6. Press and hold start/pause to begin cycle



**NOTE:** Start button must be held for 1 second to start cycle. Once the status lights are all illuminated, release the start button.

\*Not all cycles, settings or options are available with all models.


ADDING LAUNDRY PRODUCTS

**IMPORTANT:** Using non-HE detergent will likely result in longer cycle times and reduced rinsing performance. It may also result in component malfunction and, over time, buildup of mold or mildew. HE detergents should be low-sudsing and quick-dispersing to produce the right amount of suds for the best performance.

Adding HE detergent to basket:


Add a measured amount of HE detergent or single-dose laundry packets into the basket. If using Oxi-type boosters, color-safe bleach, or fabric softener crystals, add to the bottom of the washer basket before adding clothes.

**NOTE:** Follow the manufacturer’s instructions to determine the amount of laundry products to use.



Adding liquid chlorine bleach:



Do not overfill, dilute, or use more than 1 cup (236 mL). Do not use color-safe bleach or Oxi products in the same cycle with liquid chlorine bleach.

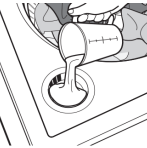

Adding liquid fabric softener to dispenser:


Pour a measured amount of liquid fabric softener into dispenser; always follow manufacturer’s directions for correct amount of fabric softener based on your load size. Dilute liquid fabric softener by filling the dispenser with warm water until liquid reaches the underside of the rim. See Max Fill line arrows.

**IMPORTANT:** The rinse option Softener must be selected to ensure proper distribution at correct time in cycle.

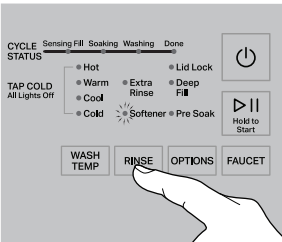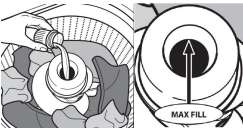

**IMPORTANT:** Retain this guide for future use.

CONTROL PANEL AND FEATURES

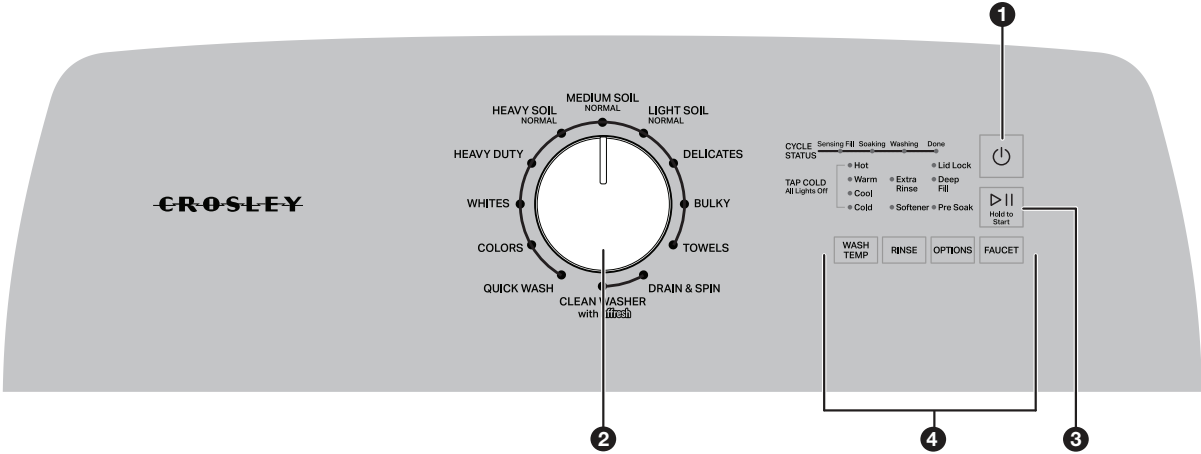

\*Appearance may vary depending on model.

1. POWER

Press to turn on/off or to stop/cancel a cycle.

2. CYCLE KNOB

Turn knob to select desired cycle.

3. START/PAUSE

Press and hold the Start/Pause button to start cycle. Press during a cycle to pause cycle and unlock lid.

**NOTE:** If machine is spinning it may take longer to unlock lid.

4. CYCLE MODIFIERS (Not all modifiers are available on all cycles)

WASH TEMP

Press to modify the cycle’s available temperatures (Tap Cold, Cold, Cool, Warm, Hot).

**NOTE:** Pressing the Wash Temp will toggle through available temperature options. When no lights in the temperature column are illuminated the selected temperature is Tap Cold.

RINSE

Press to modify the cycle’s available rinse options. Press once for Softener, twice for Extra Rinse and three times to activate both.

SOFTENER

Select this option to let the machine know when you have added liquid fabric softener.

EXTRA RINSE

Select this option to add a second rinse.

OPTIONS

Press to add or remove options for each cycle. Press once to add a 30 minutes Pre Soak, twice to activate Deep Fill and three times for both.

DEEP FILL

Use this option to automatically add more water to your wash cycle. You can also use this option to reduce the likelihood of white residue on dark clothing.

PRE SOAK

Touch to add a 30 minute Pre Soak period to help loosen tough stains. The washer will fill, pause to soak, and then begin the selected cycle.

FAUCET


Press to access an instant water stream. Use this feature to pretreat clothes and other items right in the washer. You can also use this feature to manually add water to the machine as desired.

**NOTE:** The washer will drain at the beginning of the cycle if a large volume of water is detected to ensure the machine can correctly sense the load size.

**NOTE:** If the washer detects an out-of-balance condition it may pause and attempt to correct the situation. During this time the Sensing Fill and Washing status indicators will both briefly illuminate.

**WARNING:** Do not wash water-resistant or water repellant-type clothing. Failure to closely follow these instructions may result in an abnormal vibrating and out-of-balance condition that could result in physical injury, property damage, and/or appliance damage.

CHOOSING THE RIGHT CYCLE

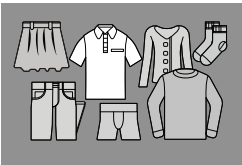


A cycle guide for your washer can be found online at [www.crosley.com](http://www.crosley.com). The document will help identify which cycle to choose for various load types as well as the default cycle options. For example we recommend using the MEDIUM SOIL NORMAL cycle with Warm water for cottons, linens and mixed garment loads.

PRE-TREATING



- Press the Faucet button once to turn on and press again to turn off.
- Faucet will automatically shut off after 10 minutes or when max water level is reached.
- Water will automatically drain if water level becomes too high. Water will also drain after 10 minutes if the lid is left open or 3 hours if the lid is left closed.

MORE WATER WHEN YOU WANT IT

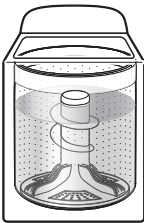

Auto sensing and deep fill

- The washer will adjust the water level to the optimal amount for a High Efficiency wash of the detected load size.
- Press Deep Fill to automatically add more water to your wash cycle.
- It is recommended to use BULKY cycle with Deep Fill option for loads where maximum water level is desired.
- Expect longer cycle times due to extended fill duration when using the Deep Fill option.

CLEANING WITH LESS WATER



The washer has been designed and optimized to provide a thorough cleaning using less water to conserve energy and resources.

As the washer dampens and moves the load, the level of the items will settle in the basket. This is normal, and does not indicate that more items should be added.

**IMPORTANT:** You will not see a full basket of water as with older, less efficient washing machines. It is normal for some of the load to be above the water line.

For detailed installation instruction and maintenance information, winter storage, and transportation tips, please see the Owner’s Manual included with your machine.

ASSISTANCE OR SERVICE AND ADDITIONAL INFORMATION

| For information on any of the following items, a full cycle guide, warranty, detailed product dimensions, or for complete instructions for use and installation, please visit <a href="http://www.crosley.com">www.crosley.com</a> . This may save you the cost of a service call. |                  |                                                                                                                                                                                                                                                                                                                                           |                     |                  |       |             |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|------------------|-------|-------------|
| Register Product                                                                                                                                                                                                                                                                   | Schedule Service | How To's & FAQ                                                                                                                                                                                                                                                                                                                            | Manuals & Downloads | Add Service Plan | Parts | Accessories |
|                                                                                                                                                                                                                                                                                    |                  |                                                                                                                                                                                                                                                                                                                                           |                     |                  |       |             |
|                                                                                                                                                                                                                                                                                    |                  | To speak with a customer service representative or if you have additional questions, call us toll free at:<br><b>1-866-698-2538</b><br>You can write with any questions or concerns at:<br>Customer eXperience Center<br>533 Benson Road<br>Benton Harbor, MI 49022-2692<br>Please include a daytime phone number in your correspondence. |                     |                  |       |             |

GUÍA DE INICIO RÁPIDO DE LA LAVADORA DE CARGA SUPERIOR CROSLEY®

INSTRUCCIONES DE FUNCIONAMIENTO

PANEL DE CONTROL Y FUNCIONES

⚠ ADVERTENCIA



Peligro de incendio

Nunca coloque en la lavadora artículos que estén humedecidos con gasolina o cualquier otro líquido inflamable.

Ninguna lavadora puede eliminar completamente el aceite.

No seque ningún artículo que haya tenido alguna vez cualquier tipo de aceite (incluyendo aceites de cocina).


No seguir estas instrucciones puede ocasionar la muerte, explosión o incendio.

**ADVERTENCIA:** A fin de reducir el riesgo de incendio, choque eléctrico o lesiones personales, lea las INSTRUCCIONES IMPORTANTES DE SEGURIDAD que se encuentran en el Manual del propietario, antes de usar el electrodoméstico.

**Paso 1. Agregue detergente HE**  
**NOTA:** Para obtener más información sobre cómo agregar detergente de alto rendimiento (HE), suavizante de telas o blanqueador, consulte “Cómo agregar productos de lavandería”. Diseñada para utilizar solamente detergentes de alto rendimiento (HE).



**Paso 2. Cargue la ropa**  
Para obtener mejores resultados, coloque las prendas en montones flojos y de modo parejo alrededor de la pared de la canasta.

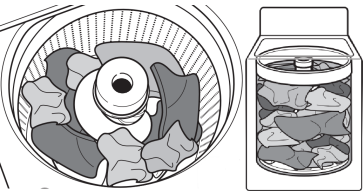


**Paso 3. Presione Power (Encendido) para encender la lavadora**



**Paso 4. Seleccione el ciclo deseado para su carga\***



**Paso 5. Ajuste la configuración del ciclo y seleccione opciones adicionales\***

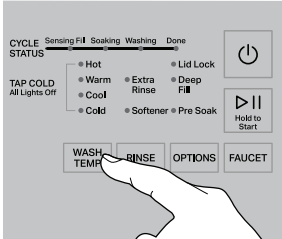

**Paso 6. Mantenga presionado Start/Pause (Inicio/Pausa) para comenzar el ciclo**




**NOTA:** Para iniciar el ciclo, debe presionar el botón Start (Inicio) durante 1 segundo. Una vez que las luces de estado se iluminen, suelte el botón Start (Inicio).

*\*No todos los ciclos, ajustes u opciones están disponibles con todos los modelos.*


## CÓMO AGREGAR PRODUCTOS DE LAVANDERÍA

**IMPORTANTE:** El uso de un detergente que no es de alto rendimiento probablemente derive en tiempos de ciclo más prolongados y menor rendimiento del enjuague. También puede resultar en mal funcionamiento de los componentes y, con el pasar del tiempo, en la acumulación de moho. Los detergentes HE deben ser de baja espuma y rápida dispersión para producir la cantidad adecuada de espuma a fin de lograr un rendimiento óptimo.

**Para agregar detergente HE a la canasta:**  
Agregue una cantidad medida de detergente de alto rendimiento (HE) o paquetes de detergente de lavandería de dosis única en la canasta. Si va a usar un producto para realzar el lavado, como Oxi, blanqueador no decolorante o cristales de suavizante para telas, agréguelo en el fondo de la canasta de lavado antes de agregar las prendas.  
**NOTA:** Siga las instrucciones del fabricante para determinar la cantidad de productos de lavandería que debe usar.

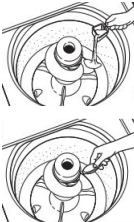




**Cómo agregar blanqueador líquido con cloro**  
No llene en exceso, diluya ni utilice más de 1 taza (236 ml). No utilice blanqueador para ropa de color ni productos Oxi en el mismo ciclo con blanqueador líquido con cloro.

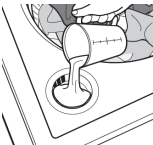

**Cómo agregar suavizante de telas líquido al dispensador:**

Vierta una cantidad medida de suavizante de telas líquido en el depósito; siempre siga las instrucciones del fabricante para usar la cantidad correcta de suavizante para telas según el tamaño de la carga. Para diluir el suavizante de telas líquido, llene el depósito con agua tibia hasta que el líquido llegue a la parte inferior del borde. Vea las flechas de la línea máxima de llenado.

**IMPORTANTE:** Se debe seleccionar la opción de enjuague Softener (Suavizante) para garantizar una distribución adecuada en el momento correcto del ciclo.

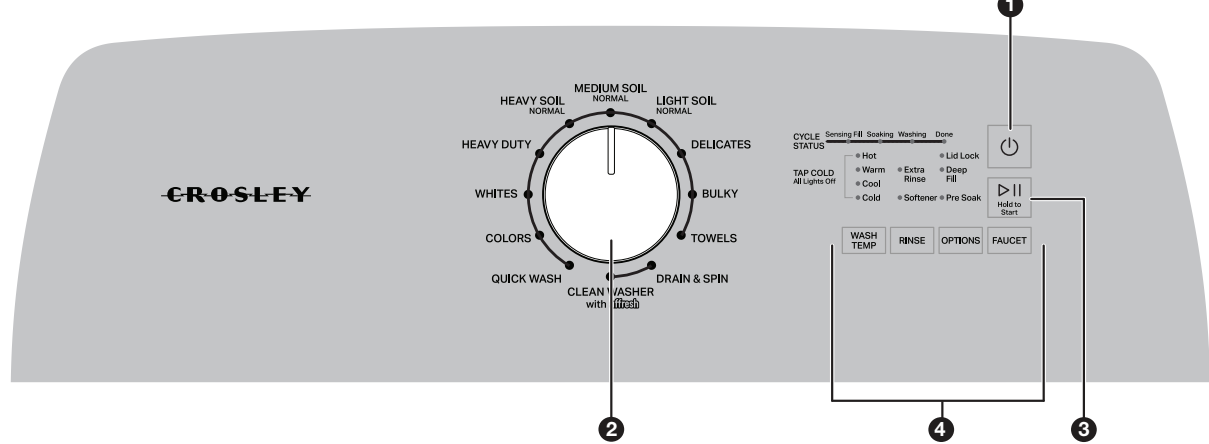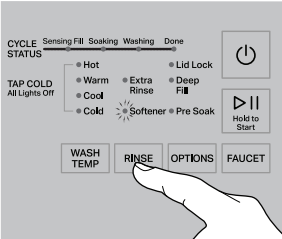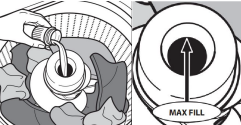

*\*La apariencia puede variar según el modelo.*


- 1. POWER (ENCENDIDO)**  
Presiónelo para encender/apagar o para detener/cancelar un ciclo.
- 2. PERILLA DE CICLO**  
Gire la perilla para seleccionar el ciclo deseado.
- 3. START/PAUSE (INICIO/PAUSA)**  
Mantenga presionado el botón Start/Pause (Inicio/Pausa) para iniciar el ciclo. Presione esta opción durante un ciclo para pausarlo y desbloquear la tapa.  
**NOTA:** Si la máquina está centrifugando, la tapa puede tardar más para desbloquearse.

- 4. MODIFICADORES DE CICLO** (No todos los modificadores están disponibles con todos los ciclos)  
**WASH TEMP (TEMPERATURA DE LAVADO)**  
Presione esta opción para modificar las temperaturas de ciclo disponibles (Tap Cold [Fría del grifo], Cold [Muy fría], Cool [Fría], Warm [Tibia], Hot [Caliente]).  
**NOTA:** Si presiona el botón Wash Temp (Temperatura de lavado), alternará entre las opciones de temperatura disponibles. Cuando ninguna de las luces de la columna de temperatura está encendida significa que la temperatura seleccionada es Tap Cold (Fría del grifo).

**RINSE (ENJUAGUE)**  
Presione para modificar las opciones de enjuague disponibles del ciclo. Presione una vez para Softener (Suavizante), dos veces para Extra Rinse (Enjuague adicional) y tres veces para activar ambas opciones.  
**SOFTENER (SUAVIZANTE)**  
Seleccione esta opción para que la máquina sepa que agregó suavizante de telas líquido.


**EXTRA RINSE (ENJUAGUE ADICIONAL)**  
Seleccione esta opción para agregar un segundo enjuague.

## CÓMO ELEGIR EL CICLO ADECUADO

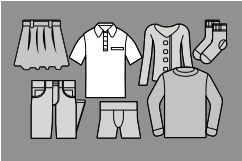

Puede encontrar una guía de ciclos de la lavadora en línea en [www.crosley.com](http://www.crosley.com). El documento ayuda a identificar qué ciclo puede elegir para los diferentes tipos de carga y también las opciones de ciclo predeterminadas. Por ejemplo, recomendamos que usen el ciclo MEDIUM SOIL (SUCIEDAD MEDIA) NORMAL (NORMAL) con agua tibia para cargas de ropa de algodón, lino y mixtas.

## MÁS AGUA CUANDO LA NECESITA

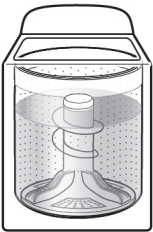

- Auto sensing (Detección automática) y Deep Fill (Llenado profundo)**
- La lavadora ajusta el nivel del agua en la cantidad óptima para lavar con gran eficiencia el tamaño de carga detectado.
  - Presione Deep Fill (Llenado profundo) para agregar más agua al ciclo de lavado.
- Se recomienda utilizar el ciclo BULKY (VOLUMINOSO) con la opción Deep Fill (Llenado profundo) para cargas en que se desea el nivel máximo de agua.
  - Es probable que los tiempos de ciclos sean más prolongados debido al mayor tiempo de llenado cuando se usa la opción Deep Fill (Llenado profundo).



La lavadora está diseñada y optimizada para proporcionar una limpieza profunda con menos agua a fin de conservar la energía y los recursos. A medida que la lavadora moje y mueva la carga, el nivel de los artículos se asentará en la canasta. Esto es normal y no indica que deban agregarse más prendas.  
**IMPORTANTE:** No observará una canasta llena de agua, como en las lavadoras antiguas y menos eficientes. Es normal que parte de la carga quede por encima del nivel de agua.

## ASISTENCIA O SERVICIO E INFORMACIÓN ADICIONAL

|                                                                                                                                                                                                                                                                                                                                                     |                                  |                                                                                                                                                                                                                                                                                                                                                                                                                                    |                      |                          |        |            |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|--------------------------|--------|------------|
| Para obtener información sobre cualquiera de los siguientes artículos, la guía de ciclos completa, garantía, las dimensiones detalladas del producto o para obtener instrucciones completas de uso e instalación, visite <a href="http://www.crosley.com">www.crosley.com</a> . Esto le podría ahorrar el costo de una llamada al servicio técnico. |                                  |                                                                                                                                                                                                                                                                                                                                                                                                                                    |                      |                          |        |            |
| Registrar el producto                                                                                                                                                                                                                                                                                                                               | Solicitar una visita de servicio | Instrucciones y preguntas frecuentes                                                                                                                                                                                                                                                                                                                                                                                               | Manuales y descargas | Agregar plan de servicio | Piezas | Accesorios |
|                                                                                                                                                                                                                                                                                                                                                     |                                  |                                                                                                                                                                                                                                                                                                                                                                                                                                    |                      |                          |        |            |
|                                                                                                                                                                                                                                                                                                                                                     |                                  | Para hablar con un representante de atención al cliente o si tiene más preguntas, llámenos sin cargo al <b>1-866-698-2538</b> . Puede escribir cualquier pregunta o inquietud a: Customer eXperience Center, 533 Benson Road, Benton Harbor, MI 49022-2692. Incluya en su correspondencia un número de teléfono en el que se le pueda localizar durante el día.<br><b>IMPORTANTE:</b> Conserve esta guía para su uso en el futuro. |                      |                          |        |            |