ASSEMBLY INSTRUCTION

HOOKER® FURNITURE

ITEM: 5878-75007-80 Rectangle Dining Table Base (C)
5878-75008-80 Rectangle Dining Table Top (C)

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK				
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Allen Wrench	73*29*5mm	1PC
B		Bolt	Ø5/16*35mm	8PCS
C		Lock Washer	Ø5/16"	12PCS
D		Flat Washer	Ø5/16"	12PCS
E		Bolt	Ø5/16"*60mm	4PCS

PARTS LIST			
NO.	DRAWING	DESCRIPTION	Q'TY
1		Table Top	1PC
2		Stretcher	1PC
3		Pedestal	2PCS
4		Leaf	2PCS

Step 1

Step 1: Attach pedestals (3) to table top (1) with bolts (B), lock washers (C) and flat washers (D), secure bolts (B) with allen wrench (A).

Step 2

Step 2: Attach stretcher (2) to pedestals (3), insert bolts (E), lock washers (C) and flat washers (D), secure bolts (E) with allen wrench (A).
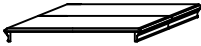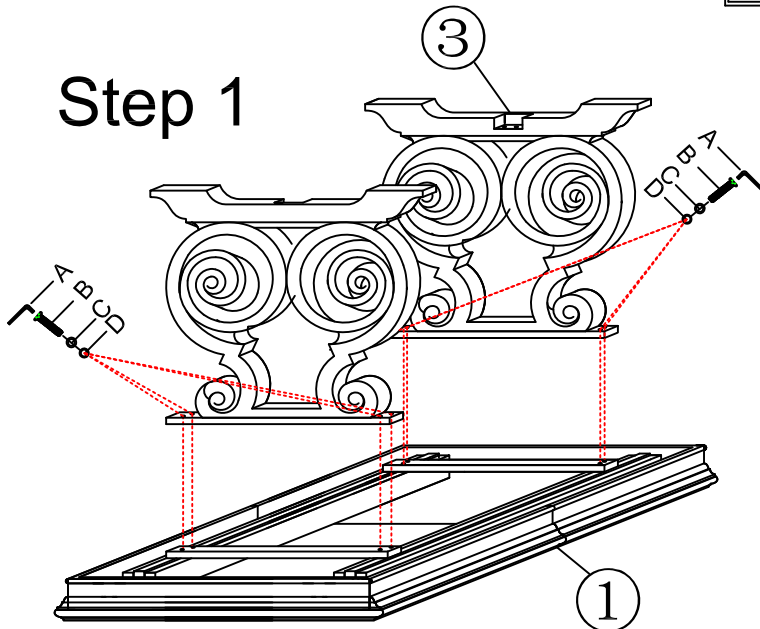
HOOKER® FURNITURE

ASSEMBLY INSTRUCTION

ITEM: 5878-75007-80 Rectangle Dining Table Base (C)
5878-75008-80 Rectangle Dining Table Top (C)

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
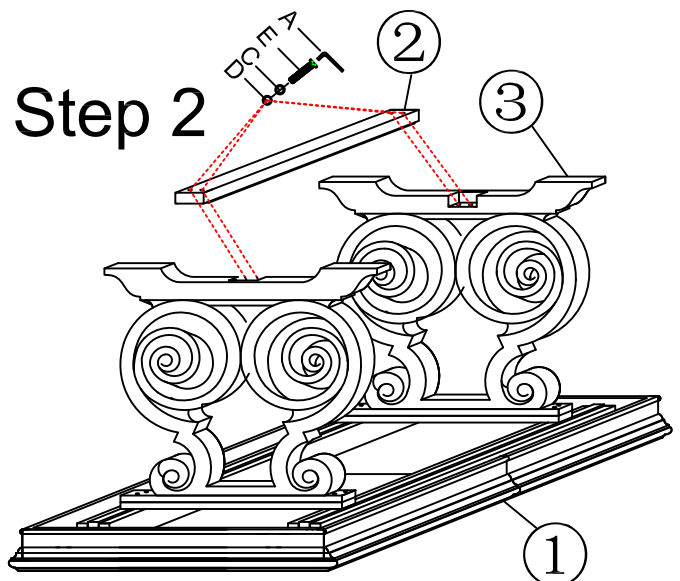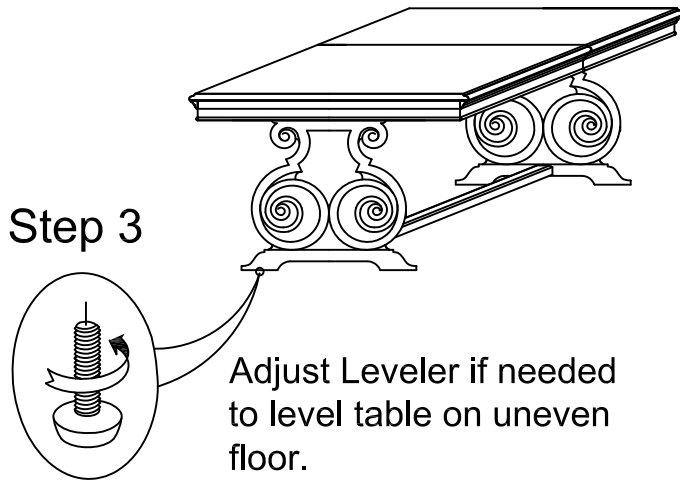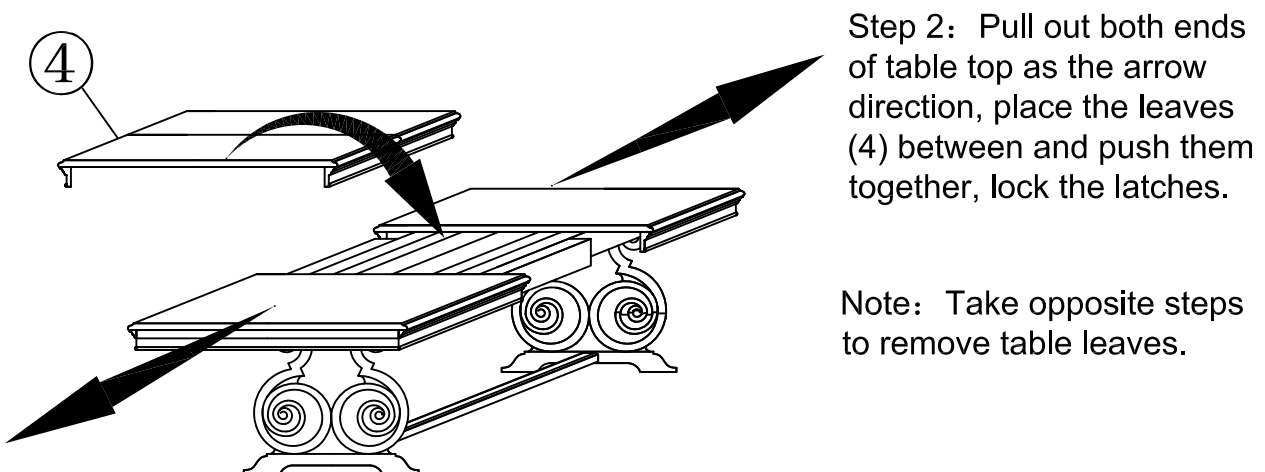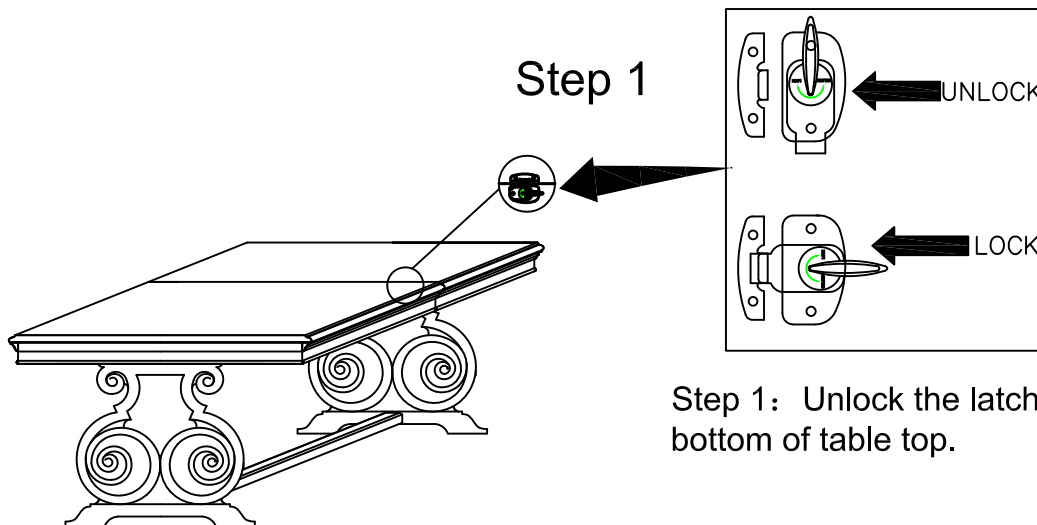Read all instruction and study the drawing carefully before starting the assembly process.

Step 3

Adjust Leveler if needed to level table on uneven floor.

Instruction for table leaves:

Step 1

UNLOCK

LOCK

Step 1: Unlock the latches at the bottom of table top.

④

Step 2: Pull out both ends of table top as the arrow direction, place the leaves (4) between and push them together, lock the latches.

Note: Take opposite steps to remove table leaves.