Assembly Instruction For

CONSOLE WITH 23" FIREPLACE INSERT

LA-16850-3-FP

Caution : Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PART LIST


NO.	PART DESC		CODE	Q'TY
A		CONSOLE	LA-16850-3-FP	1
B		LHF Door in Grey	PLA-16850-3-FPDORL	1
C		RHF Door in Grey	PLA-16850-3-FPDORR	1
D		Remote For Fireplace	PLA-16850-RMT	1

⚠ Only tighten all bolts when all bolts aligned with bolt inserts

HARDWARE


NO.		HARDWARE DESC	CODE	Q'TY
1		HANDLE	PLA-16850-HAD	2
2		HANDLE BOLT (Ø5/32*7/8")		4
3		PLASTIC BUTTON FOR DOOR	PLA-16850-PAD	6
4		ANTI-TIP KIT - METAL (SET)	P-ATKNCT-M	1
		SCREW-DRIVER (NOT PROVIDED)		1

STEP 1 OPEN CONSOLE DOORS

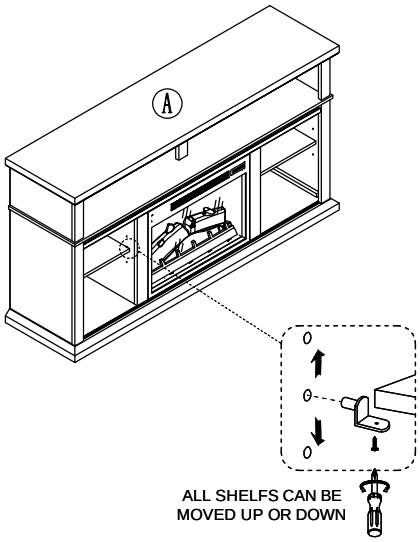

STEP 2 ATTACH HANDLE TO OUTSIDE OF DOORS

! Batteries are not included in the fireplace remote
Battery Model: AAA
Qty: 2 pcs

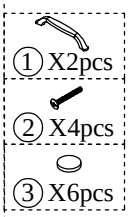


Assembly Instruction For

CONSOLE WITH 23" FIREPLACE INSERT

LA-16850-3-FP

STEP 3 INSTALL DOOR PANEL

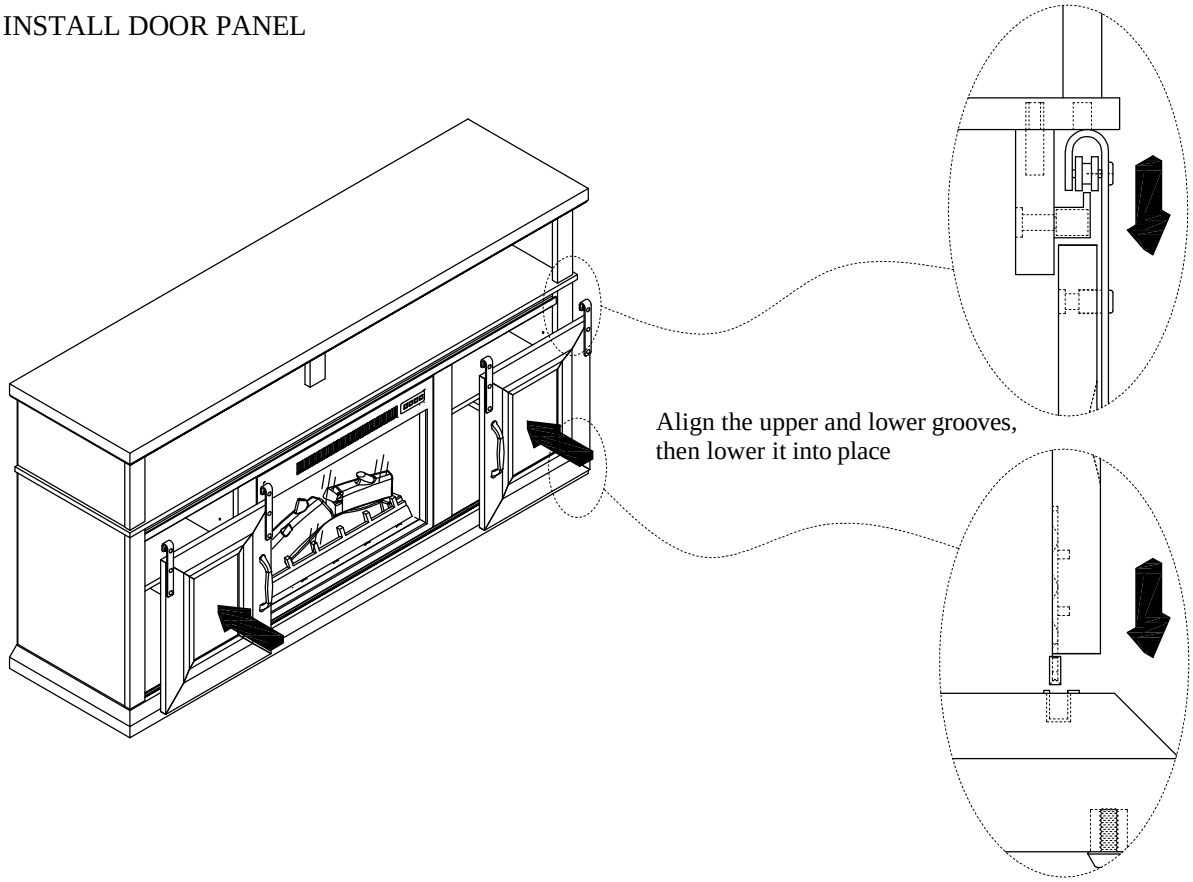

COMPLETED

