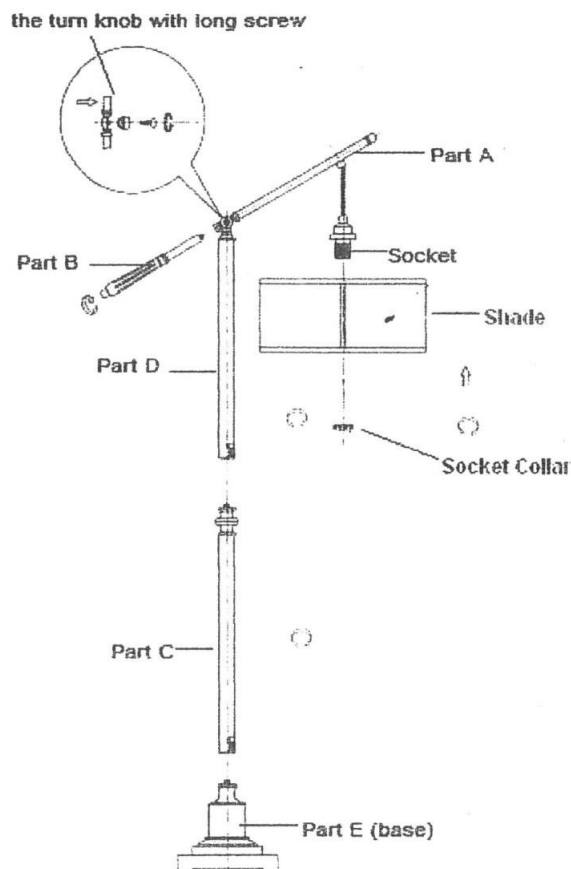UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE# 28584-1

Careful unpack all lamp parts from the carton.

1. Place the base in an upright position on the floor
2. Thread the **Part C** onto the **Part E(base)** and turn clockwise to tighten secure.
3. Screw the **Part D** into the **Part C** and turn clockwise to tight secure.
4. Thread the **Part B** onto the **Part A** Turn knob with long screw tighten secure.
5. Position the **Socket** through the hole on the bottom of the **Shade**. Thread the **Socket Collar** onto the **Socket** to secure them. Hand tighten until snug.
6. Use ON/OFF 150W bulb (not included).

the turn knob with long screw

Part A

Socket

Part B

Shade

Part D

Socket Collar

Part C

Part E (base)

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.