

Edge Flex Frame

Installation Instructions

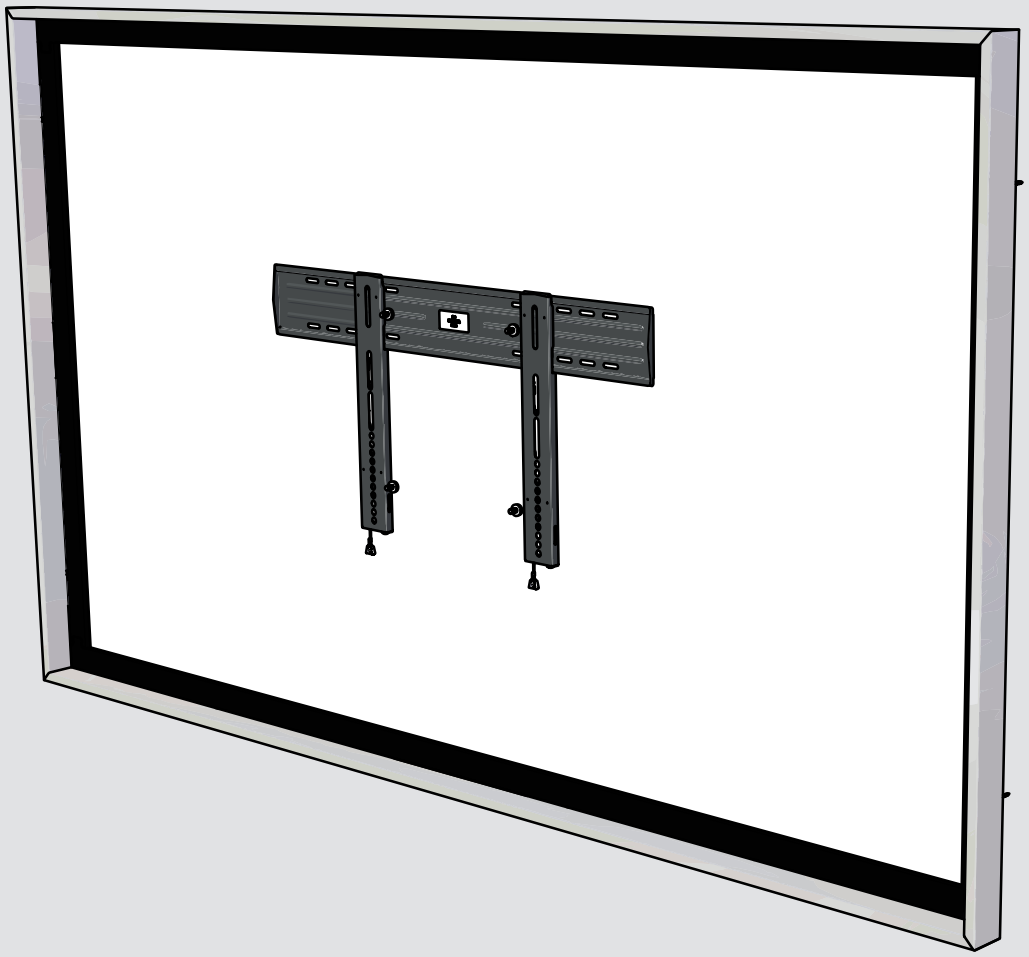

Scan QR for video installation guide.

Leon®

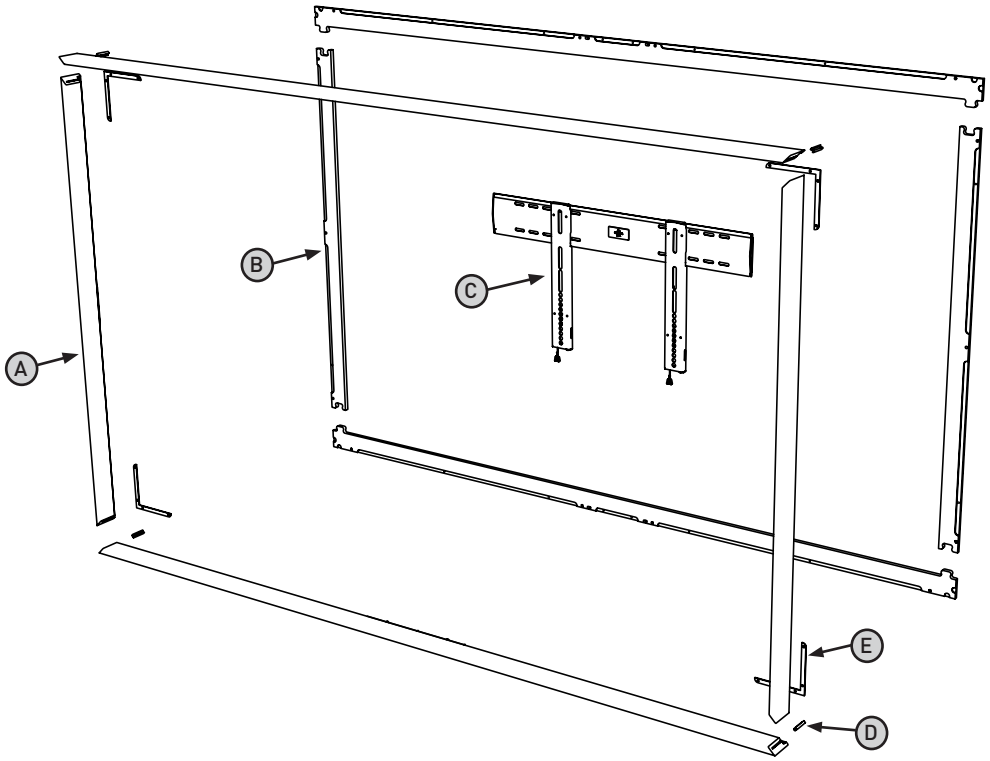

Hardware Included

A	B	C
4X Edge Flex Frame	4X Edge Flex Frame "Puzzle Piece" Backboard	1X Sanus LL11 TV Mounting Bracket

D	E	F	G
4X Corner Splines	4X Corner Bracket	16X #6 x 1/2" Wood Screw	8X #6 x 1 1/2" Pan head screws & anchors 4X

H	I	J	K
1X Mounting Template	4X Plastic Snap Shims	4X 1/8" Nylon Spacer	4X 1/16" Nylon Spacer


Drawings not to scale

Installation Tips

⚠ **IMPORTANT!** ALL INSTALLS REQUIRE SPACERS BETWEEN THE TV MOUNTING BRACKET AND THE TV (MINIMUM 1/16"). REFER TO THE ENGINEERING DRAWING ENCLOSED TO DETERMINE THE PROPER SPACER DEPTH.


Choose an installation location free of physical obstructions. Working near electrical equipment and wires poses an electrocution hazard. Turn off nearby electrical circuits from the breaker. Use a non-contact voltage tester to confirm that the installation location is free of live electrical wires and equipment prior to installation. Contact a qualified electrician before making any modifications to electrical wiring. Determine the potential hazards of working with hand or power tools and take the appropriate safety precautions. Use personal protective equipment (PPE) as appropriate, including, but not limited to: vision, hearing, and respiratory protection. Consult local building and/or electrical codes prior to installation of speakers, cabling, or electrical equipment. Contact local utilities provider for survey of service lines to ensure safe placement.

Step 1.
Prepare the Frame Assembly

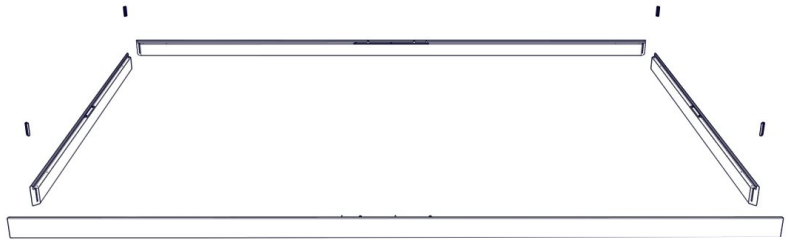


On an even, flat surface, align the four legs of the Edge Flex Frame (A)

Step 2.
Assemble Frame

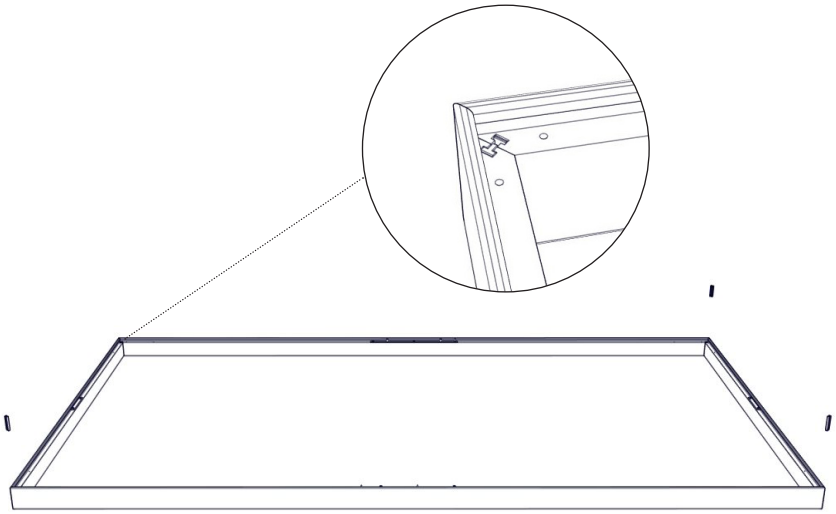


While keeping the frame corners pressed tightly together, insert the Corner Splines (D) into the pre-milled pockets of all four corners using a flat-head screwdriver.

Step 3.
Install Corner Brackets

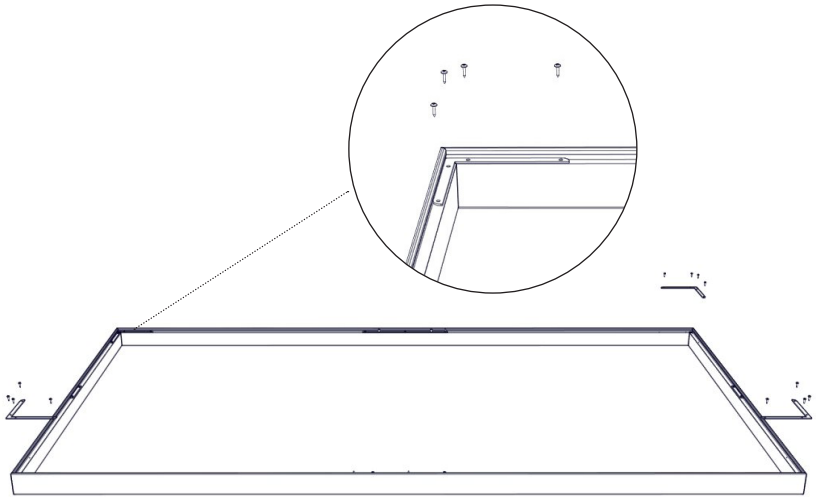


Using the provided #6 x 1/2" wood screws (F), affix the Corner Brackets (E) in each corner making sure to keep the frame corners as tight as possible.

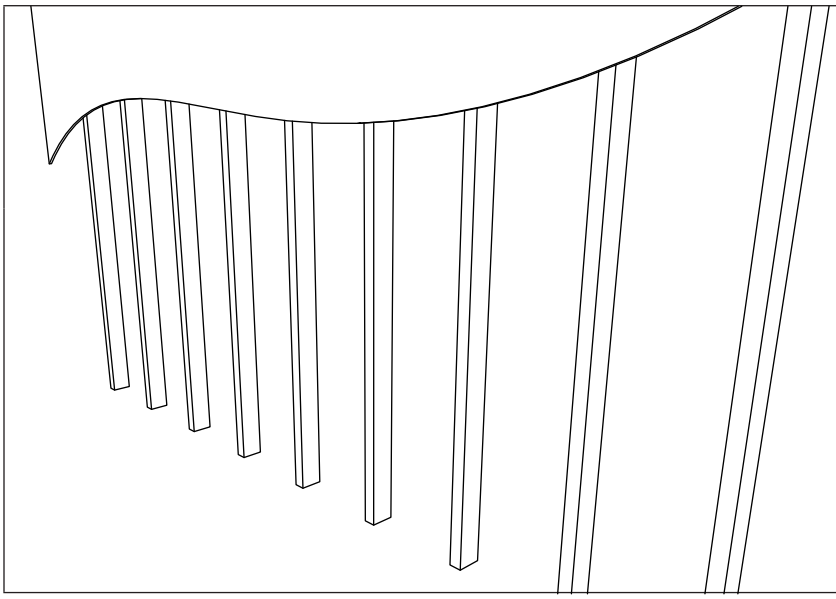


Step 4.
Determine Wall Mounting Location

Find a wall mounting location with adequate studs to hang both the Edge Flex Frame and the TV.

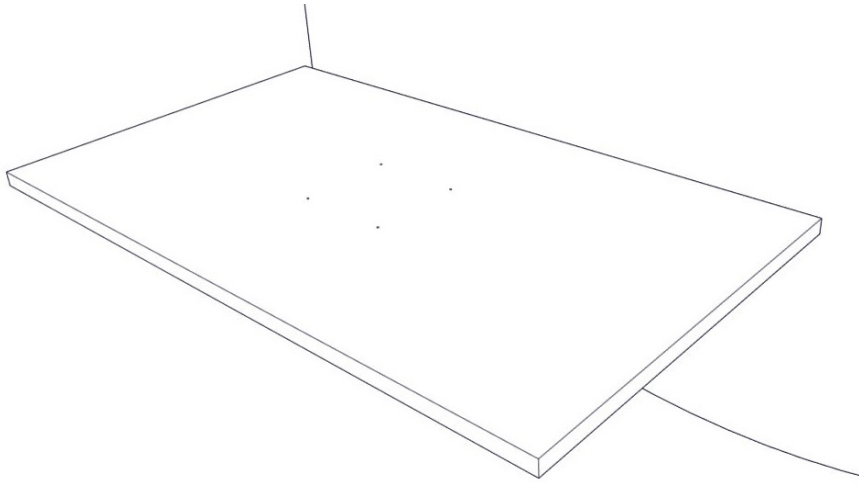

Step 5.
Place TV Face Down


Place the TV face down on a clean, padded surface.

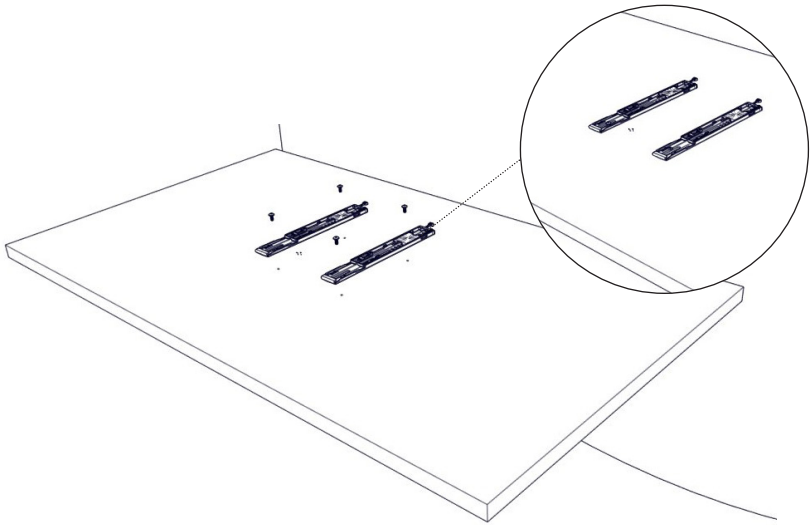

Step 6.
Attach TV Uprights with Recommended Spacers


Attach TV Bracket Uprights from Sanus TV Bracket box (C) to the back of the TV using the Sanus hardware provided.

IMPORTANT! Refer to the Leon Engineering drawing to determine the proper spacers between the TV and TV bracket. A minimum of 1/16" spacer is required. 1/8" and 1/16" spacers are included in this kit (J)(K).

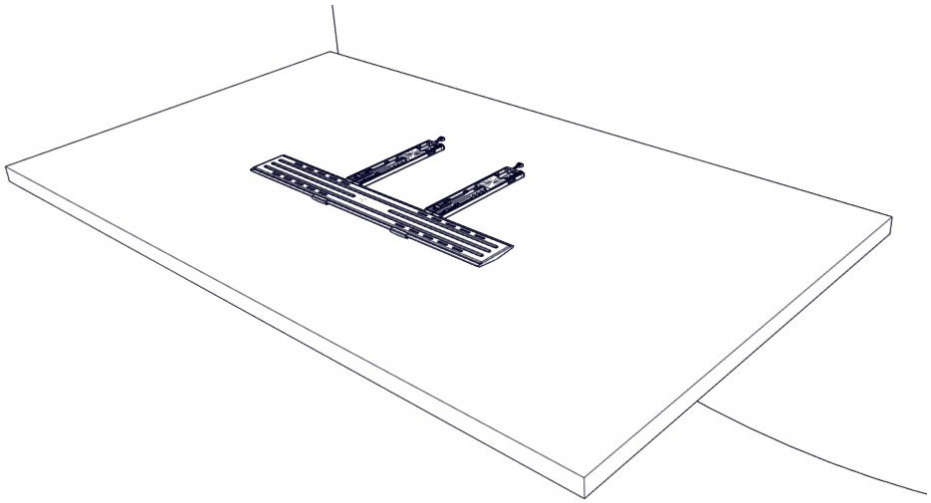


Step 7.
Attach the Wall Plate

Latch the TV Bracket Wall Plate found within the Sanus TV Bracket box (C) to to the TV Bracket Uprights as if it were mounted to the wall.

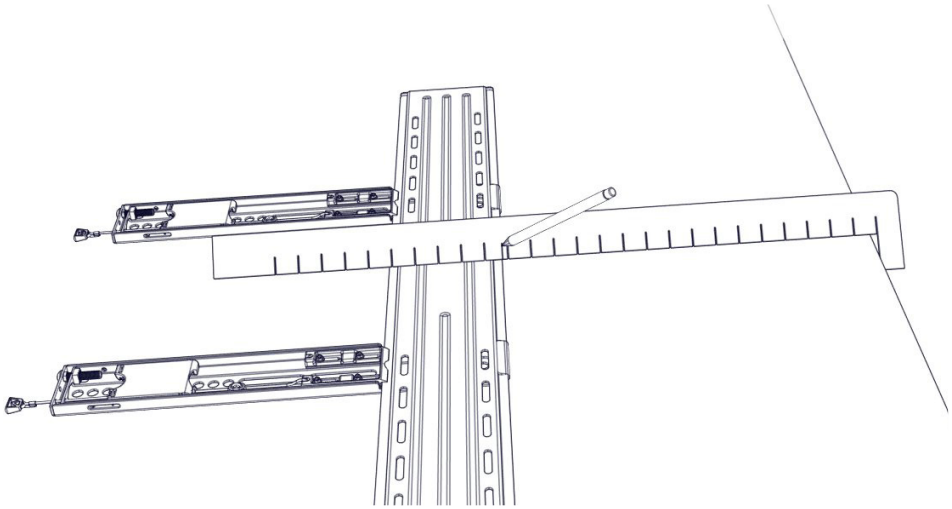


Step 8.
Position Mounting Template

Position the Mounting Template (H) on the back of the TV with the lip held tightly along the top edge of the TV. Then mark a line on the Mounting Template to indicate the top edge of the TV Bracket Wall Plate. Set template aside.

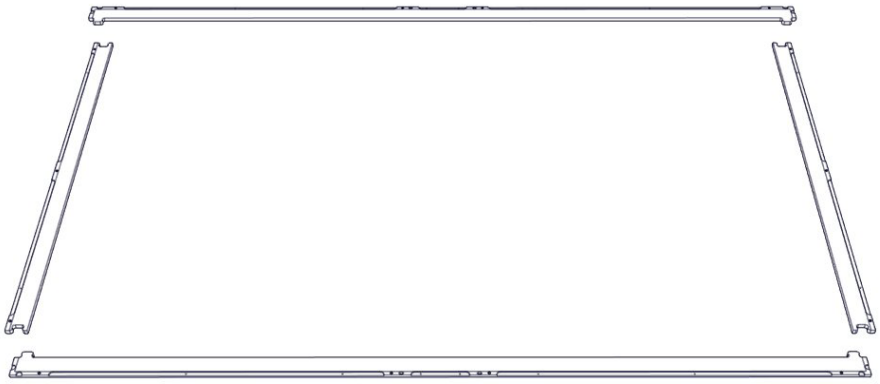


Step 9.
Assemble the Edge Flex Frame Backboard

Assemble the Edge Flex Frame Backboard (B) by connecting the pieces together like a puzzle. NOTE: The rabbeted edge should be on the outside of the backboard.

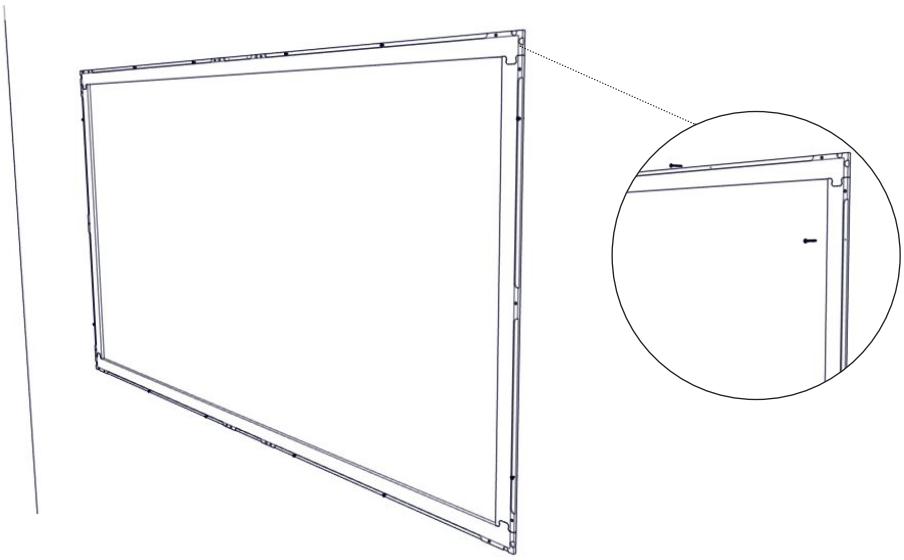


Step 10.
Affix Backboard to the Wall

Install the Edge Flex Frame Backboard to the wall by screwing the provided #6 x 1 1/2" (G) screws in the pre-drilled holes (use wall anchors in areas without studs). Use Plastic Snap Shims (I) where necessary to ensure the Backboard plane is level.

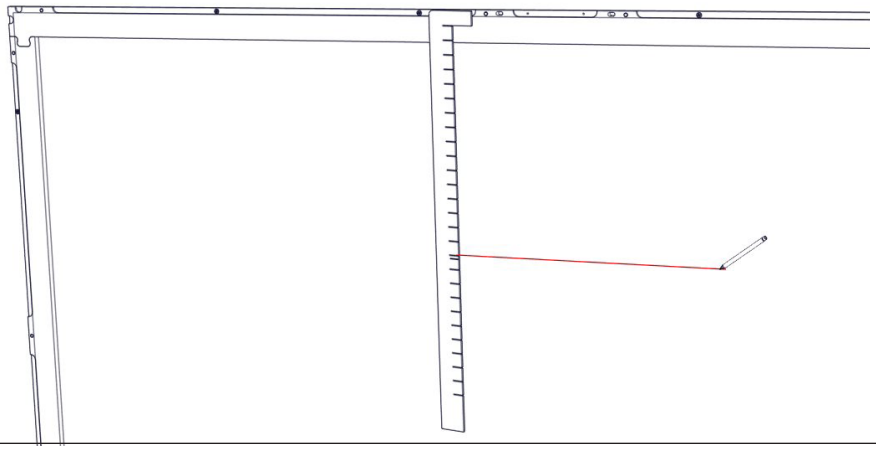


Step 11.
Mark the TV Bracket Wall Plate Location

Hold the Mounting Template flush to the top of the Edge Flex Frame Backboard and mark the wall at the same height as your pre-marked line to set the height of the top edge of the TV Bracket Wall Plate.

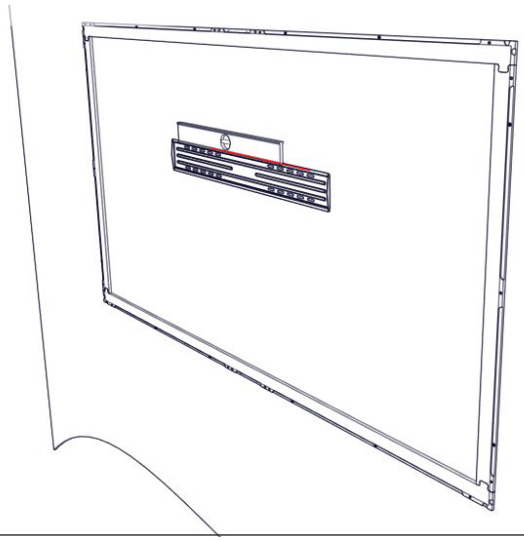


Step 12.
Attach the TV Bracket Wall Plate

Using a level, mount the TV Bracket Wall Plate to the wall with the top edge aligned with the mark from the previous step. Refer to the installation instructions provided with the Sanus TV bracket for the appropriate hardware selection.

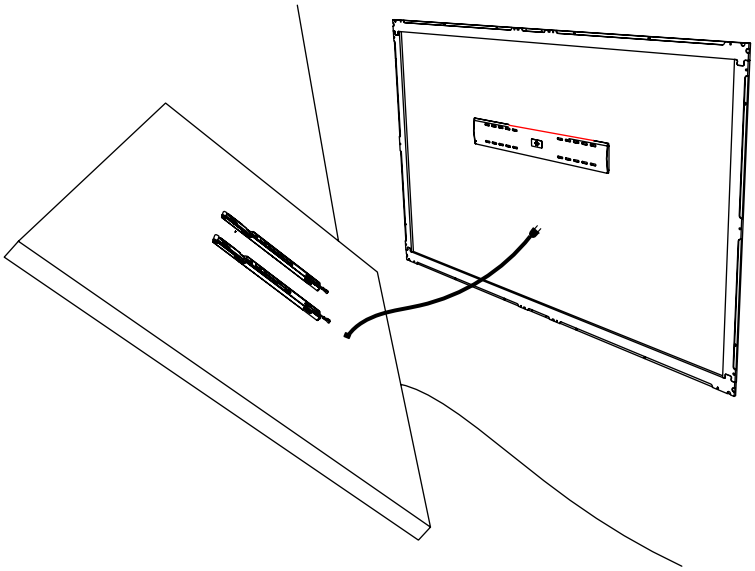


Step 13.
Make All Connections

Be sure to plug in all necessary components and connect to power before attaching the TV to the wall.

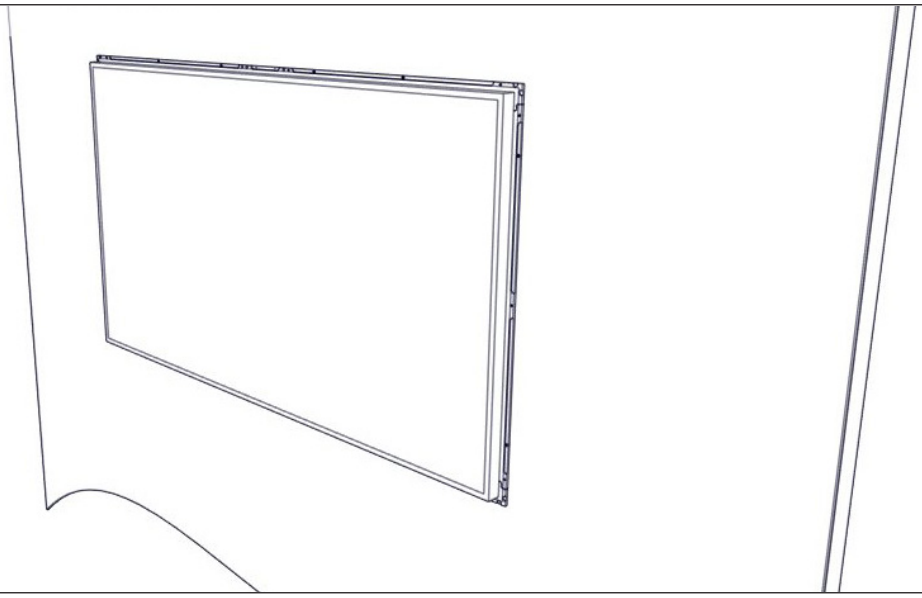

Step 14.
Attach the TV to the Wall

Attach the TV to the wall by latching the TV Bracket Uprights onto the TV Bracket Wall Plate. Refer to the installation instructions provided with the TV bracket to make adjustments so that the TV is perfectly centered on the Edge Flex Frame Backboard.

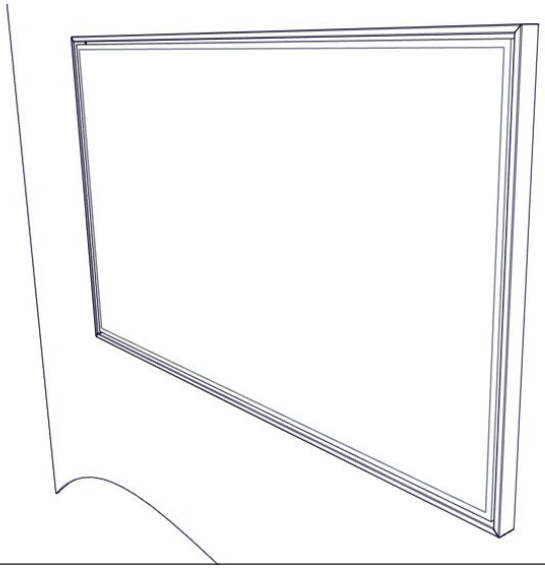

Step 15.
Attach Frame to the Backboard

Complete the installation by magnetically attaching the Edge Flex Frame to the Backboard. Ensure that the dowels in the top and bottom of the frame align with the inserts on the backboard.

Questions?

For additional support, call customer service
1 (888) 213-5015 | Mon - Fri 8 am-6 pm EST

Scan the QR Code for
Warranty Information

Leon®

Leon is a registered trademark of Leon Speakers, Inc ©2024-2025