
QUICK GUIDE
YHT-4970U

Use this Quick Guide to get started with the YHT-4970U Home Theater System.

For additional info, reference the complete RX300A AV Receiver User Guide online at: usa.yamaha.com/support/manuals/
Note that you may need additional items that are not included in this package, such as a wire stripper, HDMI® cables, speaker stands, wall-mounting hardware, etc.

1 WHAT'S IN THE BOX



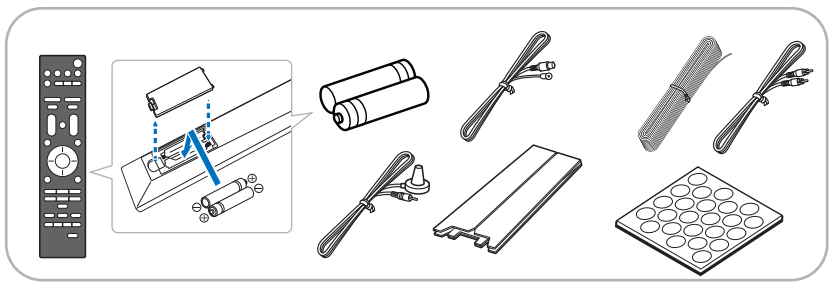

The following items are included in the box:

- AV Receiver, including:
  - Remote control with (2) AAA batteries
  - Setup microphone
  - Cardboard microphone stand
  - FM antenna
- (4) surround speakers, (1) center speaker and (1) subwoofer
  - Non-skid pads for surround and center speakers
- Speaker wire
- Subwoofer cable

2 SPEAKER PLACEMENT

Place the speakers as shown in the following illustration.


The subwoofer may be placed on either side of the front speakers depending on the room layout and personal preference.

- FL Front speaker (L)
- FR Front speaker (R)
- C Center speaker
- SL Surround speaker (L)
- SR Surround speaker (R)
- SW Subwoofer

5.1-Channel System

This is the basic speaker configuration for enjoying surround sound.


It delivers an immersive listening experience with a sound field that expands to the front, rear, left, and right. In addition, height effects are reproduced using virtual technology.

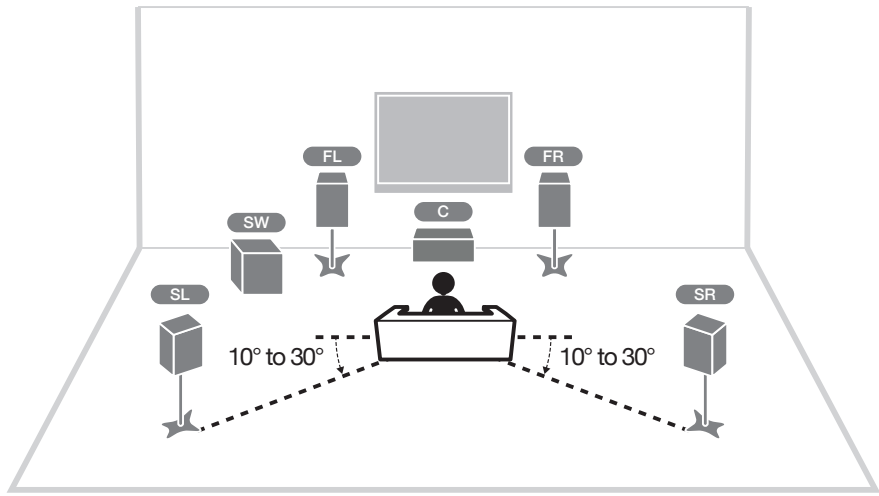

3 CONNECT THE SPEAKERS & SUBWOOFER


Speaker cables have two wires: one for connecting to the negative (-) terminal of the receiver and speaker, and the other for connecting to the positive (+) terminals.

1. Loosen speaker terminals and attach as shown in the below diagram.
2. Connect subwoofer with supplied subwoofer cable to the Subwoofer 1 output.

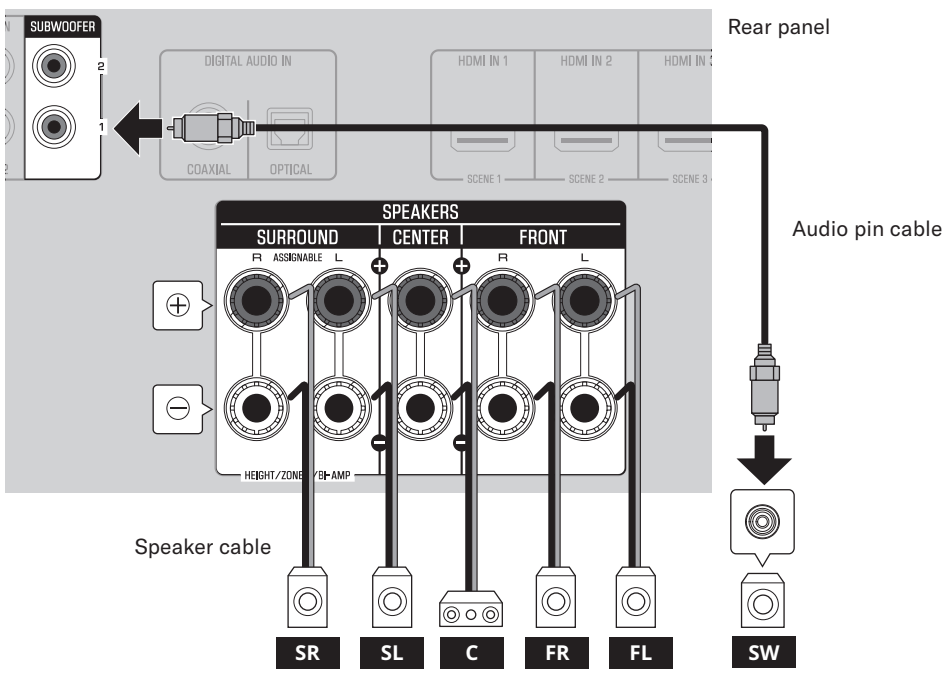

Make sure AV receiver is not plugged in while connecting speakers.

1 Strip about 10 mm (3/8") of the covering from the end of the cable and twist the exposed wire firmly.

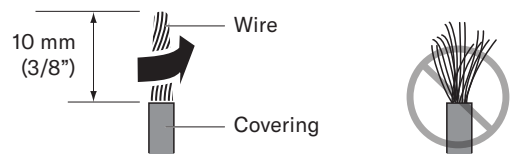

2 Connect the speaker cable to the speaker terminal.



Loosen the speaker terminal.


Insert the exposed wire into the opening on the upper right or lower left side of the speaker terminal.

Tighten the speaker terminal.

NOTICE


To prevent malfunction, note the following:

- Prepare the speaker cables away from the unit to prevent wire strands from entering the interior of the unit.
- Make sure the exposed wires do not contact each other.
- Make sure the exposed wires do not contact metal parts of the unit such as the rear panel or screws.

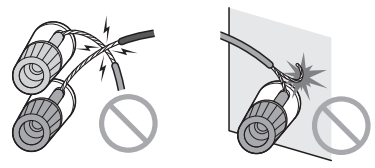

4 CONNECT YOUR TV


Using an HDMI cable, connect the HDMI OUT port of this unit to the eARC/ARC HDMI port on the TV.

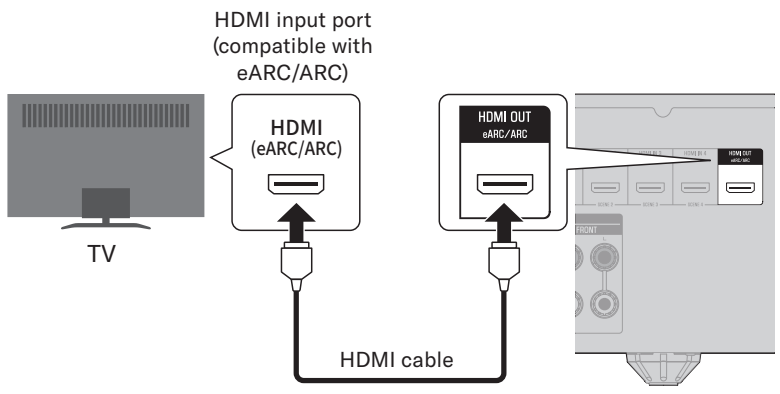

If the TV does not have an eARC/ARC port, connect to the HDMI port.


Make note of the HDMI port name this unit is connected to.

Turn the TV on.

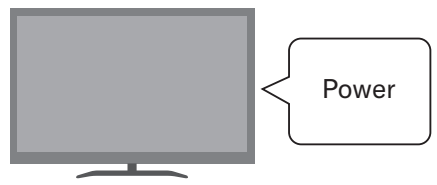

Switch the input source of the TV.


Using the TV remote control, switch the TV input to the HDMI port this unit is connected to.
For example, if the product is connected to “HDMI 2” of the TV, switch the TV input to “HDMI 2”.

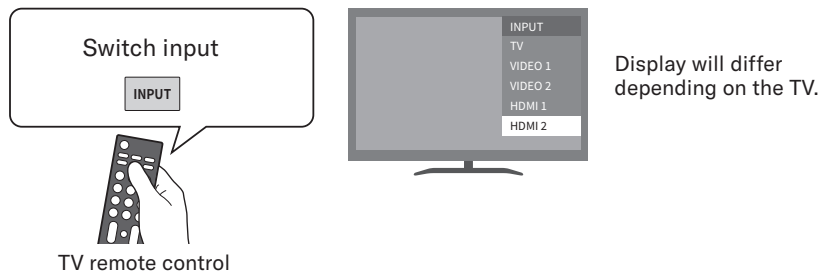


Display will differ depending on the TV.

5 CONNECT TO POWER & START SETUP GUIDE

Plug the power cord into an AC outlet.

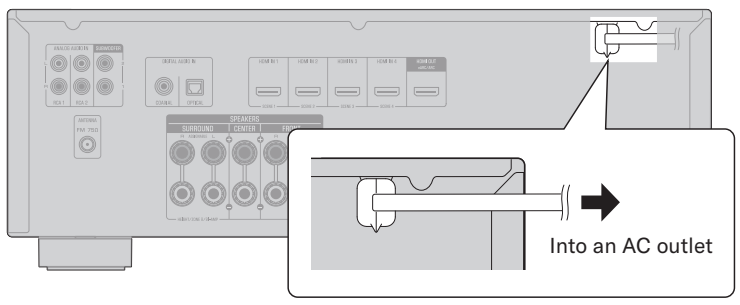

Use the Power key on the remote or the front panel to turn the unit on.

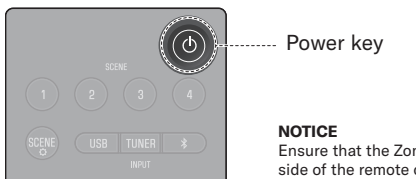

NOTICE
Ensure that the Zone switch on the left side of the remote control is set to “MAIN.”

Check that the Setup Guide is displayed on the TV screen, then select a language using the remote control.






Use the cursor to select a language and press the Enter key.


6 RUN ROOM CORRECTION

Assemble cardboard mic stand and place the Setup Mic on the stand.

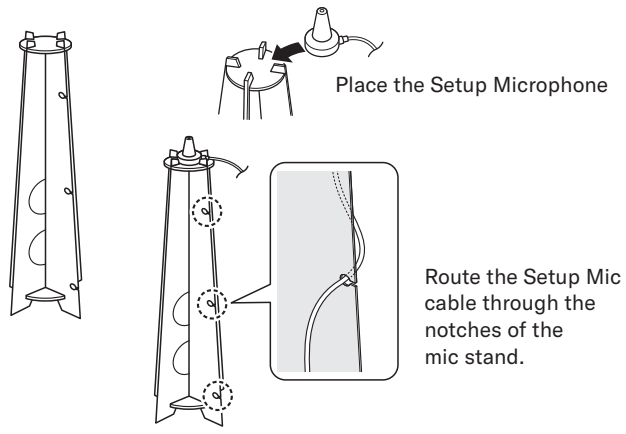


Route the Setup Mic cable through the notches of the mic stand.


Connect Setup Mic and set the subwoofer.

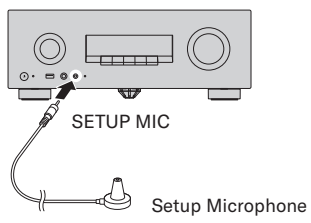

1 Turn on the subwoofer.
2 Set the volume to halfway.

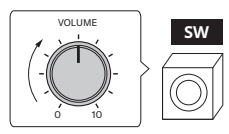

Place the mic stand with the Setup Mic at the listening position.

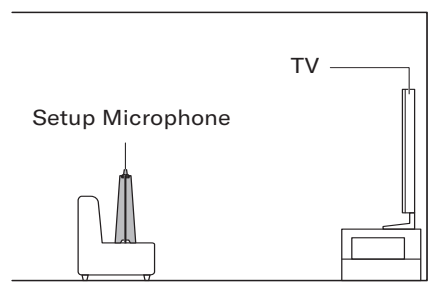


Follow the on-screen instructions to perform Room Correction measurements.

7 CONNECT INPUT DEVICES

Connect video and gaming console sources using additional HDMI cables.

Connect the included FM antenna.



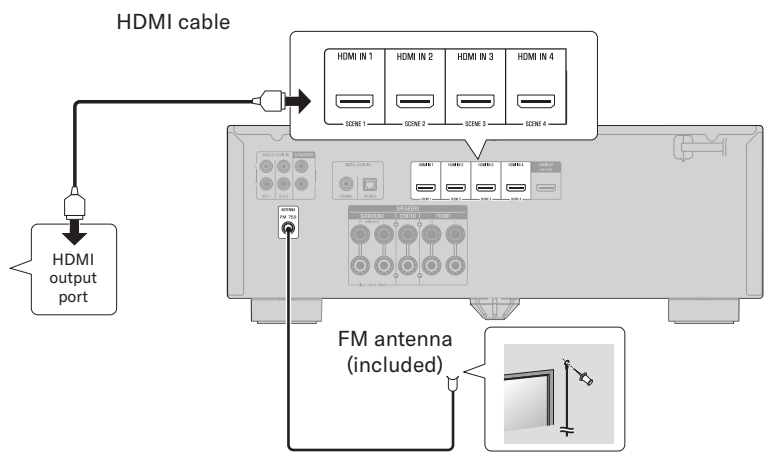

User Guide

Scan this QR code to access the complete User Guide for the included AV reciever.