
BenchMaster
FURNITURE
MARK OF VALUE

4106H

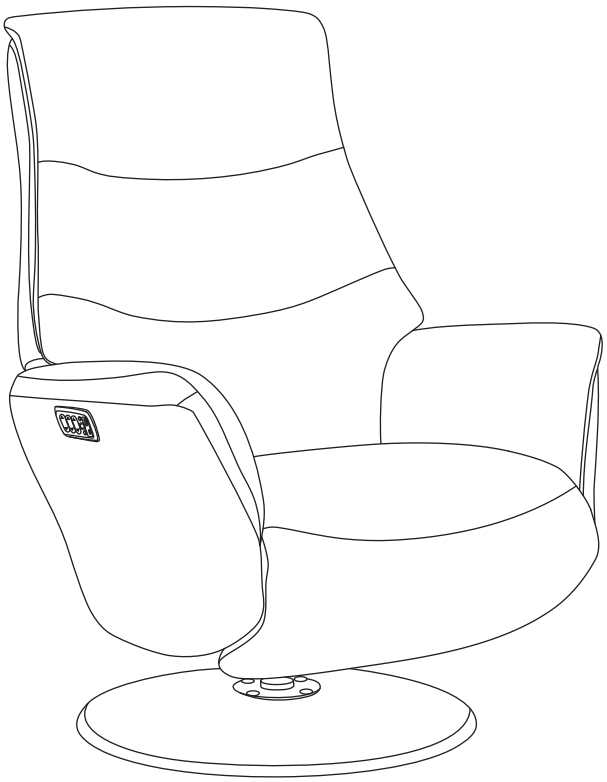


(Simplified diagram for reference only)




A		1PC	B		1PC



1

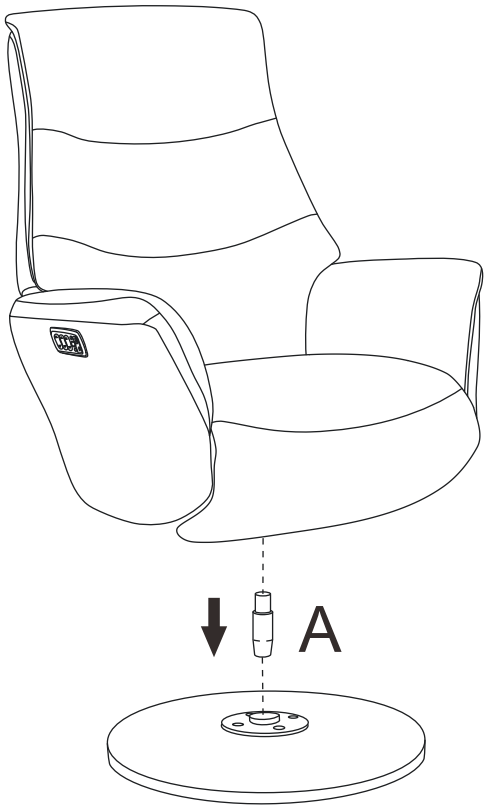



2

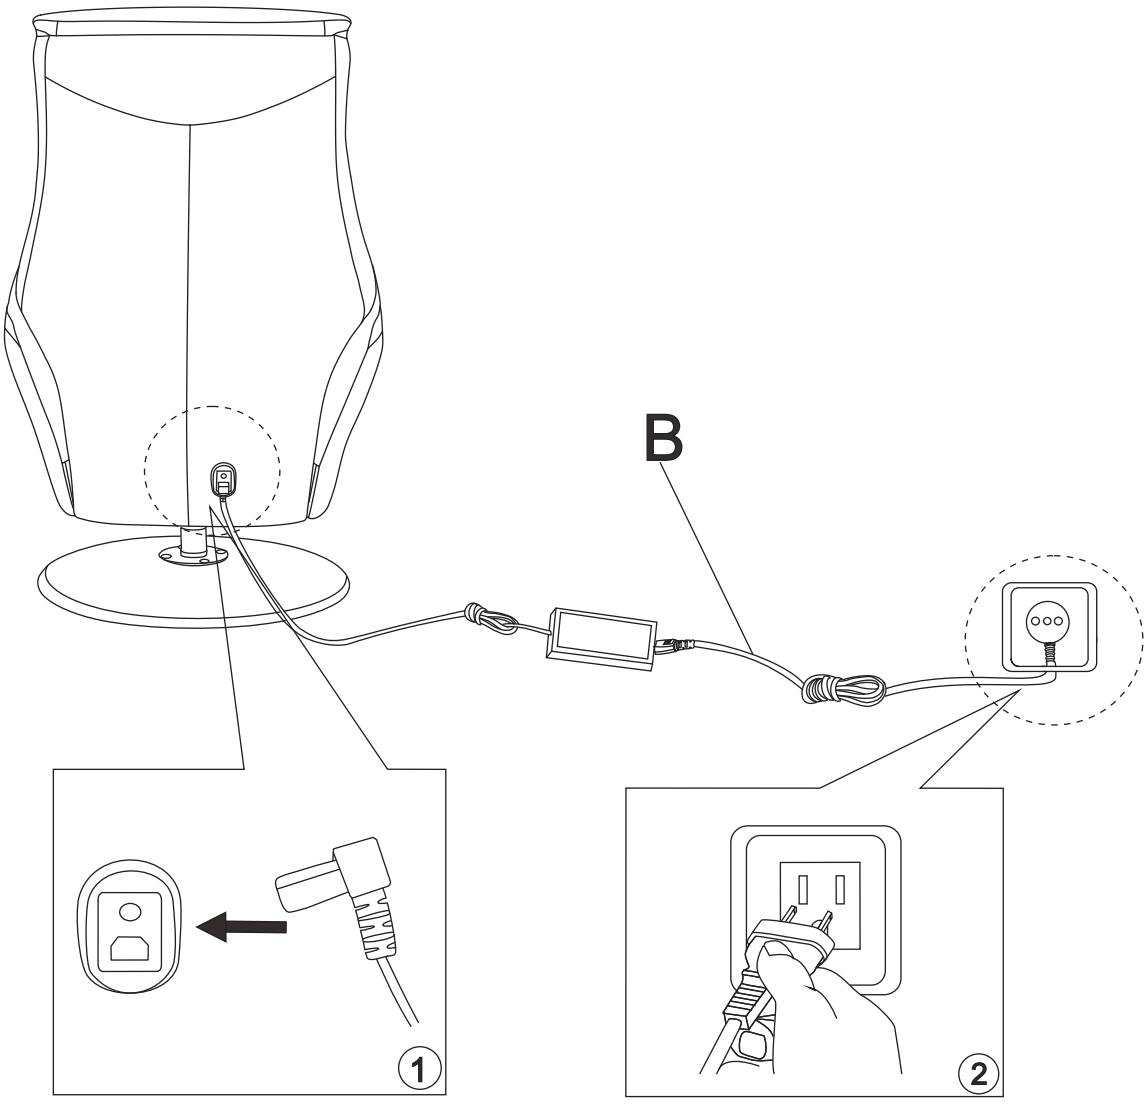


User Guide

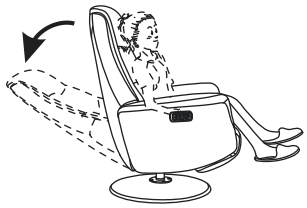1  



1. Press the button to recline

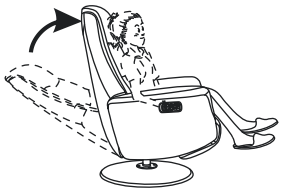2  



2. Press the button to return to upright position

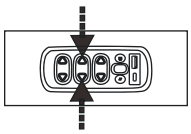3  


3. Lumbar support

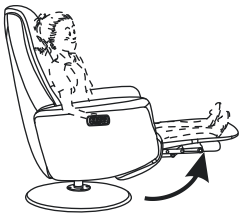4  



4. Press the button to raise the ottoman

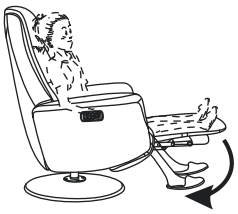5  



5. Press the button to stow the ottoman

6  

6. Massage function

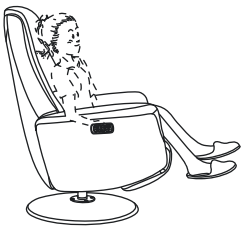7  

7. Heating

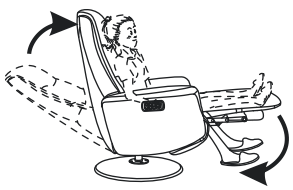8  

8. Press the button to get down to original position

HOW TO ADJUST HEADREST



To adjust headrest: pull from back on both sides as shown.




Do not pull from side edge to adjust,material may tear.





To return headrest back:push on both sides or use forearm to evenly move headrest back.

Caution:

Do not push in the center of the headrest as this may cause foam cushion to collapse.

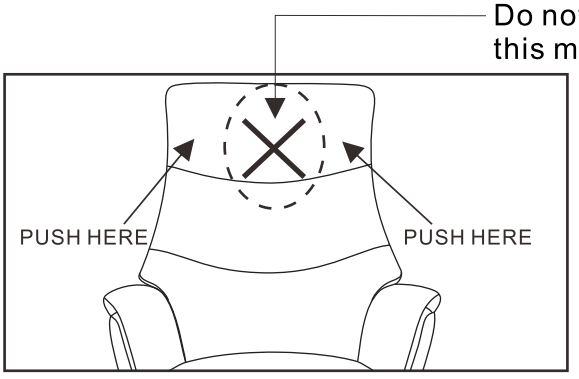

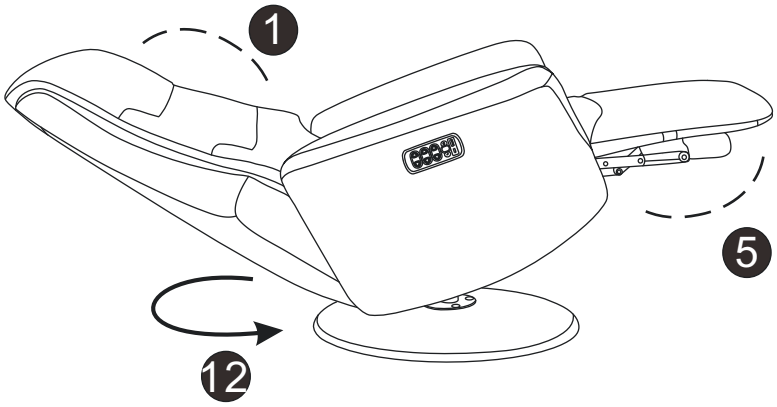

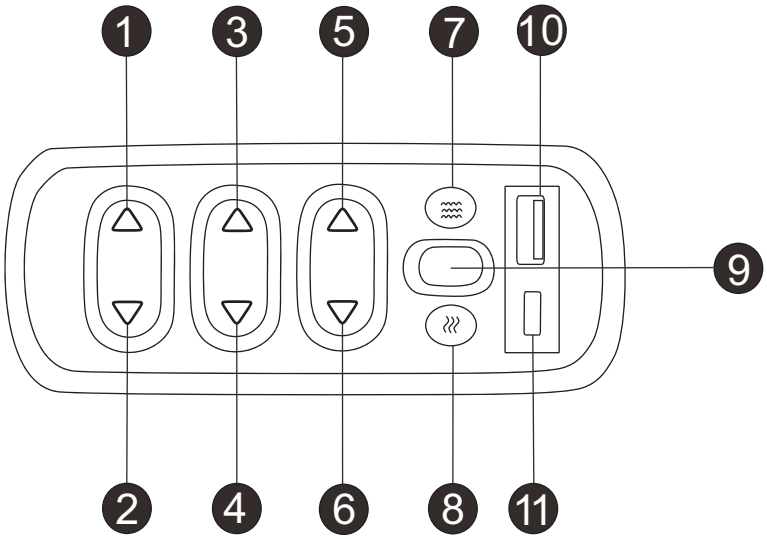

Remote Controller Instructions

1. Backrest Recline.
2. Backrest Return.
3. Stop the massage function, lumbar support extend.
4. Stop the massage function, lumbar support deflates.
5. Footrest Extend.
6. Footrest Retract.
7. Press once to turn on the massage function.
   Press 2–3 times to switch between massage modes.
   Press the 4th time to turn off the massage function.
8. Press once to turn on the heating function.
   Press 2–3 times to adjust the heating level.
   Press the 4th time to turn off the heating function.
9. Home Button(Stops the heating and massage functions, deflates and lumbar support, returns the backrest and retracts the footrest).
10. USB Port.
11. Type-C Port.
12. Swivel function.

Product Care Instruction

Leather

Wipe leather regularly with a clean damp, soft cloth, cleaning especially areas the leather comes into contact with skin. (Example: armrests, headrest, etc)

Clean up spills immediately and ensure the surface is dry before use.

Every 3-4 months, clean leather thoroughly to remove excess body oils. Use an appropriate leather cleaner safe for dyed leather.

Regarding leather:

Chemicals in hair and skin products, such as hair spray, gel, mousse, perfume, deodorant, medications, alcohol, and dark dyed clothing such as jeans, may affect or transfer to the leather surface. Please take these factors into account when planning your cleaning routine.

Avoid prolonged exposure of bare skin to leather surfaces as body oils and sweat can damage the leather surface over time.

Fabrics

Use a soft-bristle brush or low-suction vacuum to remove dust regularly.

Clean up spills and stains immediately.


Stain cleaning should only be done with a specialized fabric cleaner; test on an inconspicuous area. Do not open zippers to remove covers as the cover is stitched into the cushion. Do not use solvent-based cleaners, dish-washing liquid, or laundry detergent. Allow item to dry before using; if a wet formula fabric cleaner is used, drying the surface with cool air is recommended.

Some fabric covers may develop pilling in areas that experience friction during use. If this is a concern, please use a fabric shaver to remove the pills.

Residue from cleaning products may cause materials to dry out, crack, or discolor. Follow fabric cleaner manufacturer instructions. After using any cleaner, gently dab or wipe excess moisture or residue with clean water and white cloth.

RECLINER USER GUIDELINE

Restoring to its original beauty

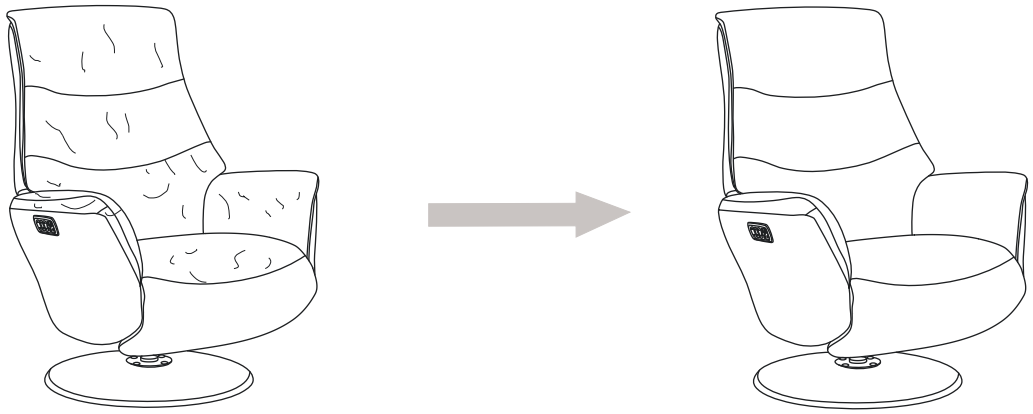


This product makes a long journey to reach you. Before using, please reshape the cushions to restore to its original beauty, steps as follows:

1: Adjust back cushions with both hands, starting from the lower part and moving to the top.


2: Adjust front side of back cushion with one hand while supporting cushion rear with other hand.

3: Use one hand to pull the outside end to the back cushions, then adjust it with the other towards the outside end.

4: Move to the armrests, adjust them evenly from the center towards the outside end.

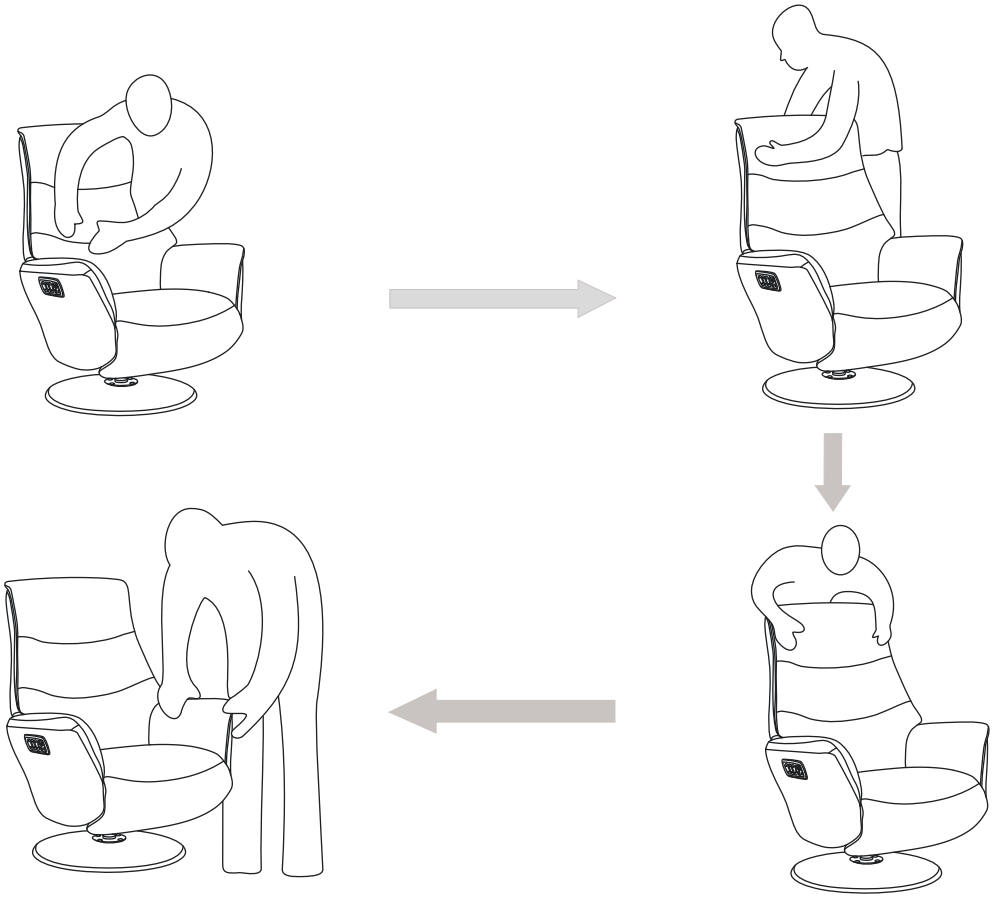




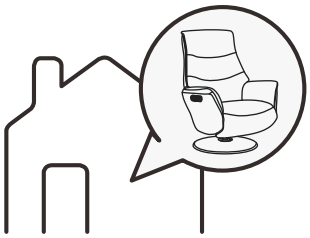


This furniture is designed for use in residential living areas.It is not suitable for use in damp areas,outdoors, or commercial spaces.



Do not stand on this furniture or sit on the armrests or footrests.

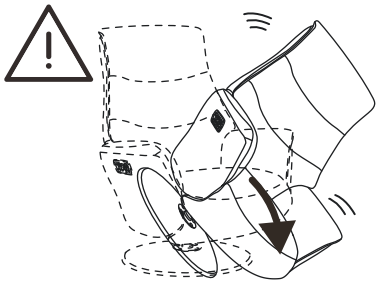

Place the chair on a flat surface or carpet to ensure stability during use.

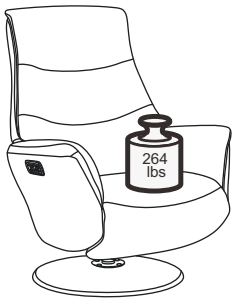


Pay attention to the maximum load limit.







Risk of swallowing and choking:keep packaging materials,plastic bags,and small items out of the reach of infants.

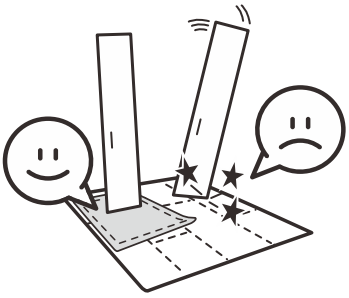

During assembly, place all components on a soft underlay.

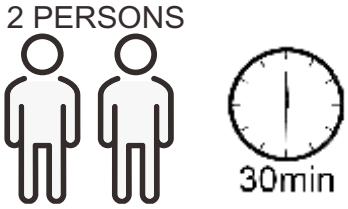


Assembly time: 30 minutes. It is recommended to have two people for the task.

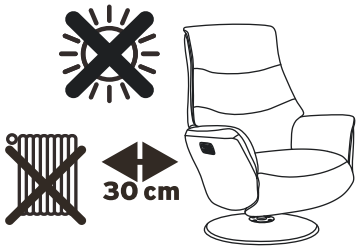

Avoid direct sunlight, as it may cause color changes. Keep at least 30 cm distance from heaters.



New clothing may transfer dye onto the surface. Zippers, rivets, buttons, keys, and belt buckles may cause scratches.

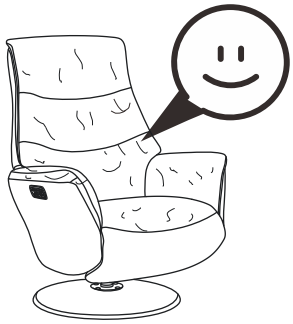

Although high-quality materials and advanced filling techniques are used, the formation of wrinkles on the surface may form after prolonged use.

STOP! IMPORTANT:

Please read this manual carefully before beginning assembly of this product.
Keep this manual for future reference.

Use the product only in a way specified under instruction manual.
Incorrect usage voids product warranty.

IMPORTANT

This product is designed to seat people up to a maximum of 264 lbs, Check and

re-tighten parts/nuts & bolts every three months.

Please retain these instructions for future reference and in case of any queries, please quote the following batch number to your retailer.

