

Television

Téléviseur


Televisor digital a color con pantalla de cristal líquido

Reference Guide

Manuel de référence

Guía de referencia

K-85XR50 / 85XR50C / 75XR50
K-75XR50C / 65XR50C / 65XR50C
K-55XR50 / 55XR50C

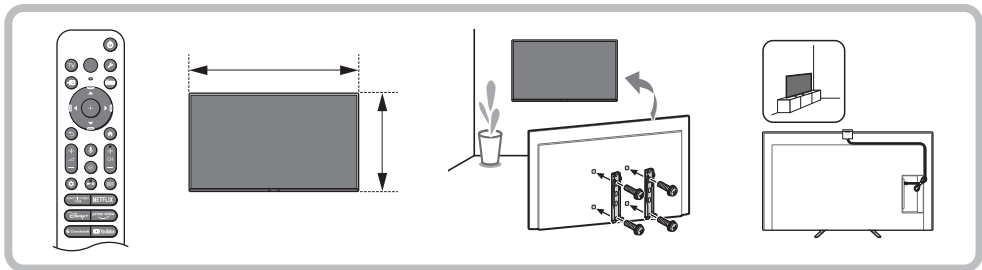

Sony Customer Support

U.S.A.:
<https://www.sony.com/tvsupport>
Canada:
<https://www.sony.ca/support>
U.S.A. Canada
1.800.222.SONY (7669) 1.877.899.SONY (7669)
Call the telephone number that appears on your warranty card policy.
Please do not return the product to the store.

© 2025 Sony Corporation


Dimensions and weight (without Table-Top Stand) / Dimensiones y peso (sin soporte de sobremesa)		(mm)/(Inches/pouces/pulgadas)*1		(kg)/(lb.)**1	
		(A)	(B)	(C)	(D)
K-85XR50 / 85XR50C		1895 / 74 3/8	1087 / 42 1/8	60 / 2 3/8	46.3 / 102
		1895 / 74 3/8	1087 / 42 1/8	60 / 2 3/8	46.3 / 102
K-75XR50 / 75XR50C		1671 / 65 1/8	960 / 37 7/8	60 / 2 1/8	36.2 / 79.8
		1671 / 65 1/8	960 / 37 7/8	60 / 2 1/8	36.2 / 79.8
K-65XR50 / 65XR50C		1447 / 57	832 / 32 7/8	58 / 2 1/8	24.9 / 54.9
		1447 / 57	832 / 32 7/8	58 / 2 1/8	24.9 / 54.9
K-55XR50 / 55XR50C		1228 / 48 3/8	709 / 28	57 / 2 1/4	17.7 / 39
		1228 / 48 3/8	709 / 28	57 / 2 1/4	17.7 / 39

*1 (Approx. / Environ / Aprox.)


Dimensions and weight (with Table-Top Stand) / Dimensiones y poids (avec support de table) / Dimensiones y peso (con soporte de sobremesa)		(mm)/(Inches/pouces/pulgadas)*1		(kg)/(lb.)**1	
		(A)	(B)	(C)	(D)
K-85XR50 / 85XR50C		1895 / 74 3/8	1117 / 44	1166 / 46	47.4 / 18 3/4
		1895 / 74 3/8	1117 / 44	1166 / 46	47.4 / 18 3/4
K-75XR50 / 75XR50C		1671 / 65 1/8	990 / 39	1039 / 41	40.5 / 16
		1671 / 65 1/8	990 / 39	1039 / 41	40.5 / 16
K-65XR50 / 65XR50C		1447 / 57	862 / 34	911 / 35 1/8	34.5 / 13 3/8
		1447 / 57	862 / 34	911 / 35 1/8	34.5 / 13 3/8
K-55XR50 / 55XR50C		1228 / 48 3/8	739 / 29 1/8	788 / 31 1/8	21.0 / 8 3/8
		1228 / 48 3/8	739 / 29 1/8	788 / 31 1/8	21.0 / 8 3/8

*1 (Approx. / Environ / Aprox.)

The length of the screw for Wall-Mount Bracket differs depending on the Wall-Mount Bracket thickness / La longueur des vis pour le support de fixation murale diffère selon l'épaisseur du support de fixation murale / La longitud del tornillo para el soporte de montaje mural varía dependiendo del espesor del soporte de montaje mural


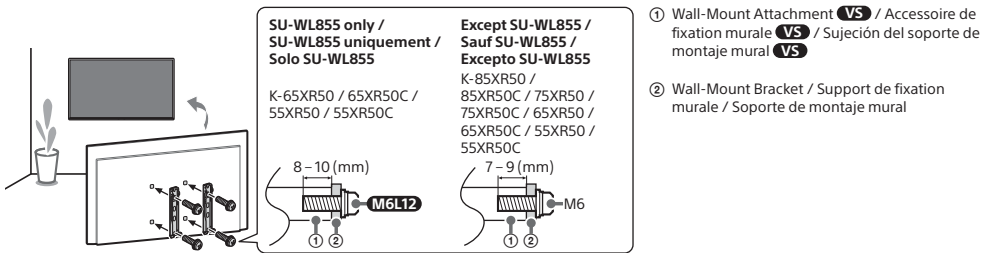


Optional Camera and Microphone Unit (not supplied) Cable Management / Gestion du câble de la caméra avec microphone en option (non fourni) / Manejo del cable de la unidad de cámara y microfono opcional (no suministrado)

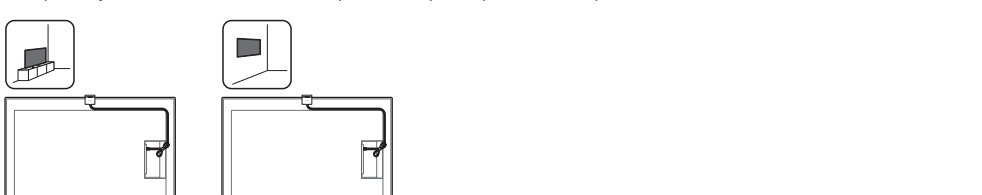

Supplier's Declaration of Conformity
Trade Name: SONY
Model: K-85XR50 / K-85XR50C / K-75XR50 / K-75XR50C / K-65XR50 / K-65XR50C / K-55XR50 / K-55XR50C
Responsible Party: Sony Electronics Inc.
Address: 16535 Via Espinillo, San Diego, CA 92127 U.S.A.
Telephone Number: 858-942-2230

5-065-830-11(1)

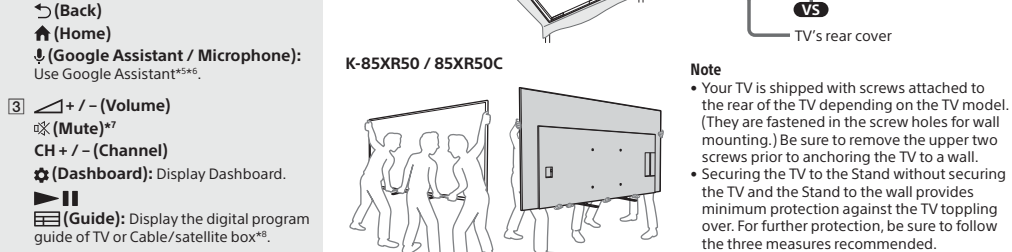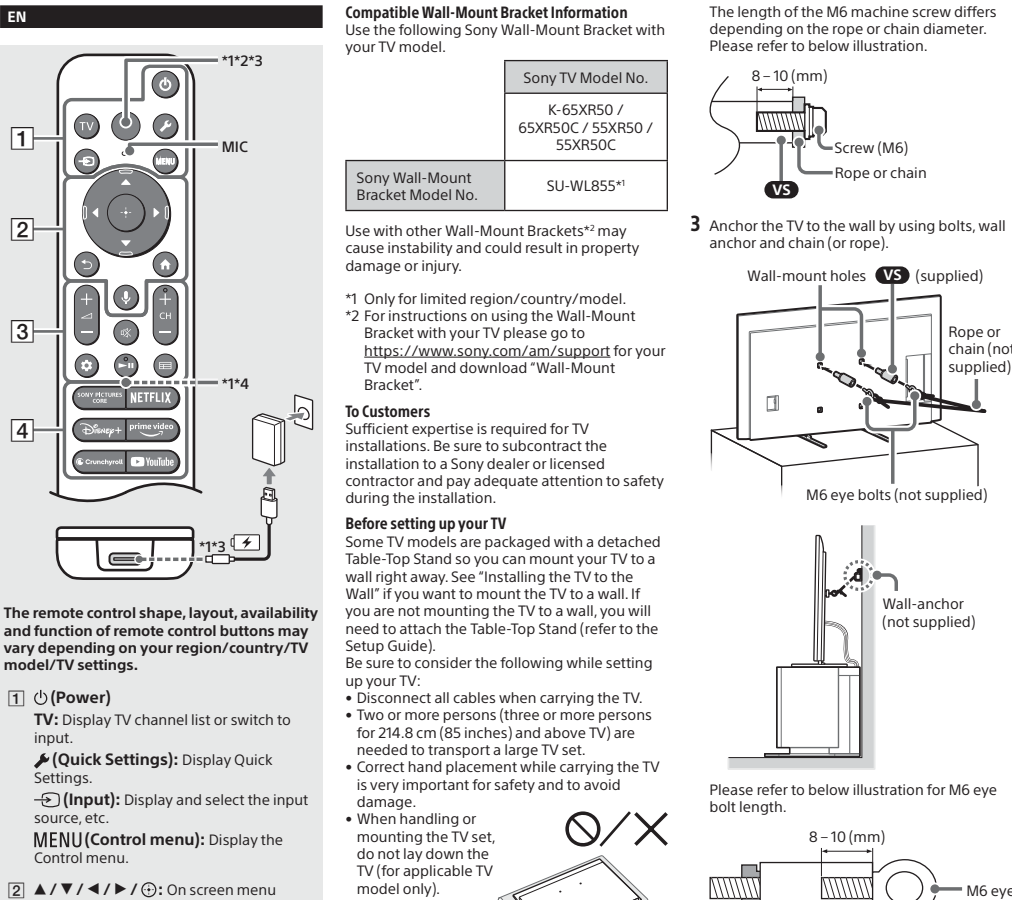

Compatible Wall-Mount Bracket Information
The following Sony Wall-Mount Bracket with your TV model.

Use with other Wall-Mount Brackets* may cause instability and could result in property damage or injury.

*1 Only for limited region/country/model.
*2 For instructions on using the Wall-Mount Bracket with your TV please go to <https://www.sony.com/am/support> for your TV model and download 'Wall-Mount Bracket'.

To Customers
Sufficient expertise is required for TV installations. Be sure to subcontract the installation to a Sony dealer or licensed contractor and pay adequate attention to safety during the installation.

Before setting up your TV
Some TV models are packaged with a detached Table-Top Stand so you can mount your TV to a wall right away. See 'Installing the TV to the Wall' if you want to mount the TV to a wall. If you are not mounting the TV to a wall, you will need to attach the Table-Top Stand (refer to the Setup Guide).

Be sure to consider the following while setting up your TV.
• Disconnect all cables when carrying the TV.
• Two or more persons (three or more persons for 21.4 cm (8 1/2 inches) and above TV) are needed to transport a large TV set.
• Correct hand placement while carrying the TV is very important for safety and to avoid damage.
• When handling or mounting the TV set, do not lay down the TV (for applicable TV model only).

1 (Power) TV: Display TV channel list or switch to input.
2 (Quick Settings): Display Quick Settings.
3 (Input): Display and select the input source, etc.
4 (MENU/Control menu): Display the Control menu.
5 (Back) MENU/Control menu: Display the Control menu.
6 (Home) MENU/Control menu: Display the Control menu.
7 (Google Assistant / Microphone): Use Google Assistant**.

2 (Volume) TV: Display TV volume level or switch to input.
3 (Mute) TV: Mute the TV.
4 (CH +/-) TV: Change the TV channel.
5 (Dashboard): Display Dashboard.
6 (Guide): Display the digital program guide of TV or Cable/satellite box**.

2 (App buttons) TV: Display TV app list or switch to input.
3 (App button) TV: Display TV app list or switch to input.

*1 RMF-TX920U only. To see the model name of the remote control, open the remote control cover and see the label on the remote control.
*2 The remote control backlight will illuminate when the light sensor detects the ambient light in low. Automatic illumination of the backlight can be turned off.
*3 The remote control is rechargeable. The LED indicator will show charging status (red). Use the supplied USB cable to charge the remote control using your own USB AC adapter.
*4 The buzzer will emit a sound when you use the remote control finder function or when you press the power button on the remote control when the battery is low. Refer to the online Help Guide for details.
*5 Only for limited region/country/model and language.
*6 Google Assistant requires an Internet connection.
*7 Accessibility shortcut is available by pressing and holding [Mute].
*8 (Cable/Satellite box setup) setting is required.

Location of the identification label
Labels for the TV Model No. and Power Supply rating are located on the rear of the TV.

IMPORTANT NOTICE
Owner's Record
The model and serial numbers are located at the side and/or rear of the TV. Record these numbers in the spaces provided below. Refer to them whenever you call upon your Sony dealer regarding this TV.

Model Name
Serial No.

IMPORTANT NOTICE FOR MEXICO
Operation of this equipment is subject to the following two conditions: (1) It is possible that this equipment or device may not cause harmful interference and (2) this equipment or device must accept any interference, including interference that may cause undesired operation.

For information related to the certificate number, refer to the package label and / or product.

Note:
This product utilizes the following device for wireless functionalities:
Model: J20H03
Brand: FOXCONN

WLAN:
2.4 GHz (2,400 MHz ~ 2,483.5 MHz)
5 GHz (5,150 MHz ~ 5,850 MHz)
Bluetooth®:
2.4 GHz (2,400 MHz ~ 2,483.5 MHz)

Information for the remote control with voice command included with this product:
Model: RMF-TX920U**
Brand: Sony

Note:
The following device for wireless functionalities:
Model: J20H03
Brand: FOXCONN

*1 Only for limited region/country/model.
*2 For instructions on using the Wall-Mount Bracket with your TV please go to <https://www.sony.com/am/support> for your TV model and download 'Wall-Mount Bracket'.

To Customers
Sufficient expertise is required for TV installations. Be sure to subcontract the installation to a Sony dealer or licensed contractor and pay adequate attention to safety during the installation.

Before setting up your TV
Some TV models are packaged with a detached Table-Top Stand so you can mount your TV to a wall right away. See 'Installing the TV to the Wall' if you want to mount the TV to a wall. If you are not mounting the TV to a wall, you will need to attach the Table-Top Stand (refer to the Setup Guide).

Be sure to consider the following while setting up your TV.
• Disconnect all cables when carrying the TV.
• Two or more persons (three or more persons for 21.4 cm (8 1/2 inches) and above TV) are needed to transport a large TV set.
• Correct hand placement while carrying the TV is very important for safety and to avoid damage.
• When handling or mounting the TV set, do not lay down the TV (for applicable TV model only).

1 (Power) TV: Display TV channel list or switch to input.
2 (Quick Settings): Display Quick Settings.
3 (Input): Display and select the input source, etc.
4 (MENU/Control menu): Display the Control menu.
5 (Back) MENU/Control menu: Display the Control menu.
6 (Home) MENU/Control menu: Display the Control menu.
7 (Google Assistant / Microphone): Use Google Assistant**.

2 (Volume) TV: Display TV volume level or switch to input.
3 (Mute) TV: Mute the TV.
4 (CH +/-) TV: Change the TV channel.
5 (Dashboard): Display Dashboard.
6 (Guide): Display the digital program guide of TV or Cable/satellite box**.

2 (App buttons) TV: Display TV app list or switch to input.
3 (App button) TV: Display TV app list or switch to input.

• Refer to the following table for the wall-mount hole pattern.

	a	b	c
K-85XR50 / 85XR50C	400	400	155.6
K-75XR50 / 75XR50C	300	300	157.1
K-65XR50 / 65XR50C	300	300	154.3
K-55XR50 / 55XR50C	300	300	154.3

1 Remove the screws from the rear of the TV.

2 Attach the Wall-Mount Attachment (supplied with the TV) to the rear of the TV (to make it parallel with the wall).

3 Attach the Wall-Mount Bracket (not supplied) using the screws (not supplied).

Securing the TV
Sony strongly recommends taking measures to prevent the TV from toppling over. Unsecured TVs may topple and result in property damage, serious bodily injury or even death.

Preventing the TV from Toppling
Secure the TV to a wall and/or Stand.
Do not allow children to play or climb on furniture and TV sets.
Avoid placing or hanging items on the TV.
Never install the TV on:
- slippery, unstable and/or uneven surfaces.
- furniture that can easily be used as steps, such as a chest of drawers.
- furniture that cannot be pulled, pushed, or knocked over.
Install the TV so that the TV's Table-Top Stand does not protrude out from the Stand (not supplied). If the Table-Top Stand protrudes out from the Stand, it may cause TV set to topple over, fall down, and cause personal injury or damage to the TV.

Fluorescent lamps can interfere with your remote control, try turning off the fluorescent lamps.

Installing the TV to the Wall
Using the optional Wall-Mount Bracket (SU-WL855 only)* (not supplied)

To Customers:
For product protection and safety reasons, Sony strongly recommends that installation of your TV be performed by Sony dealers or licensed contractors. Do not attempt to install it yourself.

To Sony Dealers and Contractors:
Provide full attention to safety during the installation. Provide permanent maintenance and examination of this product.

Wall-Mount Bracket Installation Information
For instructions on Wall-Mount Bracket installation, see the Installation Information on the Wall-Mount Bracket on the Sony Customer Support website for your TV model at the following address:
<https://www.sony.com/am/support>

Follow the instruction guide provided with the Wall-Mount Bracket for your model. Sufficient expertise is required in installing this TV, especially to determine the strength of the wall for withstanding the TV's weight.

Sony is not liable for any damage or injury caused by mishandling or improper installation.

Be sure to store the unused screws and Table-Top Stand in a safe place until you are ready to attach the Table-Top Stand. Keep the screws away from children.

Note:
• Read the supplied safety documentation for additional safety information.
*1 Only for limited region/country/model.

Using the optional Wall-Mount Bracket (except SU-WL855) (not supplied)
This TV's instruction manual only provides the steps to prepare the TV for Wall-Mount installation before it is installed on the wall.

Your TV can be mounted to a wall using a suitable Wall-Mount Bracket (not supplied). If the Table-Top Stand is attached to the TV, you may require detaching the Table-Top Stand; see 'Detaching the Table-Top Stand' for the Wall-Mount Bracket before making cable connections.

For product protection and safety reasons, Sony strongly recommends that installation of your TV on the wall be performed by qualified professionals. Do not attempt to install it yourself.

Follow the instruction guide provided with the Wall-Mount Bracket for your model. Sufficient expertise is required in installing this TV, especially to determine the strength of the wall for withstanding the TV's weight.

The screws for installing the Wall-Mount Bracket to the TV are not supplied.

General troubleshooting for issues like: black screen, no sound, frozen picture, TV does not respond, or network is lost, do the following steps.

Restart your TV by pressing the power button on the remote control for about five seconds. The TV will restart. If the TV does not recover, try unplugging the AC power cord then press the power button on the TV and release it. Wait for two minutes, and plug in the AC power cord.

Or, press the power button on the TV for about 40 seconds until the TV turns off.

WLAN:
2.4 GHz (2,400 MHz ~ 2,483.5 MHz)
5 GHz (5,150 MHz ~ 5,850 MHz)
Bluetooth®:
2.4 GHz (2,400 MHz ~ 2,483.5 MHz)

Information concerning the telecommande à commande vocale incluse dans ce produit :
Modèle : RMF-TX920U**
Marque : Sony

Remarque : Utilisez l'appareil suivant pour les fonctionnalités sans fil :
Modèle : UE878
Marque : UEI

Remarque : Pour connaître le nom du modèle de la télécommande, ouvrez le couvercle de la télécommande et consultez l'étiquette sur la télécommande.

1 Fixer solidement le téléviseur à la base. S'assurer que le bas du téléviseur est adéquatement le poids du téléviseur. Utiliser deux attaches angulaires (non fournies) pour fixer solidement la base. Avec chaque attache angulaire, utiliser la quincaillerie appropriée pour :
• Fixer un côté de l'attache angulaire au poteau mural.
• Fixer l'autre côté à la base.

2 Pour des raisons de sécurité et de protection du produit, Sony recommande vivement de faire installer votre téléviseur par des installateurs Sony ou des installateurs agréés. N'essayez pas de l'installer vous-même.

3 La longueur des vis à métal M6 diffère selon le diamètre de la corde ou de la chaîne. Reportez-vous à l'illustration ci-dessous.

4 Fixer le téléviseur au mur avec des boulons, un dispositif d'ancrage au mur et une chaîne (ou une corde).

5 La longueur des vis à métal M6 diffère selon le diamètre de la corde ou de la chaîne. Reportez-vous à l'illustration ci-dessous.

6 Pour des raisons de sécurité et de protection du produit, Sony recommande vivement de faire installer votre téléviseur par des installateurs Sony ou des installateurs agréés. N'essayez pas de l'installer vous-même.

7 Suivez le guide d'installateurs fourni avec le support de fixation murale pour votre modèle. Une certaine expertise est nécessaire pour l'installation de ce téléviseur, en particulier en ce qui concerne la solidité du mur en relation avec le poids de l'appareil.

8 Les vis pour l'installation du support de fixation murale au téléviseur ne sont pas fournies.

9 Reportez-vous au tableau suivant pour le schéma des trous pour la fixation murale.

10 Retirez les vis à l'arrière du téléviseur.

11 Installez l'accessoire de fixation murale (fourni avec le téléviseur) à l'arrière du téléviseur (de manière à ce qu'il soit parallèle au mur).

12 Assurez-vous de ranger les vis non utilisées et le support de table dans un endroit sûr jusqu'à ce que vous soyez prêt à fixer le support de table. Gardez les vis hors de la portée des enfants.

13 Utilisez la documentation de sécurité fournie pour plus de renseignements sur l'utilisation en toute sécurité.

14 Pour des informations plus détaillées, visitez le site Web du service à la clientèle de Sony.

15 Uniquement pour certaines régions/pays/modèles.

16 Utilisez la documentation de sécurité fournie pour plus de renseignements sur l'utilisation en toute sécurité.

17 Pour des informations plus détaillées, visitez le site Web du service à la clientèle de Sony.

18 Uniquement pour certaines régions/pays/modèles.

19 Utilisez la documentation de sécurité fournie pour plus de renseignements sur l'utilisation en toute sécurité.

20 Pour des informations plus détaillées, visitez le site Web du service à la clientèle de Sony.

21 Uniquement pour certaines régions/pays/modèles.

22 Utilisez la documentation de sécurité fournie pour plus de renseignements sur l'utilisation en toute sécurité.

23 Pour des informations plus détaillées, visitez le site Web du service à la clientèle de Sony.

24 Uniquement pour certaines régions/pays/modèles.

25 Utilisez la documentation de sécurité fournie pour plus de renseignements sur l'utilisation en toute sécurité.

26 Pour des informations plus détaillées, visitez le site Web du service à la clientèle de Sony.

27 Uniquement pour certaines régions/pays/modèles.

28 Utilisez la documentation de sécurité fournie pour plus de renseignements sur l'utilisation en toute sécurité.

29 Pour des informations plus détaillées, visitez le site Web du service à la clientèle de Sony.

30 Uniquement pour certaines régions/pays/modèles.

31 Utilisez la documentation de sécurité fournie pour plus de renseignements sur l'utilisation en toute sécurité.

32 Pour des informations plus détaillées, visitez le site Web du service à la clientèle de Sony.

33 Uniquement pour certaines régions/pays/modèles.

34 Utilisez la documentation de sécurité fournie pour plus de renseignements sur l'utilisation en toute sécurité.

35 Pour des informations plus détaillées, visitez le site Web du service à la clientèle de Sony.

36 Uniquement pour certaines régions/pays/modèles.

37 Utilisez la documentation de sécurité fournie pour plus de renseignements sur l'utilisation en toute sécurité.

38 Pour des informations plus détaillées, visitez le site Web du service à la clientèle de Sony.

39 Uniquement pour certaines régions/pays/modèles.

40 Utilisez la documentation de sécurité fournie pour plus de renseignements sur l'utilisation en toute sécurité.

41 Pour des informations plus détaillées, visitez le site Web du service à la clientèle de Sony.

42 Uniquement pour certaines régions/pays/modèles.

43 Utilisez la documentation de sécurité fournie pour plus de renseignements sur l'utilisation en toute sécurité.

44 Pour des informations plus détaillées, visitez le site Web du service à la clientèle de Sony.

45 Uniquement pour certaines régions/pays/modèles.

46 Utilisez la documentation de sécurité fournie pour plus de renseignements sur l'utilisation en toute sécurité.

47 Pour des informations plus détaillées, visitez le site Web du service à la clientèle de Sony.

48 Uniquement pour certaines régions/pays/modèles.

49 Utilisez la documentation de sécurité fournie pour plus de renseignements sur l'utilisation en toute sécurité.

50 Pour des informations plus détaillées, visitez le site Web du service à la clientèle de Sony.

51 Uniquement pour certaines régions/pays/modèles.

52 Utilisez la documentation de sécurité fournie pour plus de renseignements sur l'utilisation en toute sécurité.

53 Pour des informations plus détaillées, visitez le site Web du service à la clientèle de Sony.

54 Uniquement pour certaines régions/pays/modèles.

55 Utilisez la documentation de sécurité fournie pour plus de renseignements sur l'utilisation en toute sécurité.

56 Pour des informations plus détaillées, visitez le site Web du service à la clientèle de Sony.

57 Uniquement pour certaines régions/pays/modèles.

58 Utilisez la documentation de sécurité fournie pour plus de renseignements sur l'utilisation en toute sécurité.

59 Pour des informations plus détaillées, visitez le site Web du service à la clientèle de Sony.

60 Uniquement pour certaines régions/pays/modèles.

61 Utilisez la documentation de sécurité fournie pour plus de renseignements sur l'utilisation en toute sécurité.

62 Pour des informations plus détaillées, visitez le site Web du service à la clientèle de Sony.

63 Uniquement pour certaines régions/pays/modèles.

64 Utilisez la documentation de sécurité fournie pour plus de renseignements sur l'utilisation en toute sécurité.

65 Pour des informations plus détaillées, visitez le site Web du service à la clientèle de Sony.

66 Uniquement pour certaines régions/pays/modèles.

67 Utilisez la documentation de sécurité fournie pour plus de renseignements sur l'utilisation en toute sécurité.

68 Pour des informations plus détaillées, visitez le site Web du service à la clientèle de Sony.

69 Uniquement pour certaines régions/pays/modèles.

70 Utilisez la documentation de sécurité fournie pour plus de renseignements sur l'utilisation en toute sécurité.

71 Pour des informations plus détaillées, visitez le site Web du service à la clientèle de Sony.

72 Uniquement pour certaines régions/pays/modèles.

73 Utilisez la documentation de sécurité fournie pour plus de renseignements sur l'utilisation en toute sécurité.

74 Pour des informations plus détaillées, visitez le site Web du service à la clientèle de Sony.

75 Uniquement pour certaines régions/pays/modèles.

76 Utilisez la documentation de sécurité fournie pour plus de renseignements sur l'utilisation en toute sécurité.

77 Pour des informations plus détaillées, visitez le site Web du service à la clientèle de Sony.

78 Uniquement pour certaines régions/pays/modèles.

79 Utilisez la documentation de sécurité fournie pour plus de renseignements sur l'utilisation en toute sécurité.

80 Pour des informations plus détaillées, visitez le site Web du service à la clientèle de Sony.

81 Uniquement pour certaines régions/pays/modèles.

82 Utilisez la documentation de sécurité fournie pour plus de renseignements sur l'utilisation en toute sécurité.

83 Pour des informations plus détaillées, visitez le site Web du service à la clientèle de Sony.</

