


Assembly Instruction For
Counter Height Chair
D-20310-5-CSC

CAUTION: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person, this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


PART LIST

No	PART DESC		CODE	Q'TY
1		CHAIR BACK	PD-20310-5-CSCBAC	1
2		CUSHION SEAT	PD-20310-5-CSCSEC	1
3		BOX SEAT	PD-20310-5-CSCBOX	1
4		CHAIR LEG (1)(L)	PD-20310-5-CSCLEGL	1
5		CHAIR LEG (2)(R)	PD-20310-5-CSCLEGR	1
6		FRONT STRETCHER	PD-20310-5-CSCSTRF	1
7		STRETCHER (1)(FL)	PD-20310-5-CSCSTRL	1
8		STRETCHER (2)(FR)	PD-20310-5-CSCSTRR	1

HARDWARE LIST

No	HARDWARE DESC		CODE	Q'TY
A		ALLEN BOLT (M6x35)	PD-20310-5-CSCHW	2
B		ALLEN BOLT (M6x60)		4
C		ALLEN BOLT (M6x80)		4
D		SPRING WASHER (M6x12)		10
E		FLAT WASHER (M6x19)		10
F		SCREWS (M4x32)		12
G		ALLEN KEY (M4)		1


STEP 1

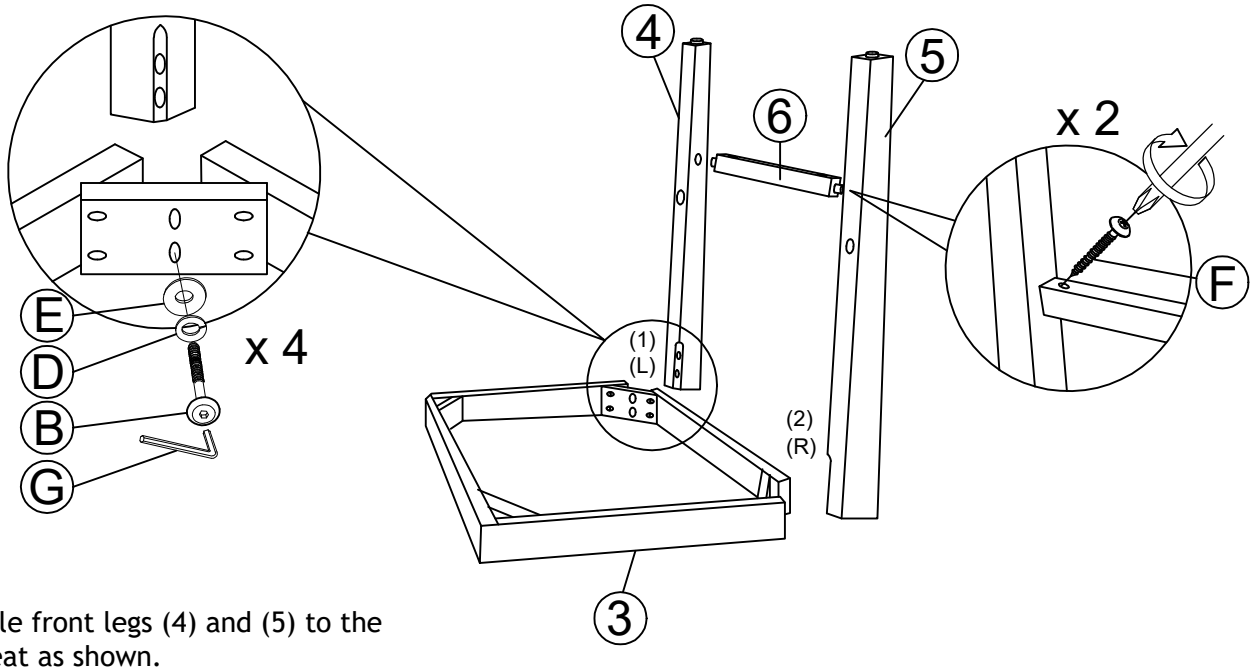


Assemble front legs (4) and (5) to the chair seat as shown.

Assembly Instruction For
Counter Height Chair
D-20310-5-CSC


STEP 2

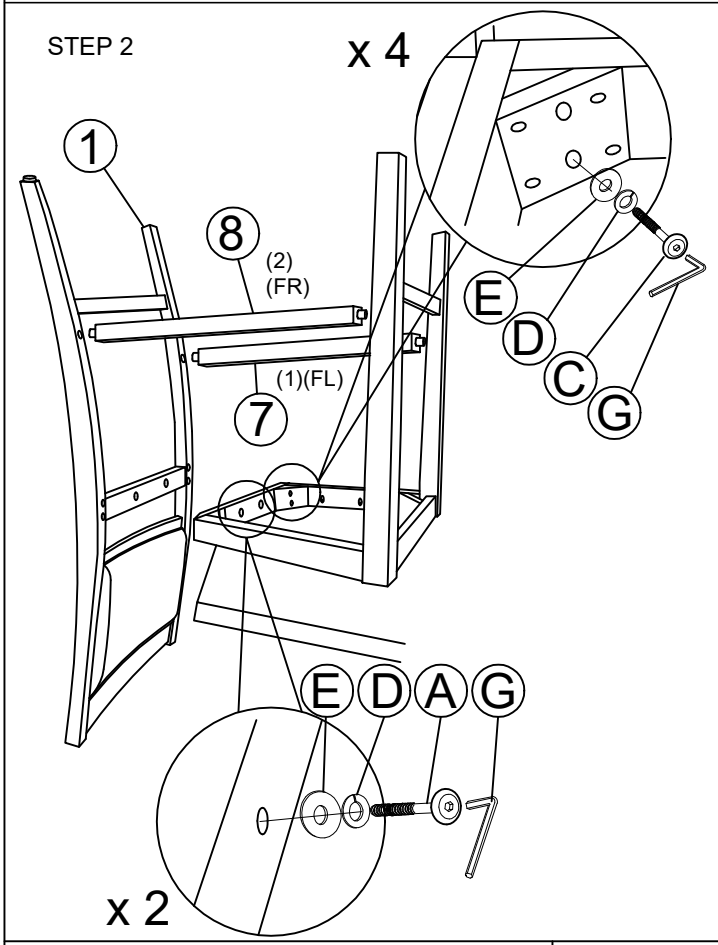


STEP 3

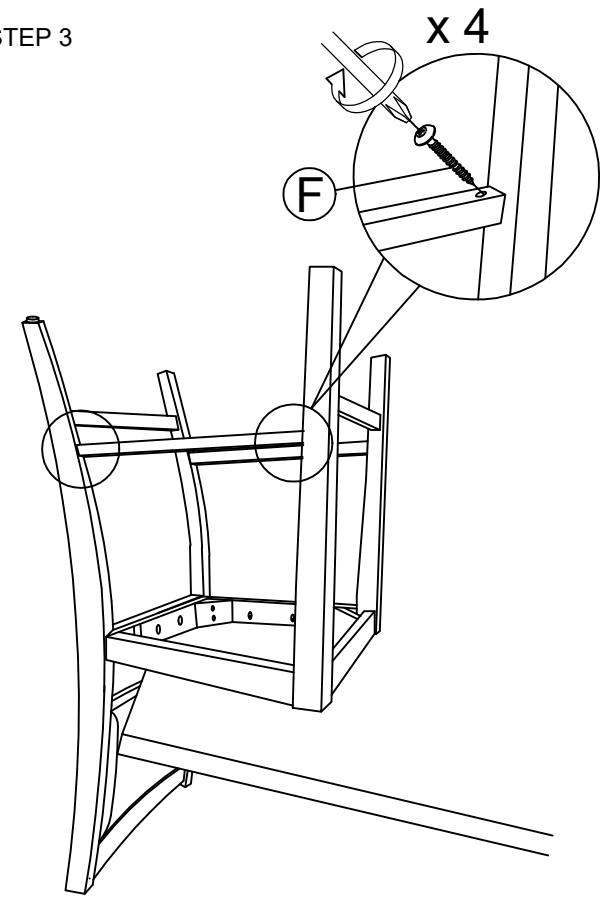

STEP 4

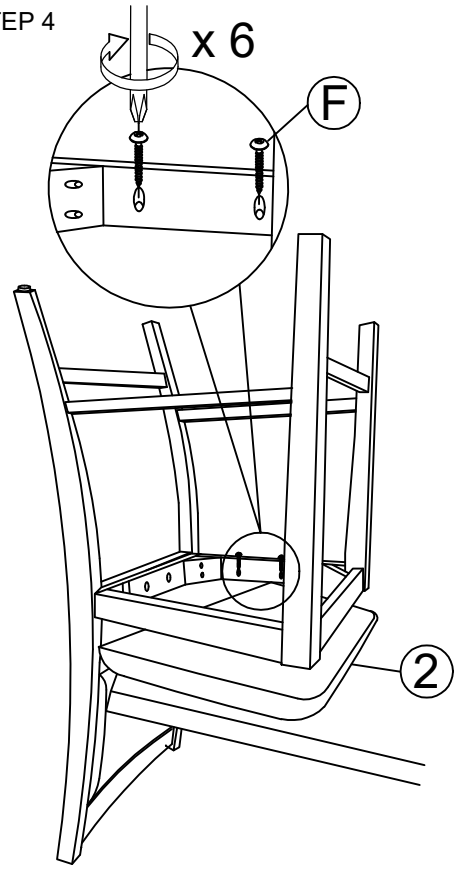

COMPLETED

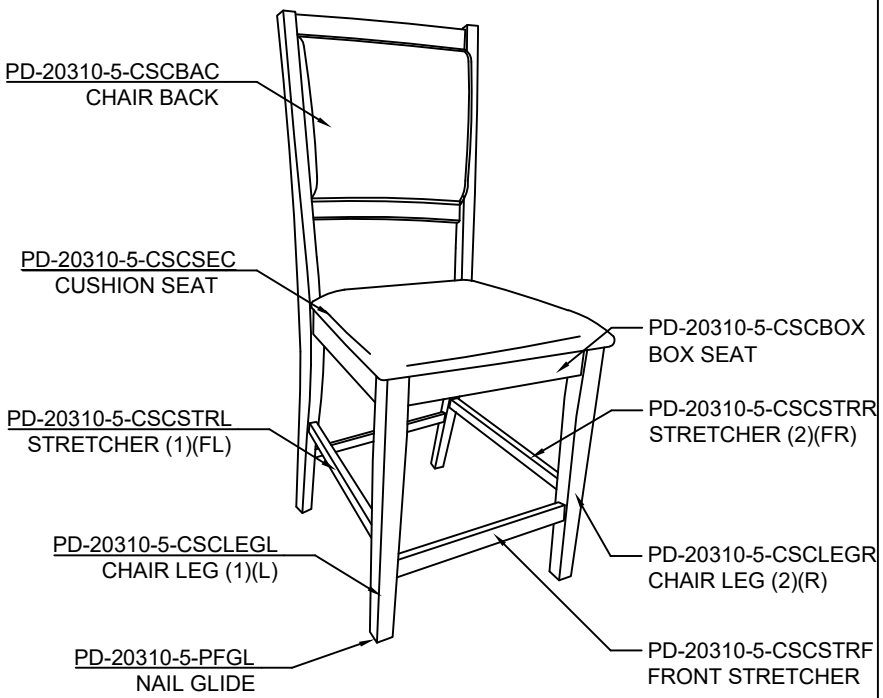

-Turn the chair upright and place on level surface
-Adjust the front legs so that chair is level and does not wobble.
-Tighten all the bolts and take care do not over tighten