Assembly Instructions for
DINING TABLE TOP
DINING TABLE BASE
DMX120DT & DMX120DB

Caution:Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1.We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.

2.Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.

3.Please do not over tighten screws or bolts.

4.Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PART LIST			
No.	PART DESC.	CODE.	Q'TY
A	TABLE TOP LEAF	PDMX120CPTLEA	1
B	TABLE LEGS	PDMX120CDTLEG	4
C	TABLE BASE BOTTOM	PDMX120CPTBOT	1
D	TABLE BASE SHELF	PDMX120CPTSHF	1
E	TABLE BASE SIDE PANEL	PDMX120CPTPAN	3
F	TABLE BASE DOOR	PDMX120CPTDOR	1
G	TABLE BASE STRETCHER	PDMX120CPTSTR	1

HARDWARE LIST				
No.		HARDWARE DESC	CODE.	Q'TY
1		Short bolt (1/4" x 40mm)	PDMX120DTHW	14
2		Hex nut (5/16")		4
3		Spring washer (5/16")		4
4		Flat Washer (5/16" x19mm)		4
5		Spring washer (1/4")		14
6		Flat Washer (1/4" x19mm)		14
7		Wrench		1
8		Allen key M4		1
9		Hinge		2
10		Screw (#3.5 x 12mm)		12
11		Small Bolt (5/32"x15mm)		1
12		Knob		1

STEP:1

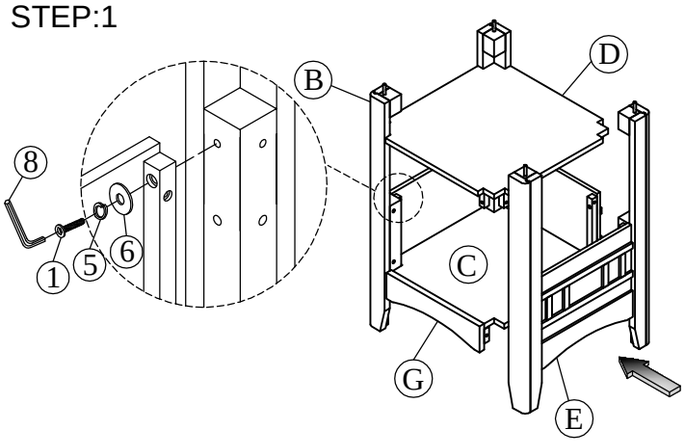

STEP:2

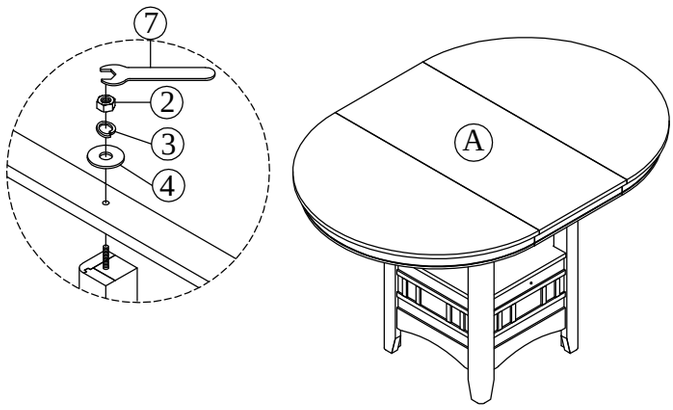

STEP:3

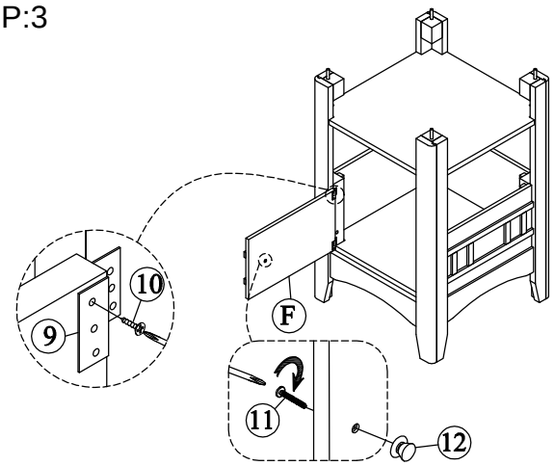

COMPLETED

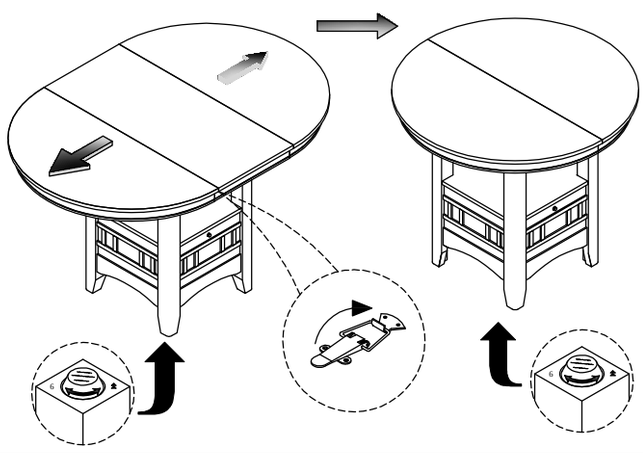

DATE: 11-10-2018