FLEXSTEEL®

Power Glider Reclining Sofa with Power Headrest & Lumbar

IMPORTANT NOTE

Read these instructions carefully and familiarize yourself with each procedure before assembling the furniture. Check that you have all the component parts and familiarize yourself with each part before proceeding.

Take all the fittings out of the plastic bag and separate them into groups. Ensure you have enough space to lay out all the parts before assembly. To prevent damage to the parts, we recommend that you assemble the unit on a soft, level surface.

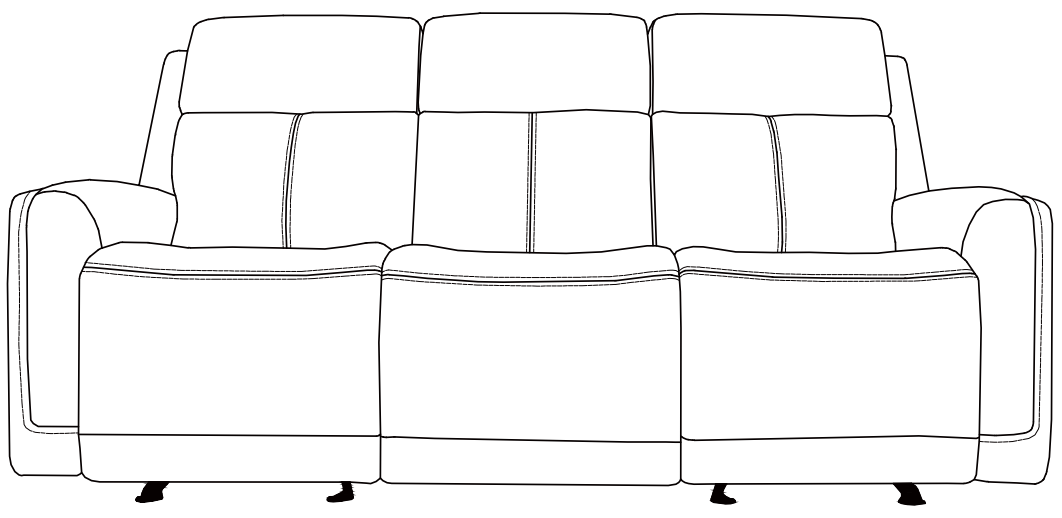

Part List

A. LAF Back
1 piece



B. RAF Back
1 piece



C. CTR Back
1 piece



D. Seat
1 piece



E. LAF Wing
1 piece



F. RAF Wing
1 piece



G. Sofa Transformer
1 piece



H. Wireless Charge Transformer
1 piece



Assembly Instructions

STEP 1
Take off the clasp (fix the glider during transit).
Detach the Wings (EF) and Transformers (G H) from the bottom of the seat. (See Figure 1.)

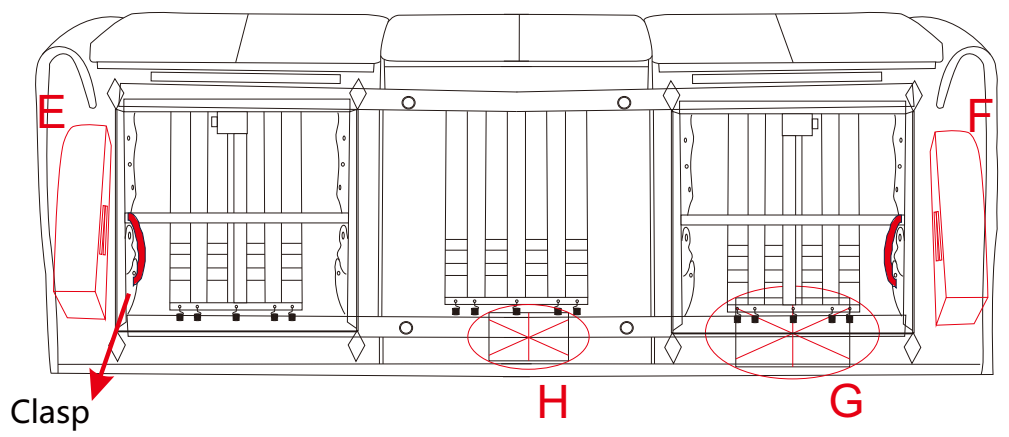

Figure 1

STEP 2
Attach the Backs (A B C) to the Seat (D), LAF Wing (E) to the LAF Back (A). and RAF Wing (F) to the RAF Back (B). Ensure the latches fit well.
(See Figure 2.)

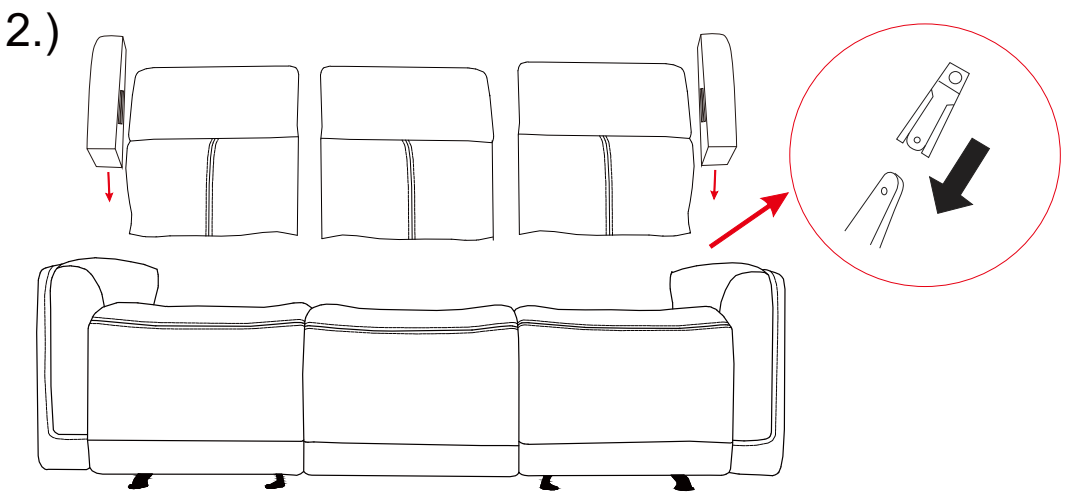

Figure 2

STEP 3

Zip the black fabric on bottom of Backs (A B C) with back of Seat (D). (See Figure 3.)

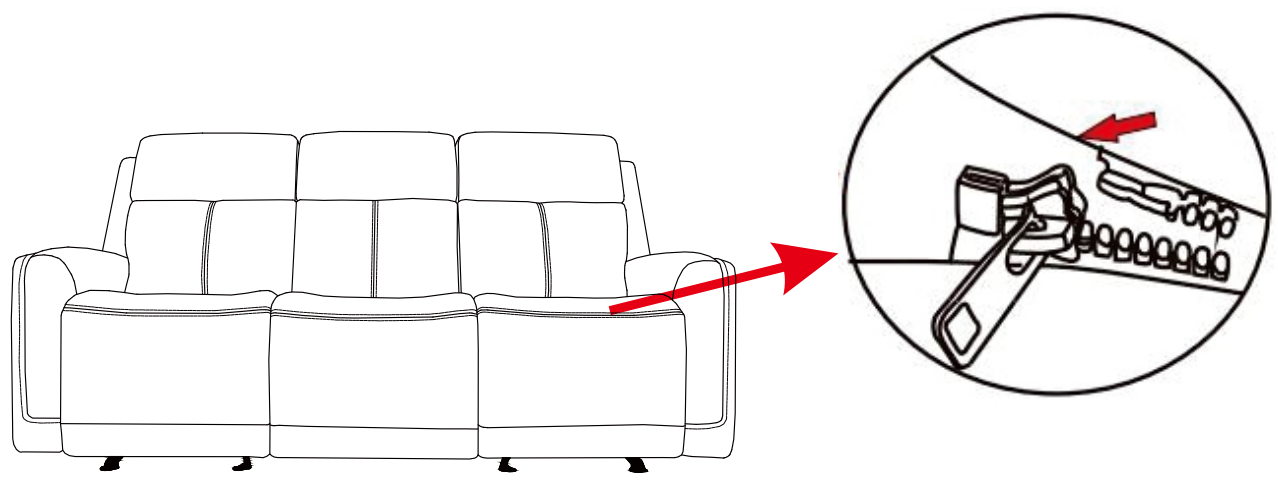

Figure 3

STEP 4

Flip up the back flap, connect the headrest and lumbar cable. (See Figure 4.)

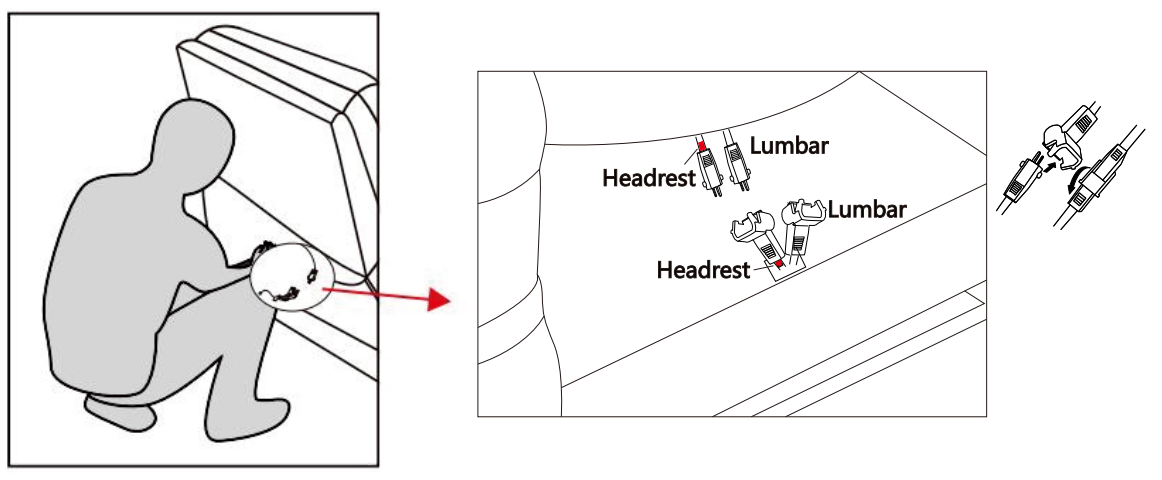

Figure 4

STEP 5
Fasten the back flaps to the bottom of the furniture. (See Figure 5.)

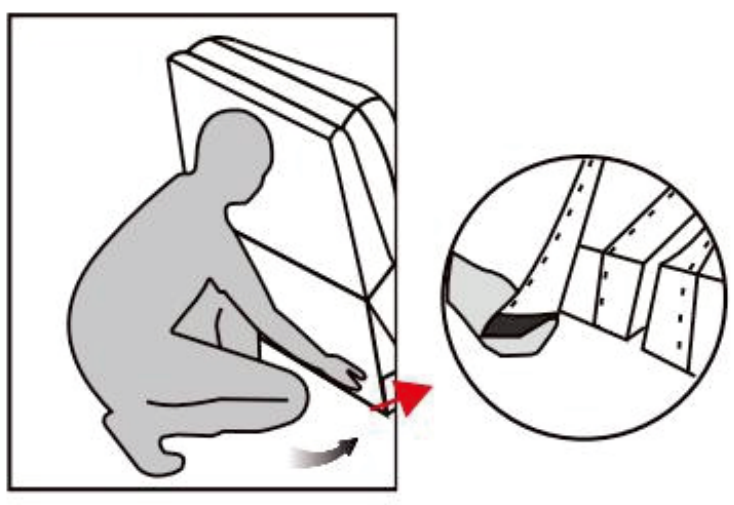

Figure 5

STEP 6
Connect the wireless charge cable to Transformer (H).
Connect the base motor cable to the Transformer (G).
Plug the transformers into a nearby outlet. (See Figure 6.)

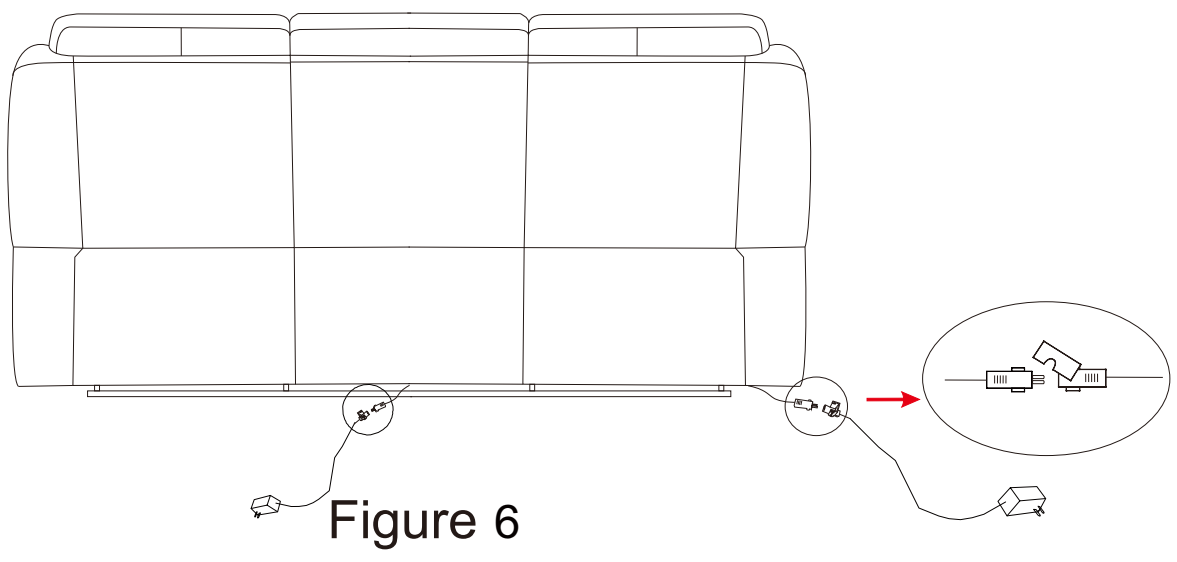

Figure 6

Disassembly Instructions

Unzipping the zip between Backs (A B C) and Seat (D), then disconnect the headrest and lumbar cable.
Pull up the spring leaf in bracket, then lift Backs (A B C) up. (See Figure 7.)

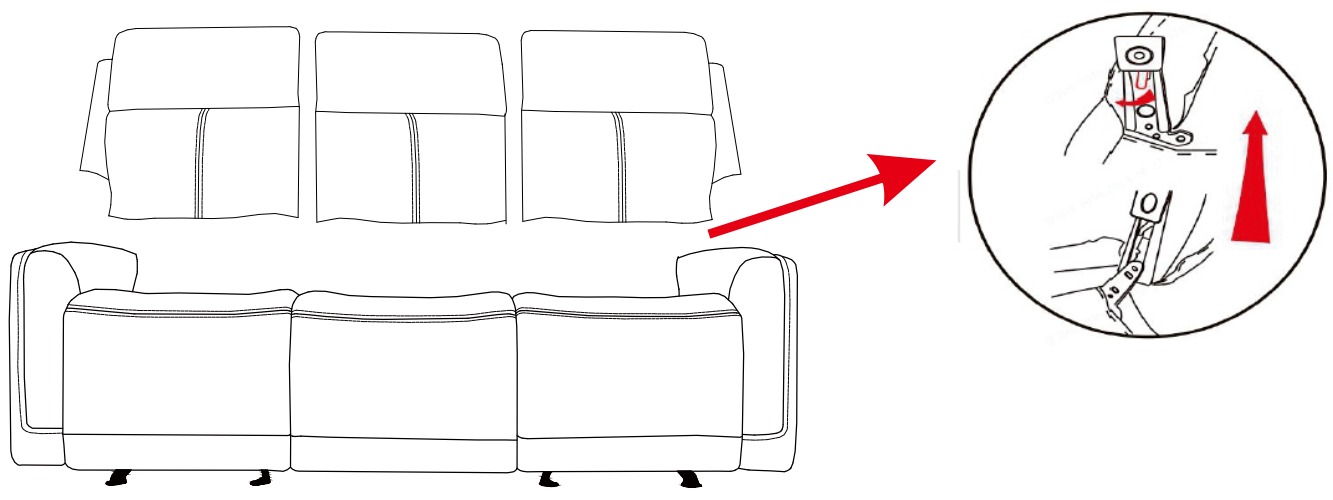

Figure 7

IMPORTANT NOTE

- To avoid any risk of suffocation to children or pets, dispose of all plastic bags immediately.
- To ensure proper performance, occasionally check for loose hardware and tighten as needed.
- If the reclining functions are not working properly, check for loose cable connections before contacting the retailer.