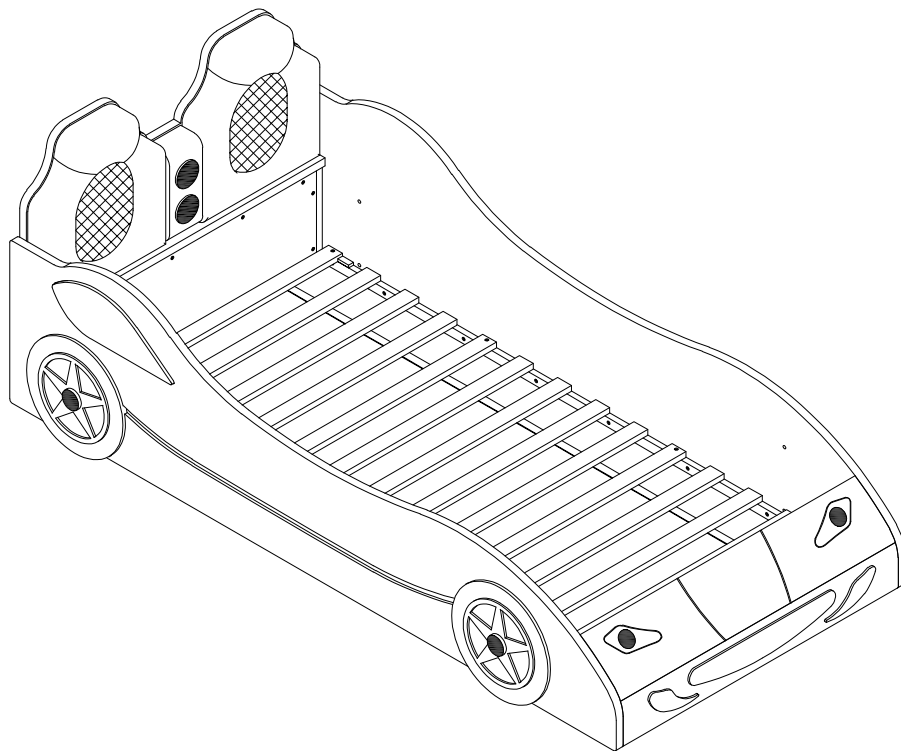# ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

Fine Furniture for every stage of life

400478(B1&B2)
Twin Bed

ITEM: **400478(B1&B2)**
ASSEMBLY INSTRUCTIONS

COASTER
FINE FURNITURE

ASSEMBLY TIPS:
1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!
1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
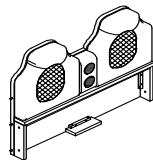2. This product is for home use only and not intended for commercial establishments.

| ASSEMBLY TIME | 30 MINUTES |

PARTS IDENTIFICATION

B1 (BOX 1)

A	**HEABOARD**	1PC
B	**FOOTBOARD BOTTOM PANEL**	1PC
C	**FOOTBOARD TOP PANEL**	1PC
D	**FOOTBOARD SUPPORT**	1PC
E	**HEADBOARD CONCEAL PANEL**	1PC
F	**FOOTBOARD CONCEAL PANEL**	1PC
G	**ROLL SLAT (14PCS)**	1SET
H	**ADAPTER**	1PC

B2 (BOX 2)

I	LEFT SIDE RAIL	1PC
J	RIGHT SIDE RAIL	1PC

HARDWARE IDENTIFICATION

Z-B1 (BOX1) - HARDWARE PACK IS LOCATED IN 400478(B1)

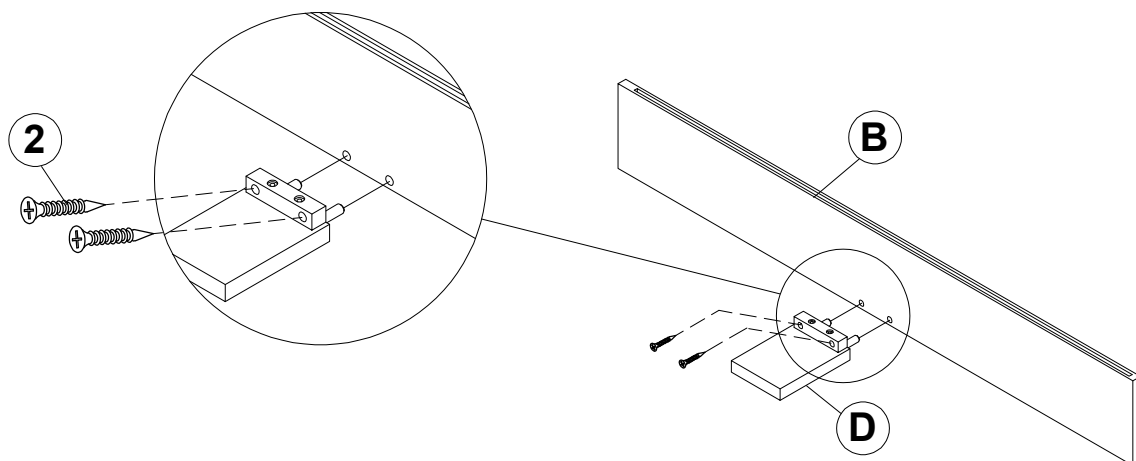|						
1	**BOLT** (5/16 x 35mm - BLK)	10PCS	**4**	**WOOD DOWEL** (10 x 40mm)	14PCS
2	**LONG FLAT HEAD SCREW** (4 x 35mm - BLK)	12PCS	**5**	**ALLEN WRENCH** (5 x 57MM - BLK)	1PC
3	**SHORT FLAT HEAD SCREW** (4 x 20mm - BLK)	20PCS			

NOTE:
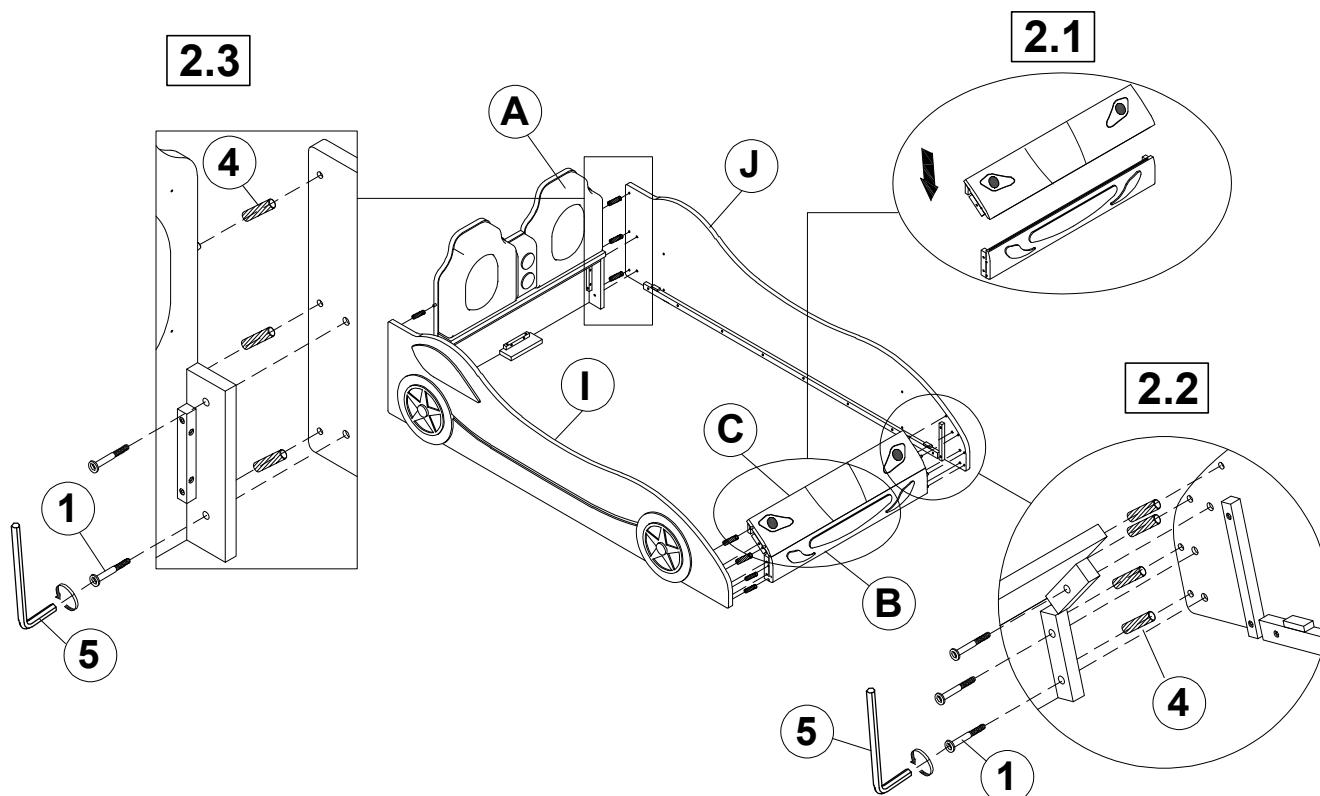**Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.**

COASTERFURNITURE.COM

ITEM: **400478(B1&B2)**

ASSEMBLY INSTRUCTIONS

STEP 1

2

B

D

STEP 2

2.3

2.1

A

J

4

I

C

1

B

5

2.2

5

4

1

ASSEMBLY INSTRUCTIONS
STEP 3
Note: connect
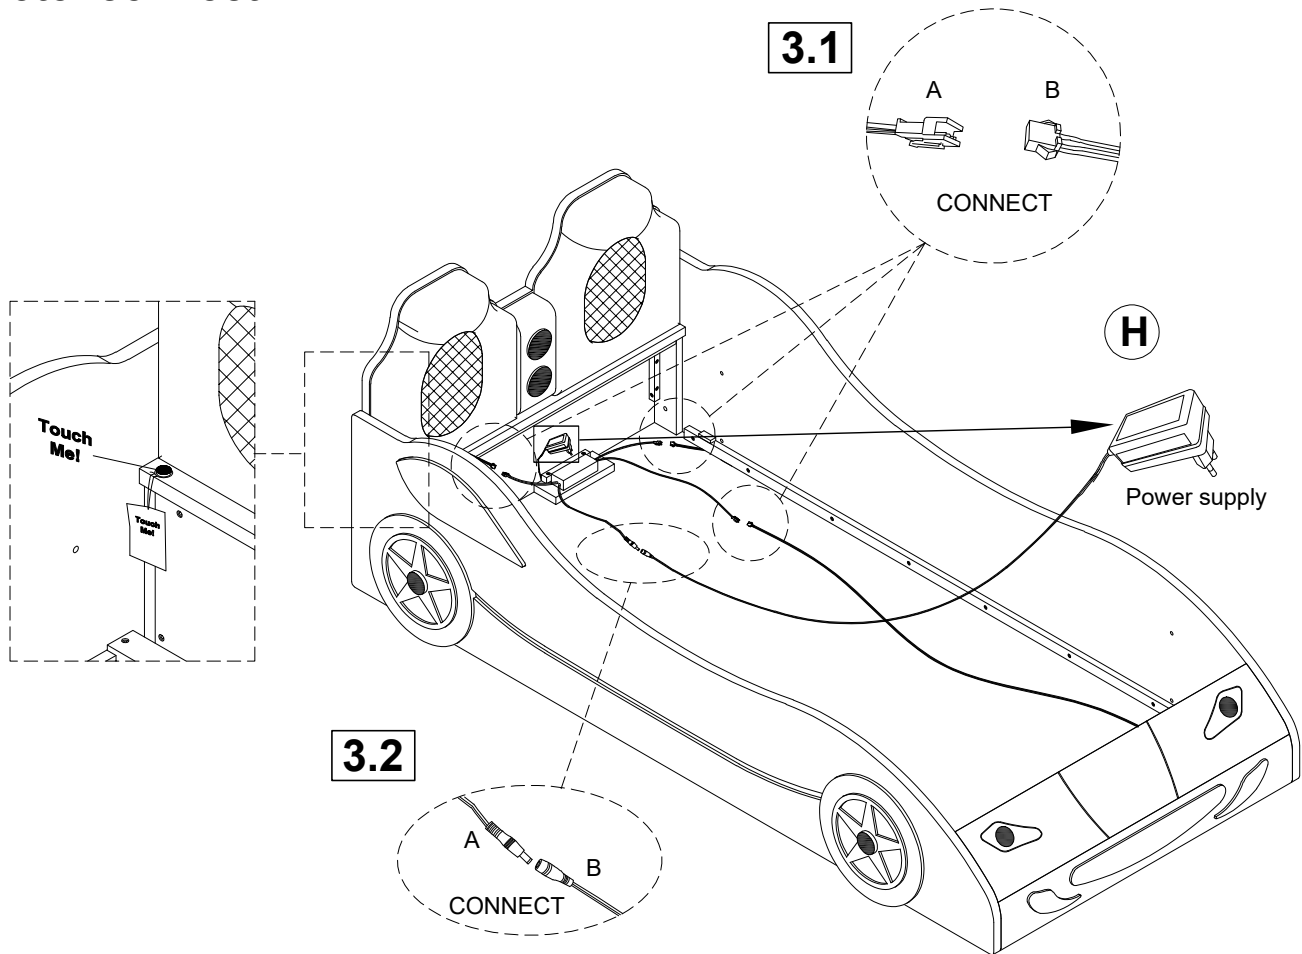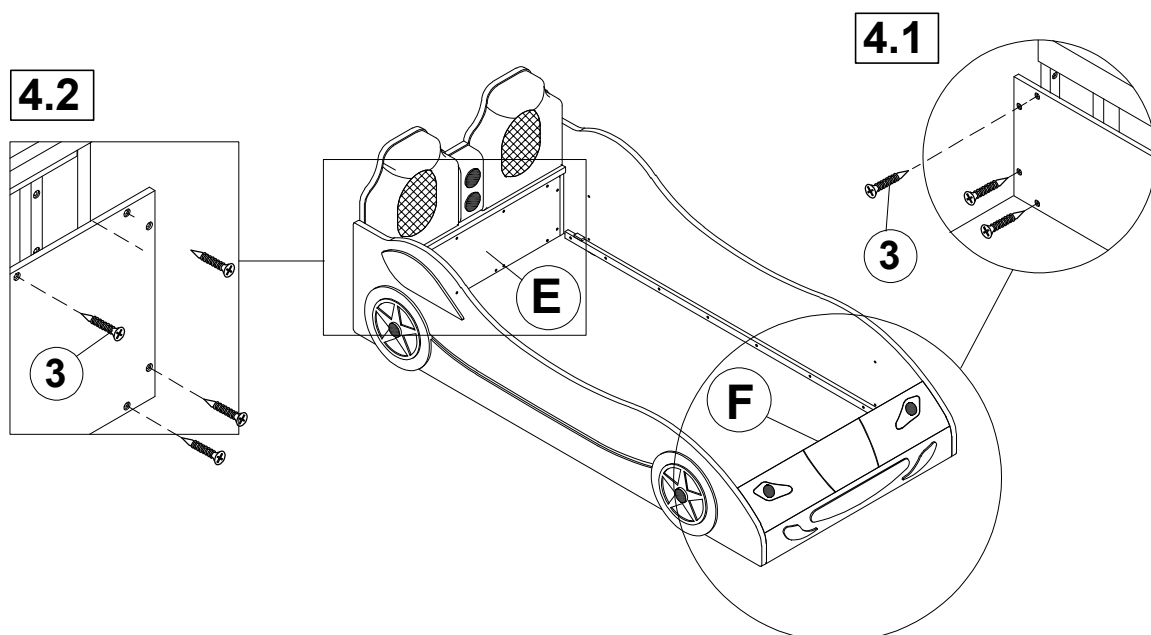
COASTER
FINE FURNITURE

3.1

A   B

CONNECT

H

Power supply

Touch Me!

Touch Me!

3.2

A

B

CONNECT

STEP 4

4.1

4.2

3

E

F

3

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS

STEP 5

G

2

STEP 6
COMPLETE

COASTER
FINE FURNITURE

COASTERFURNITURE.COM

ITEM: **400478(B1&B2)**

COASTER
FINE FURNITURE

Inner Size : 75.00"W x 39.00"D

11.50"

33.00"

11.50"

39.00"

21.50"

2.50"

86.75"

41.75"
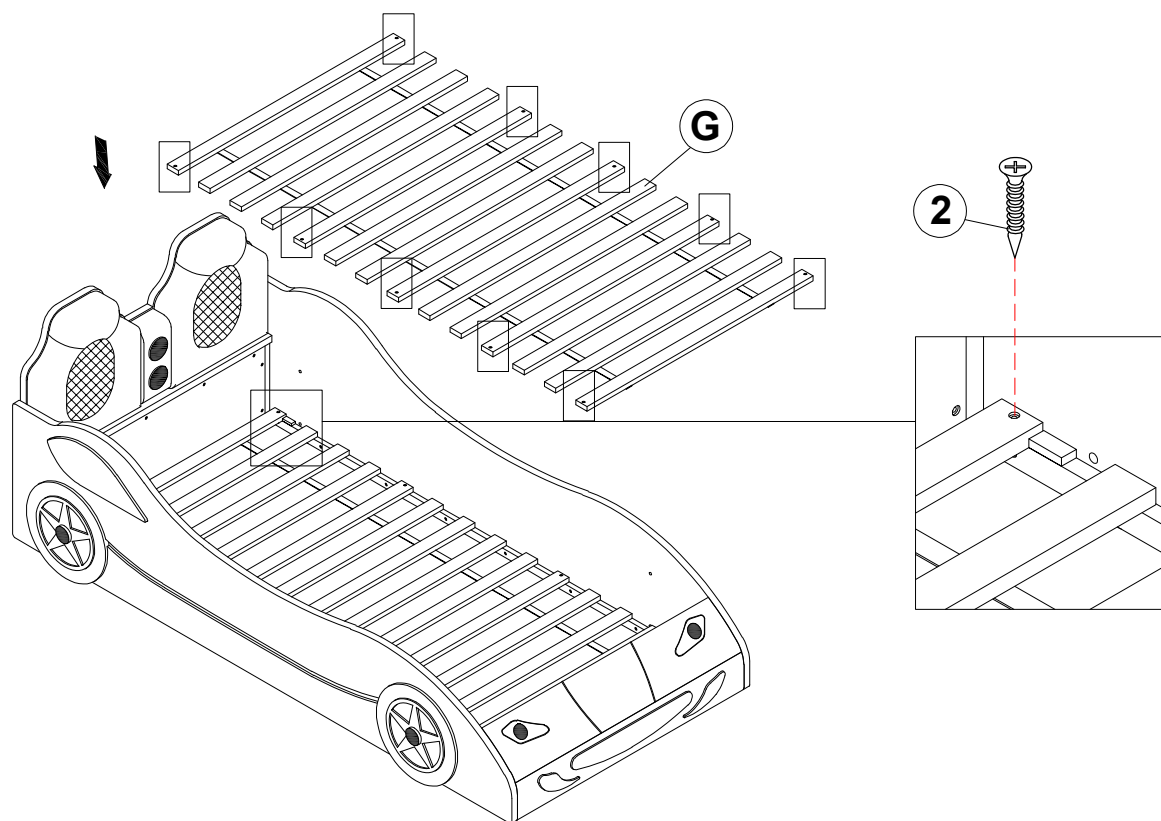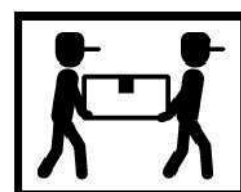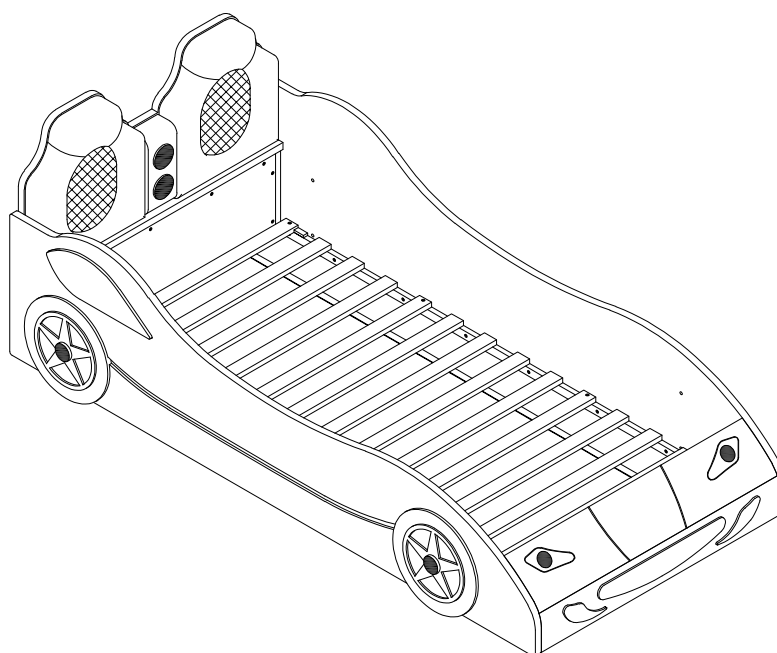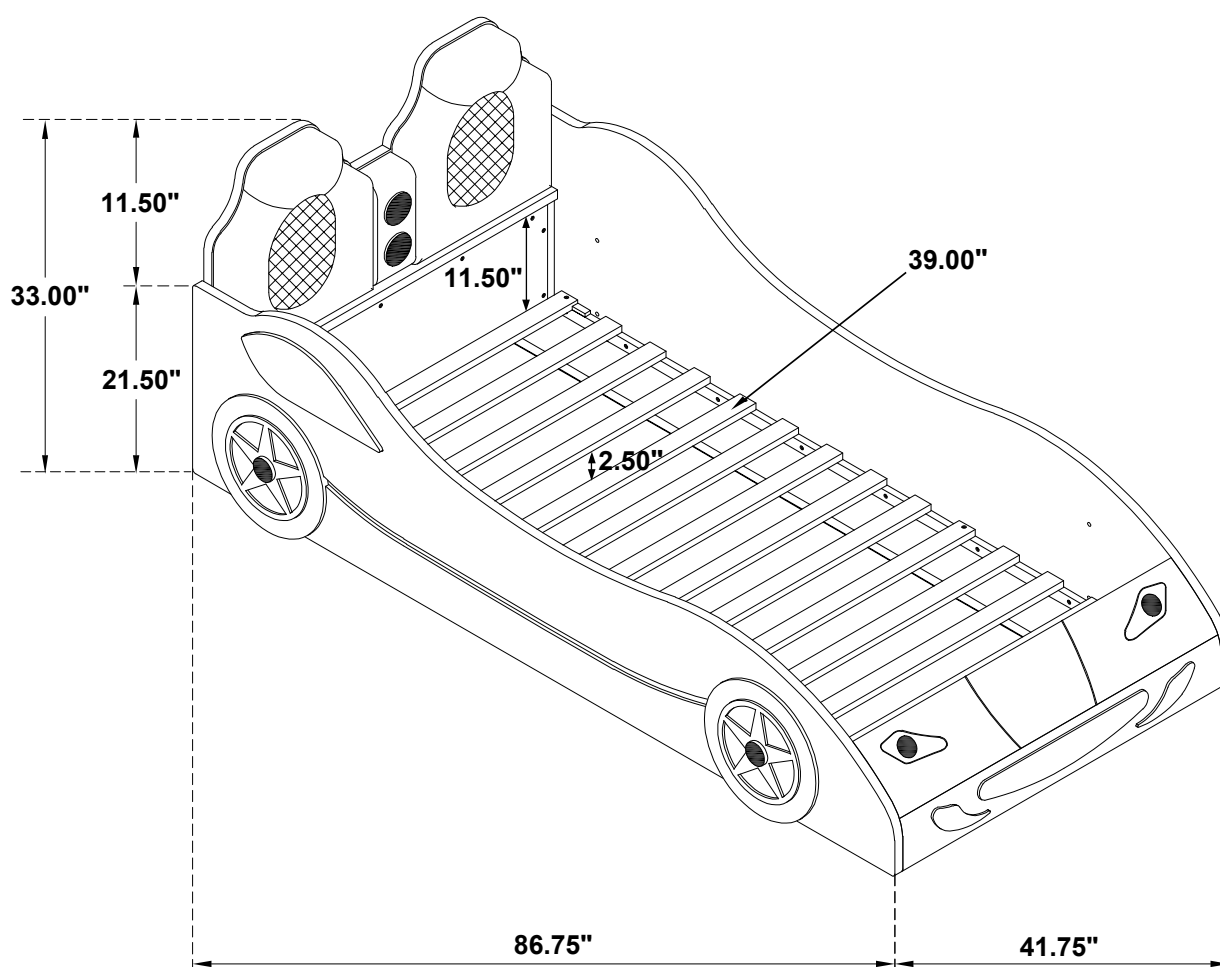
Note: Dimension Tolerance ± 5%