FLEXSTEEL®

Power Reclining Loveseat

IMPORTANT NOTE

Read these instructions carefully and familiarize yourself with each procedure before assembling the furniture. Check that you have all the component parts and familiarize yourself with each part before proceeding.

Take all the fittings out of the plastic bad and separate them into groups. Ensure you have enough space to lay out all the parts before assembly. To prevent damage to the parts, we recommend that you assemble the unit on a soft, level surface.

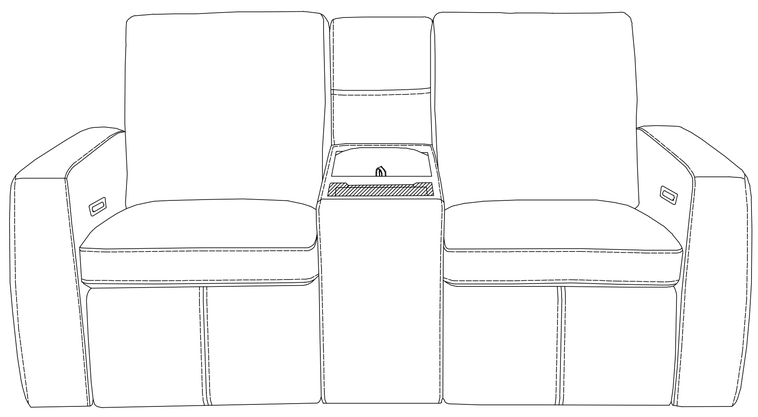

Part List

A. Back Pillow
2 pieces

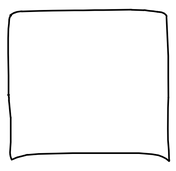

B. Back Frame
2 pieces

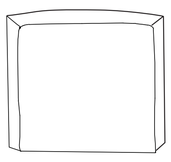

C. Seat
1 piece

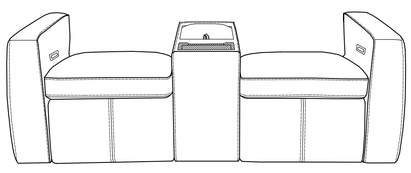

D. Console Back
1 piece



E. Sofa Transformer
1 piece

F. Wireless Charge Transformer
1 piece

G. 58mm G1/4" Bolts
2 pieces



H. Handle
2 pieces



I. 1mm M8 Washer
2 pieces

Assembly Instructions

STEP 1

Detach the Transformer (E F) and Console Back (D) from the bottom of the seat. (See Figure 1.)

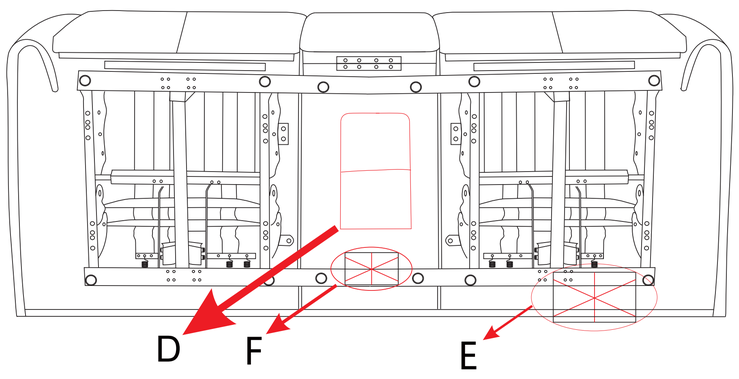

Figure 1

STEP 2

Insert the bolts (G) into the nuts on the bottom of the console back (D) by turning them by hand. Set the console back (D) onto the top of the center console of seat (C), inserting the bolts (G) through the holes on the top of the console of seat (C). Slide a washer (I) onto each bolt, then screw the handle (H) onto each bolt. Tighten handles (H) until the console back (D) is tight. (See Figure 2.)

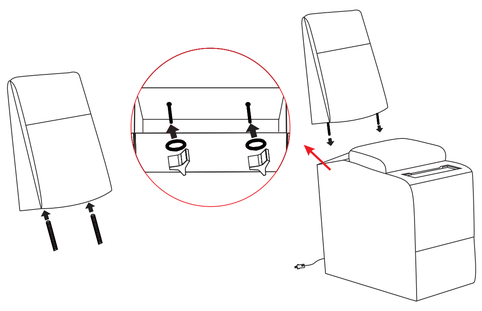

Figure 2

STEP 3

Attach the Back Frames (B) to the Seat (C).
Ensure the latches fit well. (See Figure 3.)

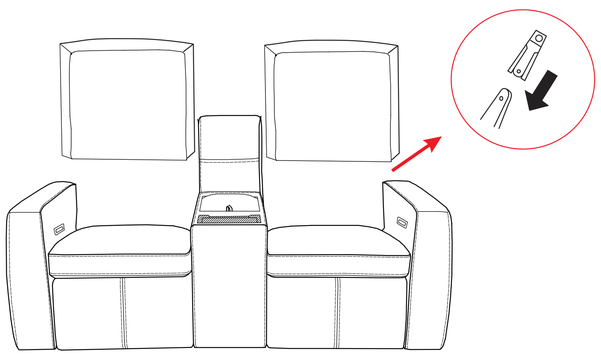

Figure 3

STEP 4

Fasten the Back Pillows (A) to the Back Frame (B) with the zipper. (See Figure 4.)

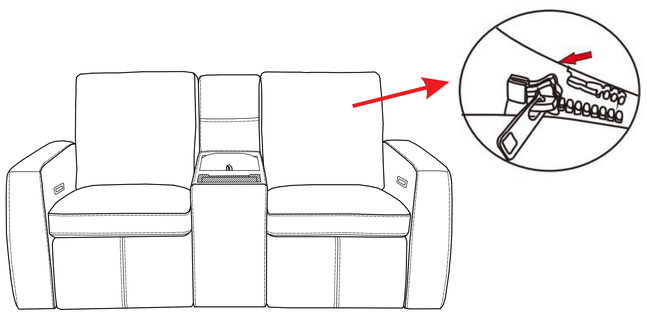

Figure 4

STEP 5

Fasten the back flaps to the bottom of the furniture. (See Figure 5.)

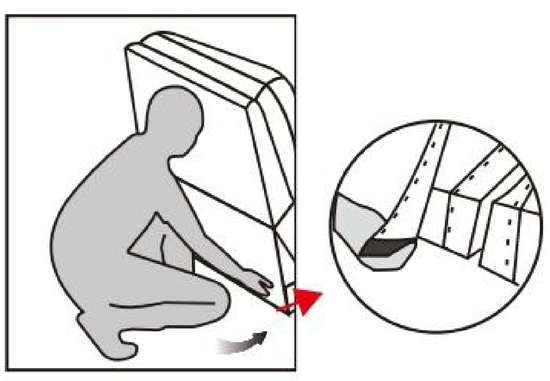

Figure 5

STEP 6

Connect the wireless charge cable to Transformer (F).
Connect the base motor cable and to Transformer (E).
Plug the transformers into nearby outlets. (See Figure 6.)

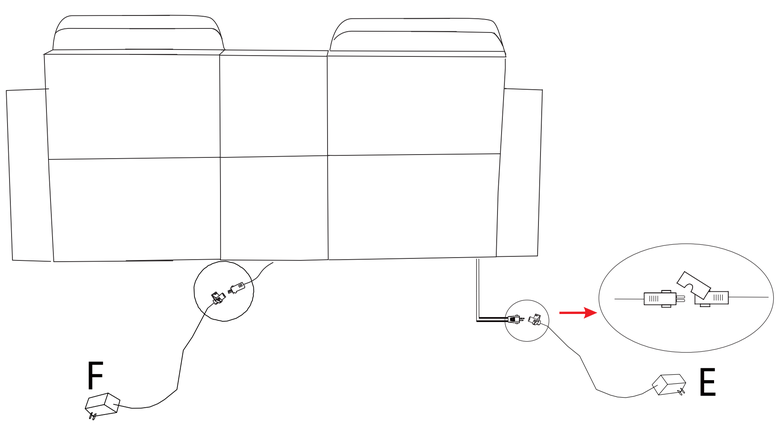

Figure 6

Disassembly Instructions

Unzip the zipper between Back Pillows (A) and Back Frames (B).

Pull up the spring leaf in bracket, then lift Back Frames (B) up.

(See Figure 7.)

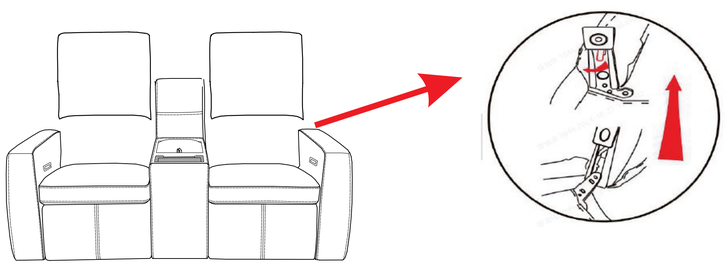

Figure 7

IMPORTANT NOTES

- To avoid any risk of suffocation to children or pets, dispose of all plastic bags immediately.
- To ensure proper performance, occasionally check for loose hardware and tighten as needed.
- If the reclining functions are not working properly, check for loose cable connections before contacting the retailer.