Riverside FURNITURE

email: info@riverside-furniture.com

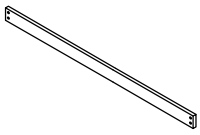
# *BENNETT*
# *Bedroom*
# *Assembly Instructions*

Made in Viet Nam






King Panel Bed

**Warning :**
- Be sure to check all packing material carefully for small parts,which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture **MUST BE ASSEMBLED BY TWO PEOPLE** on a soft surface such as a blanket or carpet.








## Hardware and Parts packed with the Headboard

| | | | |
|---|---|---|---|
| 79280 King Panel Headboard  H-A 1 pc. | Headboard Post (Left)  H-B 1 pc. | Headboard Post (Right)  H-C 1 pc. | Headboard Stretcher  H-D 1 pc. |
| Allen Head Bolt ϕ5/16"-18 x 1-3/4"  H-E 10 pcs. | Spring Washer ϕ5/16"  H-F 10 pcs. | Flat Washer ϕ5/16" x 19*2mm  H-G 10 pcs. | Allen Key 5mm  H-H 1 pc. |





## Hardware and Parts packed with the Footboard
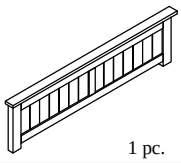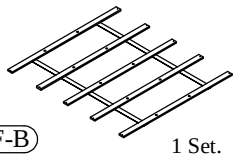
| | | | | |
|---|---|---|---|---|
| 79281 King Panel Footboard  F-A1 1 pc. | Wood Slat 77" long  F-B 1 Set. | Slat Support Leg 6-3/4" x 1-1/4" x 1-1/4"  F-C 10 pcs. | Wood Screw #8 x 1"  F-D 10 pcs. | Screw Driver not included  |

## Hardware and Parts packed with the Storage Footboard
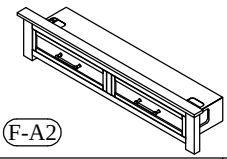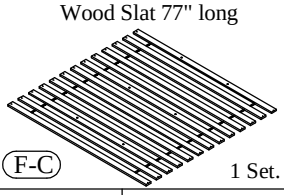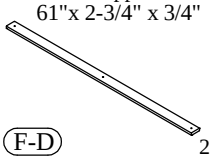
| | | | | | |
|---|---|---|---|---|---|
| 79283 King Storage Footboard  F-A2 1 pc. | Footboard Support Leg 7-1/4"x 1-1/4" x 1-1/4"  F-B 2 pcs. | Wood Slat 77" long  F-C 1 Set. | Center Support Rail 61"x 2-3/4" x 3/4"  F-D 2 pcs. | Slat Support Leg 12" x 1-1/4" x 1-1/4"  F-E 6 pcs. | |
| Allen Head Bolt ϕ5/16"-18 x 1-1/2"  F-F 4 pcs. | Spring Washer ϕ5/16"  F-G 4 pcs. | Flat Washer ϕ5/16" x 19*2mm  F-H 4 pcs. | Allen Key 5mm  F-I 1 pc. | Wood Screw #8 x 1"  F-J 26 pcs. | Screw Driver not included  |

## Hardware and Parts packed with the Bed Rail
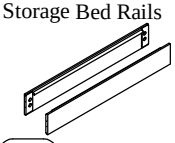
| | | | | | | |
|---|---|---|---|---|---|---|
| 79272 Panel Bed Rails  R-A1 2 pcs. | All-Thread Bolt ϕ5/16"-18 x 3-1/2"  R-B 8 pcs. | Curved Washer ϕ5/16"  R-C 8 pcs. | Flat Washer ϕ5/16" x 16*2mm  R-D 8 pcs. | Spring Washer ϕ5/16"  R-E 8 pcs. | Hex Nut ϕ5/16"x L17  R-F 8 pcs. | Open Wrench 13mm  R-G 1 pc. |
| 79274 Storage Bed Rails  R-A2 2 pcs. | All-Thread Bolt ϕ5/16"-18 x 3-1/2"  R-B 8 pcs. | Curved Washer ϕ5/16"  R-C 8 pcs. | Flat Washer ϕ5/16" x 16*2mm  R-D 8 pcs. | Spring Washer ϕ5/16"  R-E 8 pcs. | Hex Nut ϕ5/16"x L17  R-F 8 pcs. | Open Wrench 13mm  R-G 1 pc. |

*6/0-6/6 King Bed*

*79280 -- 6/6 Panel Headboard*
*79281 -- 6/6 Panel Footboard*
*79272 -- 5/0-6/6 Panel Side Rails*

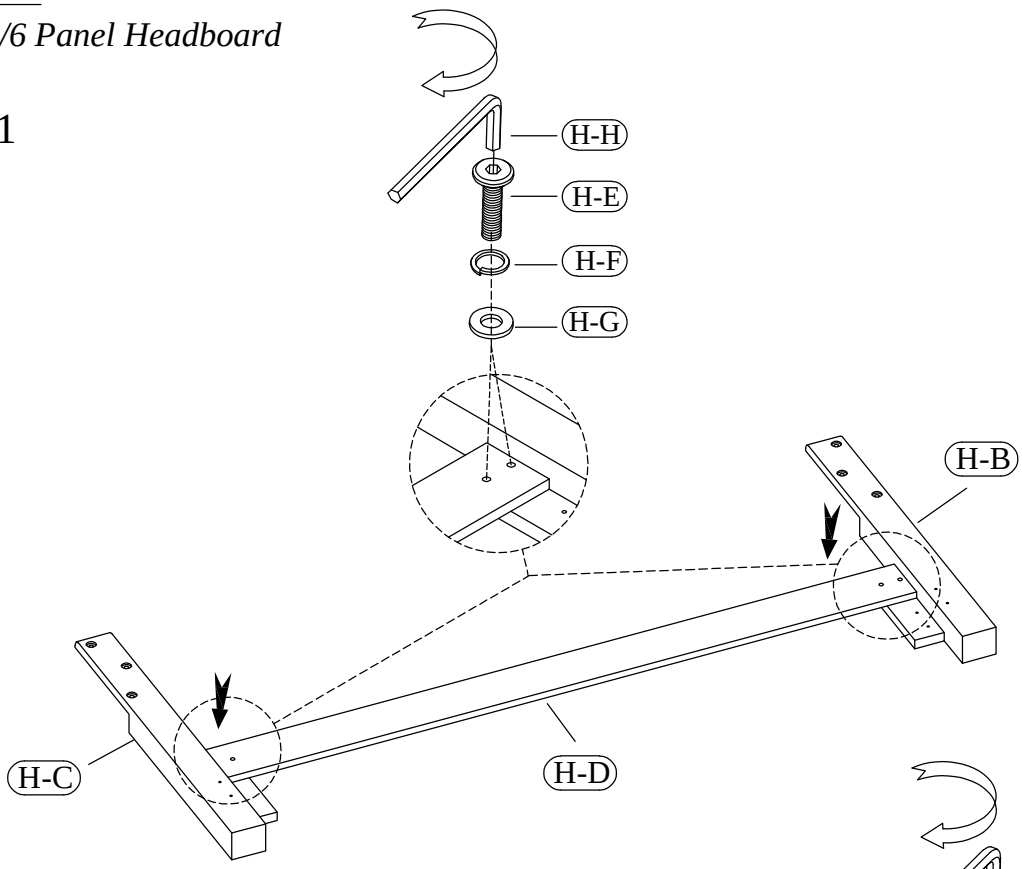
*6/0-6/6 King Bed*

*79280 -- 6/6 anel Headboard*
*79283 -- 6/6 Storage Footboard*
*79274 -- 5/0-6/6 Storage Bed Rails*


*6/6 King Bed*

*79280 -- 6/6 Panel Headboard*

STEP 1



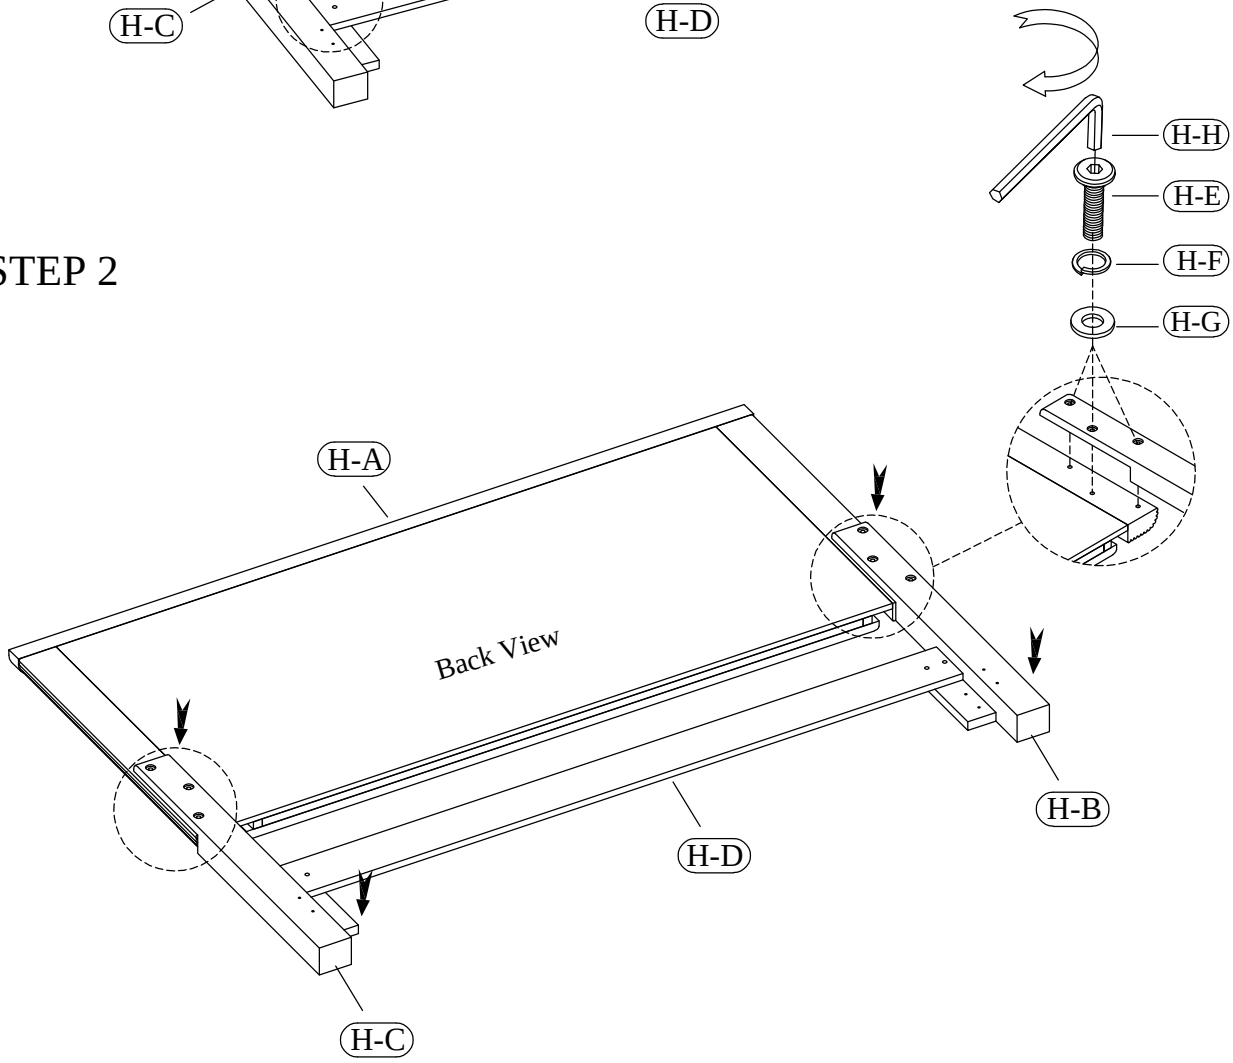

STEP 2




*6/6 King Bed*

*79280 -- 6/6 Panel Headboard*
*79281 -- 6/6 Panel Footboard*

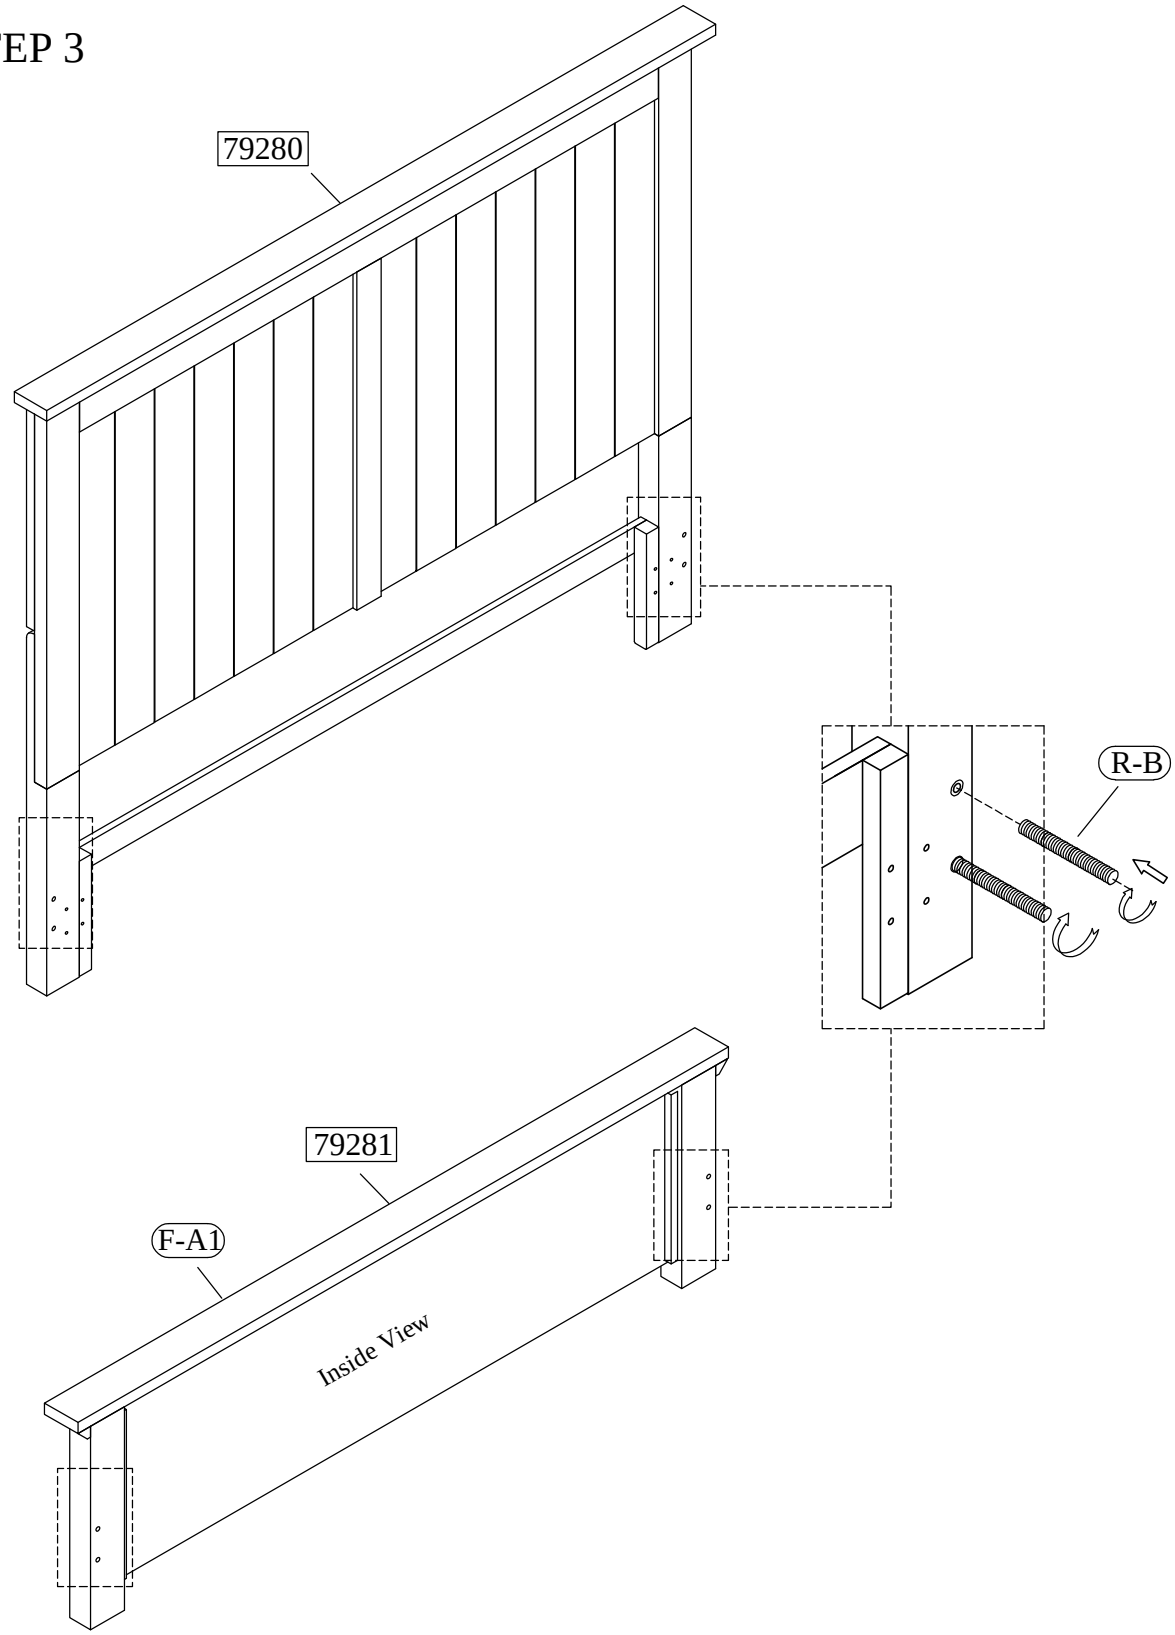
STEP 3




## STEP 4

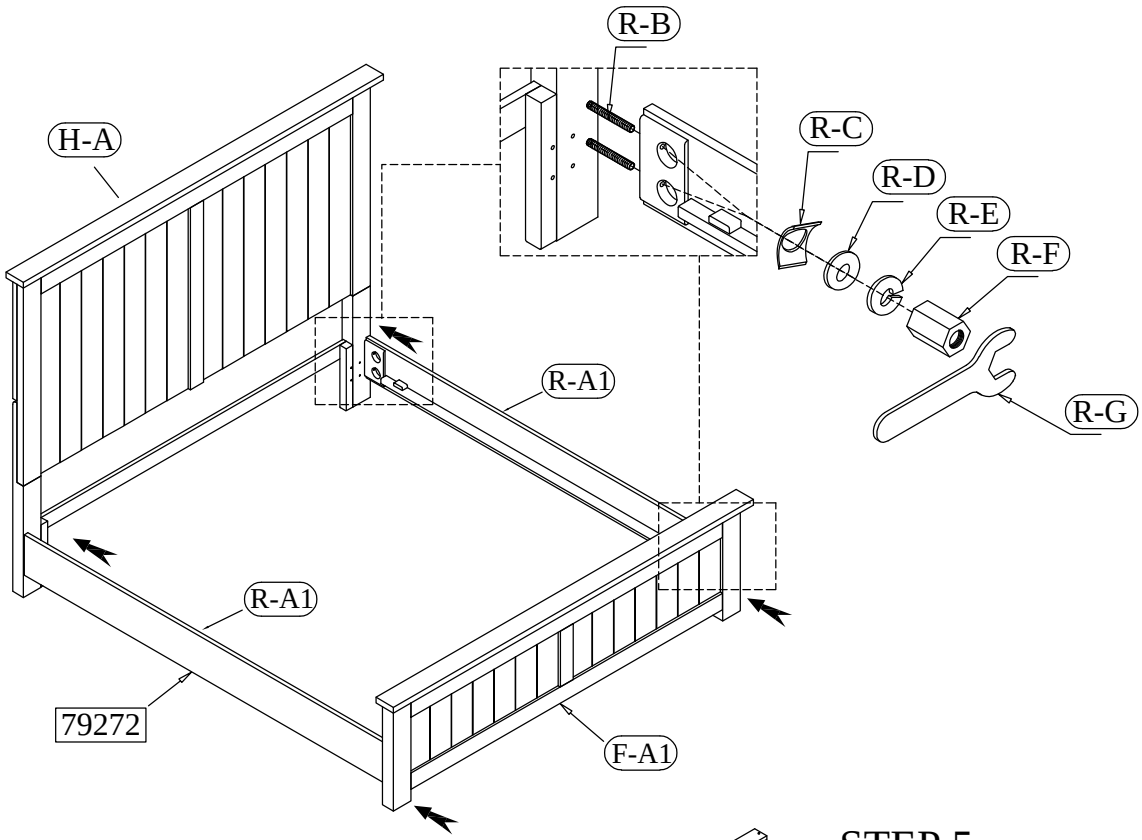



## STEP 5

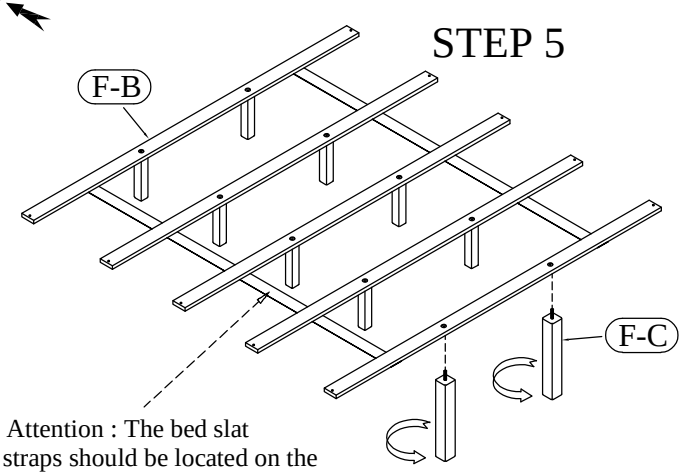

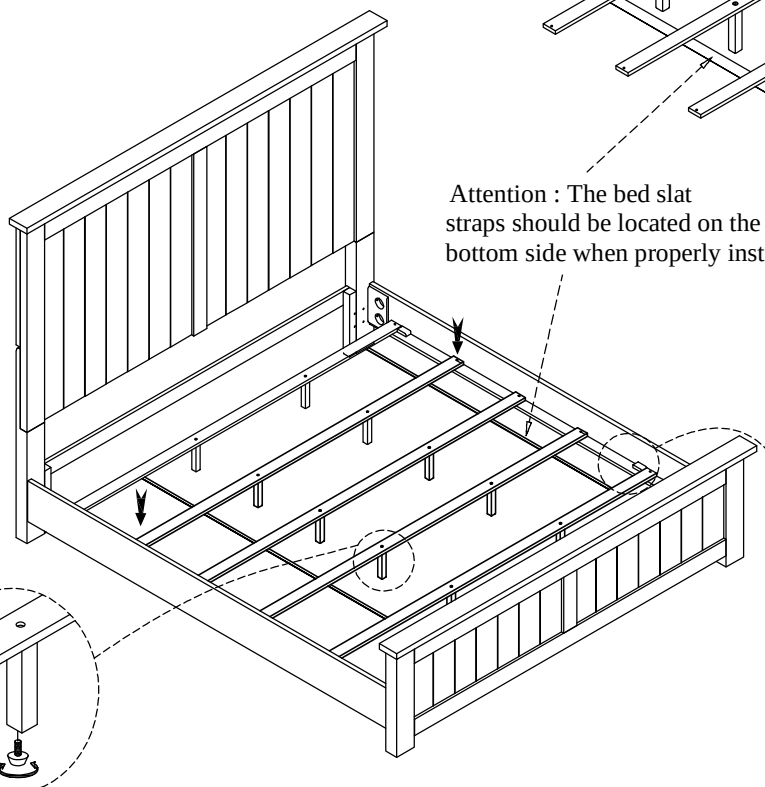
Attention : The bed slat straps should be located on the bottom side when properly installed.



## STEP 6

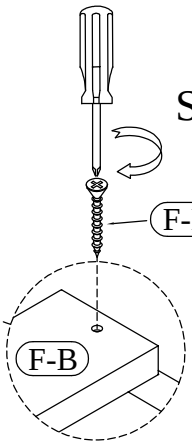





Adjustable Leveler

*6/6 King Bed*

*79280 -- 6/6 Panel Headboard*

*79283 -- 6/6 Storage Footboard*

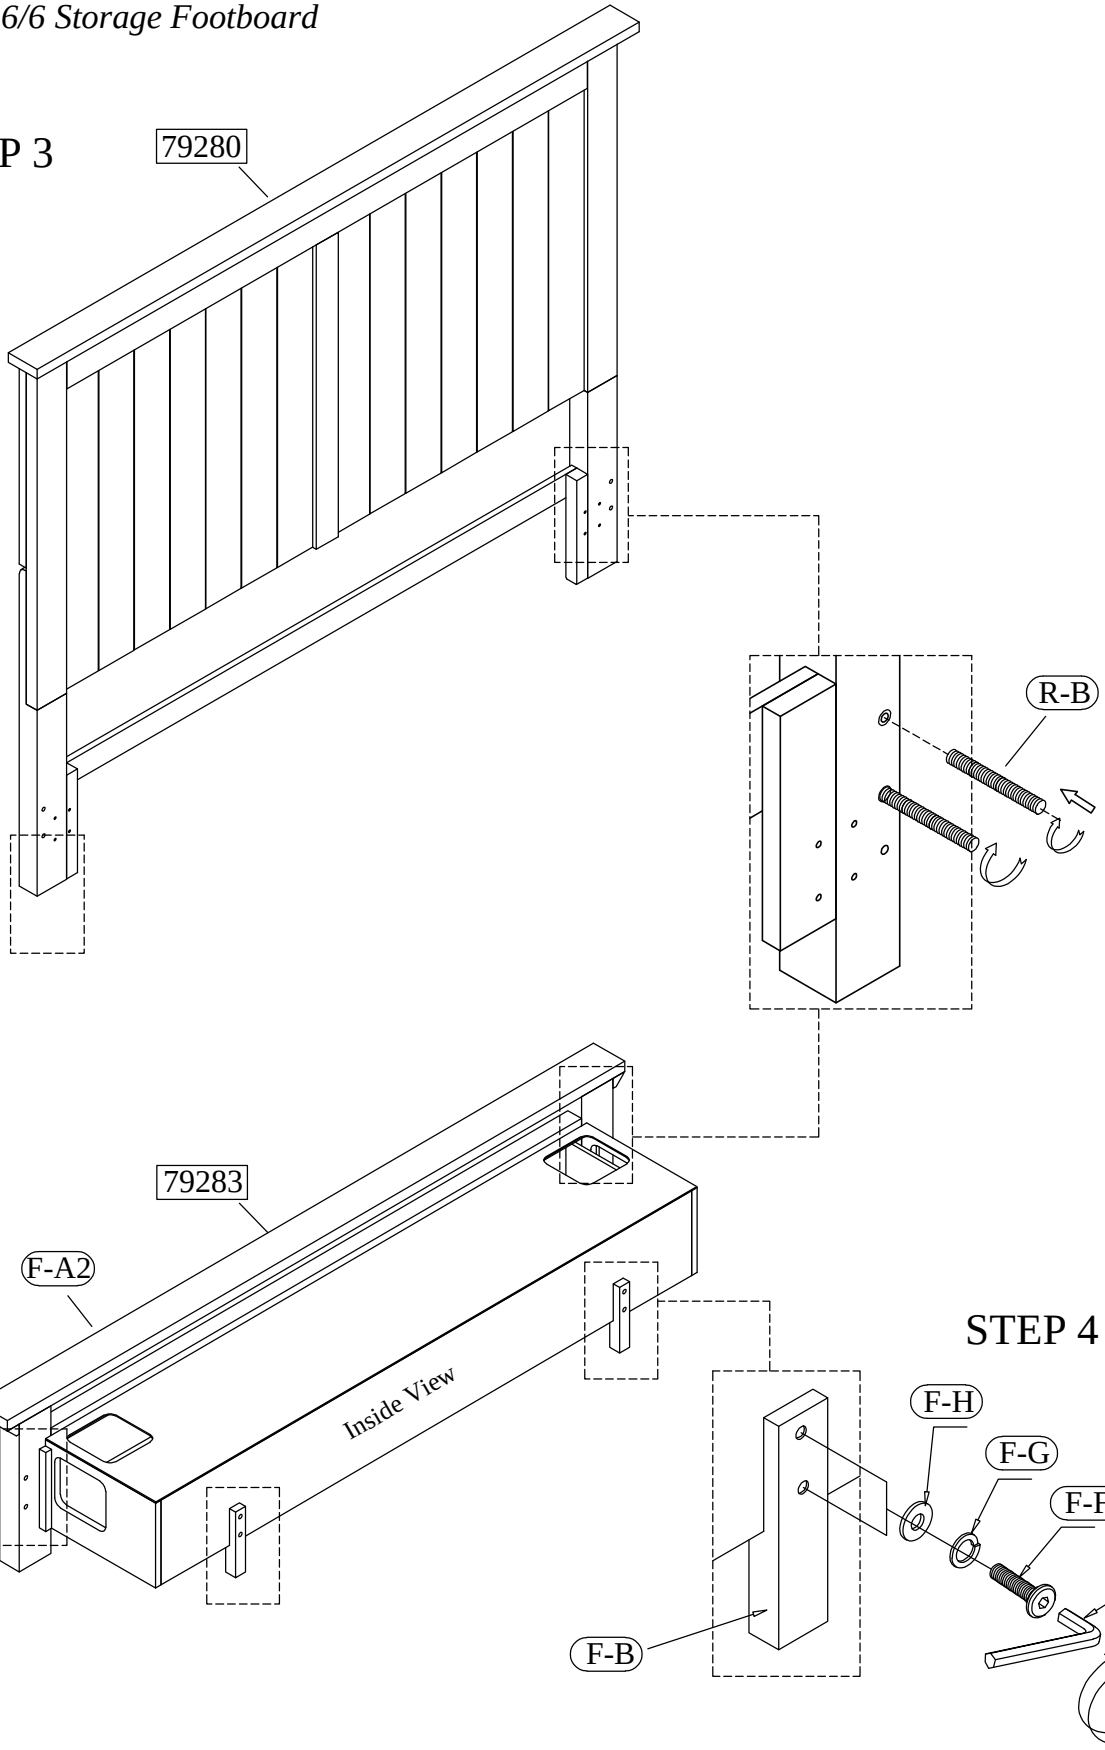STEP 3





STEP 4


*6/6 King Bed*

*79280 -- 6/6 Panel Headboard*
*79283 -- 6/6 Storage Footboard*
*79274 -- 5/0-6/6 Storage Bed Rails*

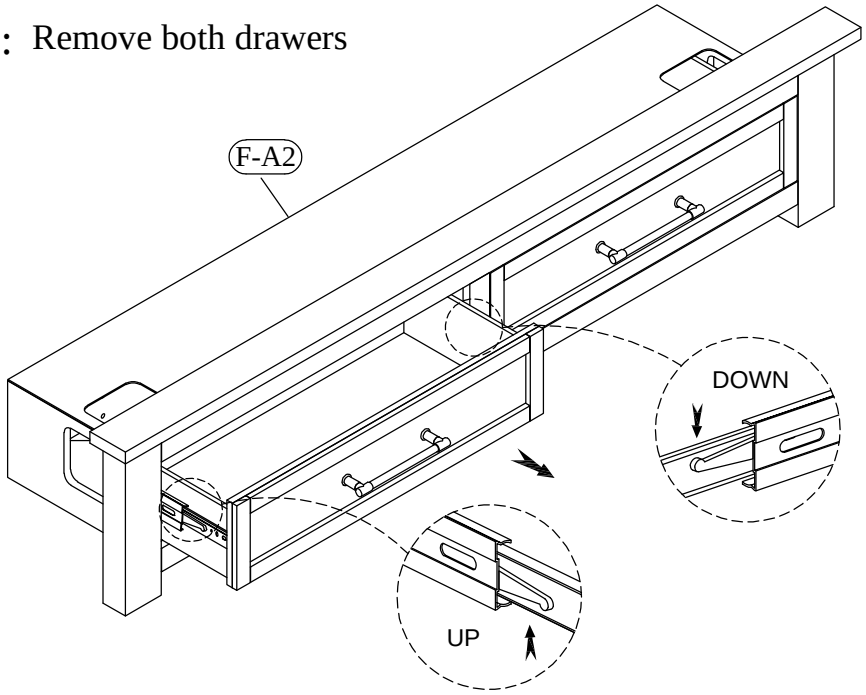
STEP 5: Remove both drawers



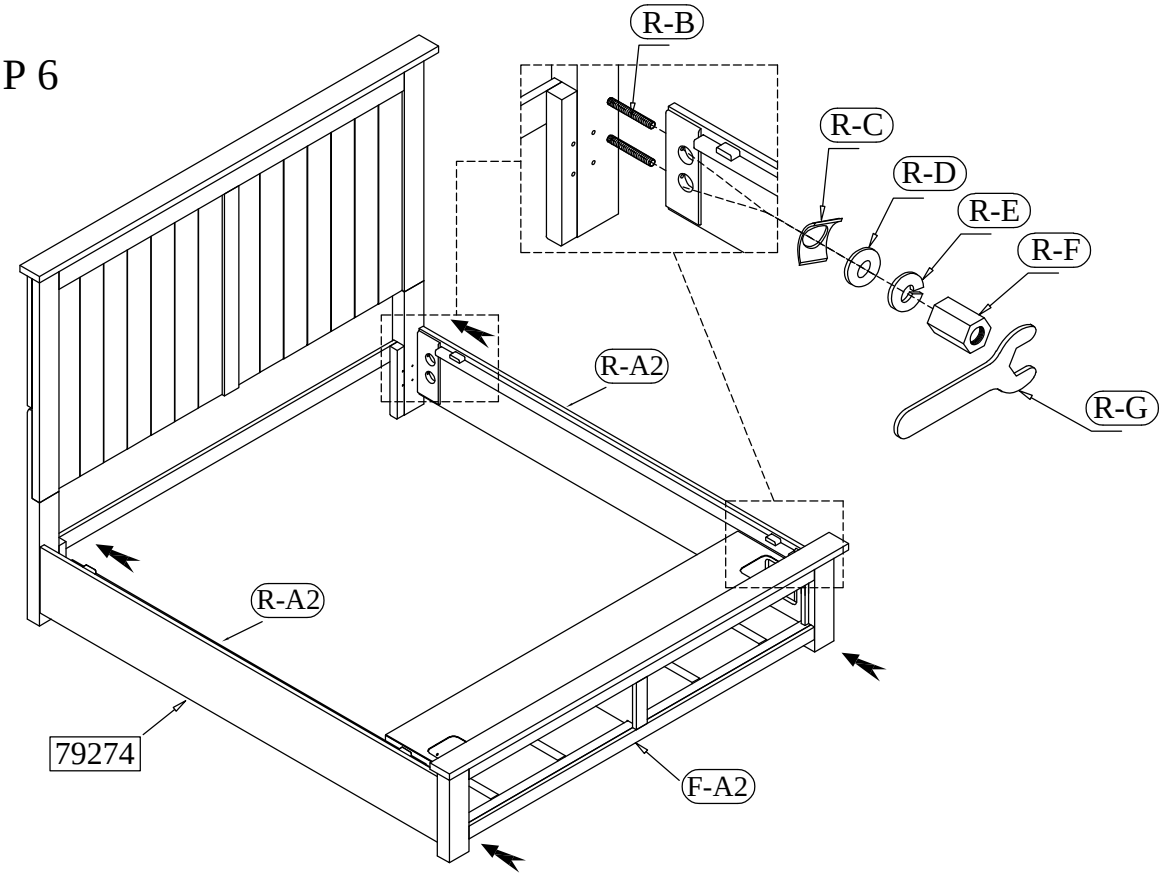

STEP 6



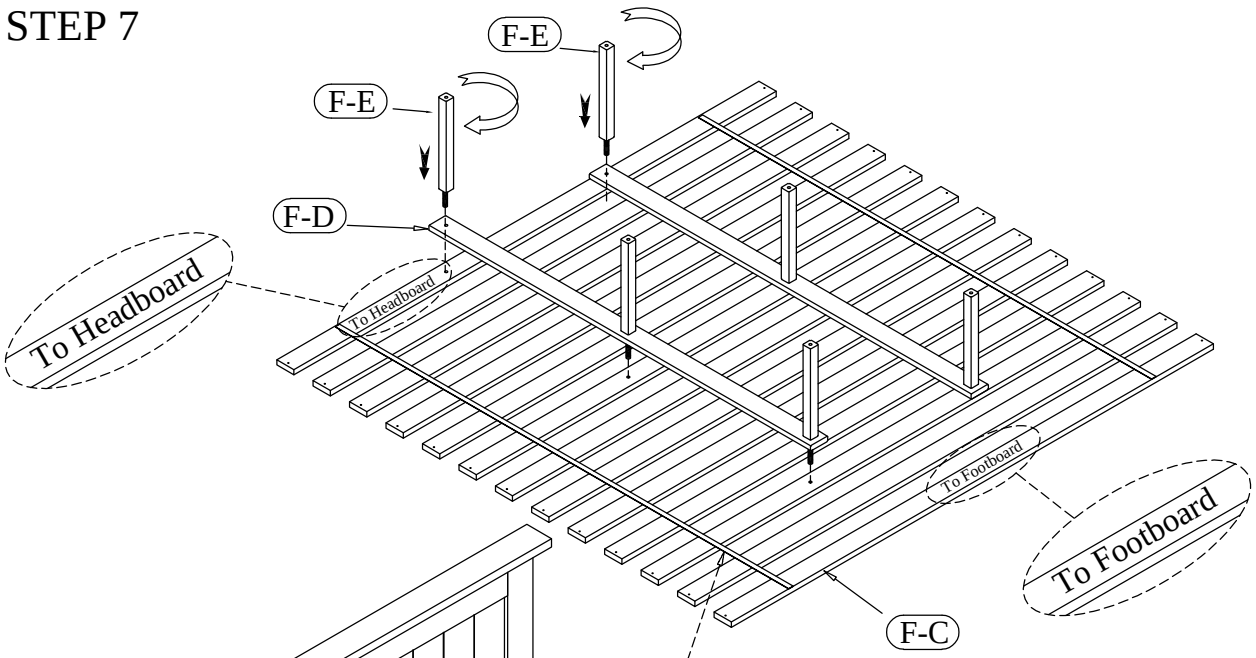STEP 7



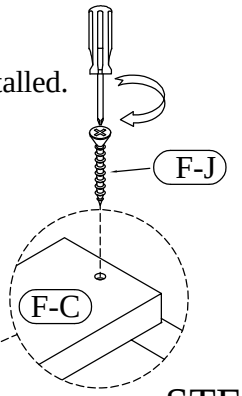
Attention : The bed slat straps should be located on the bottom side when properly installed.





STEP 8





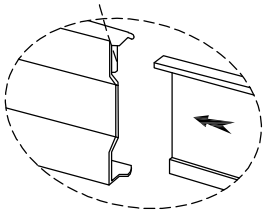
Adjustable Leveler



STEP 9

Attach both drawers

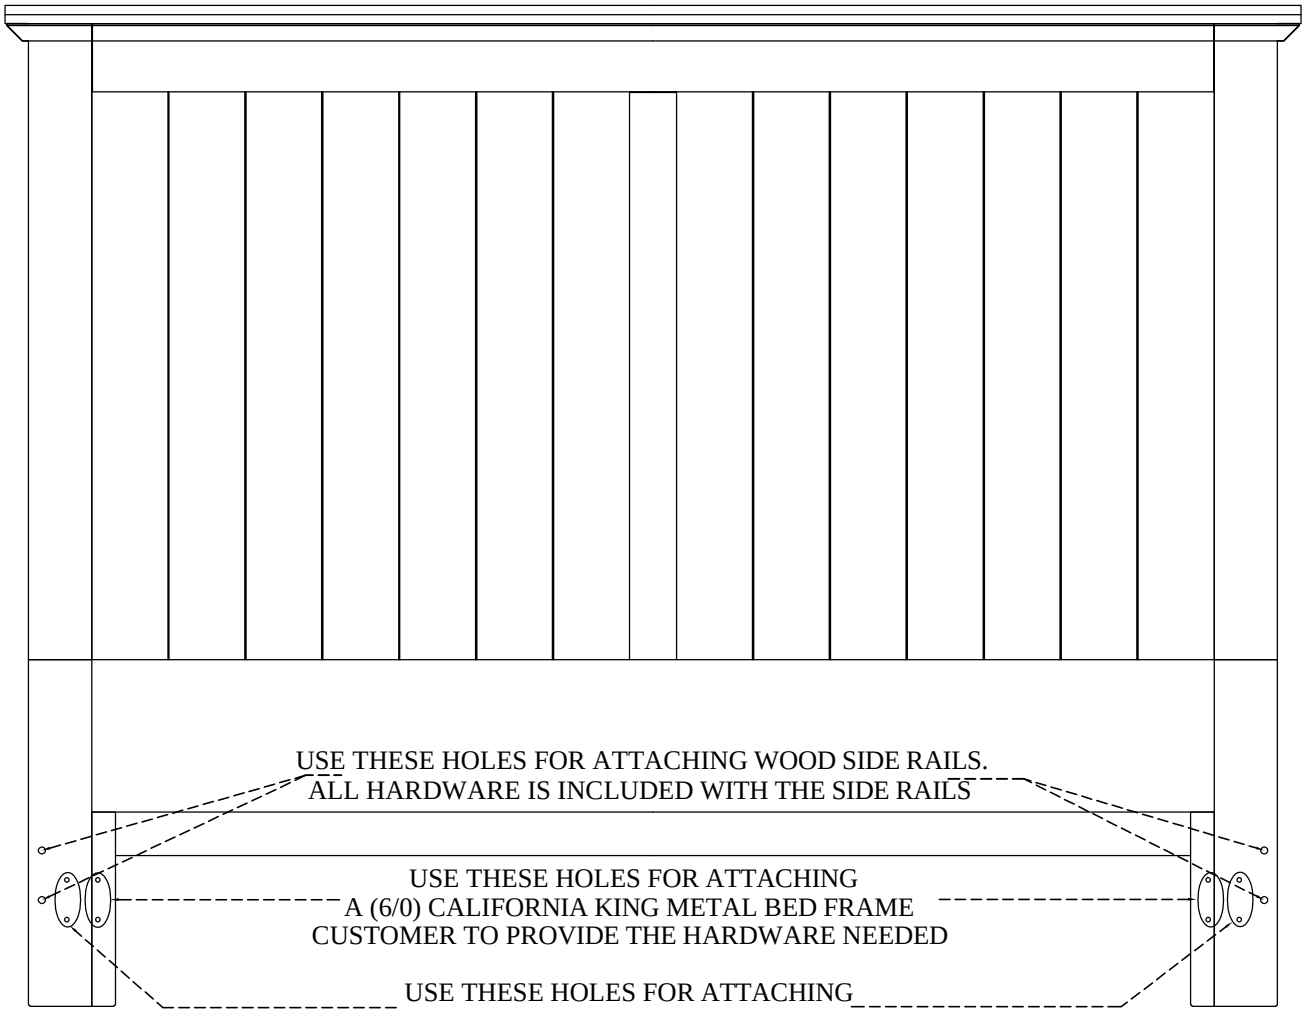*6/6 King Bed*
*79280 --6/6 Panel Headboard*




THE HEADBOARD MAY BE USE ALONE WITH A CALIFORNIA KING OR A STANDARD KING SIZE METAL BED FRAME.