


# **CROSLEY**








---

FURNITURE


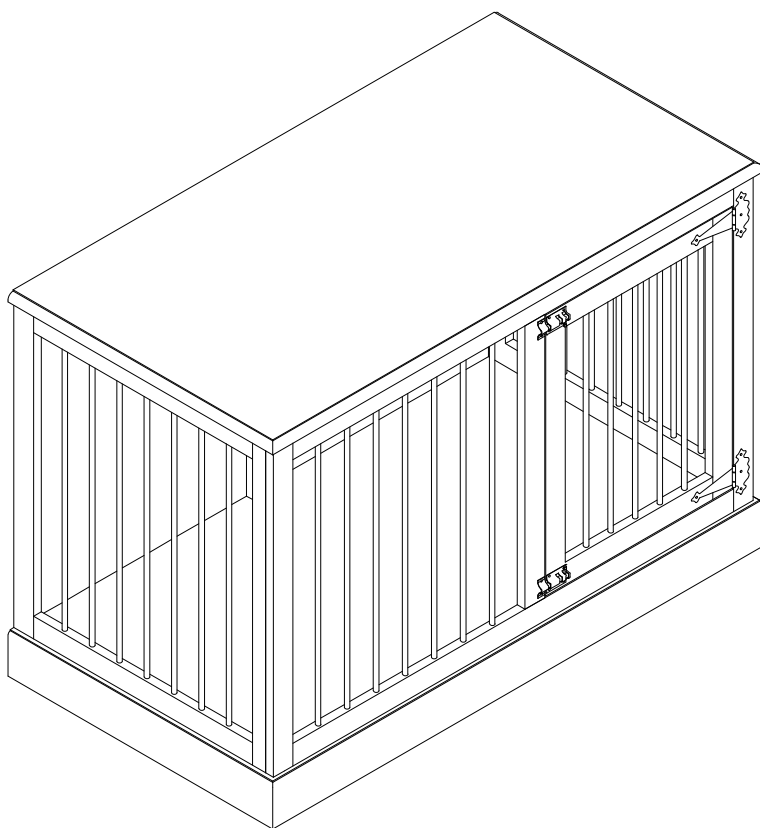



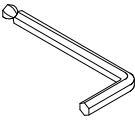

## Small Pet Crate CF4502

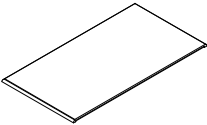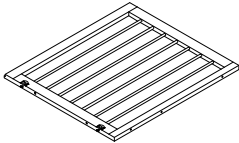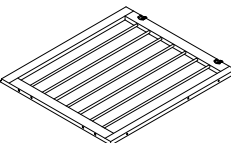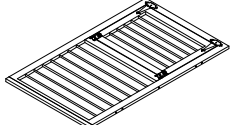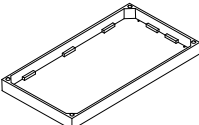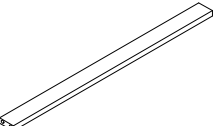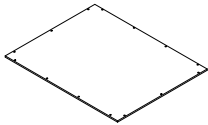

## PART LIST


				
<p>Top 1 PC</p>	<p>Left Frame 1 PC</p>	<p>Right Frame 1 PC</p>	<p>Door Frame 1 PC</p>	<p>Bottom 1 PC</p>
				
<p>Back Rail 1 PC</p>	<p>Back Panel 2 PCS</p>			

## HARDWARE LIST

				
<p>Ø8 x 30mm Wood Dowel 20 PCS (Extra 2)</p>	<p>Ø1/4" x 38mm Bolt 10 PCS (Extra 1)</p>	<p>Spring Washer 10 PCS (Extra 1)</p>	<p>Flat Washer 10 PCS (Extra 1)</p>	<p>Screw 27 PCS (Extra 1)</p>
				
<p>Allen Wrench 1 PC</p>	<p>Safety Strap Kit 1 SET</p>			

### ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.

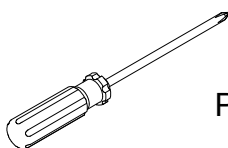

Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Please do not use tools to assemble this unit unless specifically indicated.

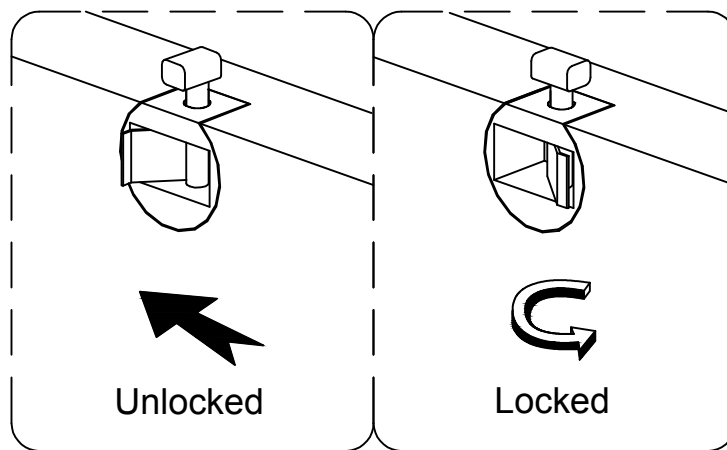


Reference the images above any time the instructions state "lock the hardware".  
Note: Be sure to check all hardware is locked when completed.

Step 1. Carefully lay top (part A) on a soft surface, such as carpet. Attach door frame (part D) to top (part A) using wood dowels (part #1) and lock the hardware.

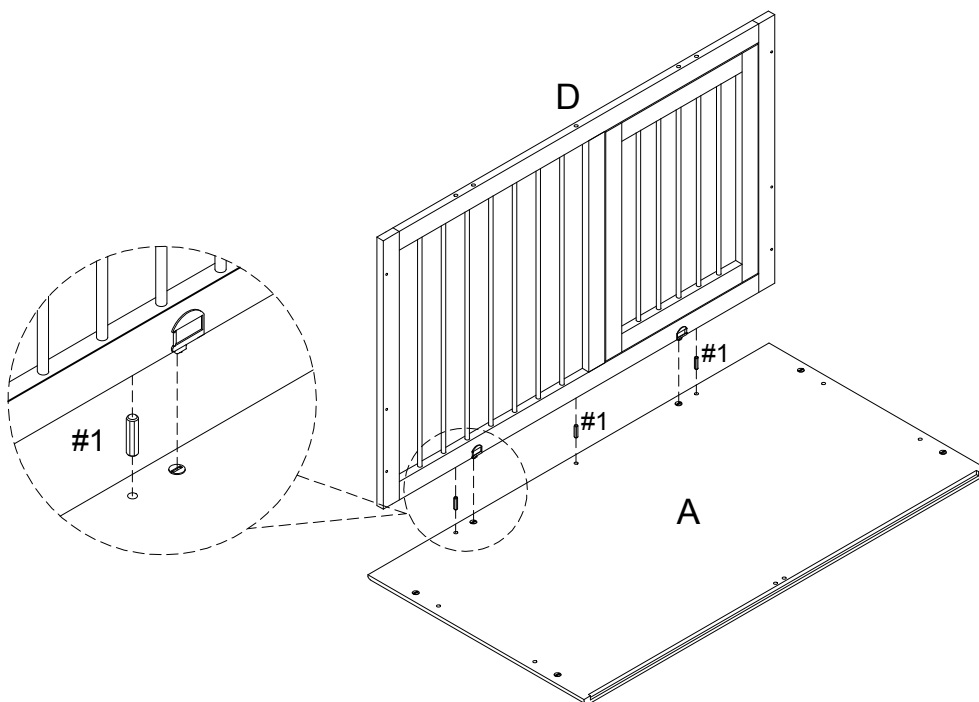


#1  X 3


Step 2. Attach left frame (part B) and right frame (part C) to assembled unit (parts A & D) using wood dowels (part #1), bolts (part #2), spring washers (part #3), flat washers (part #4), allen wrench (part #6) and lock the hardware.

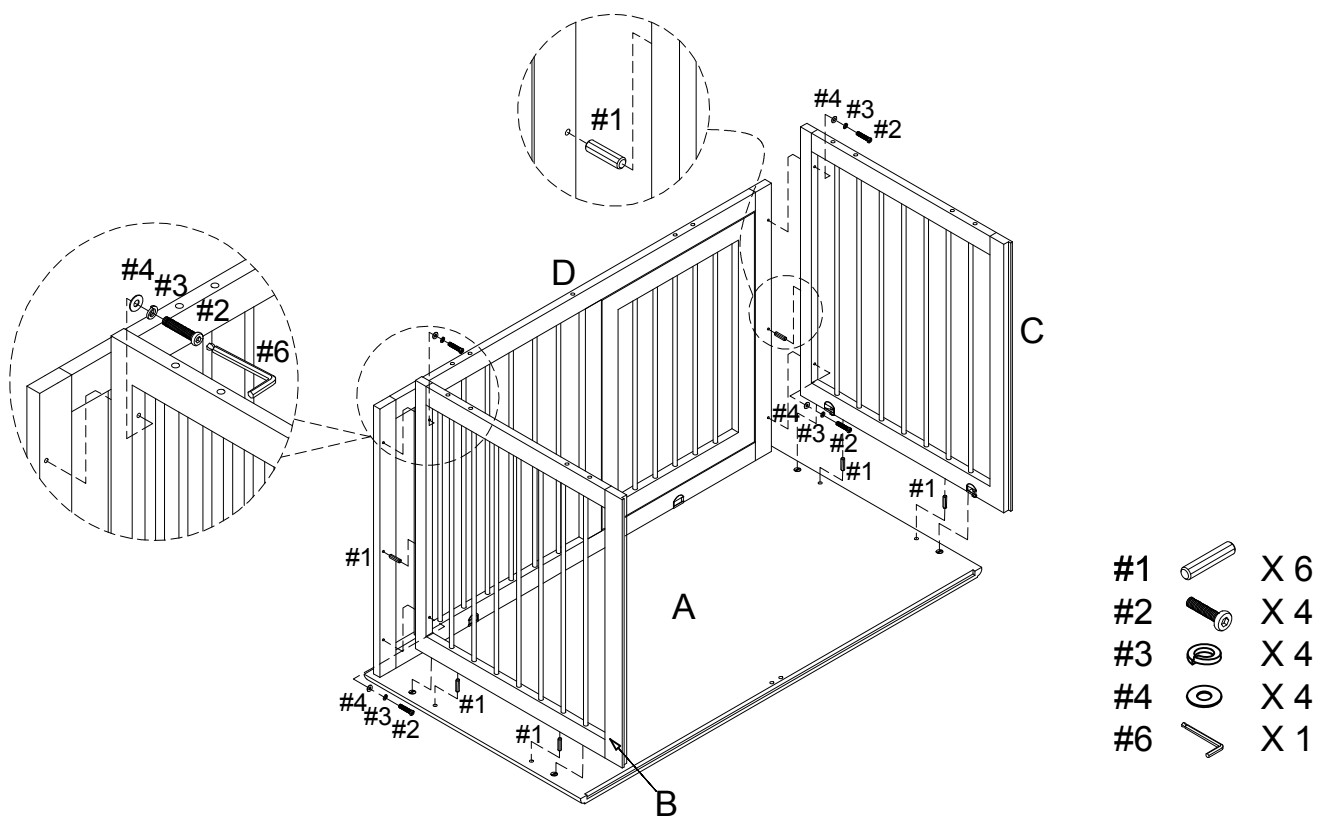

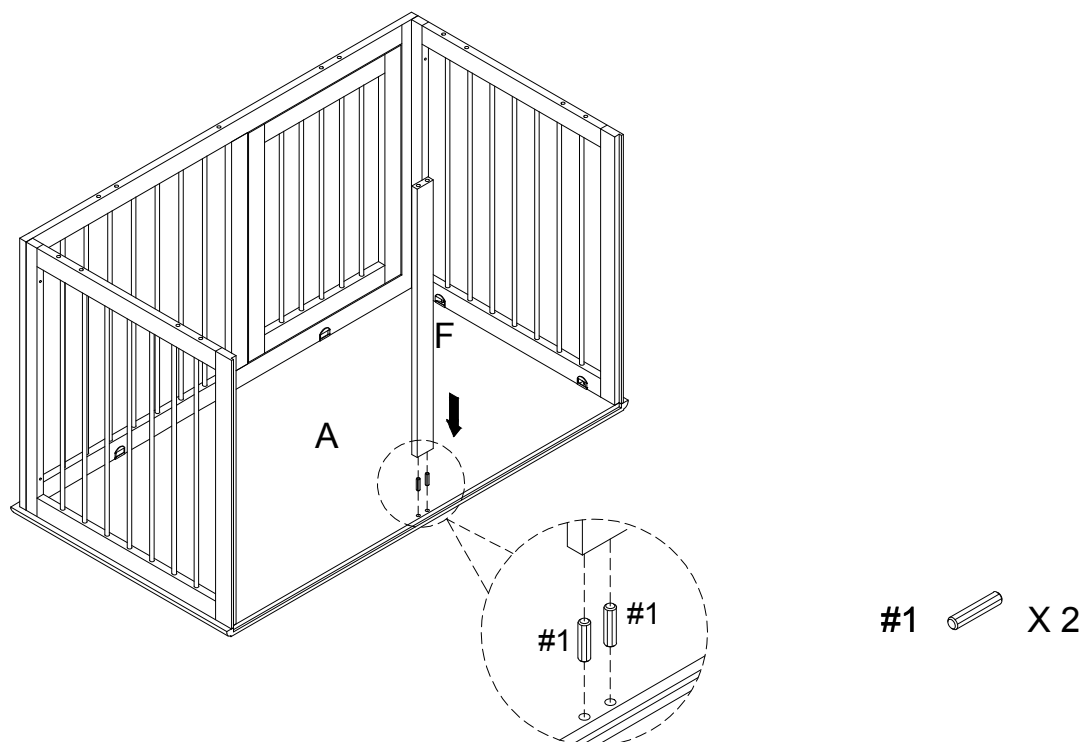

Step 3. Attach back rail (part F) to top (part A) using wood dowels (part #1).

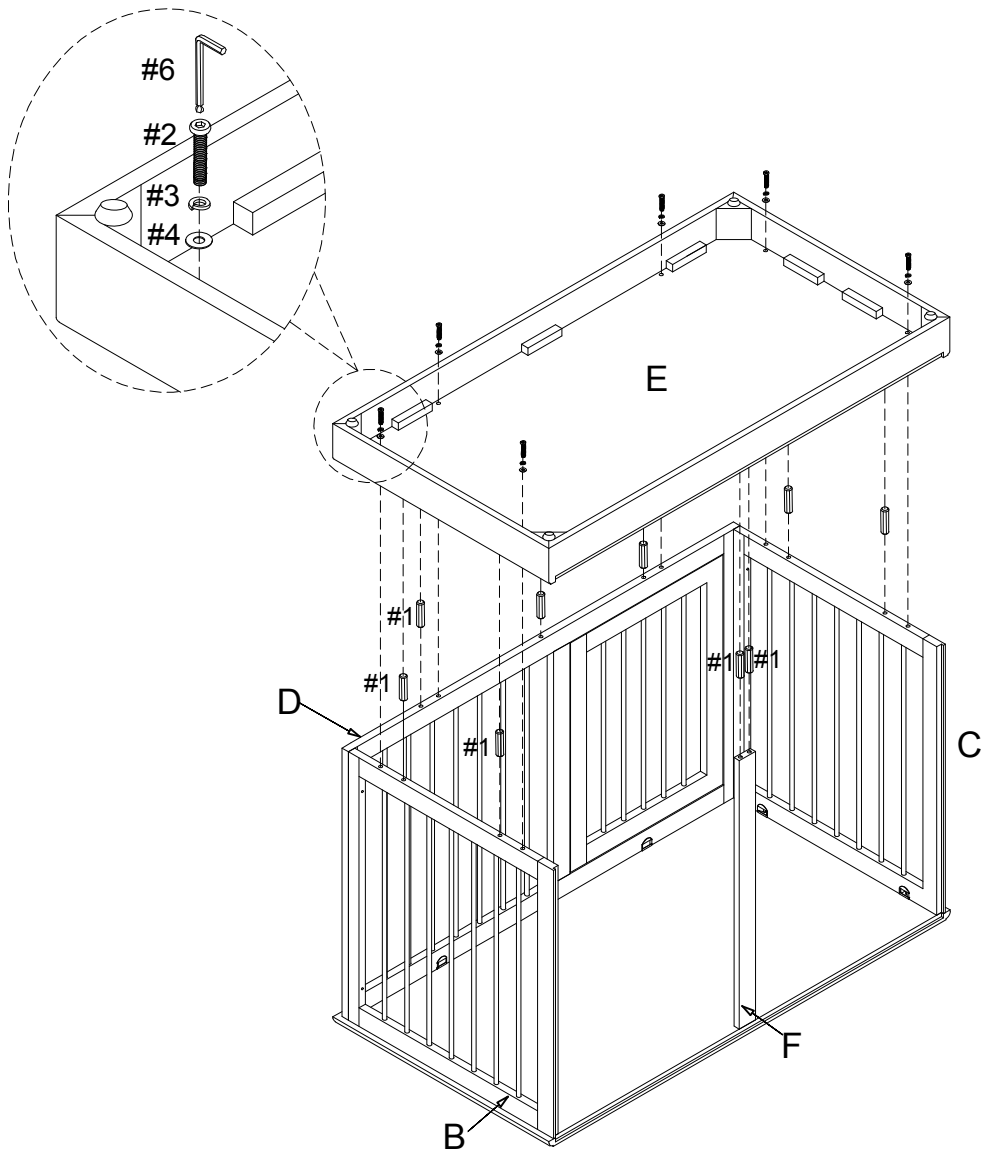


Step 4. Attach bottom (part E) to assembled unit (parts B, C, D & F) using wood dowels (part #1), bolts (part #2), spring washers (part #3), flat washers (part #4), and allen wrench (part #6).




- |    |   |     |
|----|---|-----|
| #1 |  | X 9 |
| #2 |  | X 6 |
| #3 |  | X 6 |
| #4 |  | X 6 |
| #6 |  | X 1 |


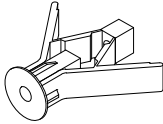



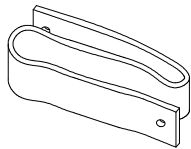
Step 5. Carefully turn unit upright. Attach back panels (part G) to assembled unit (parts A, B, C, E & F) using screws (part #5) and phillips head screwdriver.

Important: Safety strap kit (part #7) must be installed to prevent tipping, damage and /or injury.

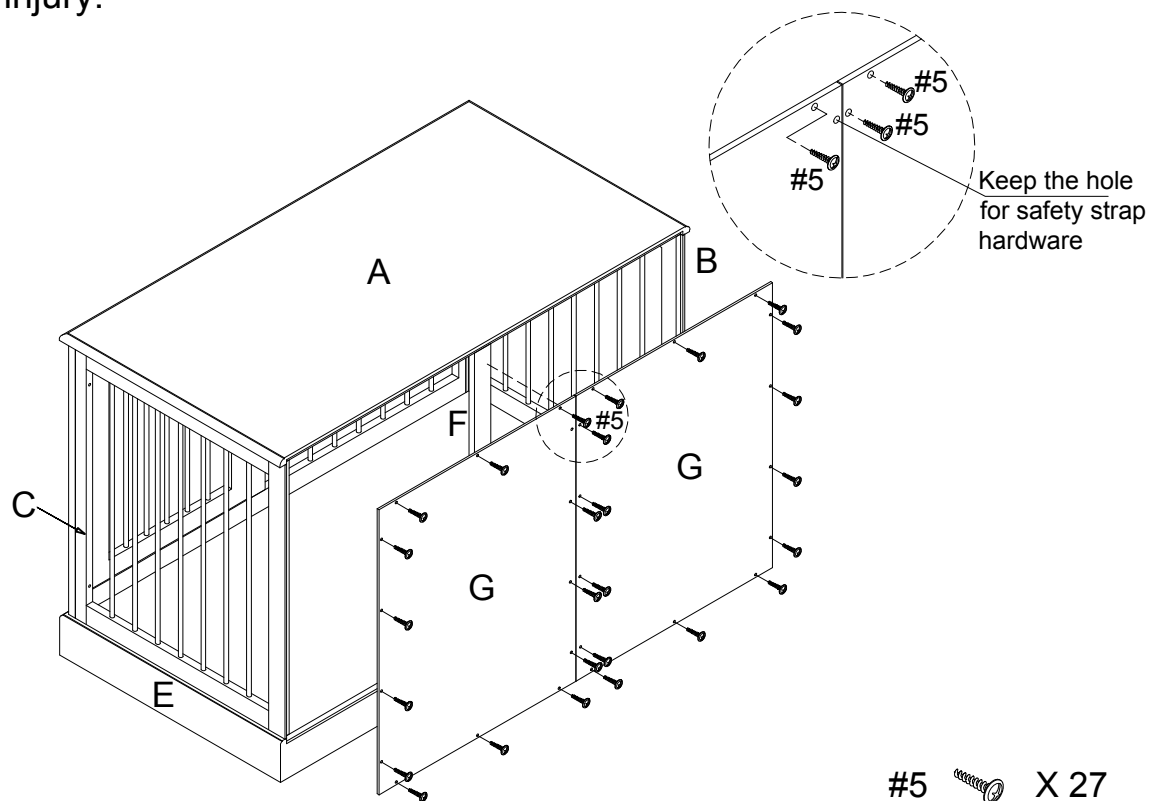

Note: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust.

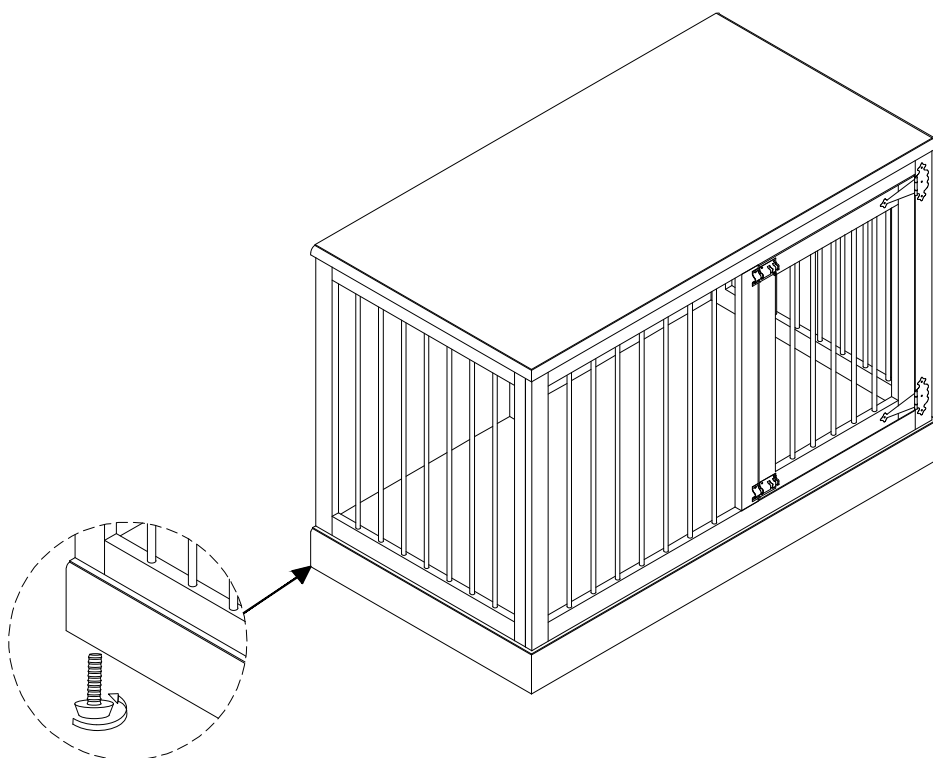

#7	A	B	C	D	E
			 D8*3/4"	 D8*1-1/2"	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Washer 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

## SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) through washer (B) and safety wall strap (E) and attach to back rail (part F) using phillips head screwdriver.
2. Drill a 1 1/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in back rail (part F) where the safety wall strap (E) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) through washer (B) and safety wall strap (E) into wall anchor (A) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

