


















ASSEMBLY INSTRUCTIONS

WILLIAMSBURG 60" VANITY

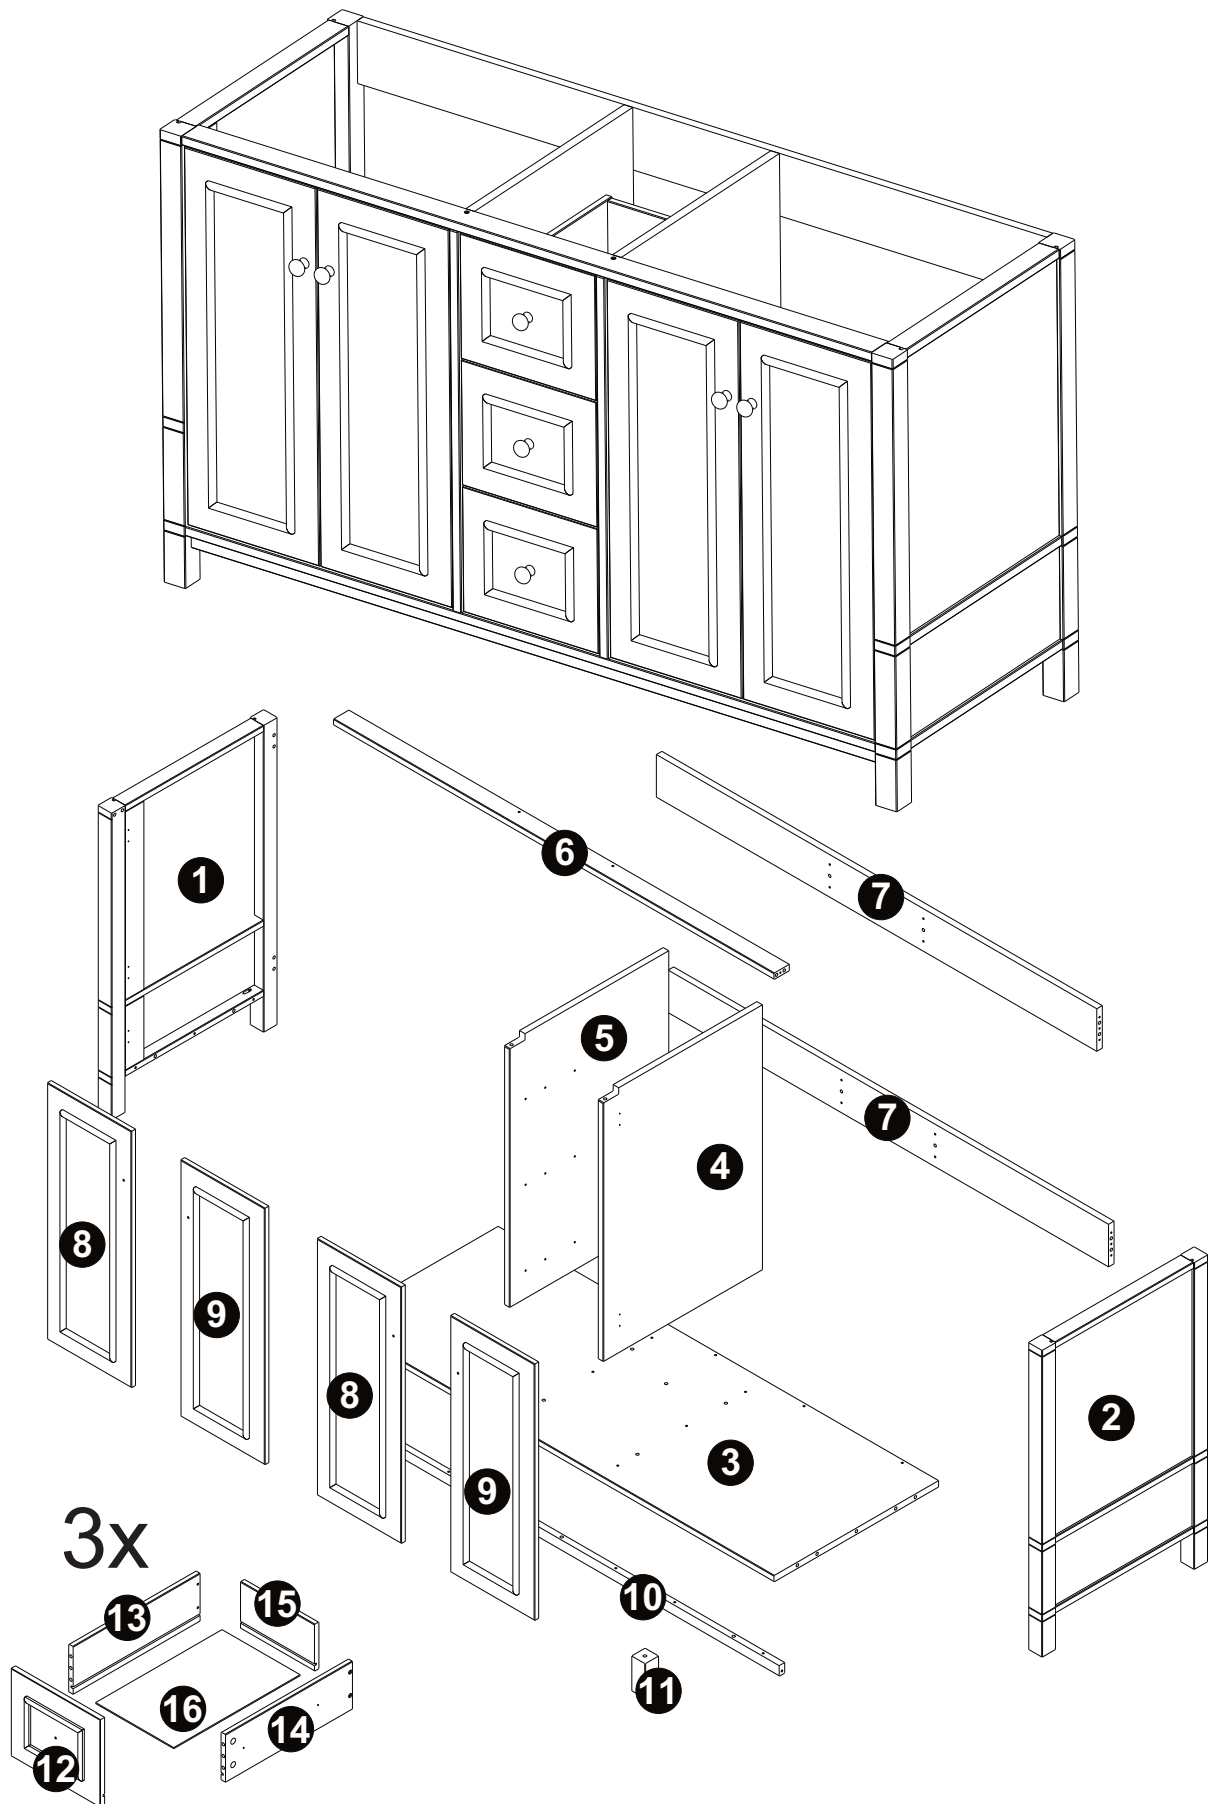

A	 Ø8x30mm	35
B	 Ø6x10mm	18
C	 Ø3,5x30mm	34
D	 Ø4x22mm	07
E	 Ø3,5x14mm	46
F	 Ø3,5x14mm	04
G	 Ø4,0x40mm	21
H		18
I		04
J		18
K		08
L		07
M	 27x23mm	05
N		06
O	 Ø7,0x50mm	01
P		01

REPLACEMENT PARTS


Please do not contact the company purchased from as we can help you faster.
Order replacement parts and hardware at "www.boltonfurniture.com".

Tools Required




Hammer
* These tools are not
supplied by the
manufacturer



01


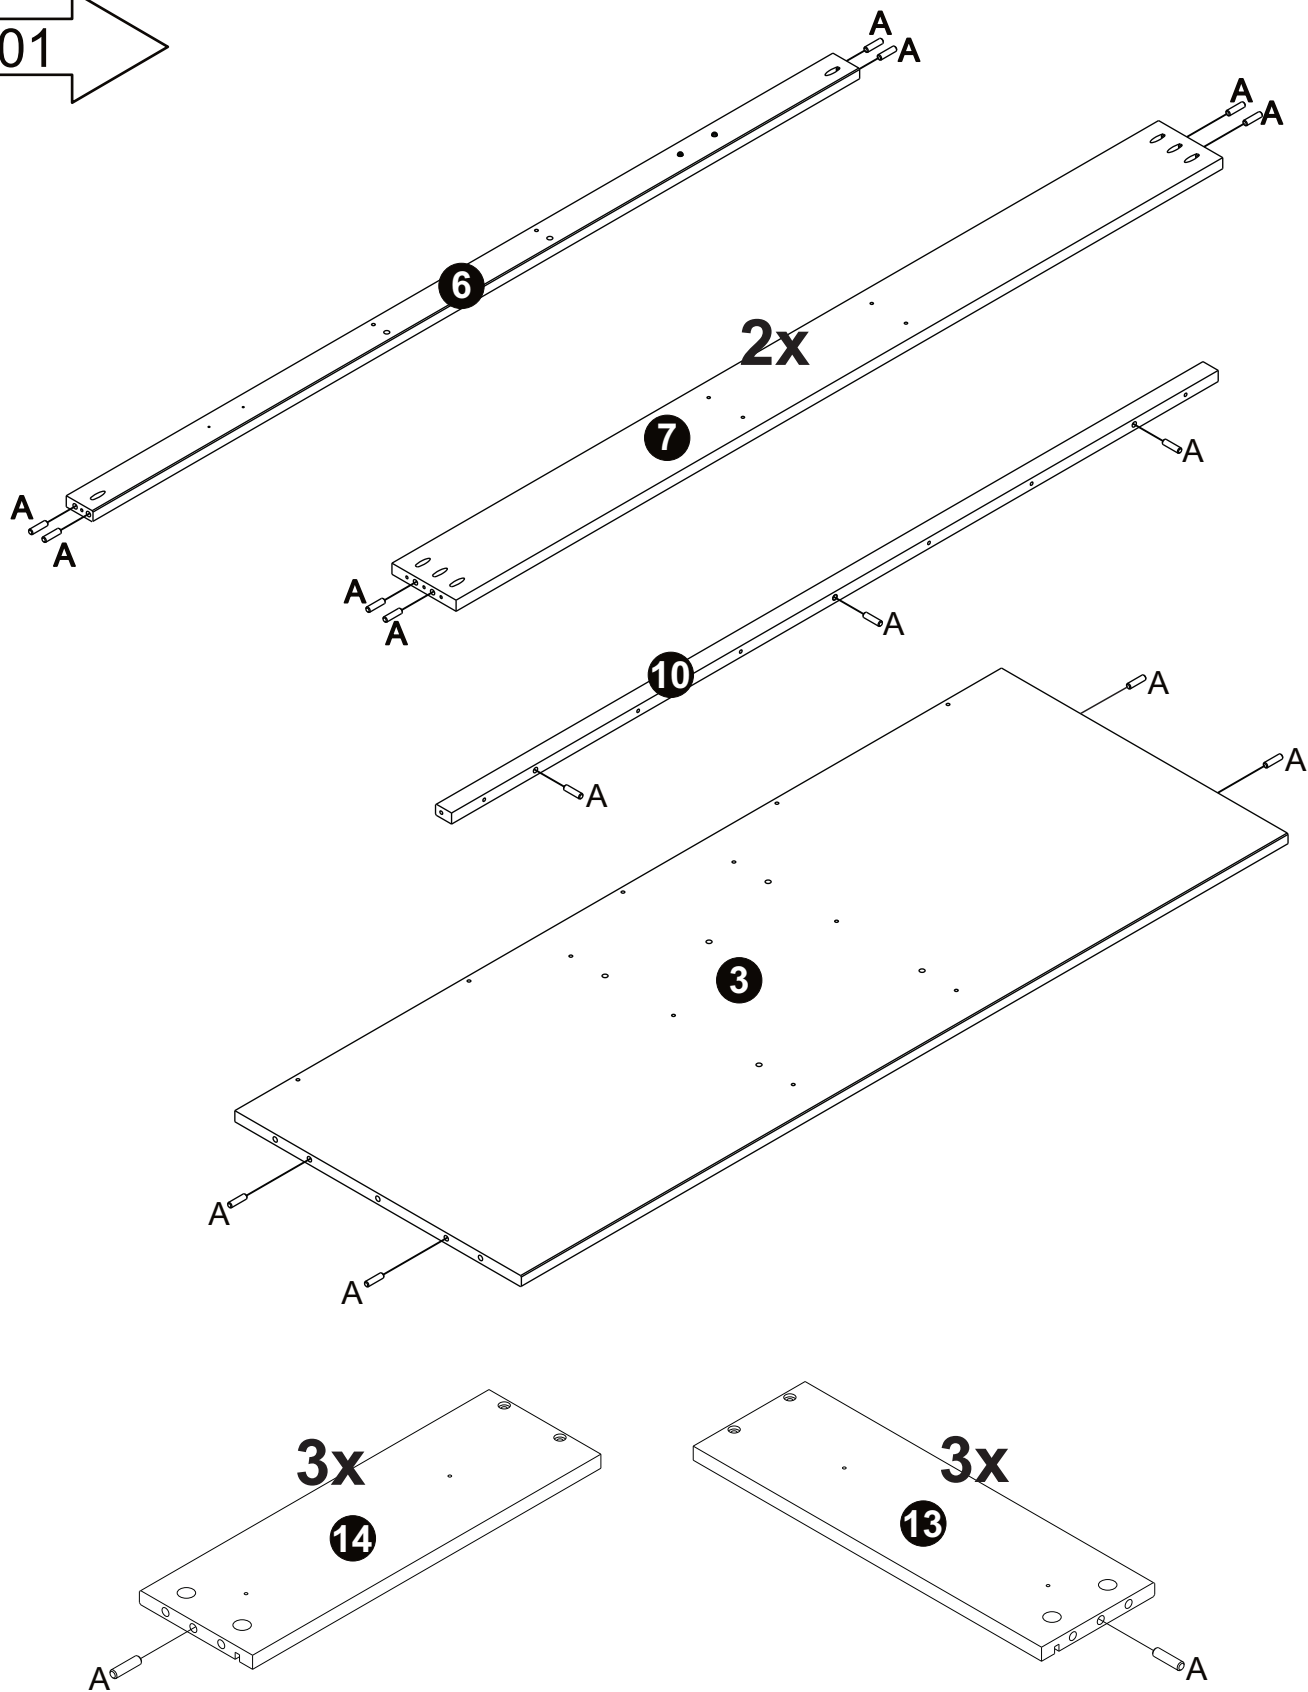



02



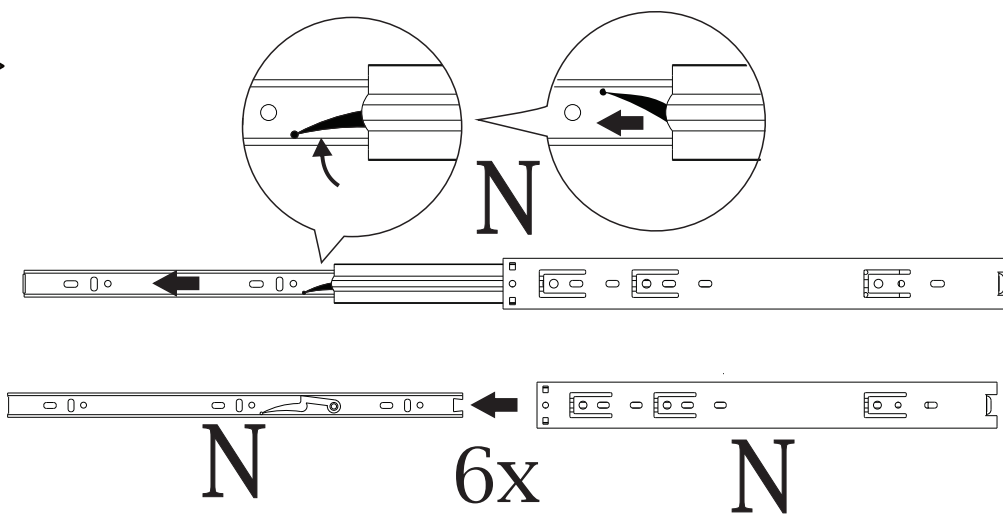




03

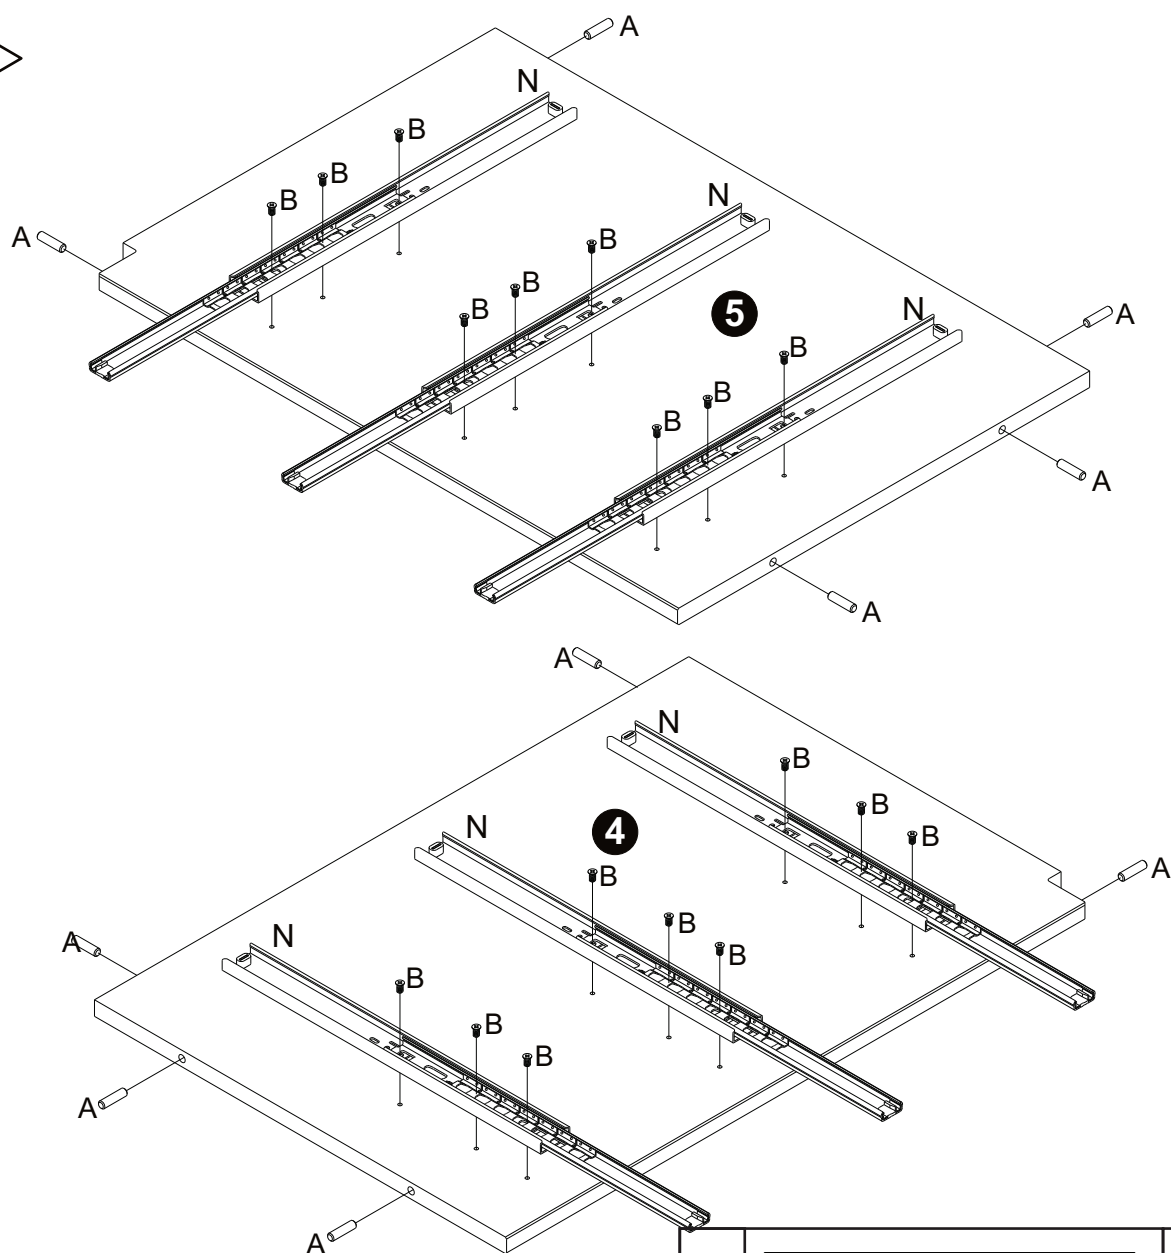



N		06
B	 Ø8x30mm	18
A	 Ø8x30mm	10

04

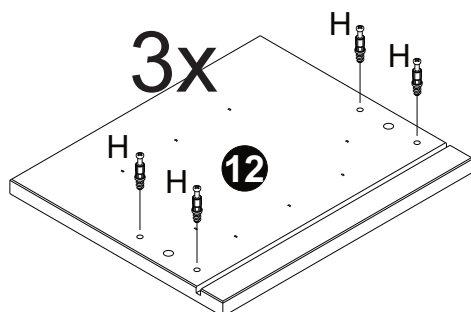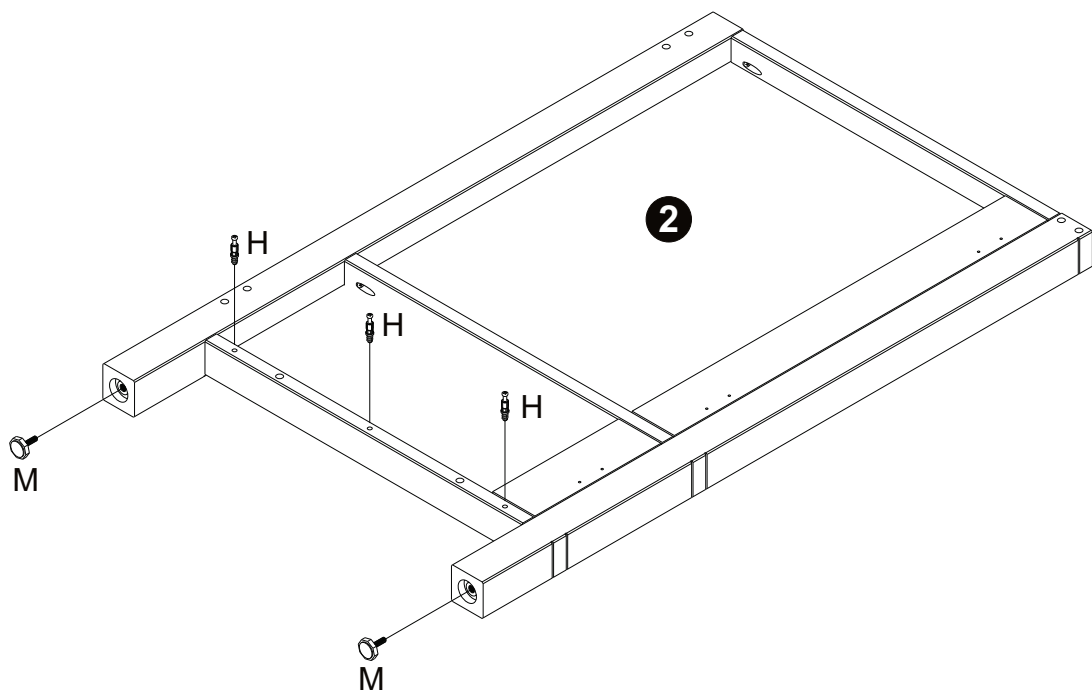
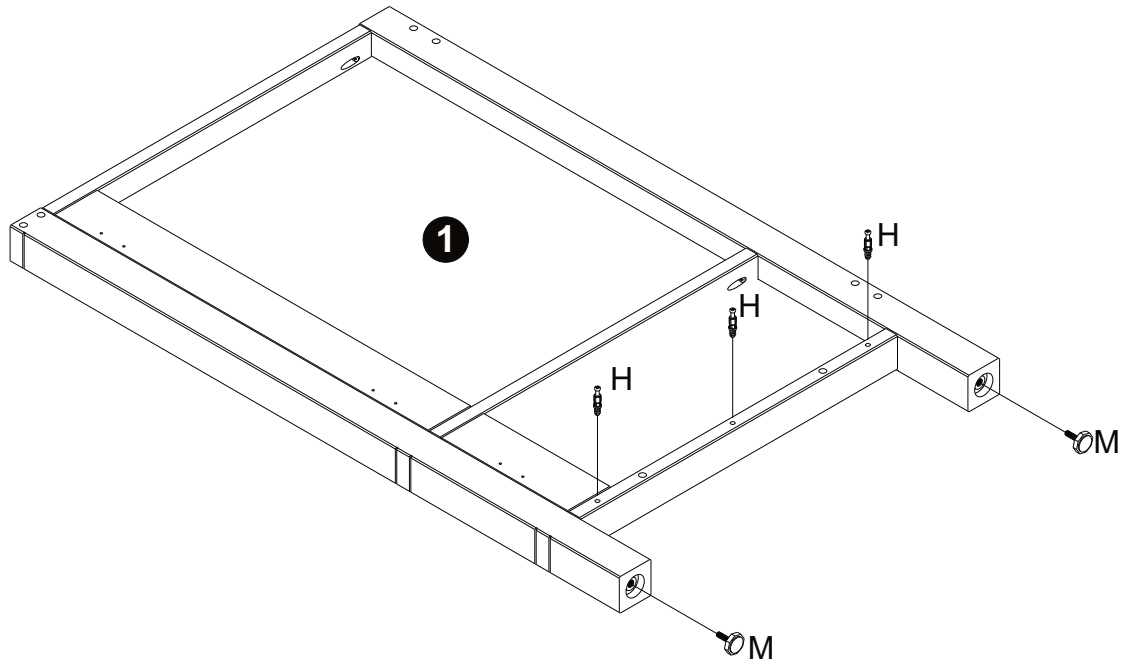


H		18
M		04



27x23mm

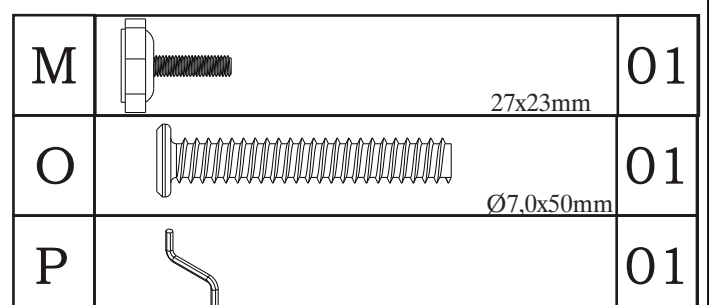


07

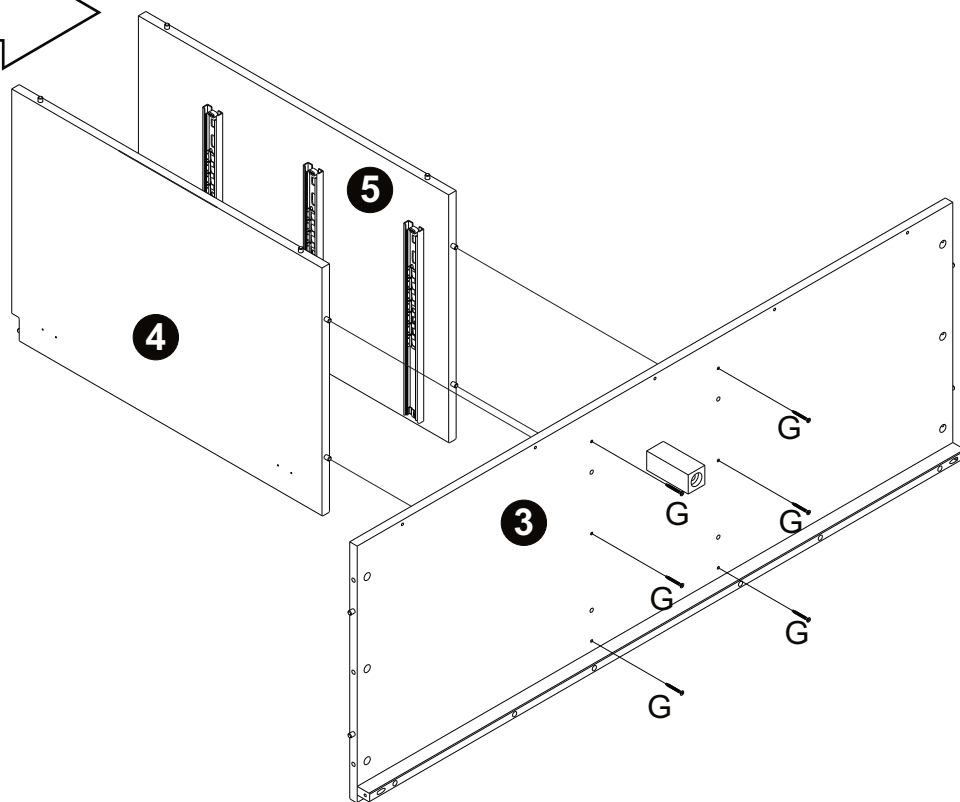


08

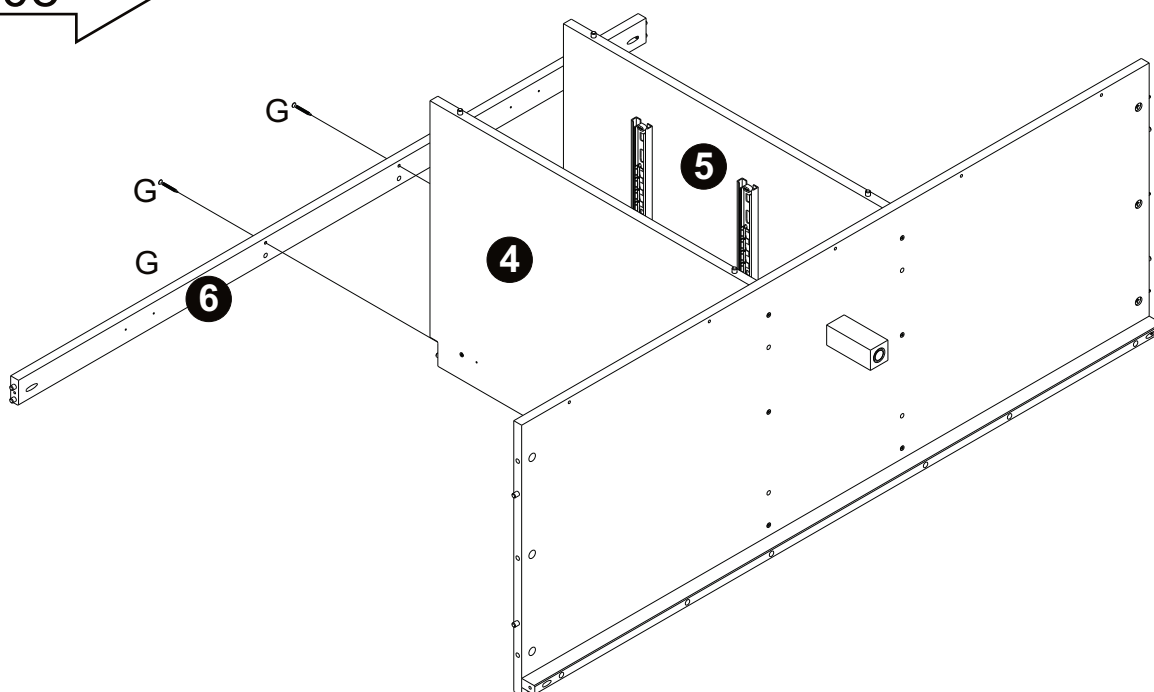




09

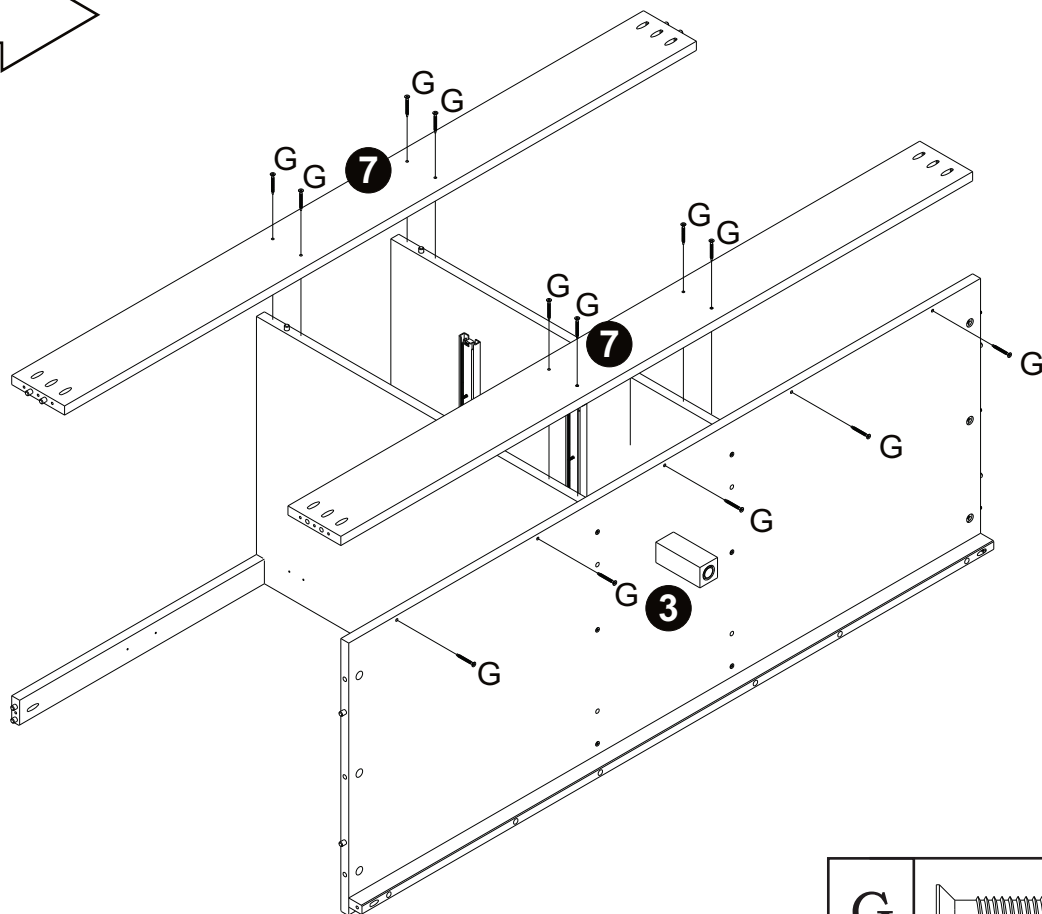


G		13
Ø4,0x40mm		



10

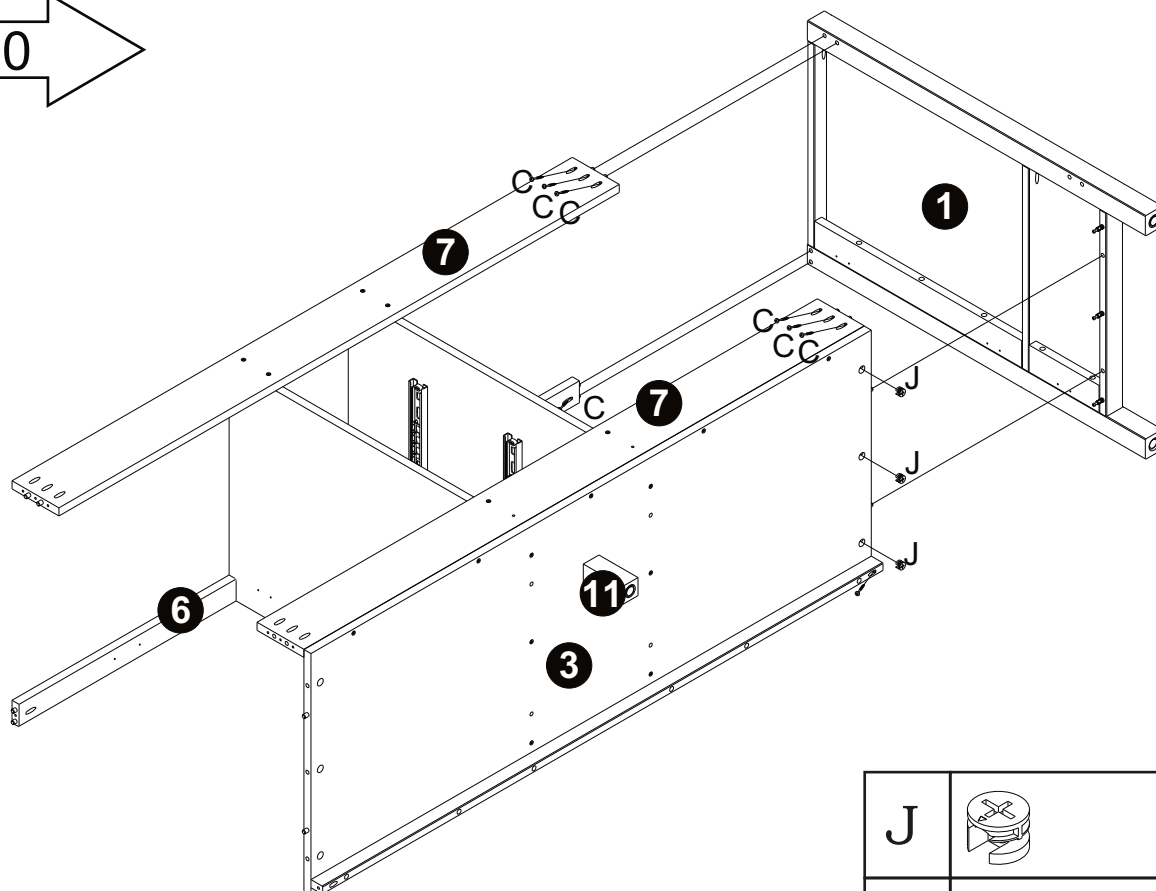


J		03
C		08
Ø3,5x30mm		



11

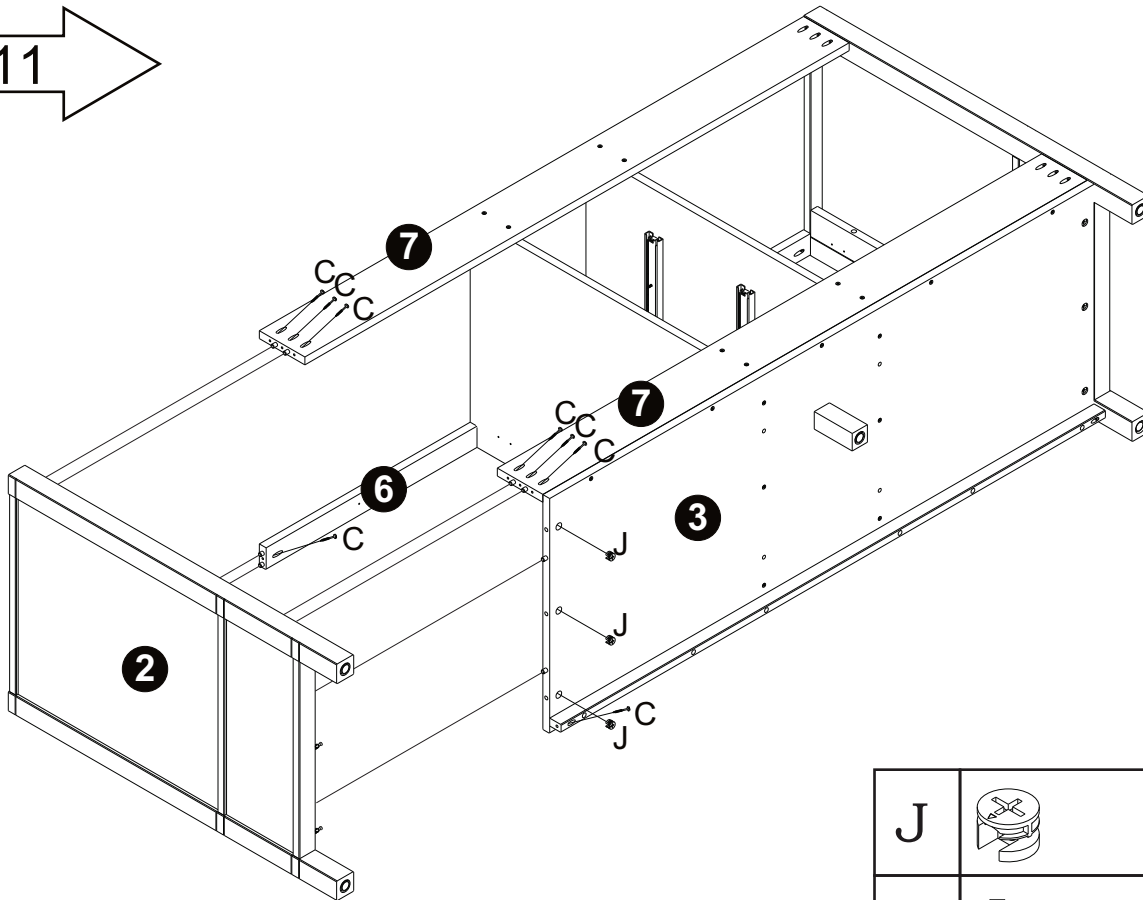

J		03
C	 Ø3,5x30mm	08


12

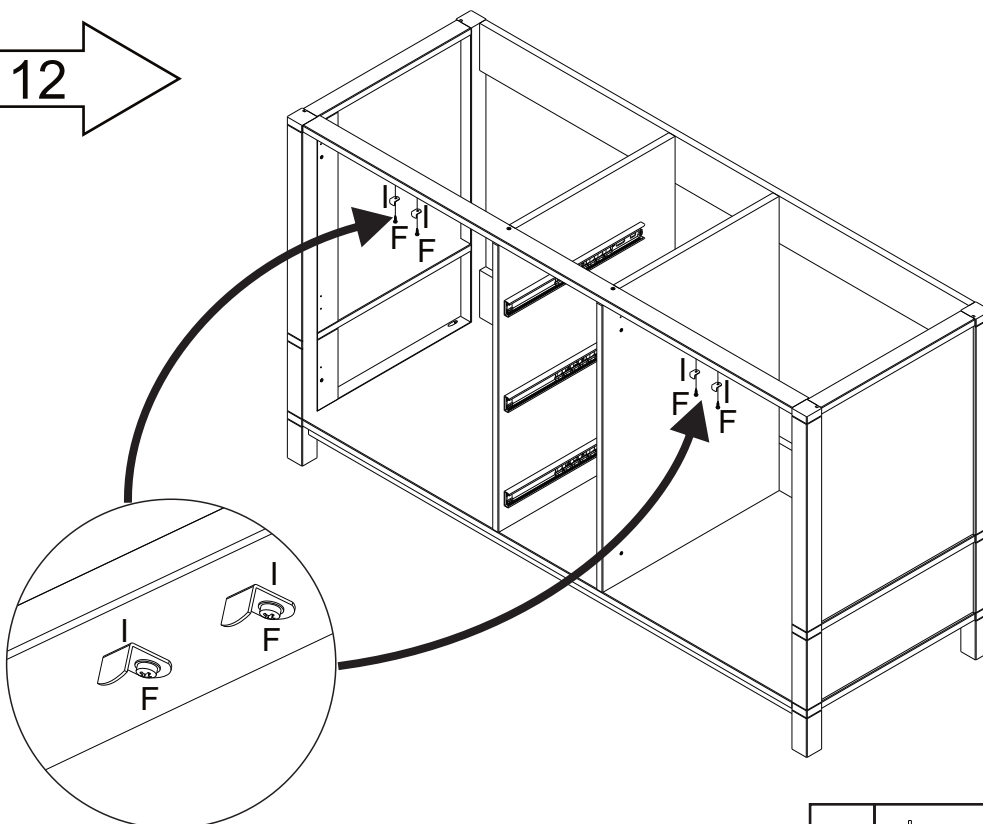

F	 Ø3,5x14mm	04
I		04

2x


13

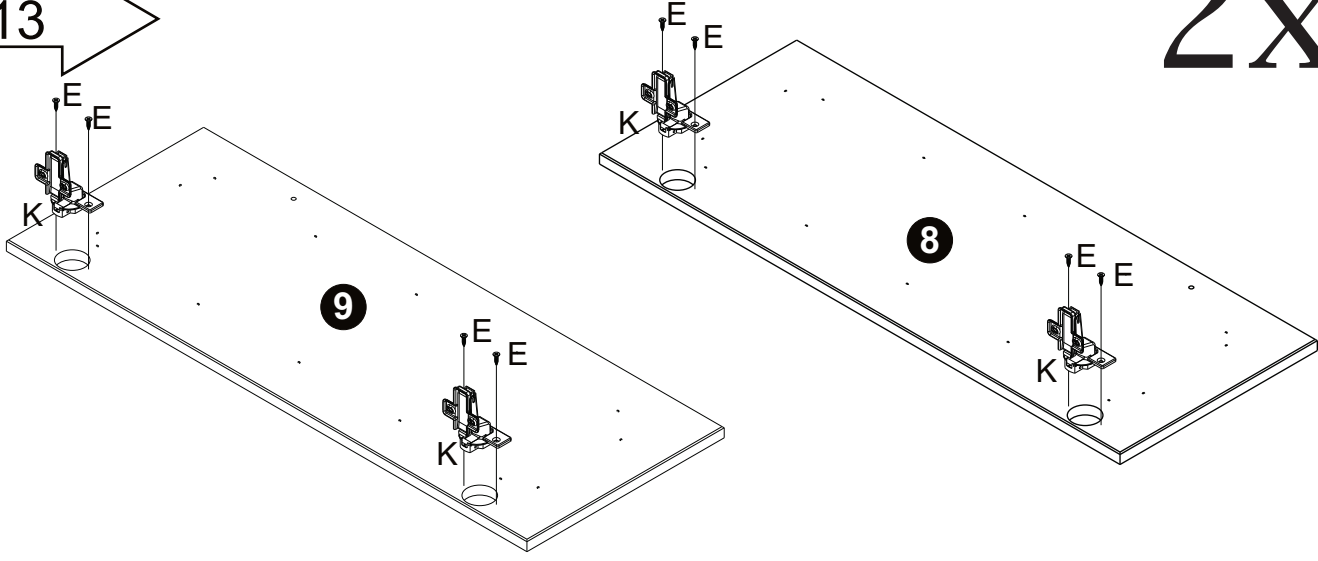

K		08
E		16

Ø3,5x14mm


14

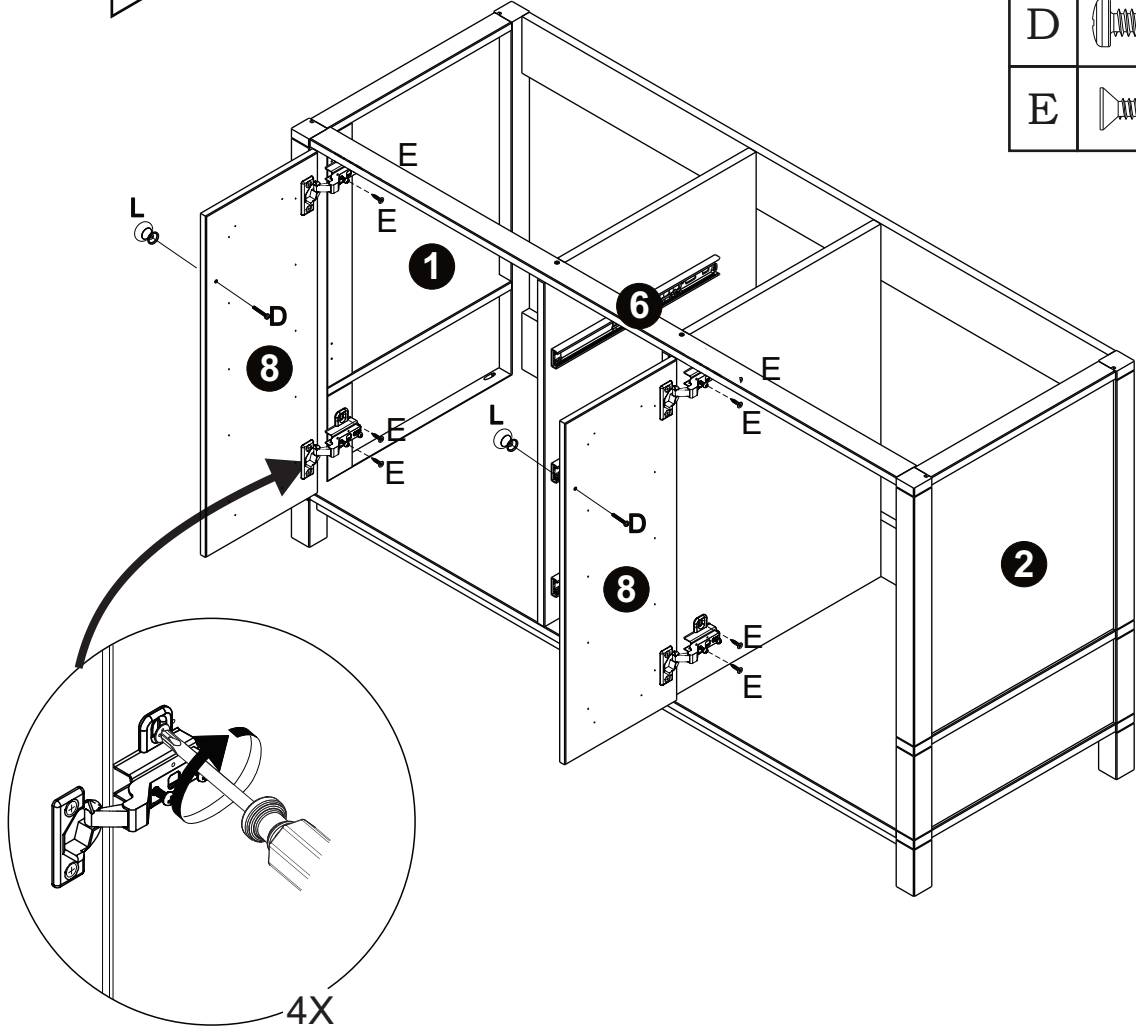




L		02
D		02
E		08

Ø4x30mm
Ø3,5x14mm





15




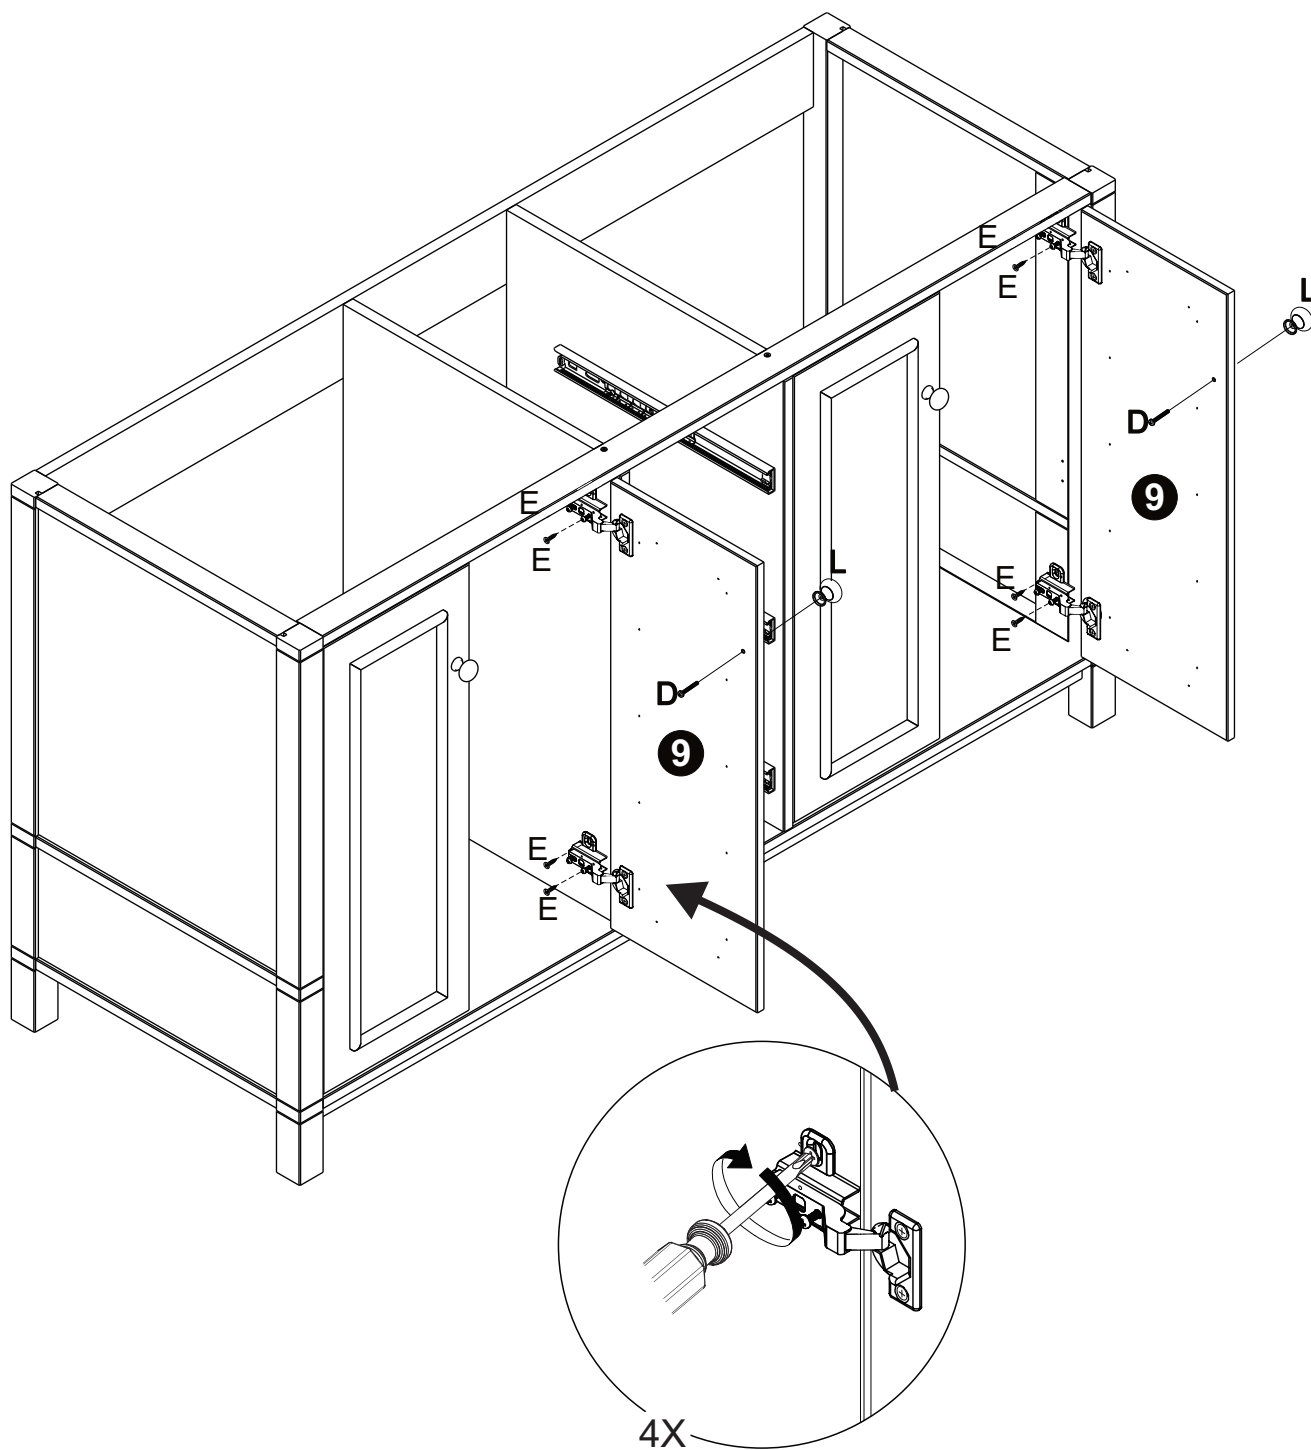




L		02
D	 Ø4x30mm	02
E	 Ø3,5x14mm	08

3x

16

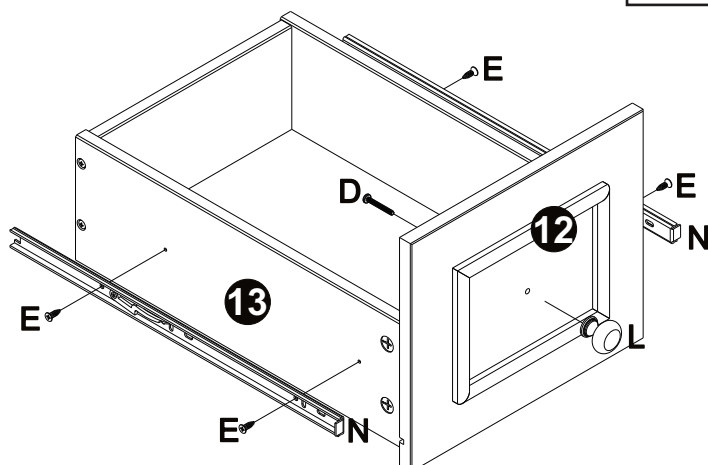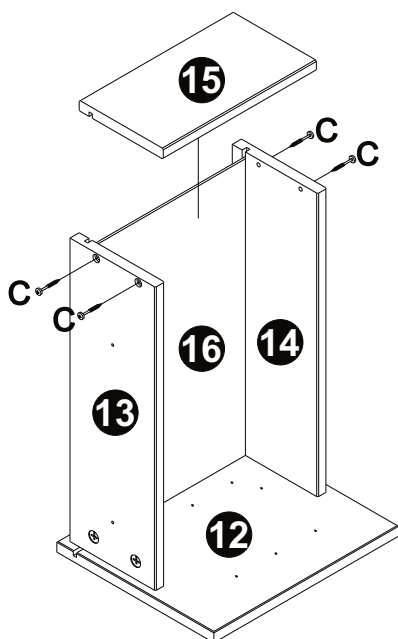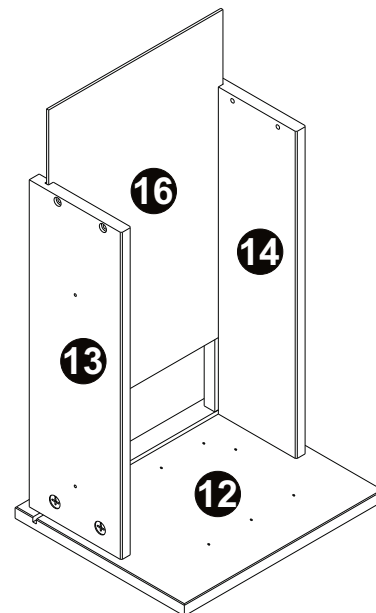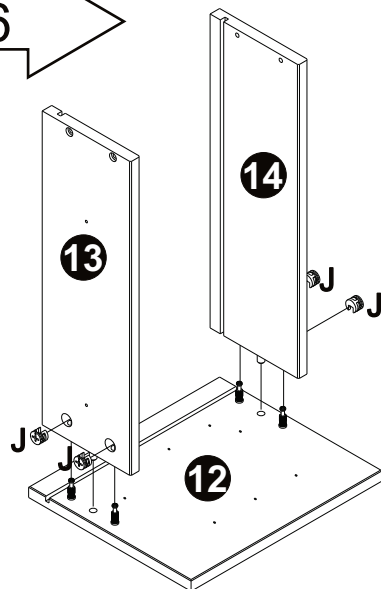

C		Ø3,5x30mm	12
D		Ø4x22mm	03
E		Ø3,5x14mm	12
J			12
L			03
N			06

17

