


# ASSEMBLY INSTRUCTION

MODEL NO: B3450 / B3550 / B3650 / B3850 / B3950 - Q - RAIL  
FOR SIDE RAIL

(BOX 1)  
BOX OF HEADBOARD & FOOTBOARD

| ITEM | DRAWING                                                                           | DESCRIPTION | Qty |
|------|-----------------------------------------------------------------------------------|-------------|-----|
| A    |  | HEADBOARD   | 1   |
| B    |  | FOOTBOARD   | 1   |

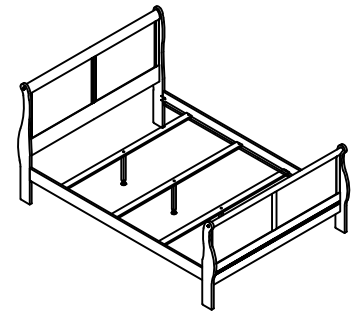


(BOX 2)  
BOX OF SIDE RAIL

| ITEM | DRAWING                                                                           | DESCRIPTION    | Qty |
|------|-----------------------------------------------------------------------------------|----------------|-----|
| C    |  | SIDE RAIL      | 2   |
| D    |  | WOODEN SLAT    | 3   |
| E    |  | WOODEN SUPPORT | 3   |

(BOX 2)  
HARDWARE LIST

| ITEM | DRAWING                                                                           | DESCRIPTION            | Qty |
|------|-----------------------------------------------------------------------------------|------------------------|-----|
| 1    |  | CB SCREW<br>(M4 *28mm) | 6   |
| 2    |  | SCREW<br>DRIVER(*)     | 1   |

**COMPLETED FULL BED  
ASSEMBLY**

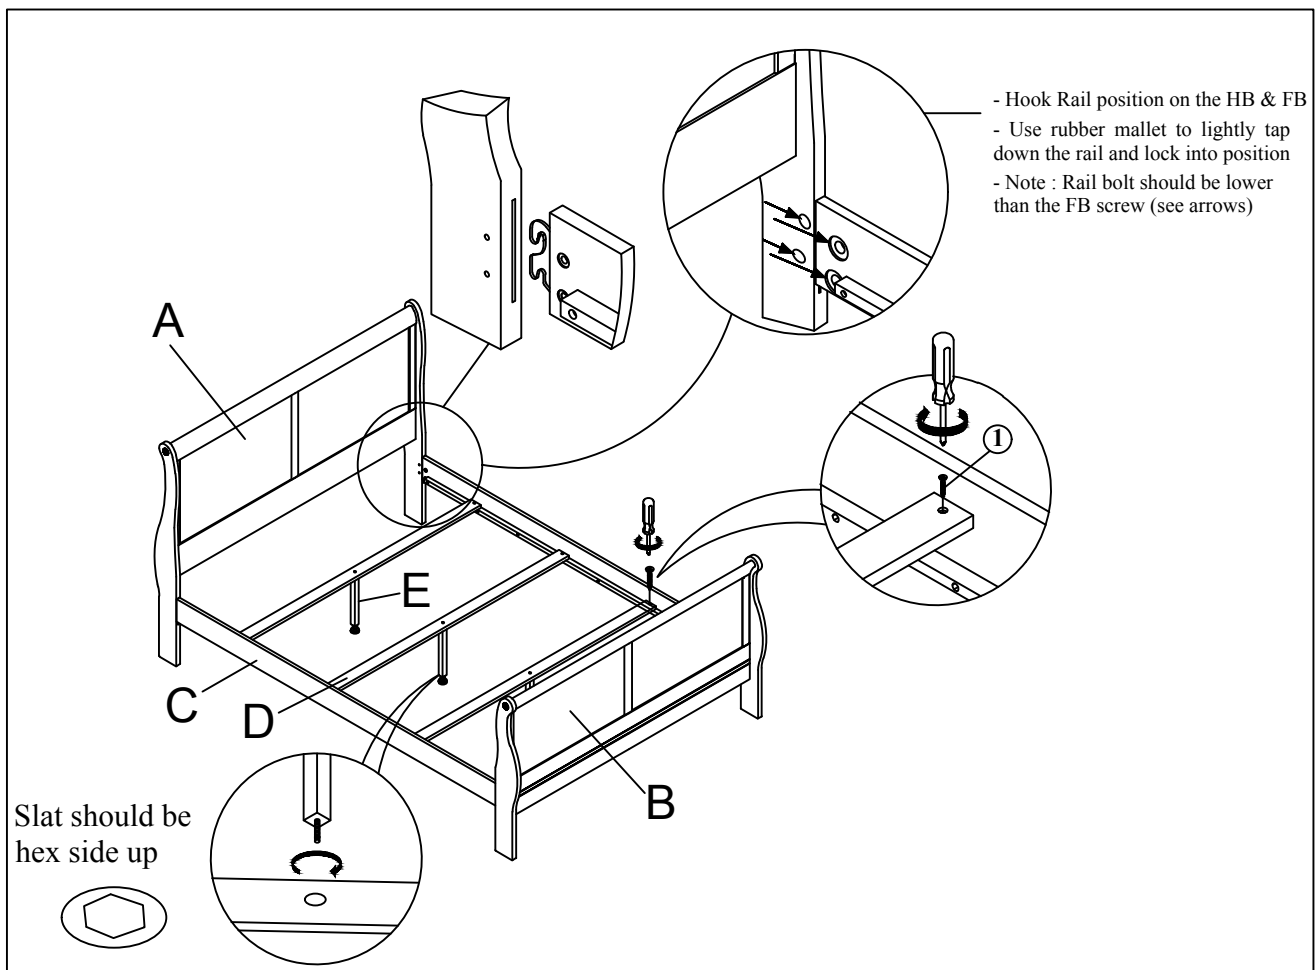

## THE HARDWARE IS LOCATED THE PACKING ITEMS

NOTE: MUST TIGHTEN SCREWS PERIODICALLY WITH USE SCREWS MAY BECOME LOOSE.

CHECK TIGHTNESS OF ALL SCREWS EVERY 6-8 WEEKS.

## CLEANING INSTRUCTION

After assembled, clean & polish the completed parts if necessary with soft cloth and industrial recognized furniture polish.

MADE IN VIETNAM