



ITEM NO.2347

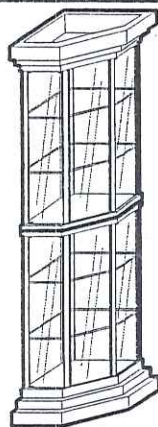


A	LONG MACHINE SCREWS	20
B	WOOD SCREWS	56
C	HANGERS BOLTS	20
D	SHELF SUPPORTS	20
E	MAGNETS	4
F	GLASS PAD	4
G	GLASS PROTECTOR	4
H	HINGE	8
I	HINGE SCREW	16
J	HINGE SCREW CAP	8
K	SIDE PANEL	4
L	BASE	2
M	CENTER WOOD SHELVES	2
N	BACK CORNER POST	2
O	SIDE POST	4
P	FRONT POST	4
Q	MIRROR	4
R	FRONT GLASS	2
S	DOOR GLASS	4
T	GLASS SHELVES	4
U	DOWEL	2

01

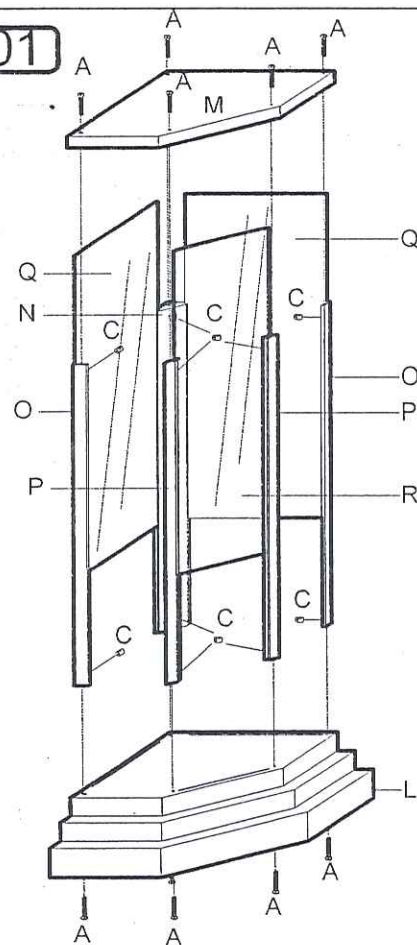

- 01.INSERT HANGER BOLT (C) INTO POST (N.O.P.)
- 02.INSERT POST (N.O.P.) INTO BASE (L) BY USING LONG MACHINE SCREW (A)
- 03.SLIDE MIRROR (Q) INTO POST (N.O.)
- 04.SLIDE GLASS (R) INTO POST (P)
- 05.SAME AS STEP 01.
- 06.TO ATTACH CENTER WOOD SHELF (M) BY USING LONG MACHINE SCREW (A) TO ASSEMBLED FRAMES.
- 07.TO ATTACH HINGE (H) TO DOOR GLASS (S) BY USING HINGE SCREW (I) TO TIGHTEN, THEN PUT HINGE SCREW CAP (J) ON HINGE (H).
- 08.INSERT HINGE SCREW CAP (J) AND HINGE (H) INTO THE DRILLED HOLE ON CENTER WOOD SHELF AND SLIDE ASSEMBLED DOOR GLASS OF STEP (07.) INTO HINGE (H) , THEN TIGHTEN BY USING HINGE SCREW (I).


02

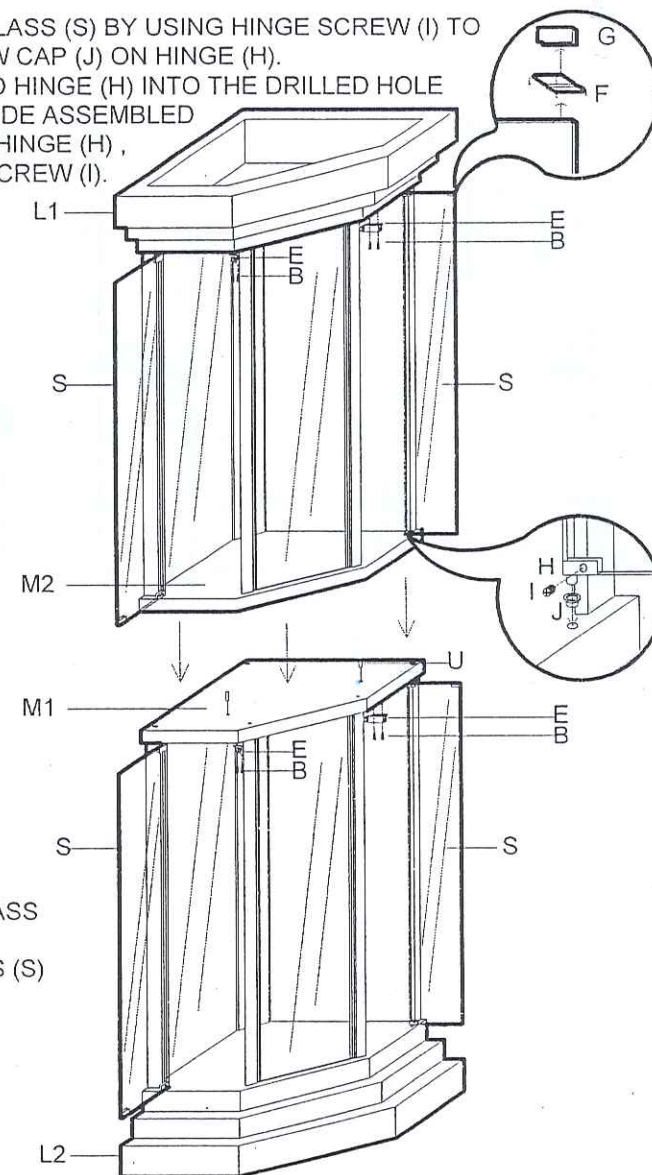


- 09.SAME AS STEP (01.)-(08.) AND UPSIDE DOWN AS UPPER CABINET AND USE DOWELS (U) TO FIRM IT.
- 10.TAKE OFF THE BACK STICKER OF GLASS PAD (F) AND INSERT INTO GLASS PROTECTOR (G).
- 11.SLIDE UPPER-RIGHT AND UPPER-LEFT CORNER OF EACH DOOR GLASS (S) INTO GLASS PROTECTOR (G) SEPERATELY.
- 12.INSERT WOOD SCREW (B) THROUGH MAGNET (E) AND TIGHTEN INTO UNDERSIDE TOP (L.M)

ITEM NO.2347

03

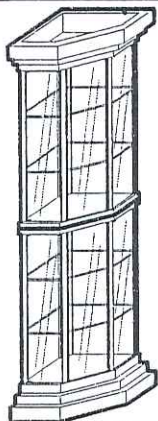


A	LONG MACHINE SCREWS	20
B	WOOD SCREWS	56
C	HANGERS BOLTS	20
D	SHELF SUPPORTS	20
E	MAGNETS	4
F	GLASS PAD	4
G	GLASS PROTECTOR	4
H	HINGE	8
I	HINGE SCREW	16
J	HINGE SCREW CAP	8
K	SIDE PANEL	4
L	BASE	2
M	CENTER WOOD SHELVES	2
N	BACK CORNER POST	2
O	SIDE POST	4
P	FRONT POST	4
Q	MIRROR	4
R	FRONT GLASS	2
S	DOOR GLASS	4
T	GLASS SHELVES	4
U	DOWEL	2

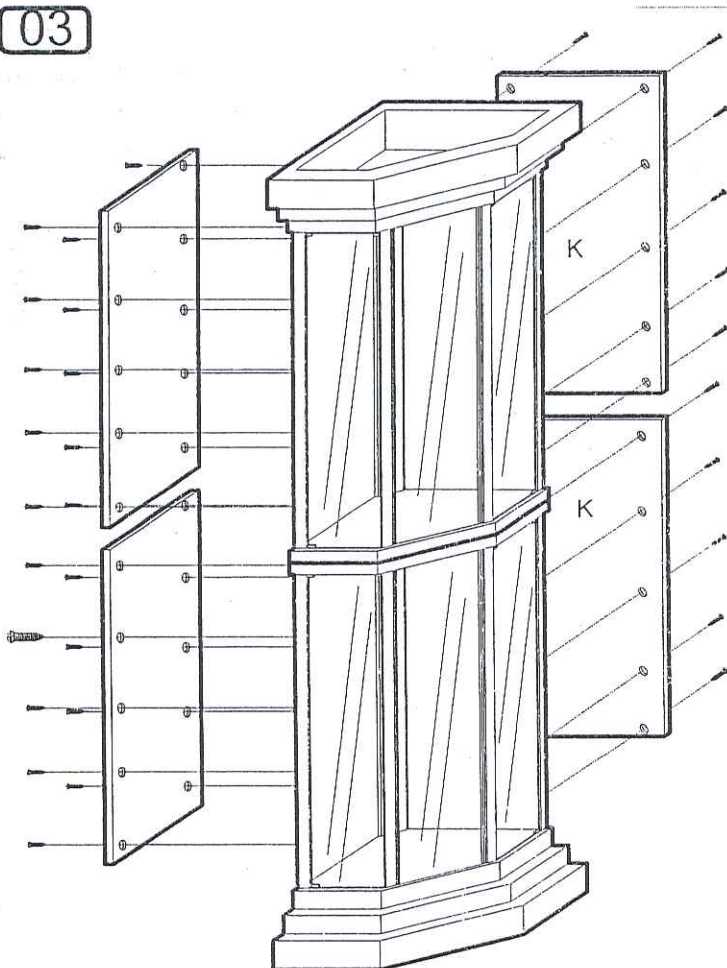

13. INSERT WOOD SCREW (B) THROUGH SIDE PANEL (K) AND TIGHTEN.

04

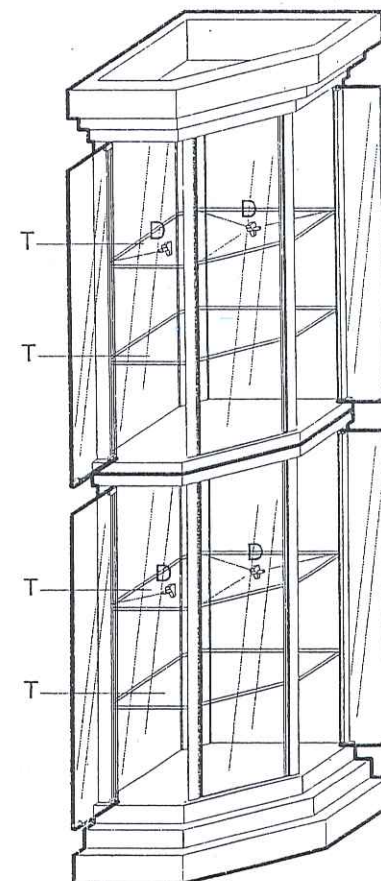

14. INSERT SHELF SUPPORT (D) INTO POST (N.O.P.).
15. PUT GLASS SHELVES (T) ON SHELF SUPPORT (D)