

# Elements

## Assembly instruction for

DESCRIPTION : EMILY KING HEADBOARD  
: EMILY KING FOOTBOARD  
: EMILY KING RAILS  
: KING SLATS & SUPPORT LEGS  
ITEM NO :

PEM300KHF/PEM300KRD/PEM300KLD/PEM300KR

Caution : Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person ; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non - abrasive floor before assembly. and follow the assembly step to assemble your newly purchased product correctly and efficiently .

### (BOX 1)

#### BOX OF HEADBOARD & FOOTBOARD

NO	ITEM	CODE	QTY
A	Headboard	KHB	1
B	Footboard	KFB	1
C	Headboard Leg (L/R)	HBL/HR	2
D	Triangle Support Panel -9 x 200 x 200	HBSN	2

### (BOX 1)

#### HARDWARE LIST

NO	ITEM	CODE	QTY
1	FLAT HEAD CHIPBOARD SCREW m4 x 32mm RBW	-	8
2	PAN HEAD CHIPBOARD SCREW m3.5 x 16mm BLK	-	8
3	JCBC BOLT M6 x 35MM BLK	-	4
4	JCBC BOLT M6 x 50MM BLK	-	2
5	SPRING WASHER 1/4" RBW	-	6
6	FLAT WASHER 1/4" ID x 13mmOD BLK	-	6
7	ALLEN KEY m4 x 110mm BLK	-	1

### (BOX 2)

#### BOX OF SIDERAIL

NO	ITEM	CODE	QTY
E	Side Rail (L/R)	QKR	2
F	Bed Slat	KST	5
G	F/Board Drawer Frame	KFDWF	1
H	Concealed Panel	QKCPN	6
I	H/board Back Support - 20 x 30 x 1560mm	KHBSR	1
J	Drawer Suppt. Rail - 1	KRDWSR	1
K	Drawer Suppt. Rail - 2	FDWSR	4
L	Support Leg 1 - 30 x 30 x 518mm	SPL1	5
M	Support Leg 2 - 30 x 30 x 95mm	SPL2	1
N	Support Leg 3 - 30 x 30 x 107mm	SPL3	1
O	H/board Back Support -1x18x45x1560	KHBR	1

### (BOX 2)

#### HARDWARE LIST

NO	ITEM	CODE	QTY
8	FLAT HEAD CHIPBOARD SCREW m4 x 32mm RBW	-	16
9	PAN HEAD CHIPBOARD SCREW m3.5 x 16mm BLK	-	32
10	JCBC BOLT M6 x 35MM BLK	-	15
11	JCBC BOLT M6 x 50MM BLK	-	6
12	SPRING WASHER 1/4" RBW	-	15
13	FLAT WASHER 1/4" ID x 13mmOD BLK	-	15
14	Z-BRACKET	-	1
15	ALLEN KEY m4 x 110mm BLK	-	1

### (BOX 3 & 4)

#### BOX OF PART & HARDWARE

NO	ITEM	CODE	QTY
P	Drawer - 1	QKFBW1/QKFBDW2/QKFBW4	4
Q	Drawer - 2	QKLDW1	2
16	HANDLE	HDS	8
17	T/HEAD M. SCREW HANDLE M4 x 48MM BLK	-	4
18	T/HEAD M. SCREW HANDLE M4 x 50MM BLK	-	4


### (BOX 1)

#### BOX OF HEADBOARD & FOOTBOARD

NO	ITEM	CODE	QTY
A1	Headboard Drawer	HBDW1/HBDW2	2

### REMARK!!!


\* DRAWER 1 (P) & 2 (Q)  
ARE IDENTICAL AND COULD BE  
USED IN COMMON, REGARDLESS  
LEFT OR RIGHT.

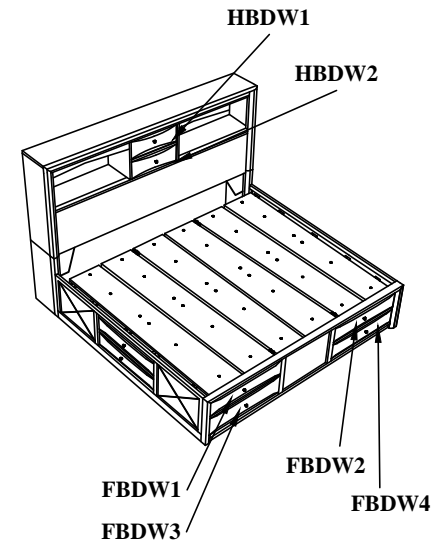

NOTE : DURING ASSEMBLY, DO NOT TIGHTEN  
ANY HARDWARE UNTIL THE COMPLETE  
UNIT HAS BEEN ASSEMBLED.

# ASSEMBLY INSTRUCTIONS


**STEP 1 :** Attached and tighten the Headboard Leg L/R ( C ) to the Headboard ( A ).Insert Spring Washer ( 5 ) Flat Washer ( 6 ),use JCBC Bolt ( 3 ) to fix with Allen Key ( 7 ).

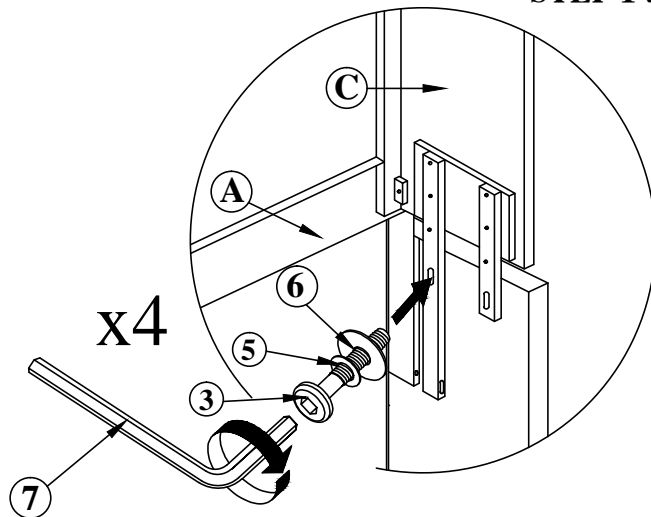


LEFT

RIGHT

STEP 1  
STEP 2  
STEP 3

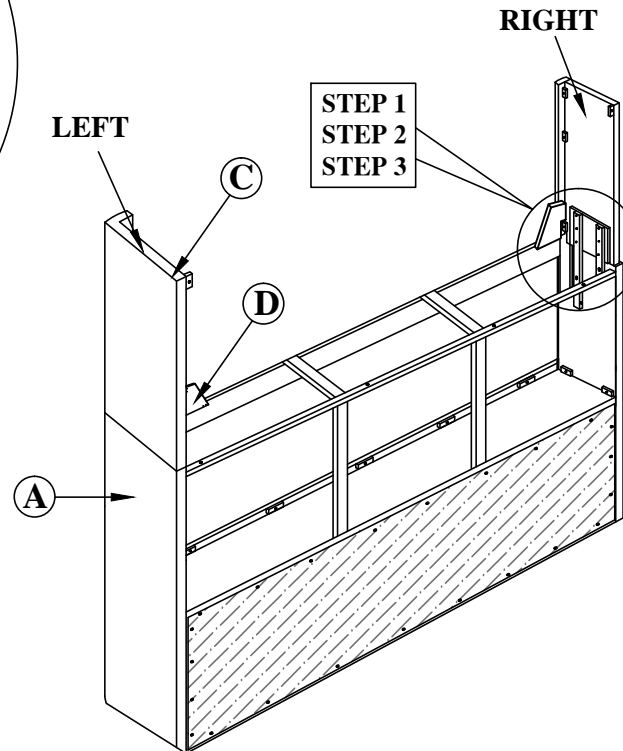


**STEP 3 :** Attached and tighten the Triangle Support Panel ( D ) to the Headboard and fix the Panhead Screw ( 2 ) using Screw Driver.( Not Included )

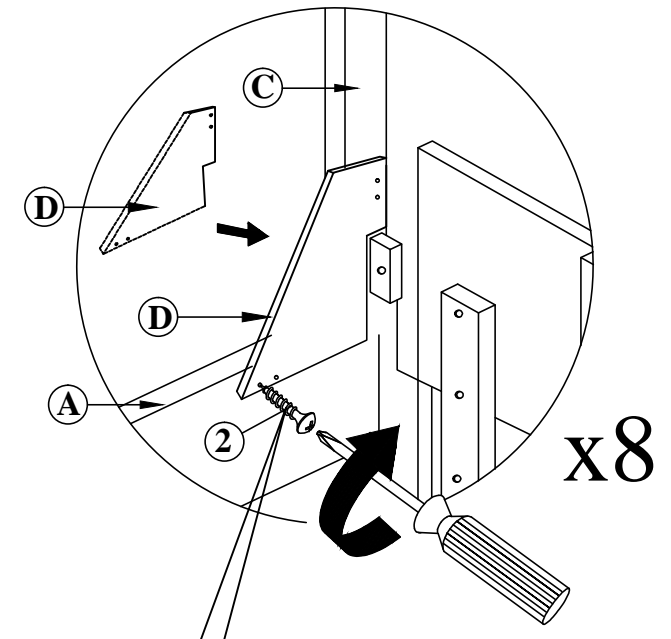


**WARNING !!! USE SHORT CHIPBOARD SCREW (M3.5 x 16mm)**

**STEP 2 :** Attached and tighten the Headboard Leg L/R ( C ) to the Headboard ( A ).Insert Spring Washer ( 5 ) Flat Washer ( 6 ),use JCBC Bolt ( 4 ) to fix with Allen Key ( 7 ).

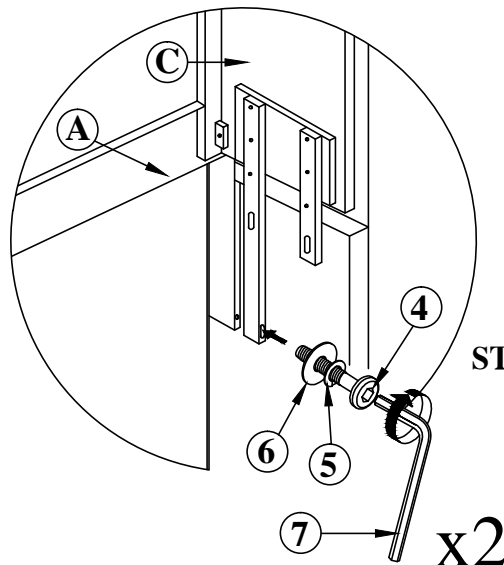


# ASSEMBLY INSTRUCTIONS

**STEP 4 : Attach Headboard Back Support ( I ) and ( O ) follow the picture. Fix the CSK Screw ( 1 ) using a Screw Driver. ( Not Included )**

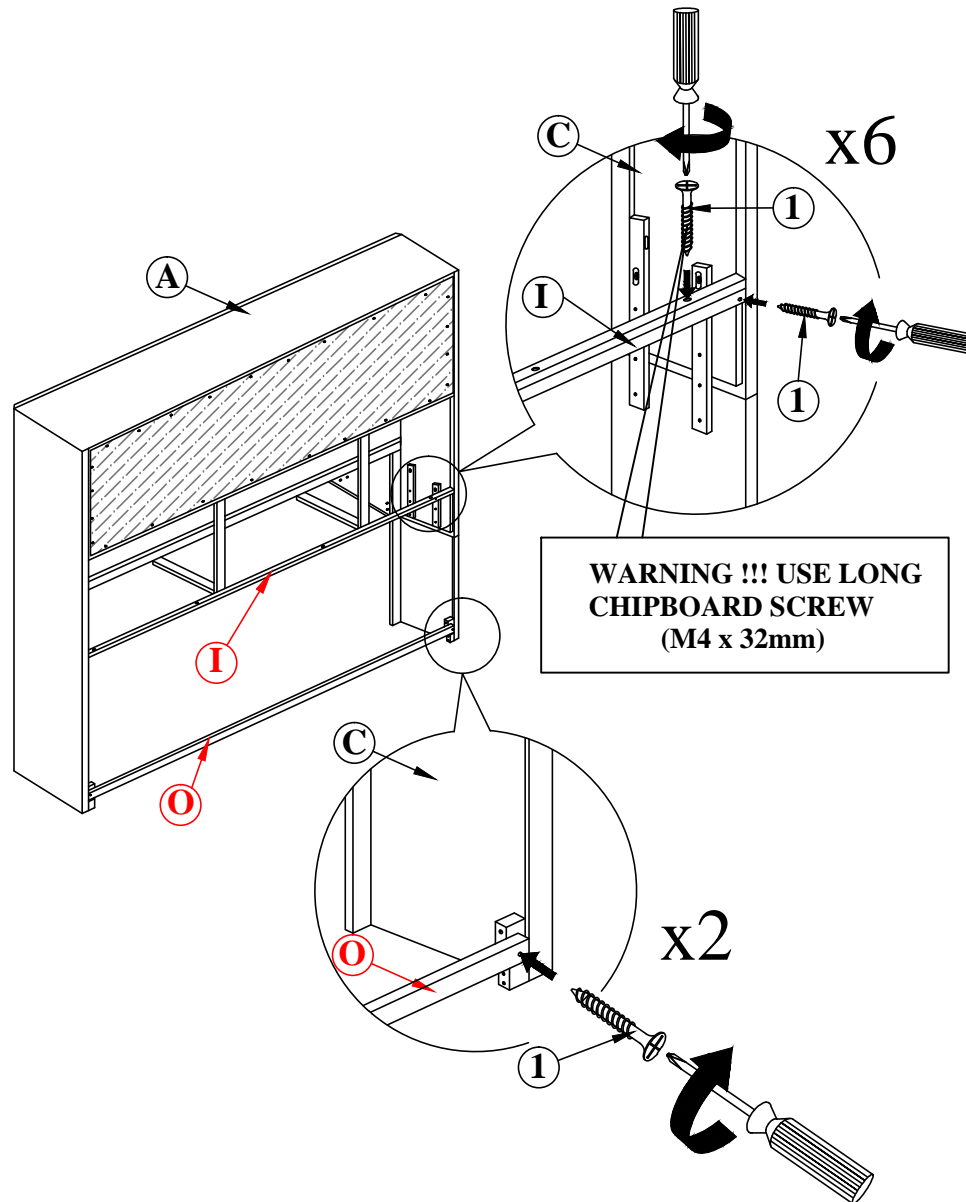

**STEP 5 : Attach the Side Rail ( E ) to the Headboard Leg ( C ) and Footboard ( B ). Insert Spring Washer ( 12 ) , Flat Washer ( 13 ), use JCBC Bolt ( 10 ) to fix with Allen Key ( 15 ).**

**WARNING !!! USE SHORT BOLT (M6 x 35mm)**

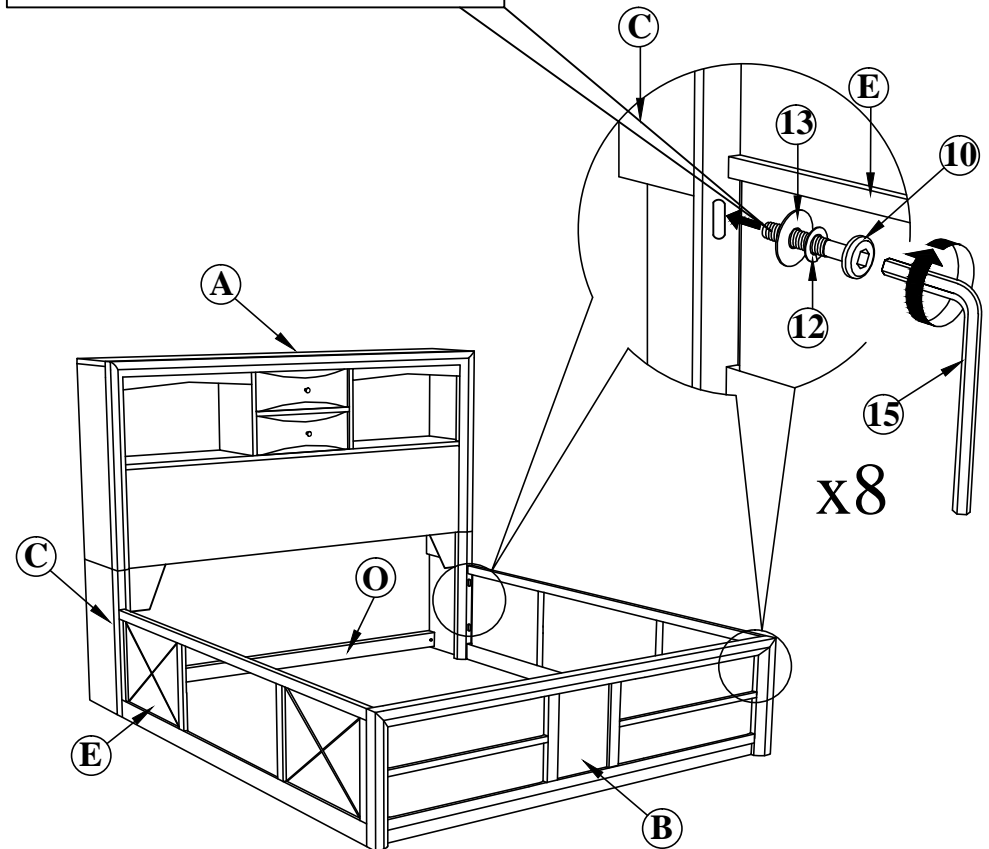


# ASSEMBLY INSTRUCTIONS

**STEP 6 :** Attach the Footboard Drawer Frame ( G ) to the Side Rail ( E ). Insert Spring Washer ( 12 ), Flat Washer ( 13 ) & JCBC Bolt ( 10 ) to fix with Allen Key ( 15 ).

**STEP 9 :** Attach the Drawer Support Rail ( K ) to the Footboard Drawer Frame ( G ). Insert Spring Washer ( 12 ), Flat Washer ( 13 ) & JCBC Bolt ( 10 ) to fix with Allen Key ( 7 ).

**WARNING !!! USE SHORT BOLT (M6 x 35mm)**

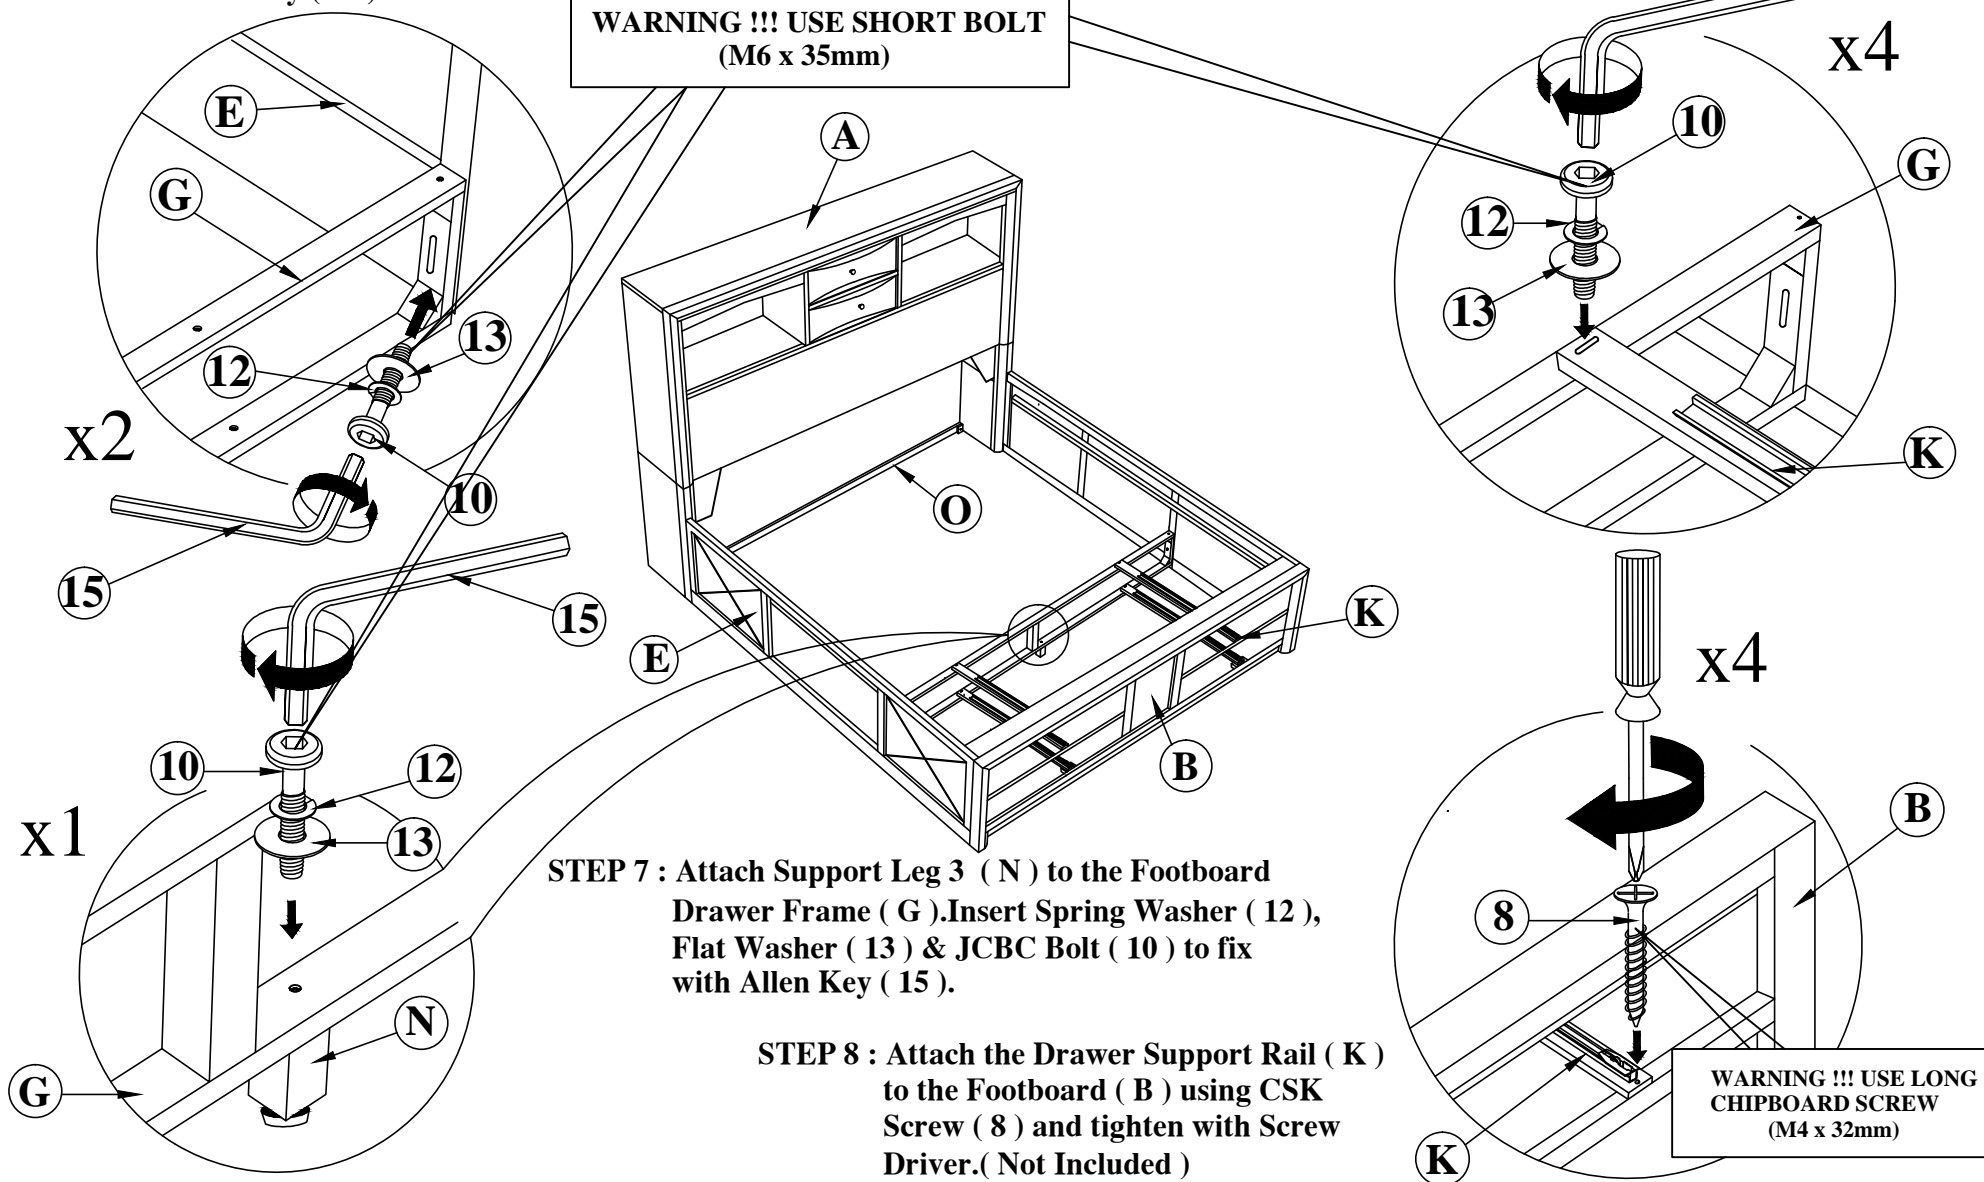

**STEP 7 :** Attach Support Leg 3 ( N ) to the Footboard Drawer Frame ( G ). Insert Spring Washer ( 12 ), Flat Washer ( 13 ) & JCBC Bolt ( 10 ) to fix with Allen Key ( 15 ).

**STEP 8 :** Attach the Drawer Support Rail ( K ) to the Footboard ( B ) using CSK Screw ( 8 ) and tighten with Screw Driver. ( Not Included )

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.




PAGE 4 OF 7

# ASSEMBLY INSTRUCTIONS

**STEP 10 : Attach Support Leg 2 ( M ) to the Drawer Support Rail ( J ).Use JCBC Bolt ( 11 ) to fix with Allen Key ( 15 ).**

**WARNING !!! USE LONG BOLT (M6 x 50mm)**

**Step 12 : Attach Bed Slat ( F ) to the Bed Slat Support ( L ). Use JCBC Bolt ( 11 ) to fix with Allen Key ( 15 ). ( Loosen and tighten the Adjuster to stability of bed )**

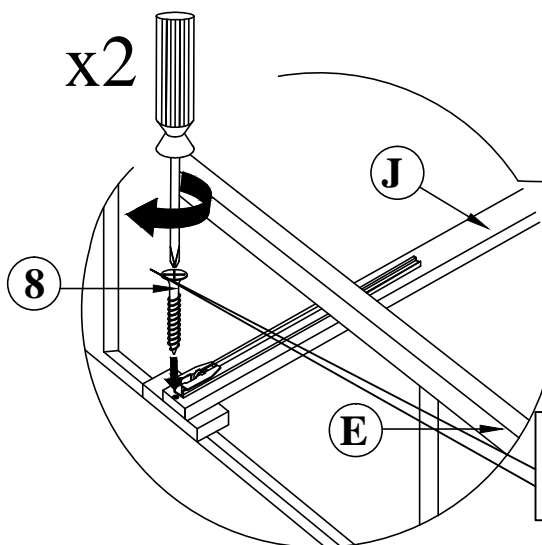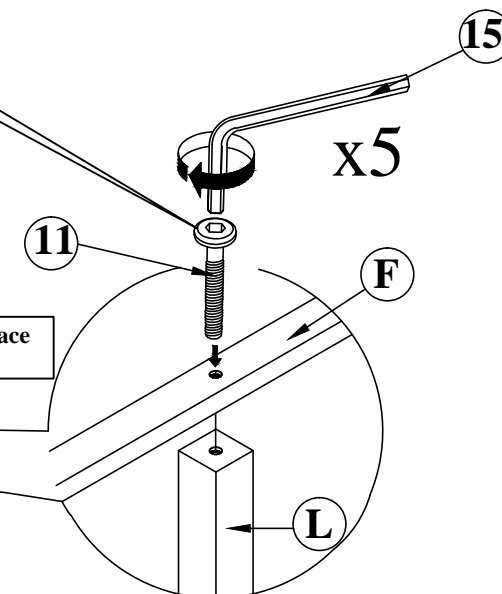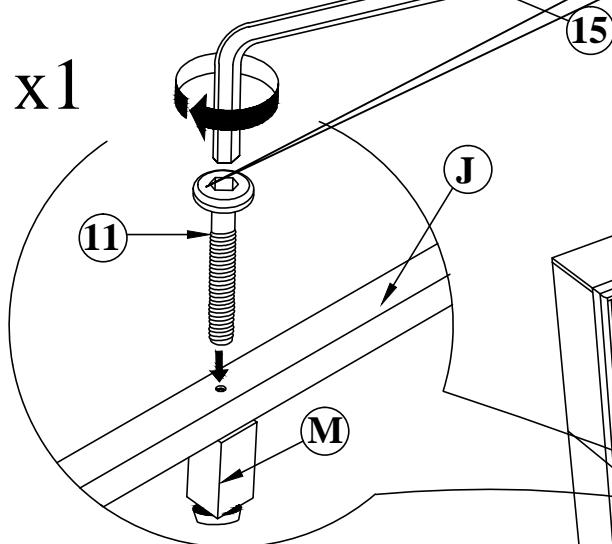


**STEP 11 : Attach Drawer Support Rail ( J ) to the Side Rail ( E ) using Csk Screw ( 8 ) and tighten with Screw Driver.( Not Included )**

**WARNING !!! USE LONG CHIPBOARD SCREW (M4 x 32mm)**

**WARNING !!! USE SHORT CHIPBOARD SCREW (M3.5 x 16mm)**

**STEP 13 : Attach Z-Bracket ( 14 ) to the Bed Slat Support ( L ) and Support Leg 2 ( M ).Use Panhead Screw ( 9 ) and tighten with Screw Driver. ( Not Included )**




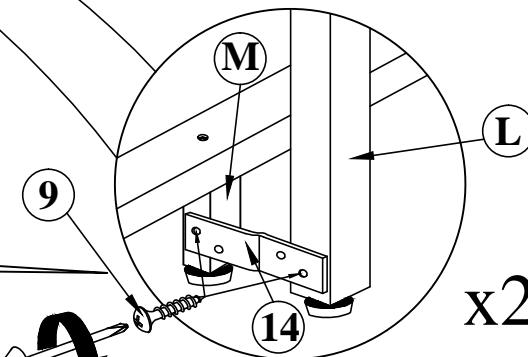


NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.







PAGE 5 OF 7

# ASSEMBLY INSTRUCTIONS

**STEP 14 : Attach Drawer-2 ( Q ) on Drawer Support Rail -1 ( J ).**

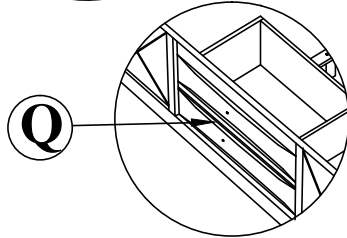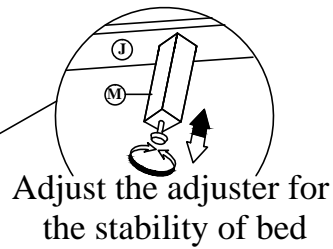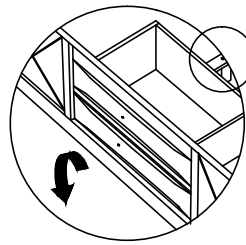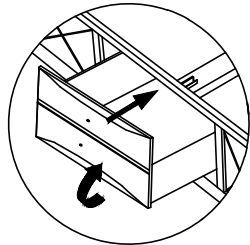


**STEP 15 : Attach Drawer-1 ( P ) on Drawer Support Rail -2 ( K ).**

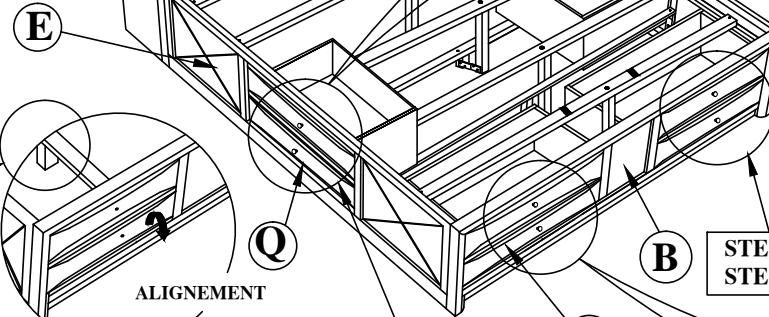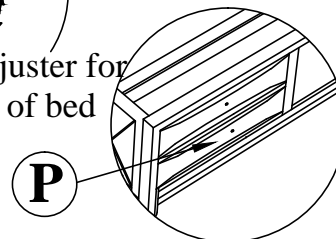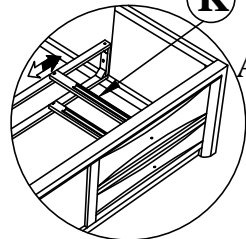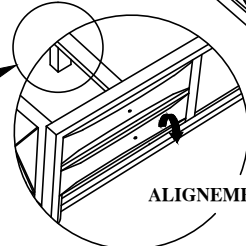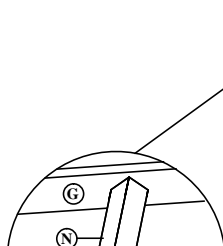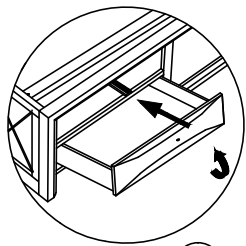


STEP 14  
STEP 16

**STEP 16 : Install the Handle ( 16 ) in front of drawer. Tighten the Handle Screw ( 18 ) using Screw Driver.( Not Included )**

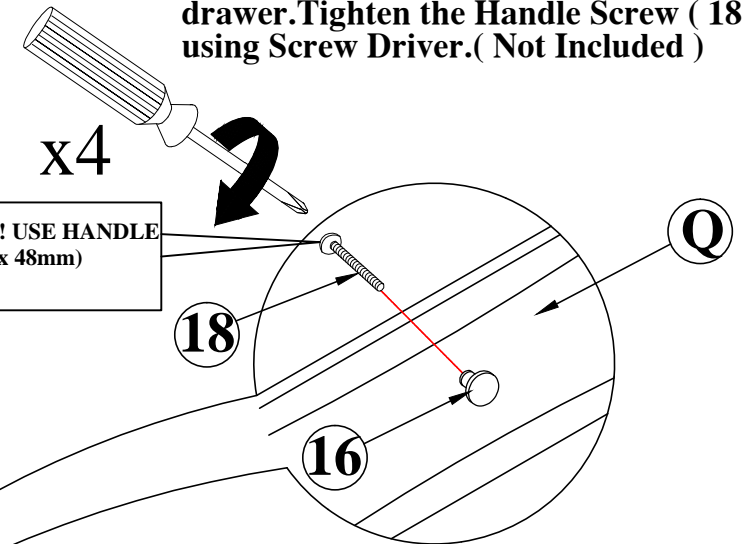

**STEP 17 : Install the Handle ( 16 ) in front of drawer. Tighten the Handle Screw ( 17 ) using Screw Driver.( Not Included )**

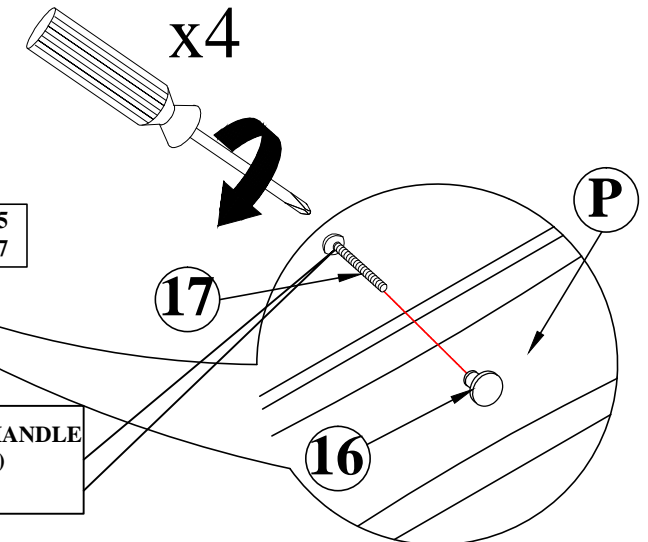


NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

PAGE 6 OF 7

# ASSEMBLY INSTRUCTIONS

**STEP 18 : Push the Side Rail ( E ) with Bed Slat ( F ) and tighten with CSK Screw ( 8 ) by using Screw Driver.( Not Included )  
( Make sure follow the center Marking Line as shown )**

**STEP 20 : Attach Concealed Panel Slat ( H ) at the Upper Bed Slat ( F ) using Panhead Screw ( 9 ) and tighten with Screw Driver. ( Not Included )**

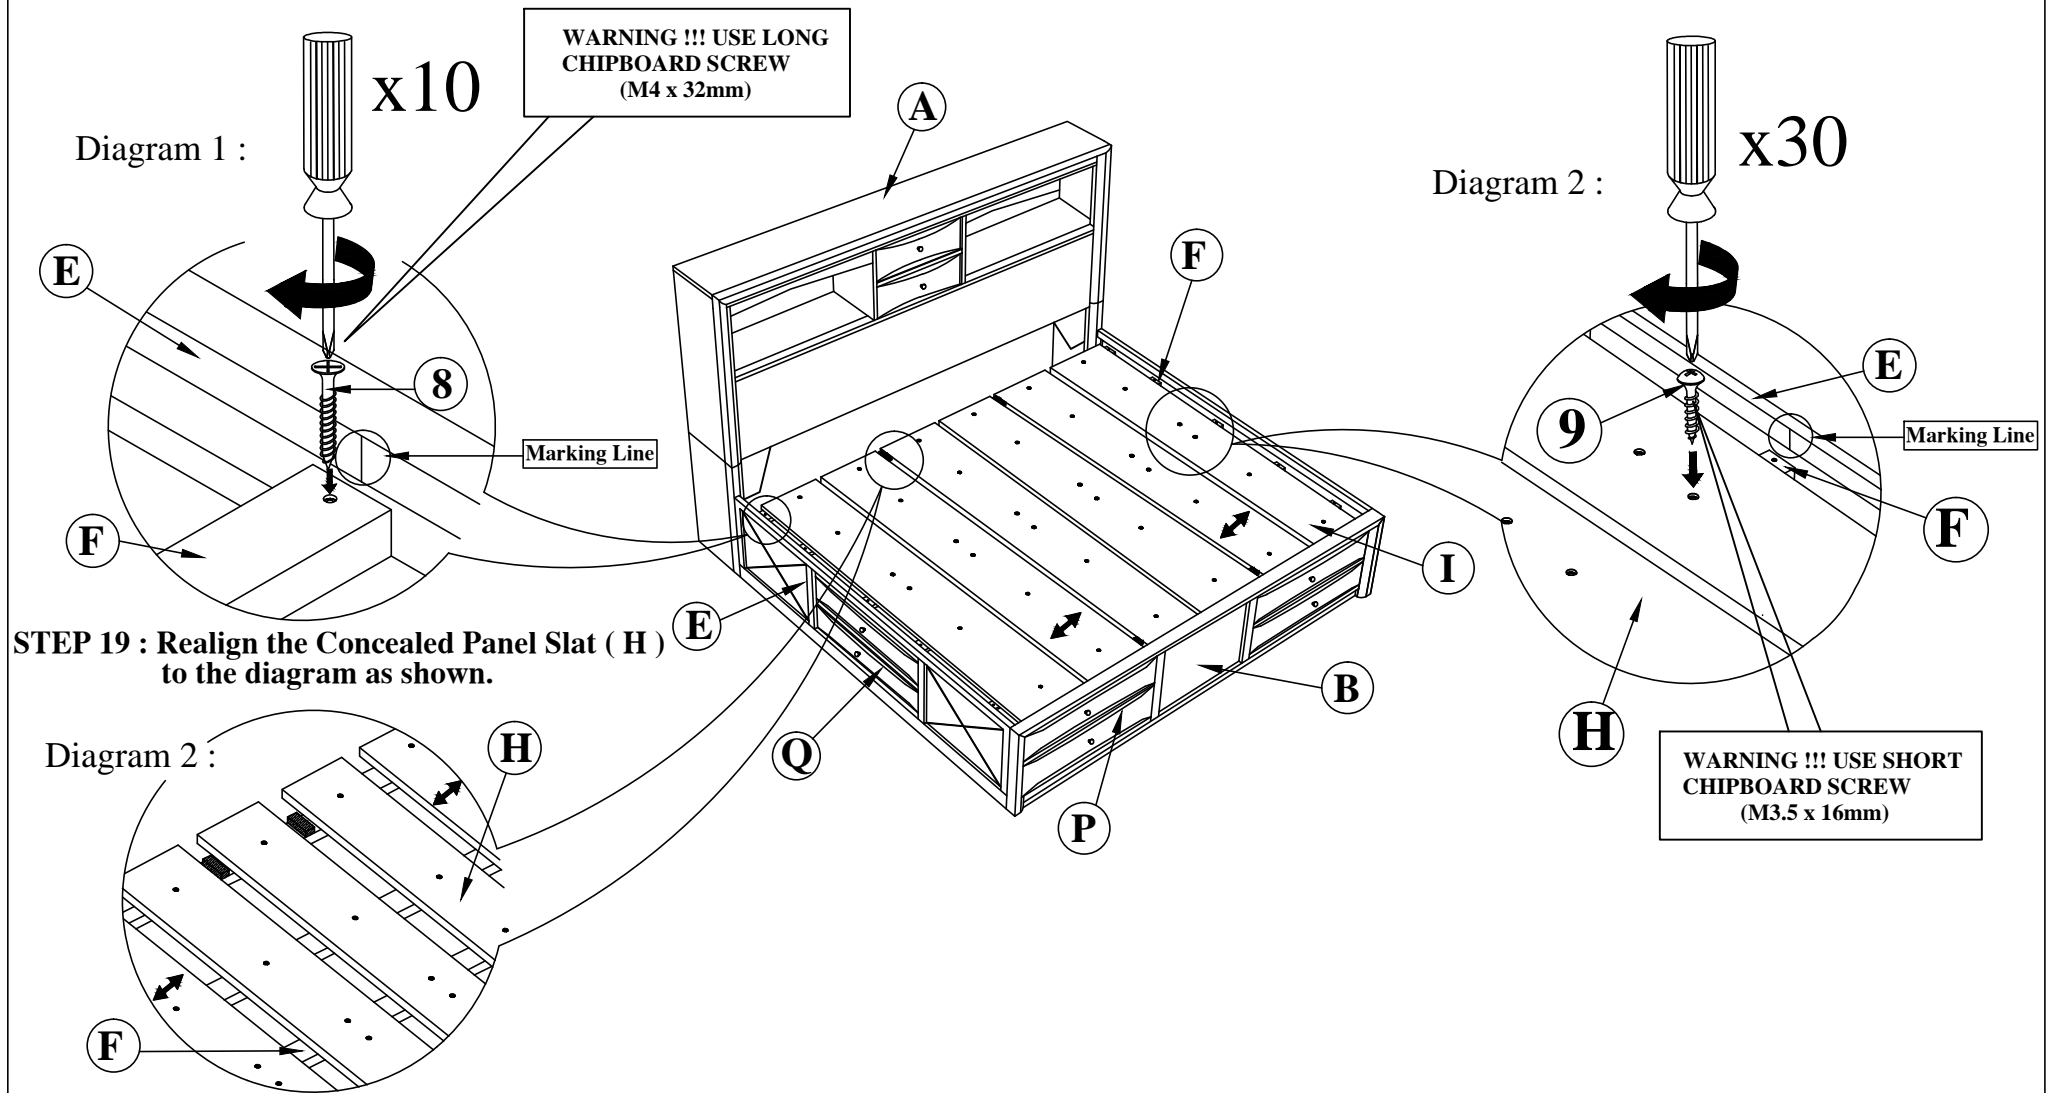

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

PAGE 7 OF 7