





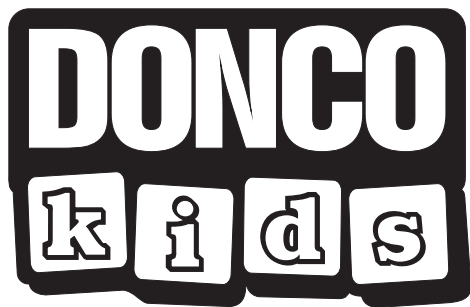


Fort Worth, Texas 76140

ASSEMBLY INSTRUCTIONS

5000 - LOW LOFT BED

REVERSIBLE OPTIONS

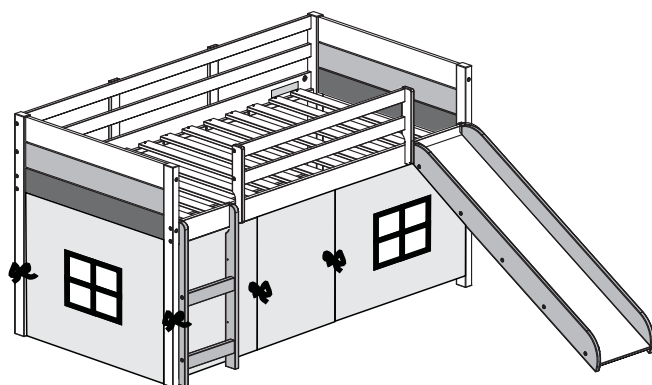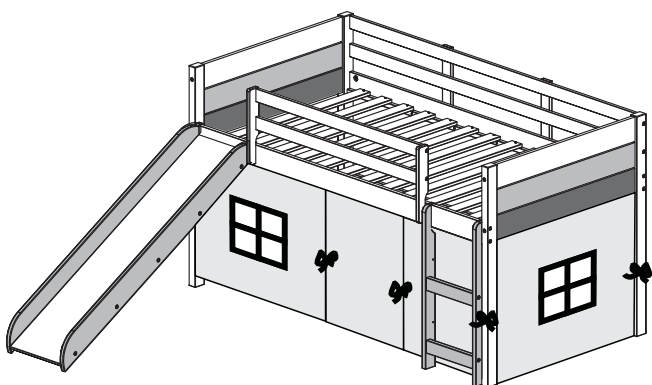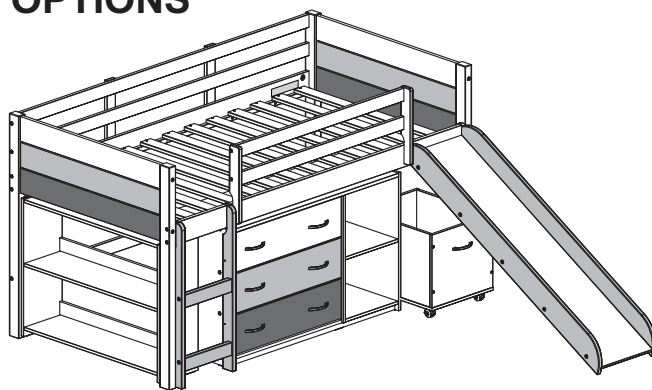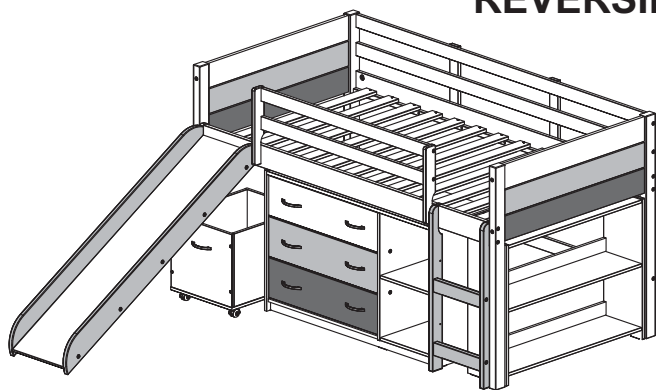

OPTIONAL COMPONENTS

DRESSER


TOY BOX

BOOKCASE



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.


"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

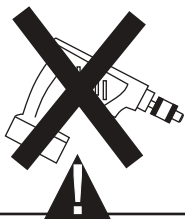


* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.

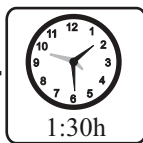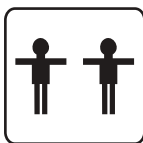

Tools Required



(Not included)





(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Part List - 5000 LOW LOFT BED

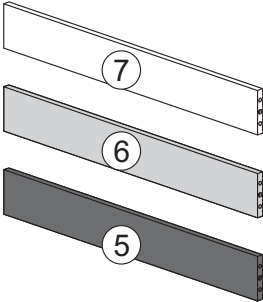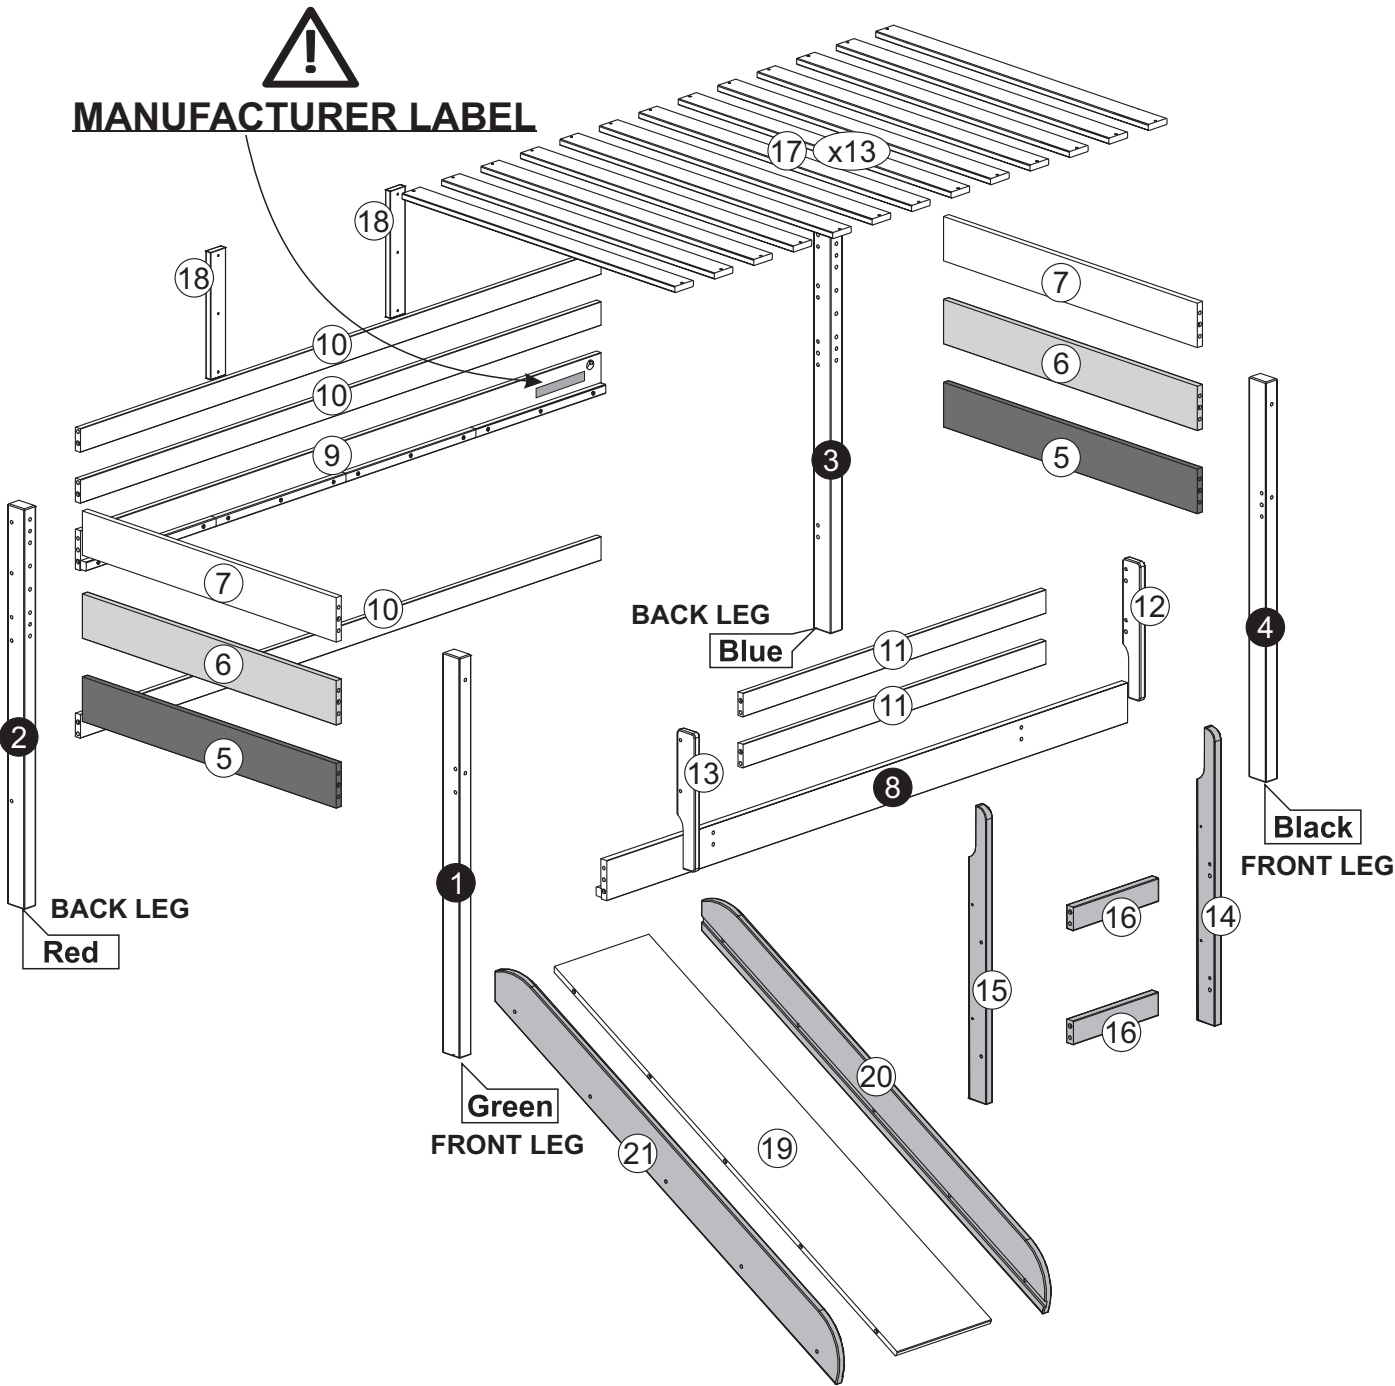


#7 Rustic White

#6 Rustic Light Grey

#5 Rustic Dark Grey

Identifying the Hardware—Identify the hardware using the illustrations below.

A

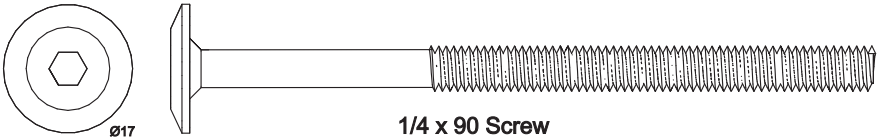

Qty
04

1/4 x 90 Screw


B



Qty
04

1/4" Half Moon


C

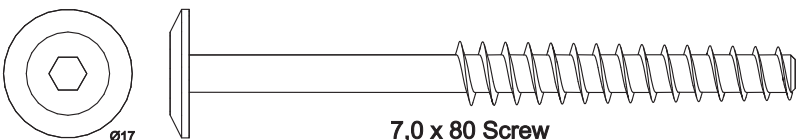

Qty
10

7,0 x 80 Screw


D

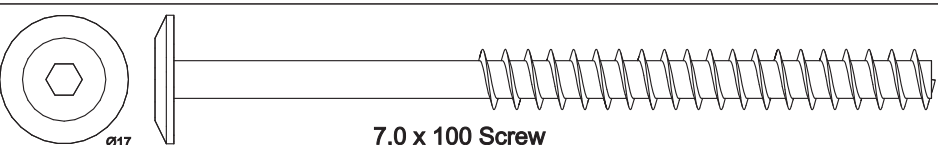

Qty
08

7,0 x 100 Screw


E



Qty
42

10 x 40 Wood Dowel


F

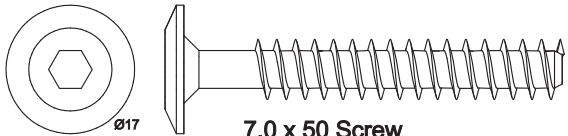

Qty
22

7,0 x 50 Screw


G



Qty
32

4,0 x 30 Screw


H



Qty
02

4,0 x 40 Screw


I



Qty
01

Hex
Screwdriver


J



Qty
04

Hook
Ladder


K



Qty
12

4,0 x 20 Screw


L



Qty
04

Protector



M

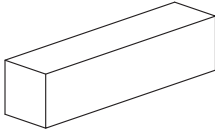

Qty
02

Wooden
spacer
72.5mm

01

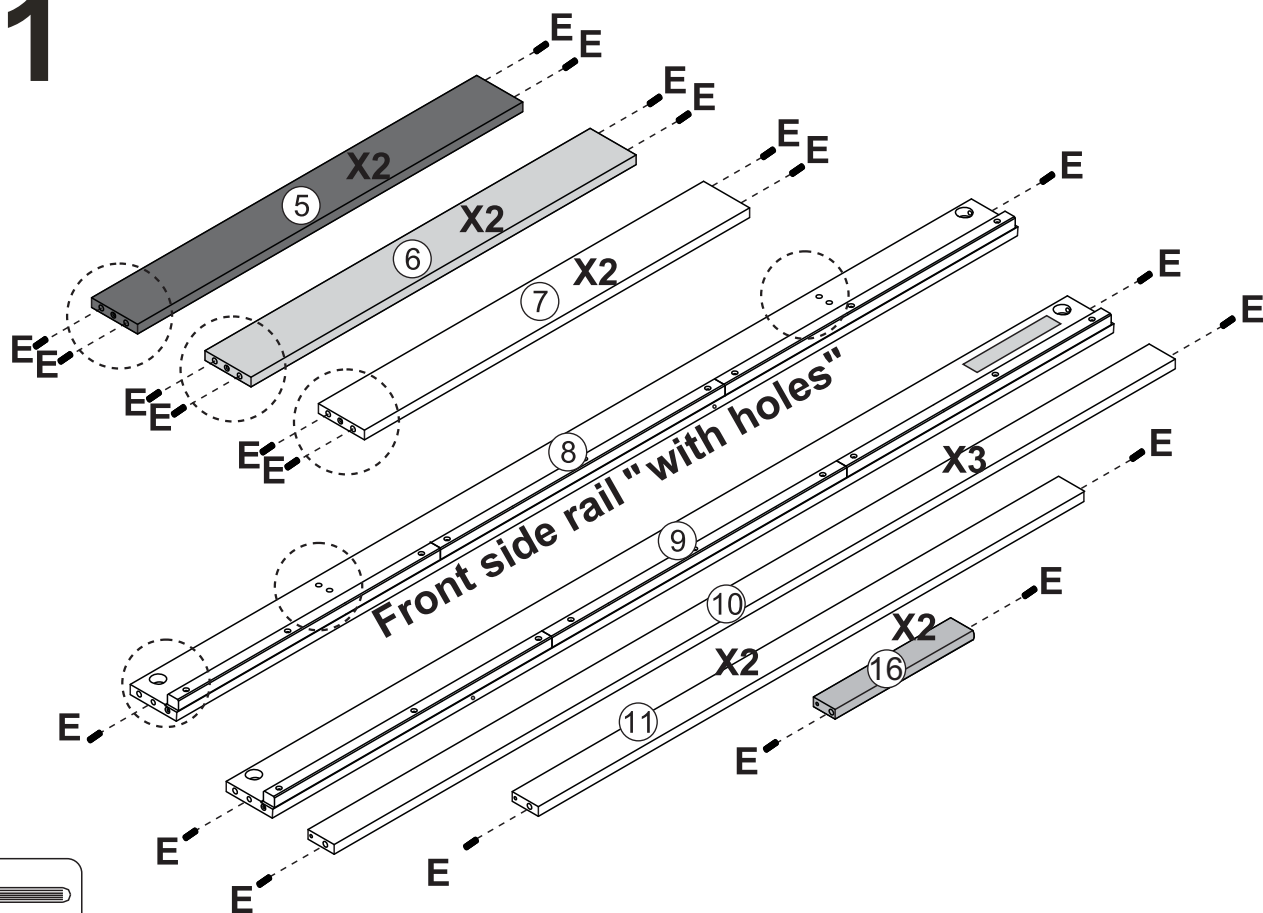


E  Qty **42**
10 x 40 Wood Dowel


02


#5 Rustic Dark Grey

#6 Rustic Light Grey







#7 Rustic White

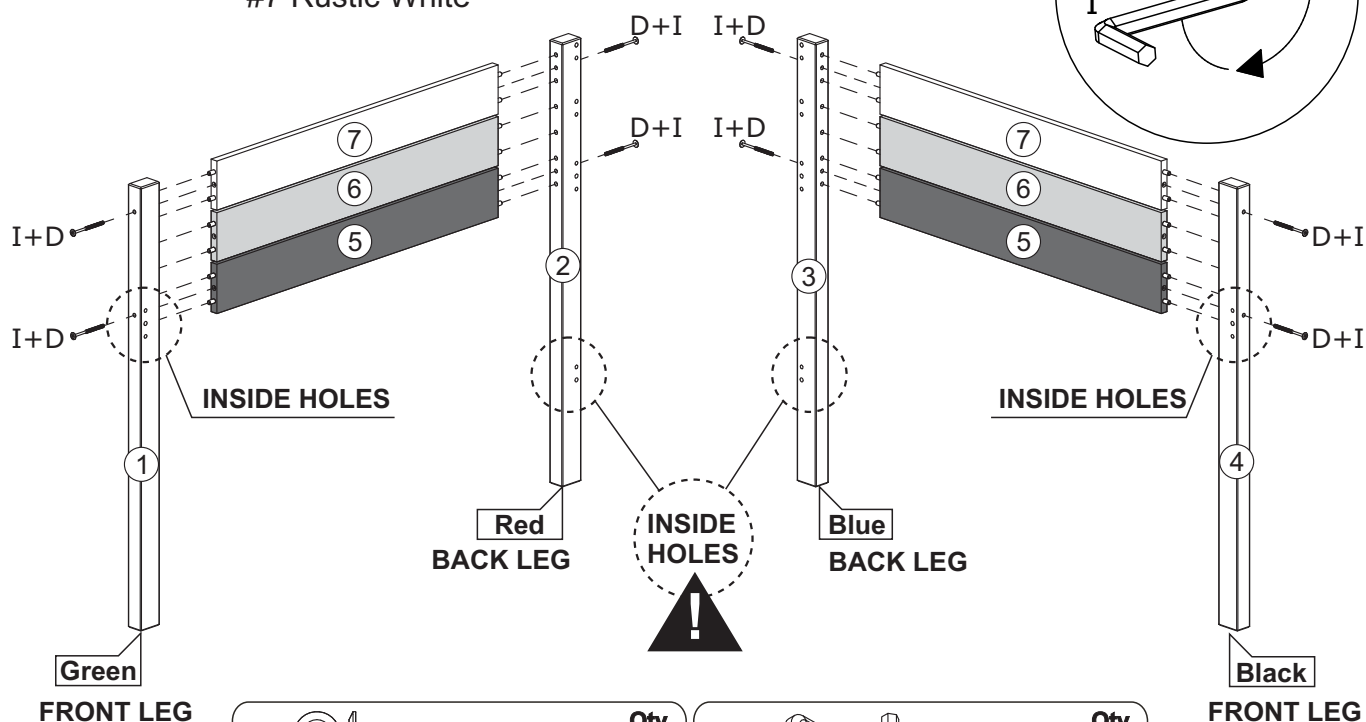






D  Qty **08**
7,0 x 100 Screw

I  Qty **01**
Hex Screwdriver



03

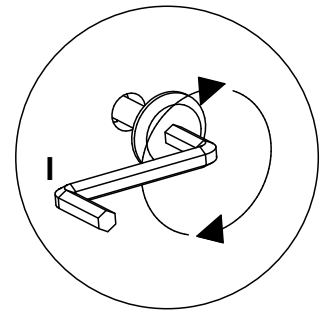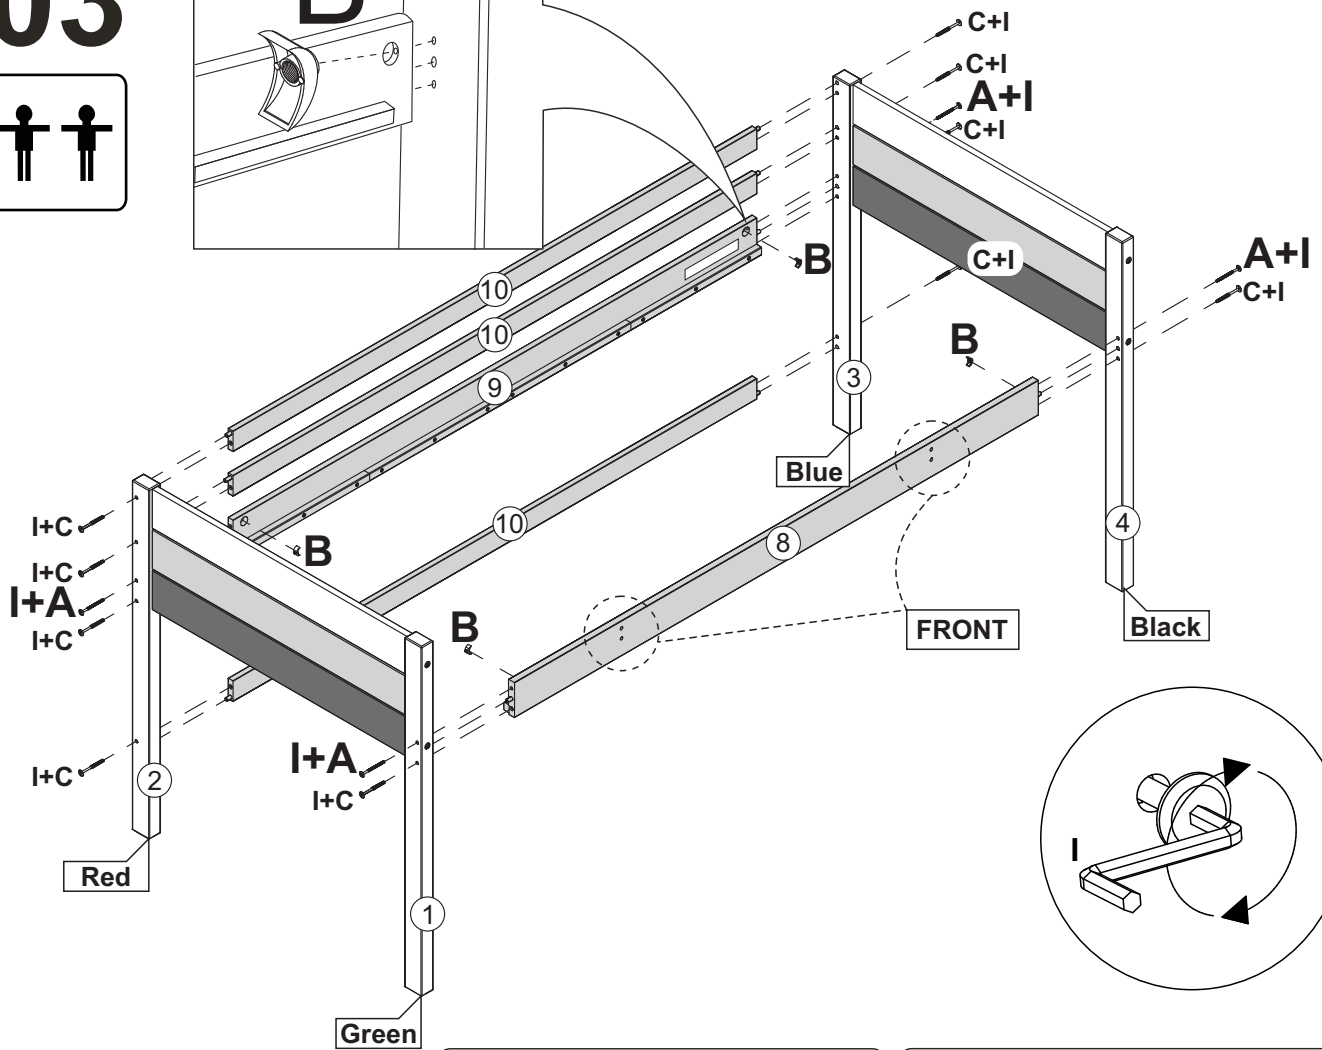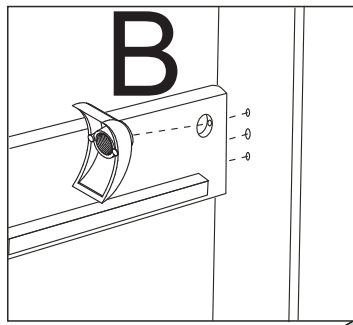


04 FRONT GUARDRAIL

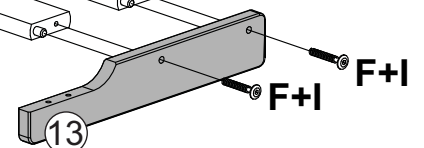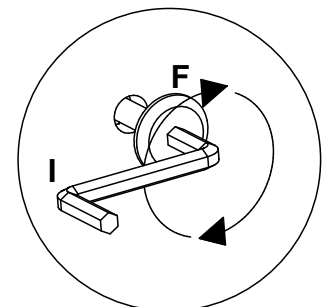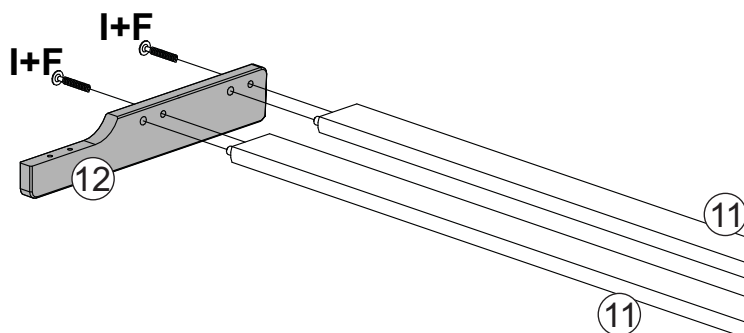






05

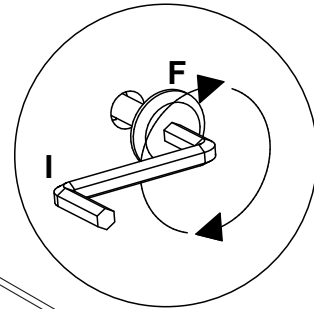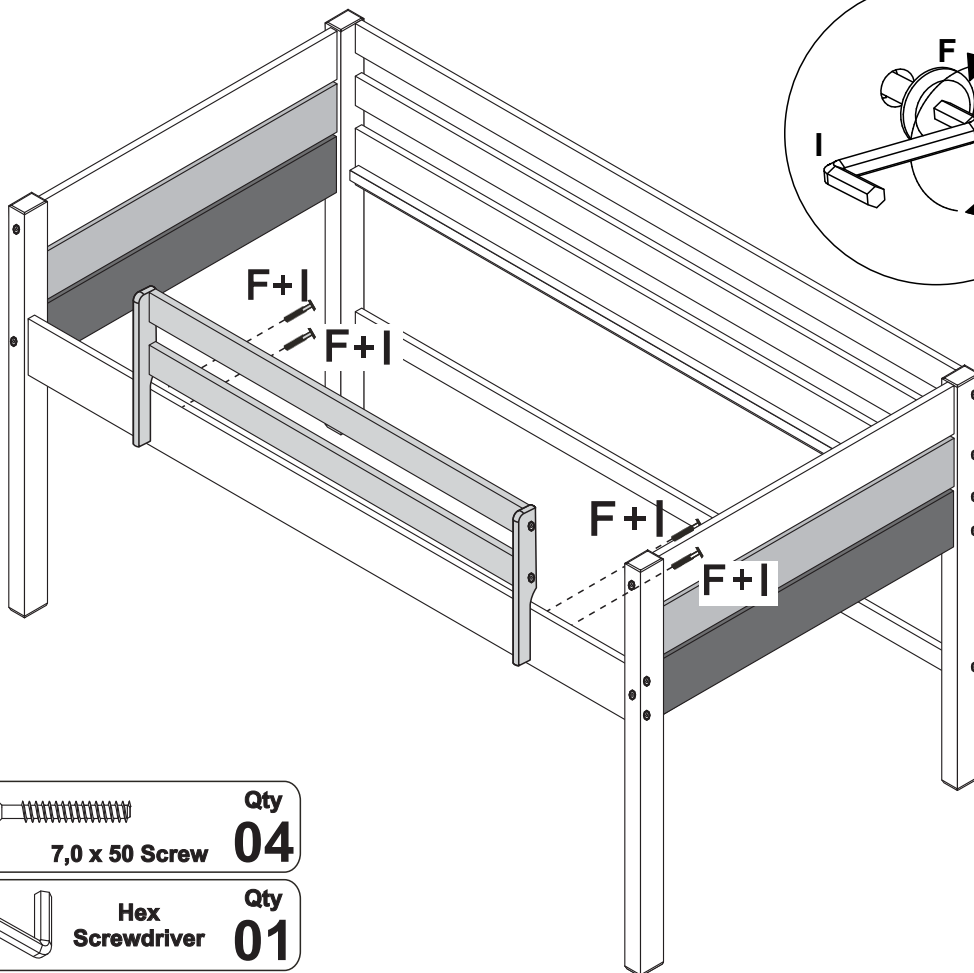


F	 Ø17 7,0 x 50 Screw	Qty 04
I	 Hex Screwdriver	Qty 01


06 LADDER

! PRE HOLES!

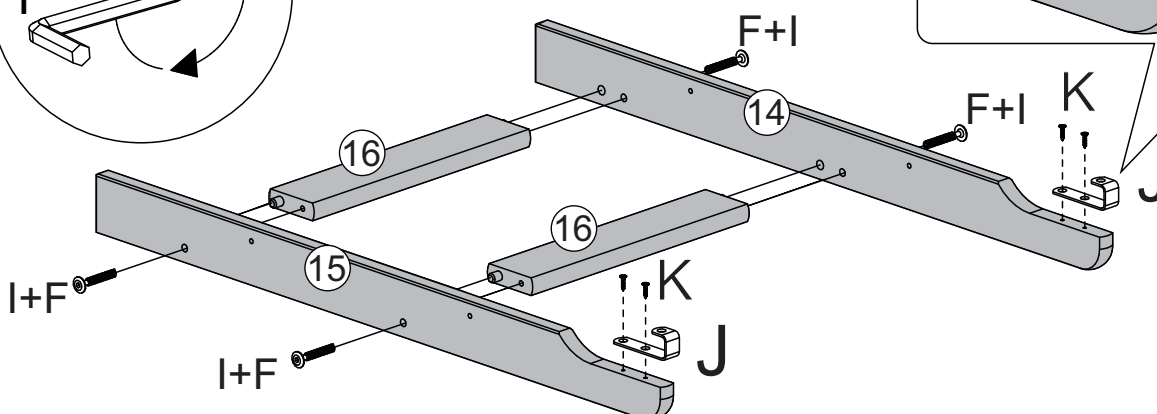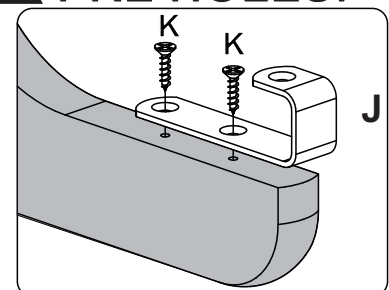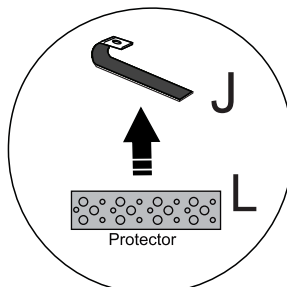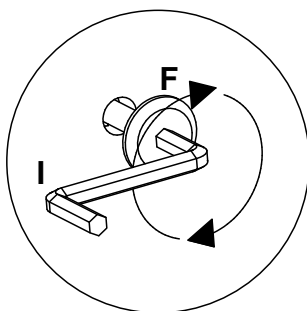


F	 Ø17 7,0 x 50 Screw	Qty 04
---	--	------------------



I	 Hex Screwdriver	Qty 01
---	---	------------------

J	 Hook Ladder	Qty 02
---	---	------------------

K	 4,0 x 20 Screw	Qty 04
---	---	------------------


L	 Protector	Qty 02
---	--	------------------

07

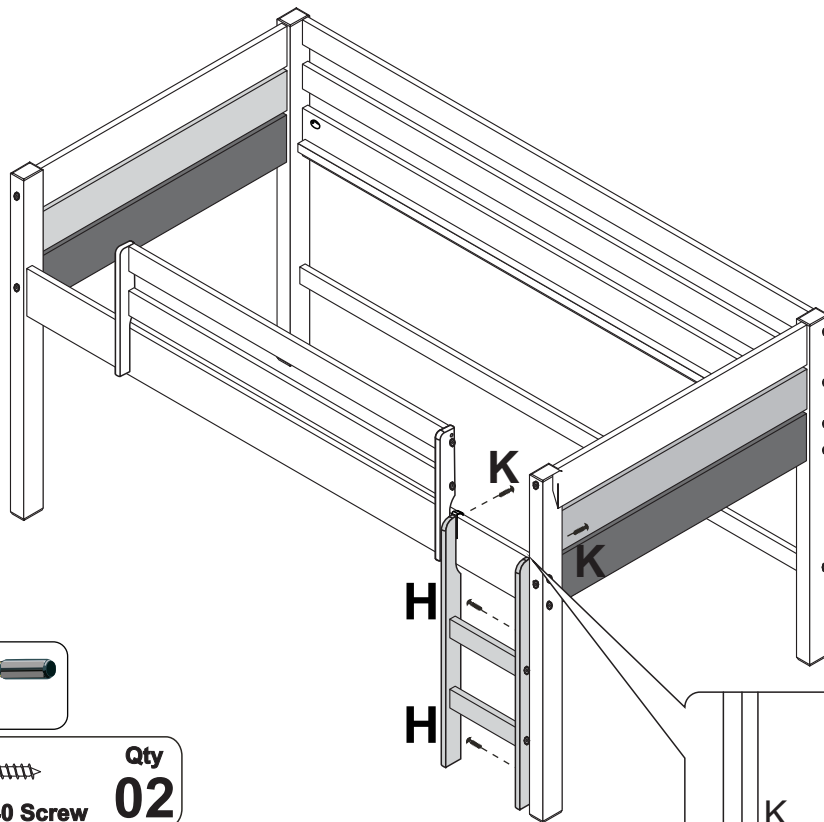


H  **4,0 x 40 Screw** Qty **02**



K  **4,0 x 20 Screw** Qty **02**

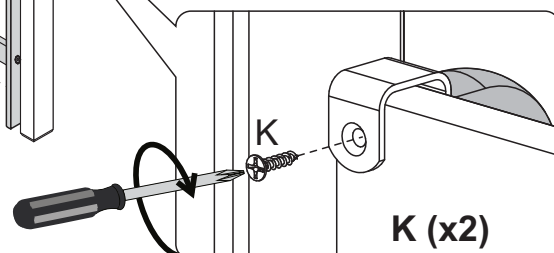


08

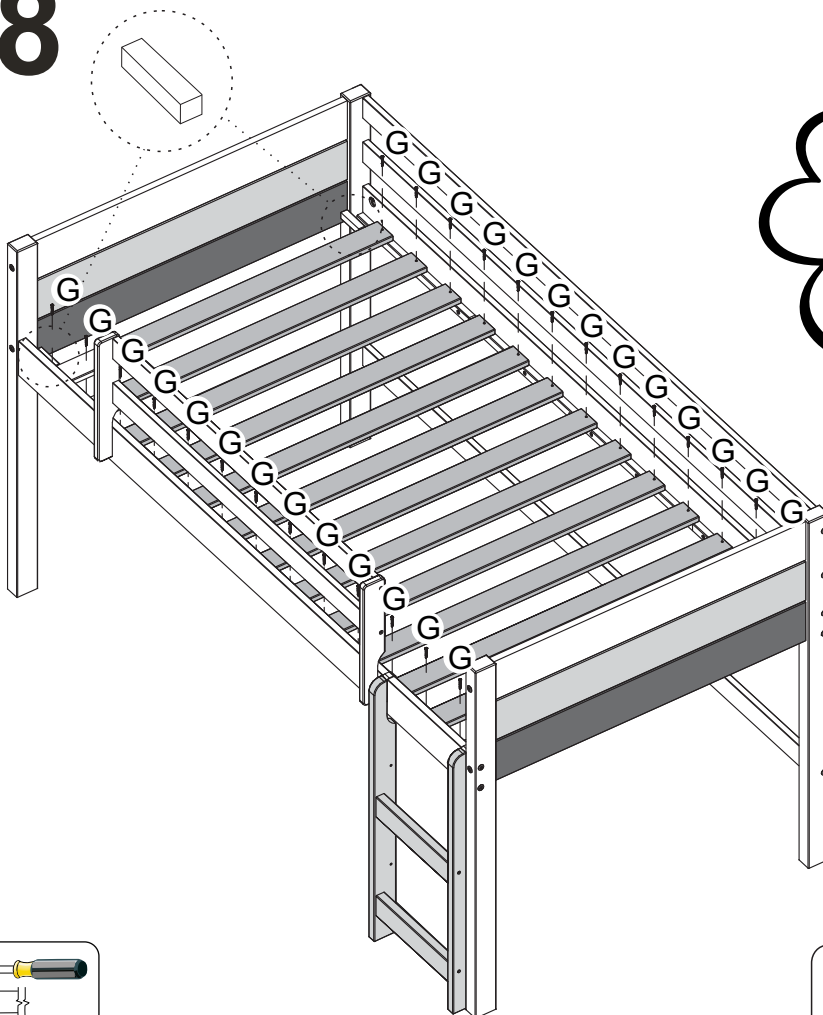

There must be at least 5" inches from top surface of mattress to top edge or guardrails.


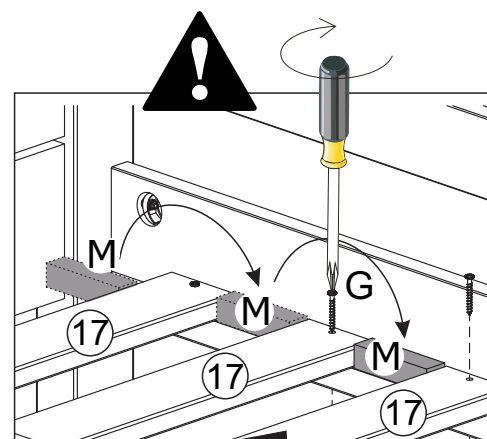


G  **4,0 x 30 Screw** Qty **26**

M  **Wooden spacer** Qty **02**


Before fixed the first slat use the hardware letter M to help define the space between each next slats. Use 1 M on the left side rail and 1 M on the right side rail.

09

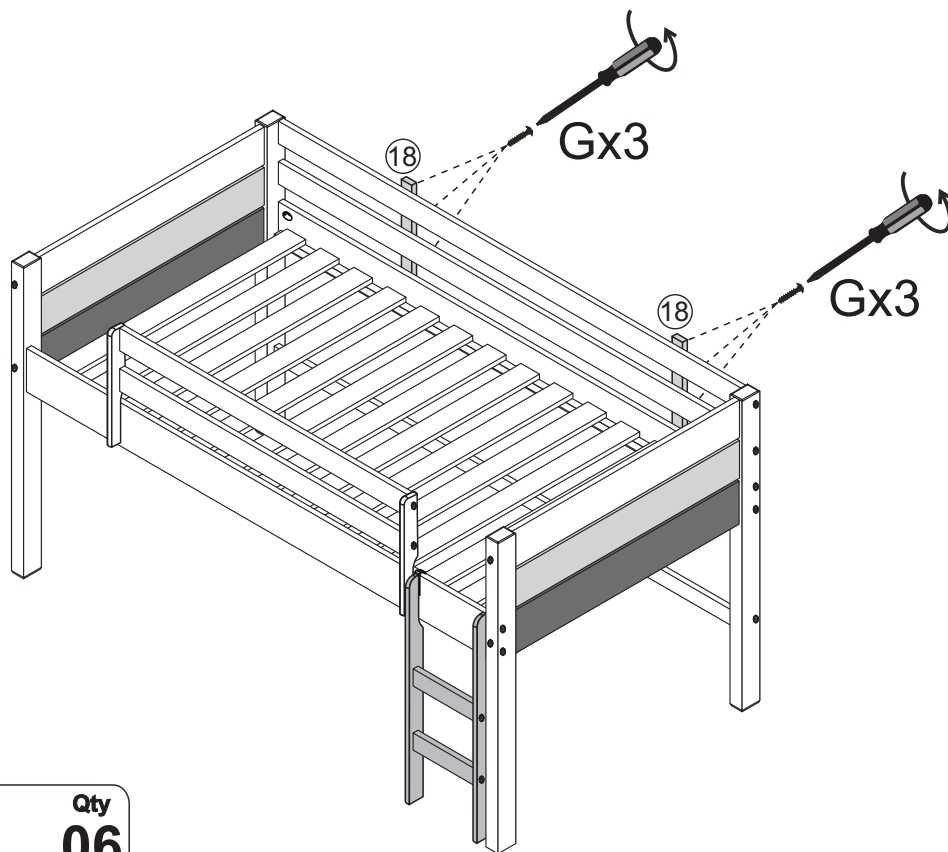


G  **Qty 06**
4,0 x 30 Screw

10 SLIDE

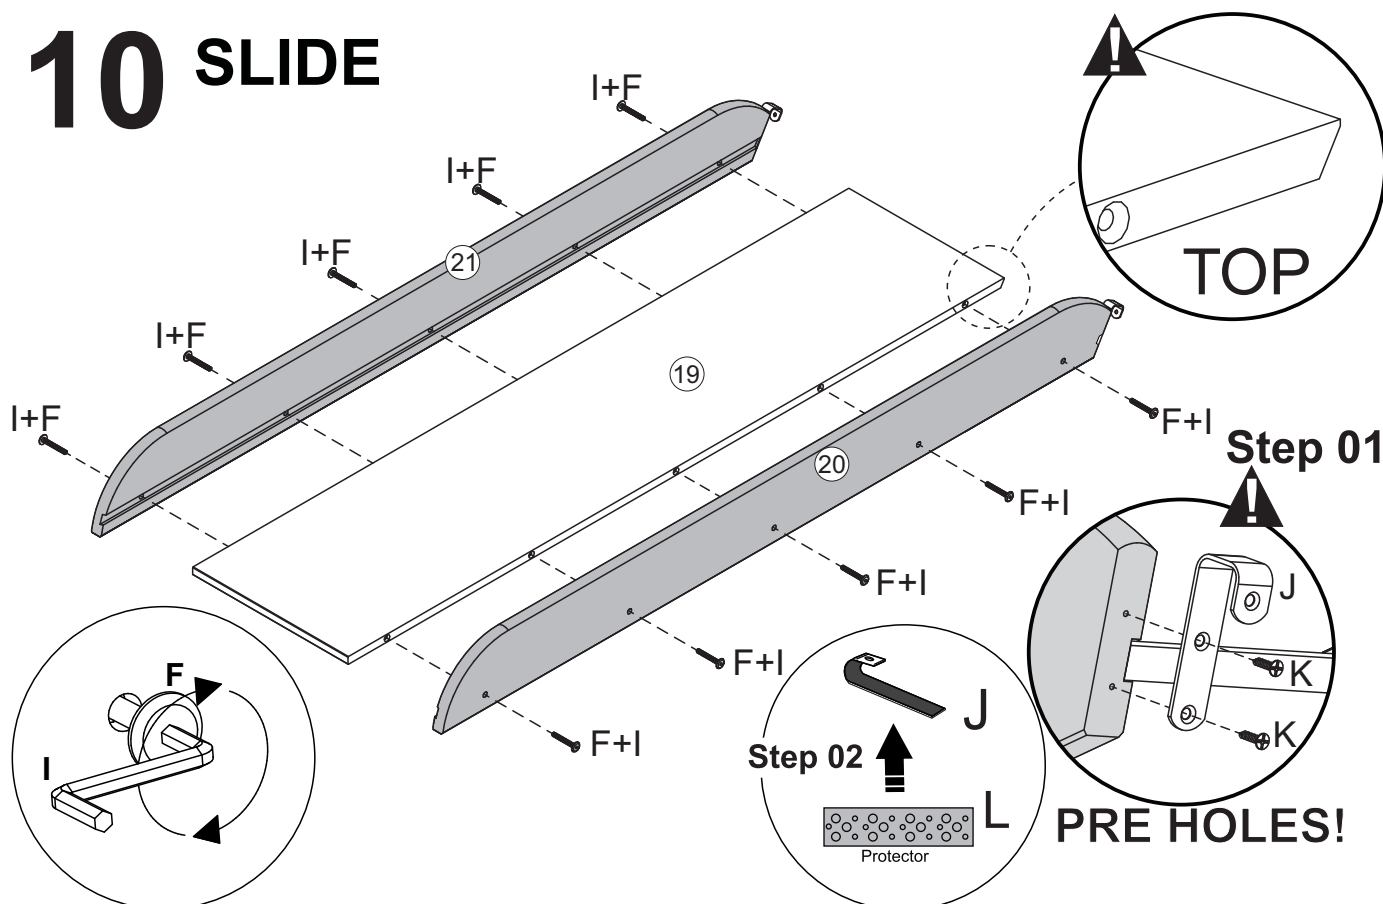

F  **Qty 10**
7,0 x 50 Screw

I  **Qty 01**
Hex Screwdriver



J  **Qty 02**
Hook Ladder



K  **Qty 04**
4,0 x 20 Screw

L  **Qty 02**
Protector


11

K**4,0 x 20 Screw**


Qty

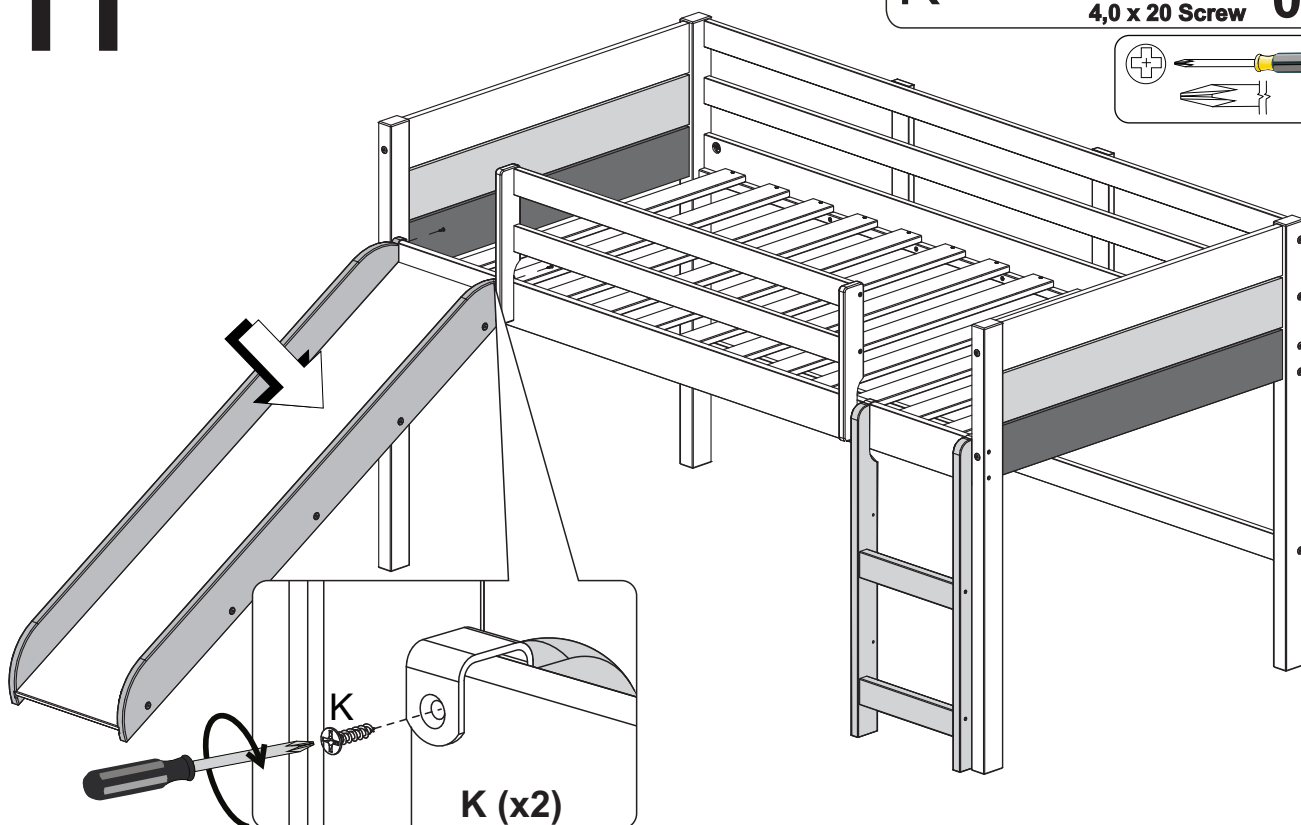02

OPTIONAL COMPONENTS

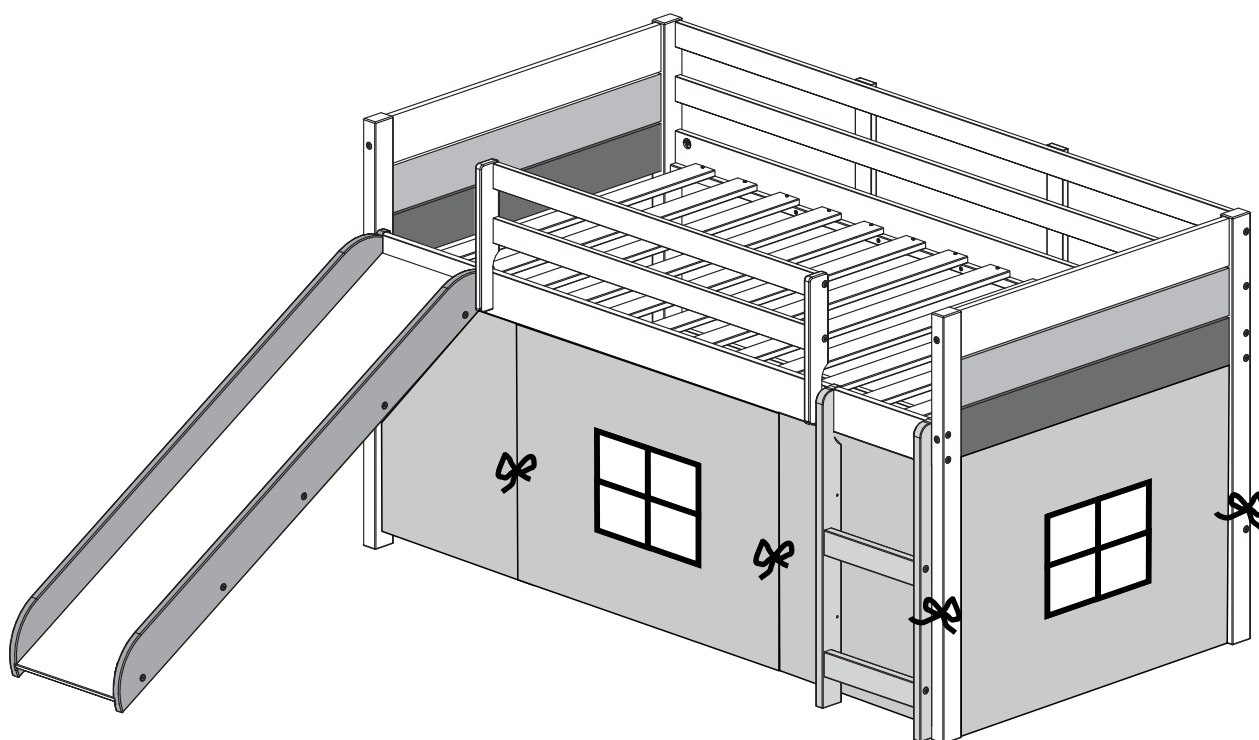

OPTION THE BED WITH TENT FABRIC

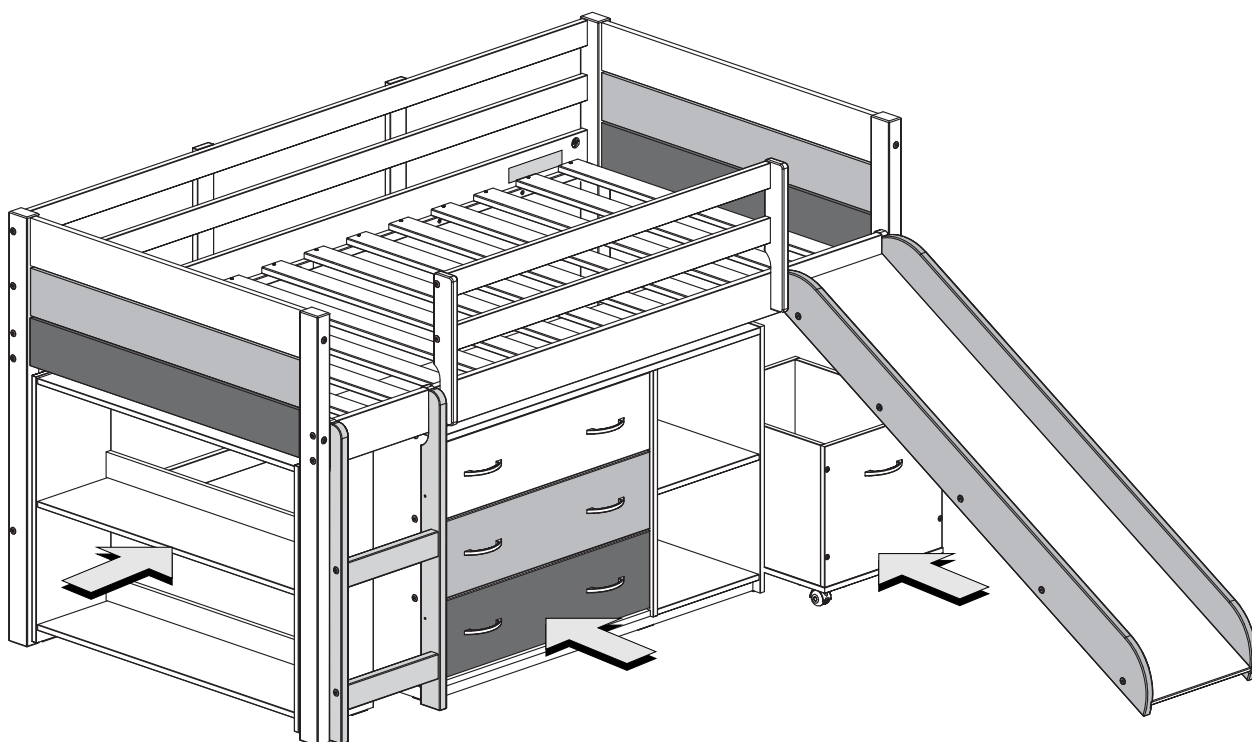

OPTION THE BED WITH CASES

