



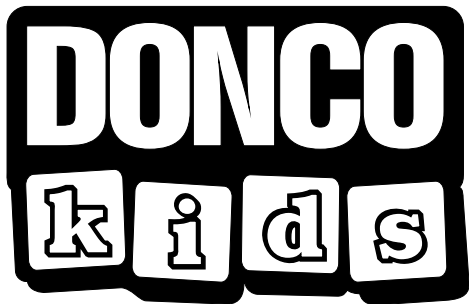

Fort Worth, Texas 76140

ASSEMBLY INSTRUCTIONS


1733F - Bookcase Day Bed Full

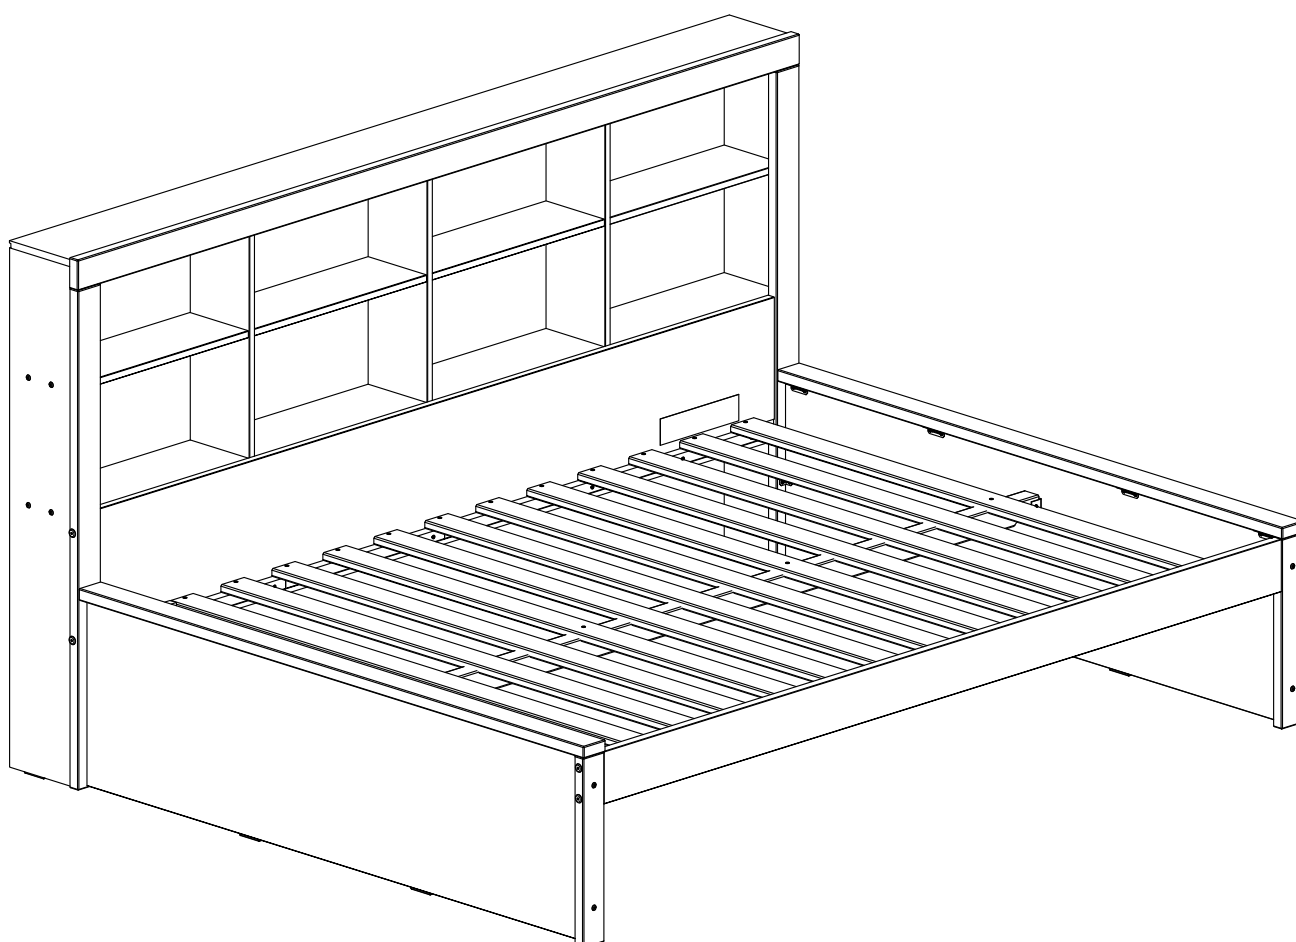


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.


"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

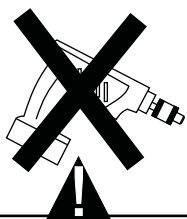


* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.

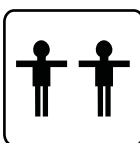


+

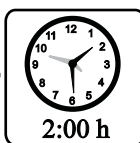

Tools Required



(Not included)





(Not included)

IMPORTANT:


PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Part list: 1733F - Bookcase Day Bed Full

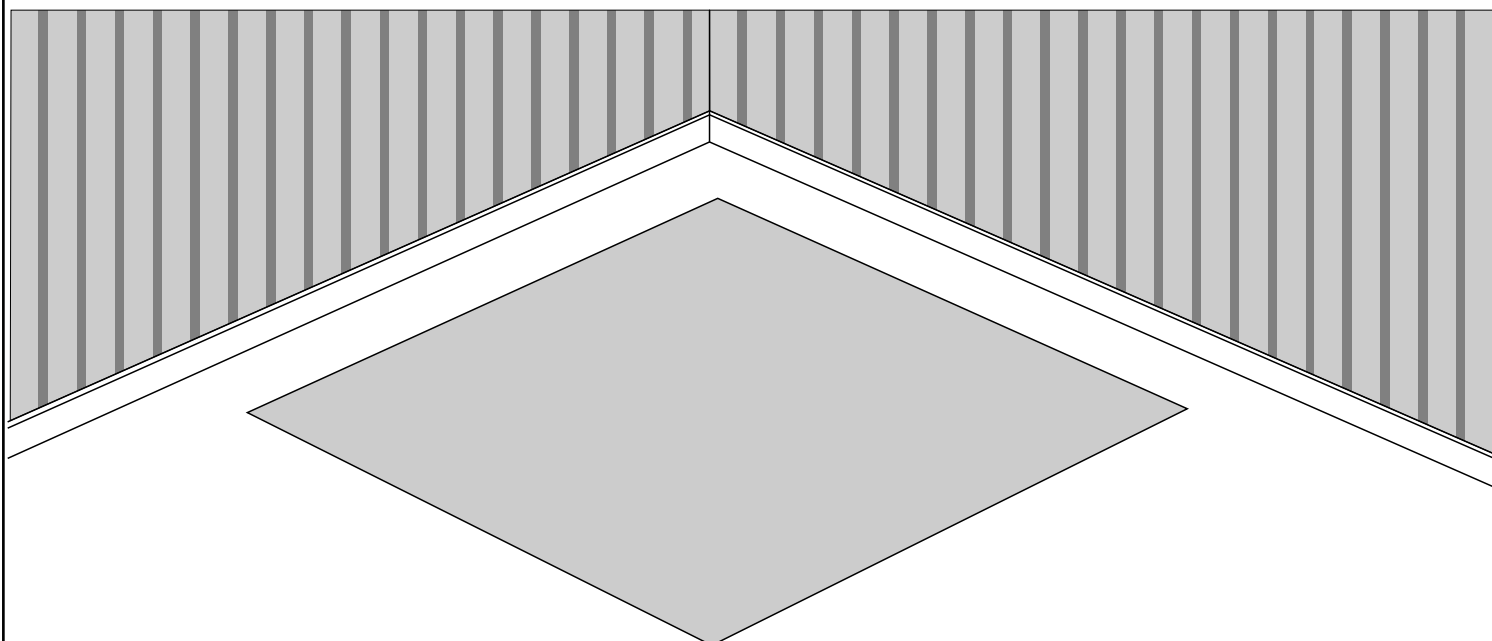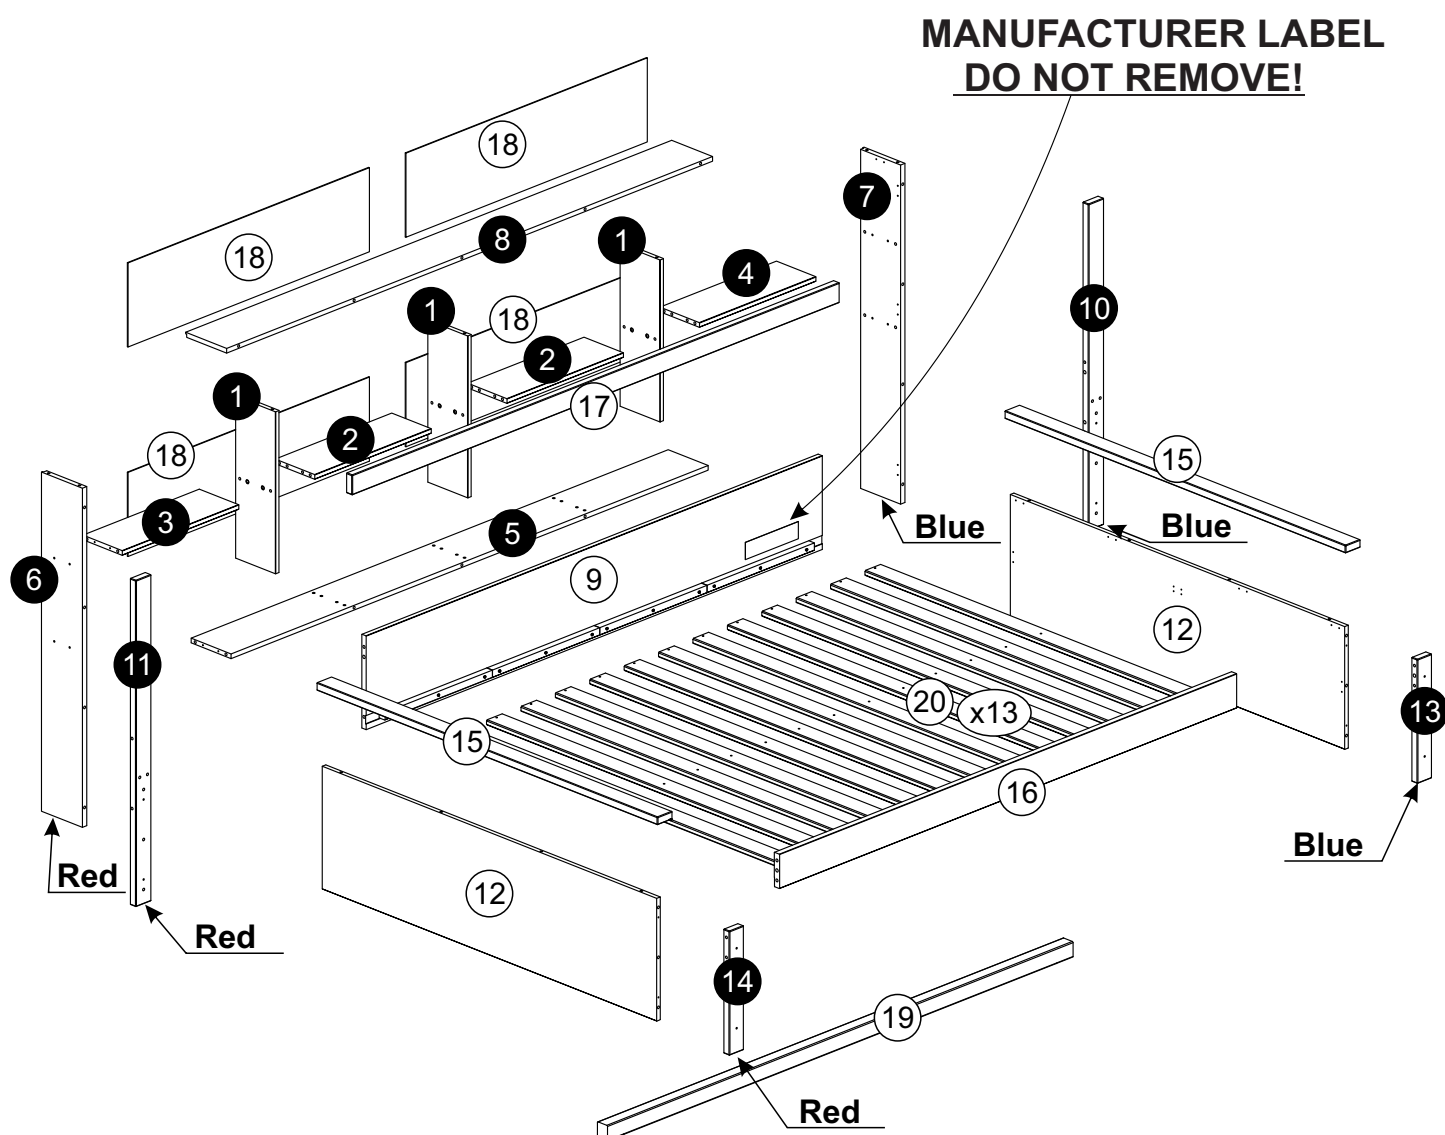


PLEASE USE A FLOOR PROTECT AS A RUG OR
A CARDBOARD TO ASSEMBLY THE BOOKCASE !!!


Identifying the Hardware-Identify the hardware using the illustrations below.


A  **Qty 06**
1 $\frac{9}{16}$ " Wooden Dowel (10 x 40mm)


B  **Qty 64**
1 $\frac{3}{16}$ " Wooden Dowel (8 x 30mm)


C  **Qty 06**
2" Wooden Dowel (8 x 50mm)

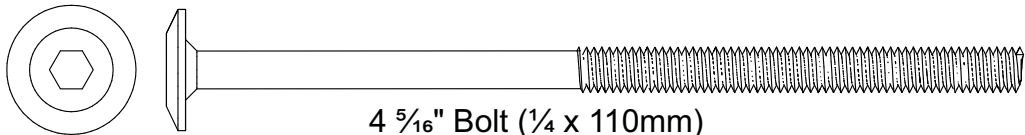
D  **Qty 08**
4 $\frac{5}{16}$ " Bolt ($\frac{1}{4}$ x 110mm)

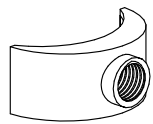
E  **Qty 08**
 $\frac{1}{4}$ " Half Moon


F  **Qty 06**
Cam Bolts

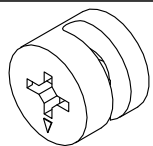
G  **Qty 12**
Cam Lock


H  **Qty 22**
2 $\frac{3}{8}$ " Bolt (5 x 60mm)


I  **Qty 30**
1 $\frac{3}{16}$ " Screw (4 x 30mm)


J  **Qty 136**
 $\frac{15}{32}$ " Screw (3.5 x 12mm)

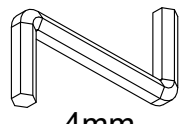
K  **Qty 01**
Large Allen wrench
4mm


L  **Qty 01**
Small Allen wrench
3mm


M  **Qty 35**
Nail (Anelado)

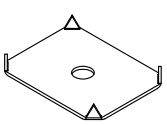N  **Qty 11**
Metal Plate

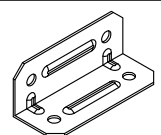O  **Qty 31**
L-Bracket
46x18mm

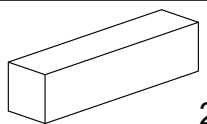P  **Qty 02**
Wooden spacer
2 $\frac{15}{16}$ " (75 mm)


Q  **Qty 06**
Slider Legs

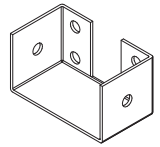R  **Qty 02**

*Actual size of screws and bolts, for measurements checking.

PLEASE BE ATTENTIVE BECAUSE THE BOOKCASE
SHELVES ARE IN 3 ASSEMBLY STEPS !!!

**SEE THE PART # ON
THE END OF PIECES**

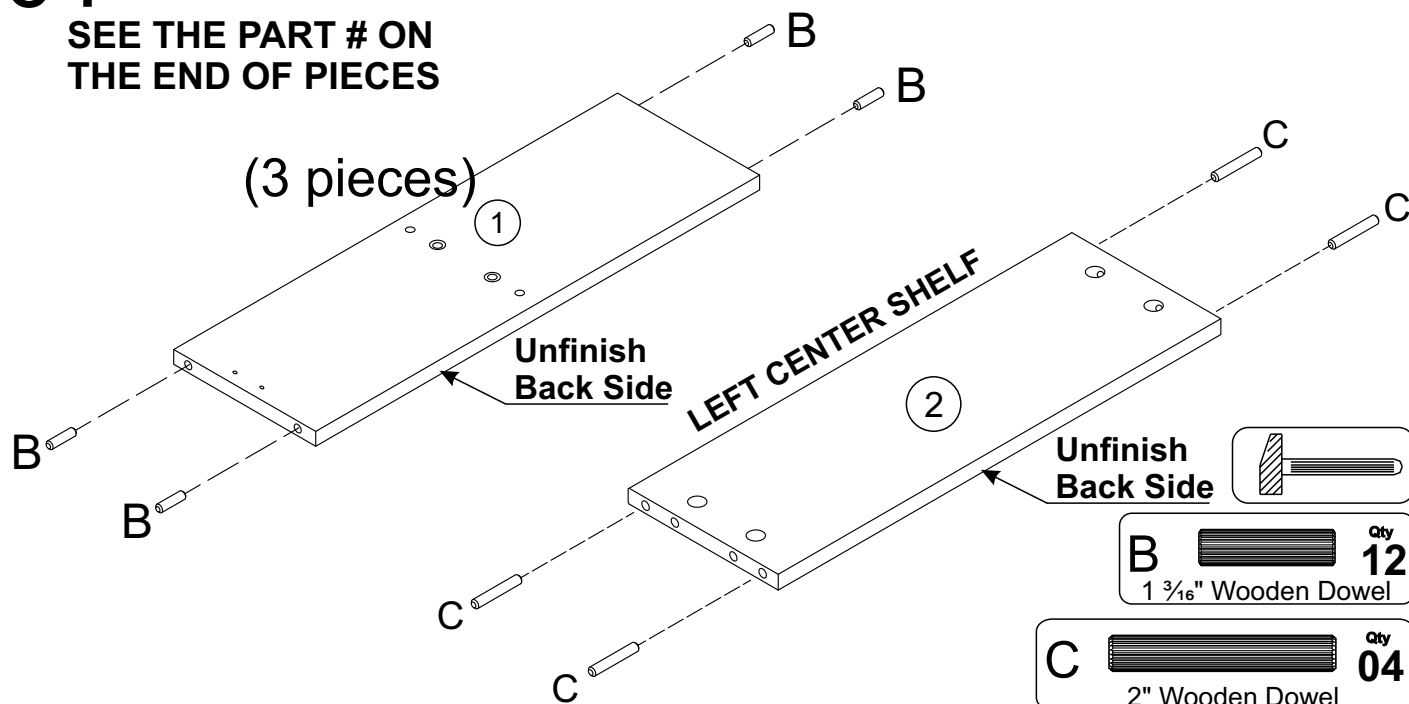


02


Bottom Side

FIRST SET ASSEMBLED

START THE ASSEMBLY ON THE FLOOR TILL STEP #28

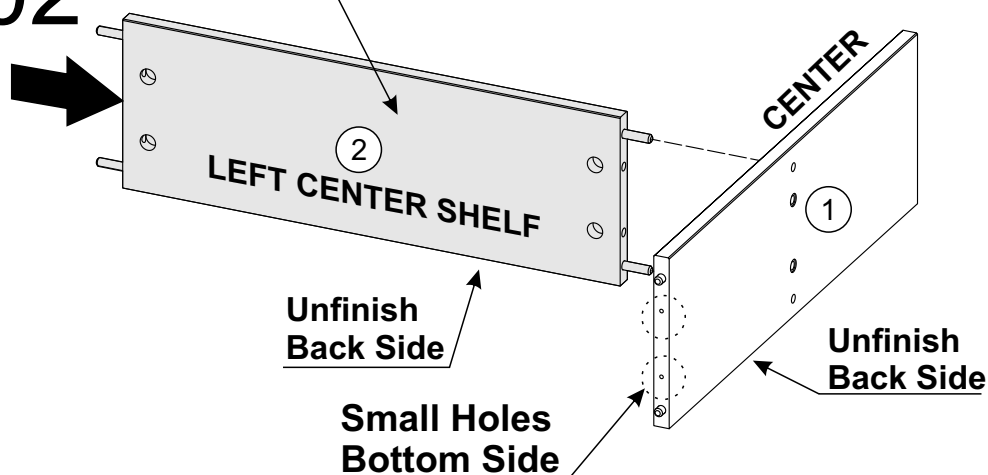


03

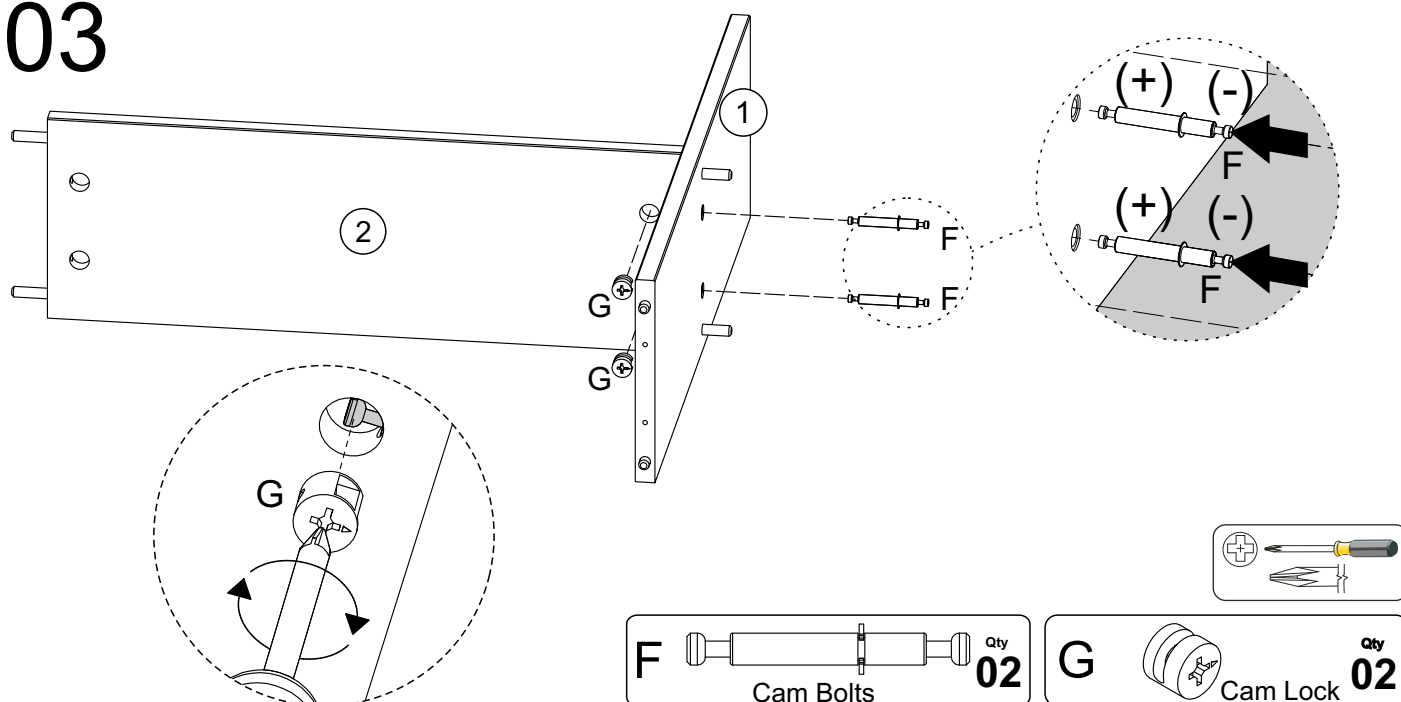


04



ATTENTIVE TO KEEP
THE FACE HOLES UPSIDE,
EXACTLY AS THE
DRAWING BELOW.

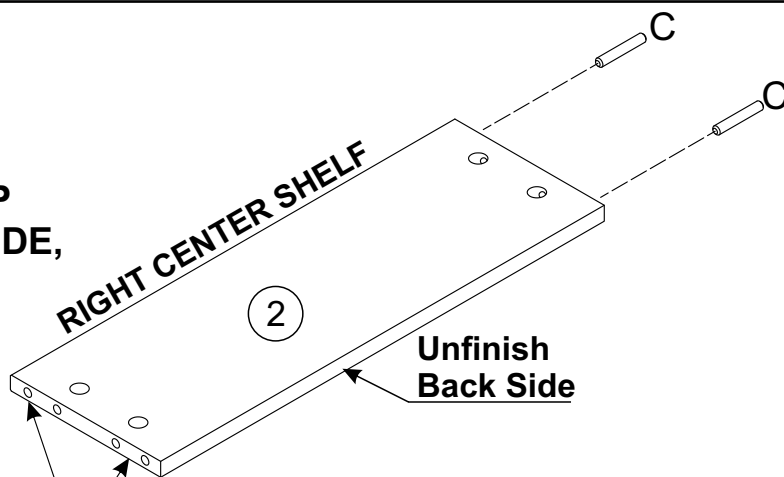


NOT ADD
WOODEN DOWEL IN
THIS SIDE



C  Qty **02**
2" Wooden Dowel


05

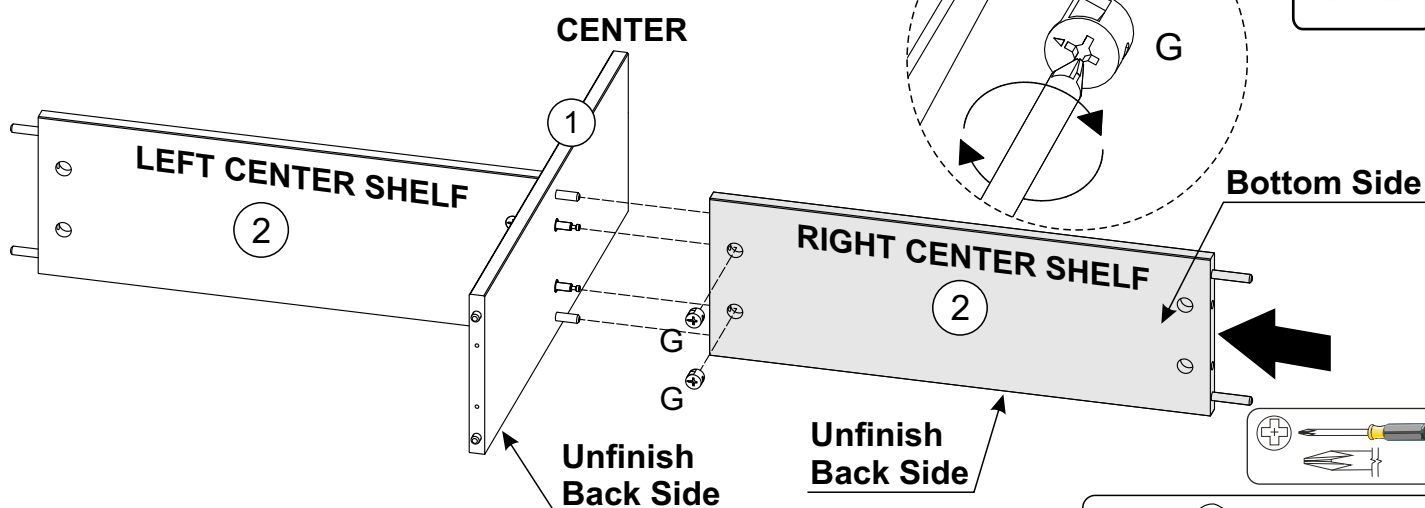

G  Qty **02**
Cam Lock

06

SECOND SET ASSEMBLED





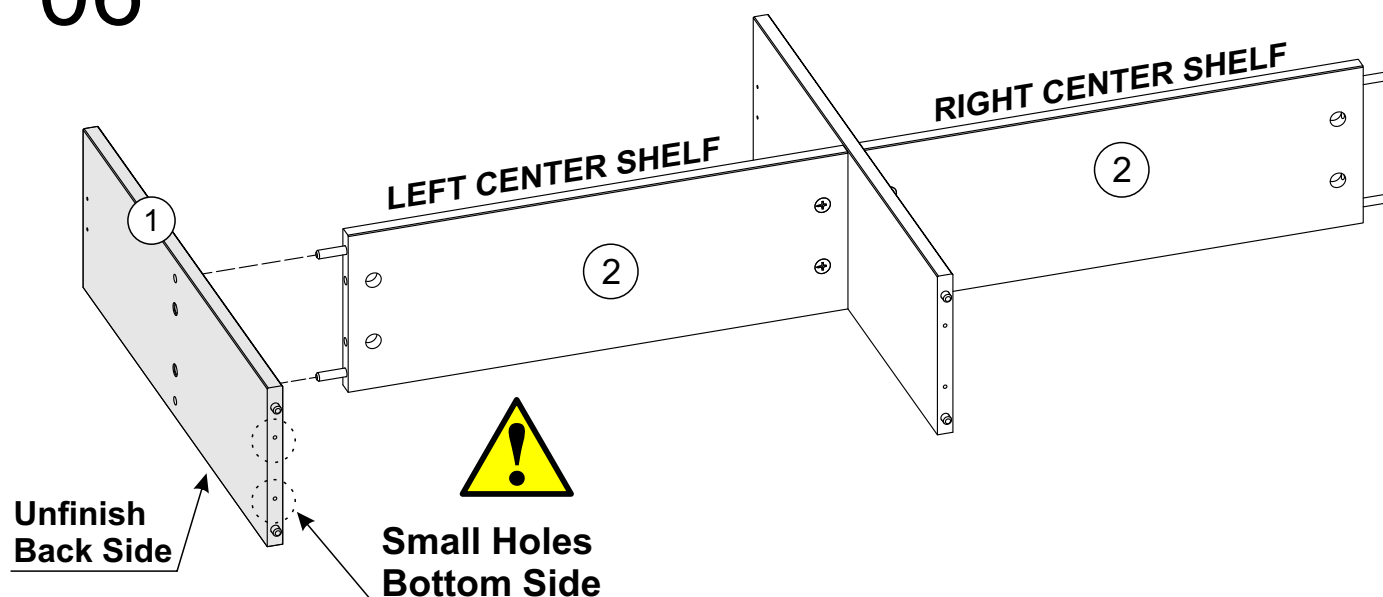


07



LEFT CENTER SHELF

RIGHT CENTER SHELF


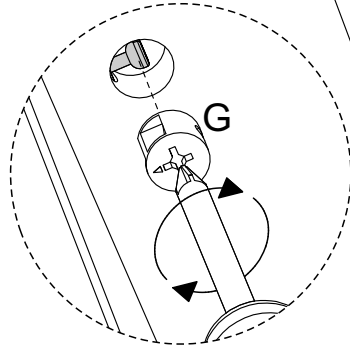
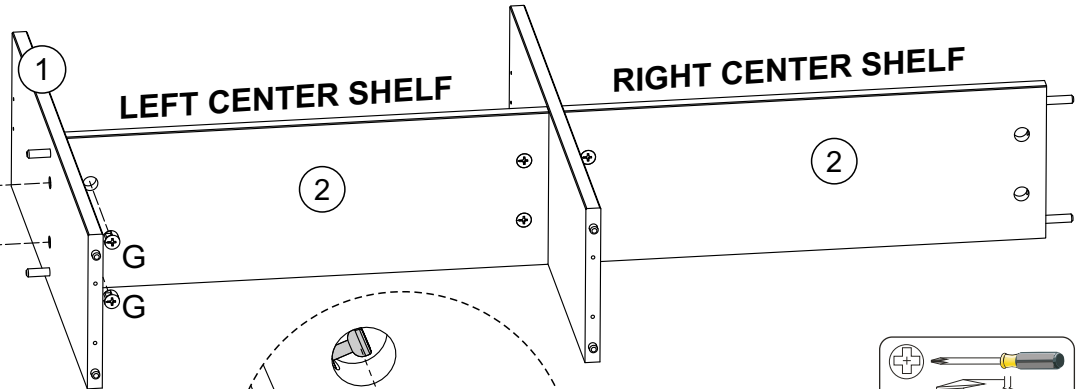
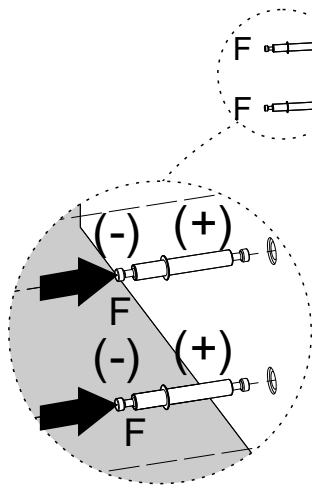


08


NOT ADD
WOODEN DOWEL IN
THIS SIDE






ATTENTIVE TO KEEP
THE FACE HOLES UPSIDE,
EXACTLY AS THE
DRAWING BELLOW.

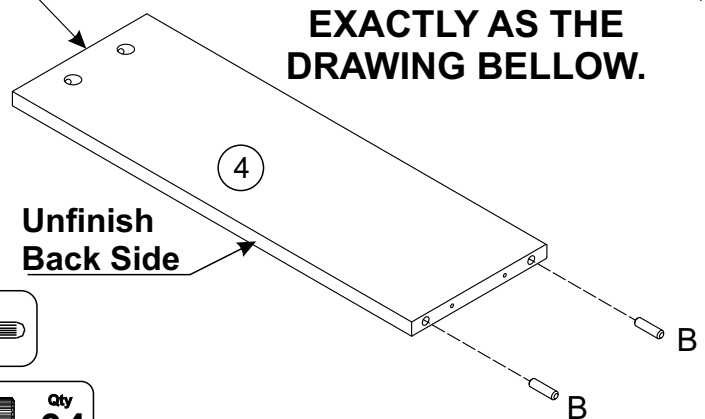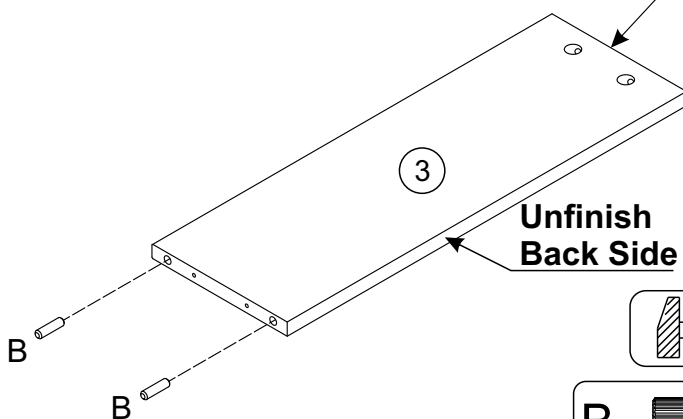

09

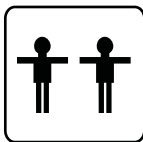

Bottom Side

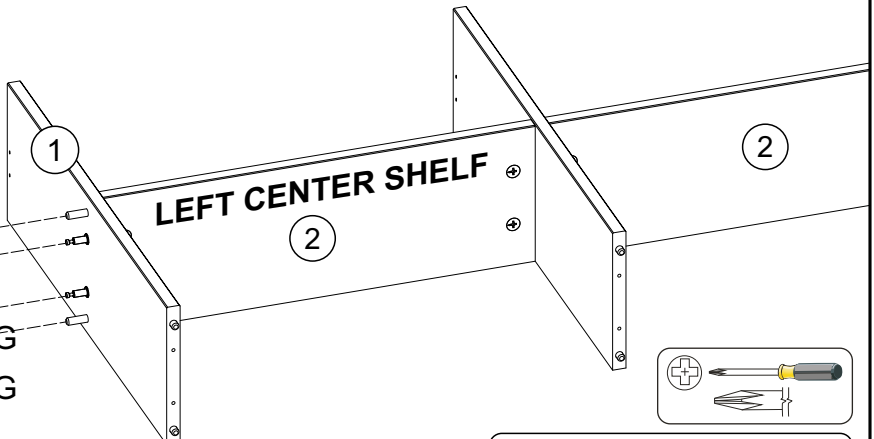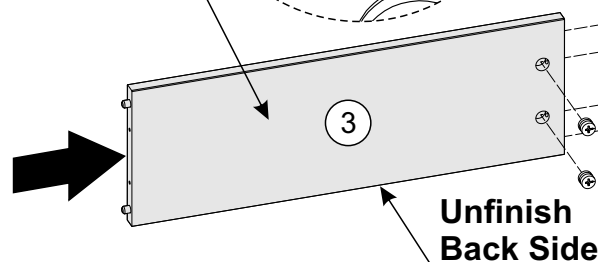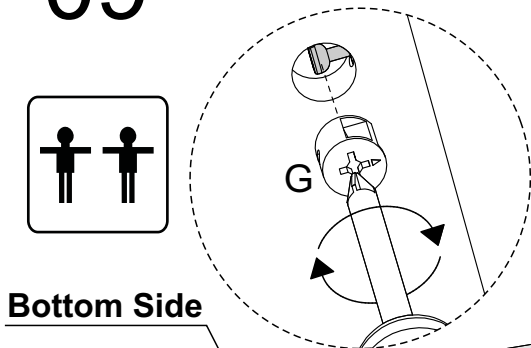

10



Unfinish Back Side

11



Cam Lock

Qty
02



F

Cam Bolts

Qty
02



12

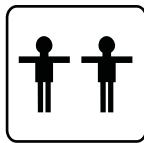


G

Cam Lock

Qty
02

13


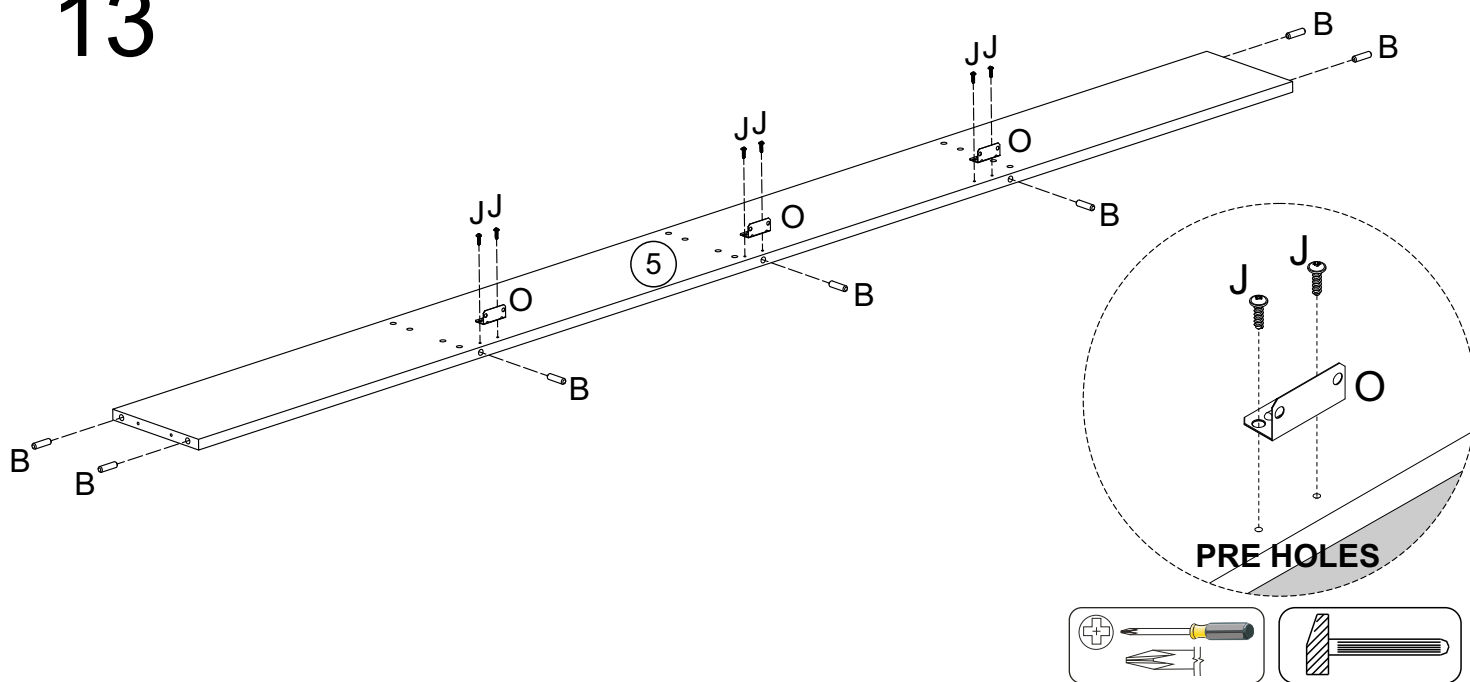


B  **Qty 07**
1 3/16" Wooden Dowel

J  **Qty 06**
15/32" Screw


O  **Qty 03**
L-Bracket

14

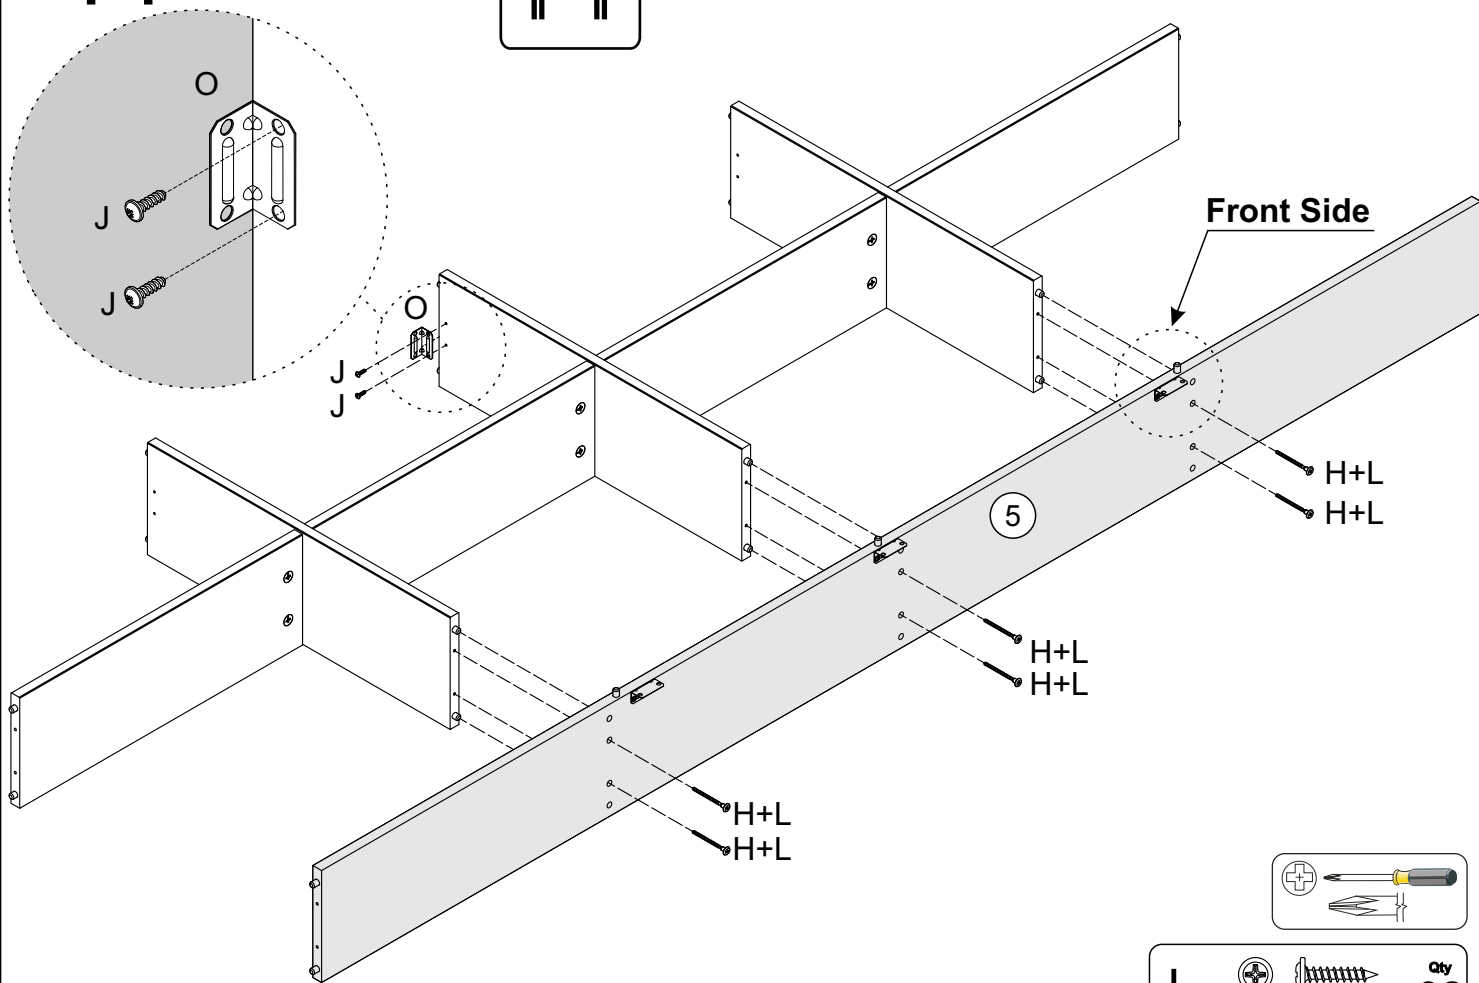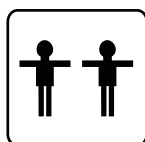



H  **Qty 06**
2 3/8" Bolt

L  **Qty 01**
3mm Small Allen wrench


J  **Qty 02**
15/32" Screw

O  **Qty 01**
L-Bracket


15

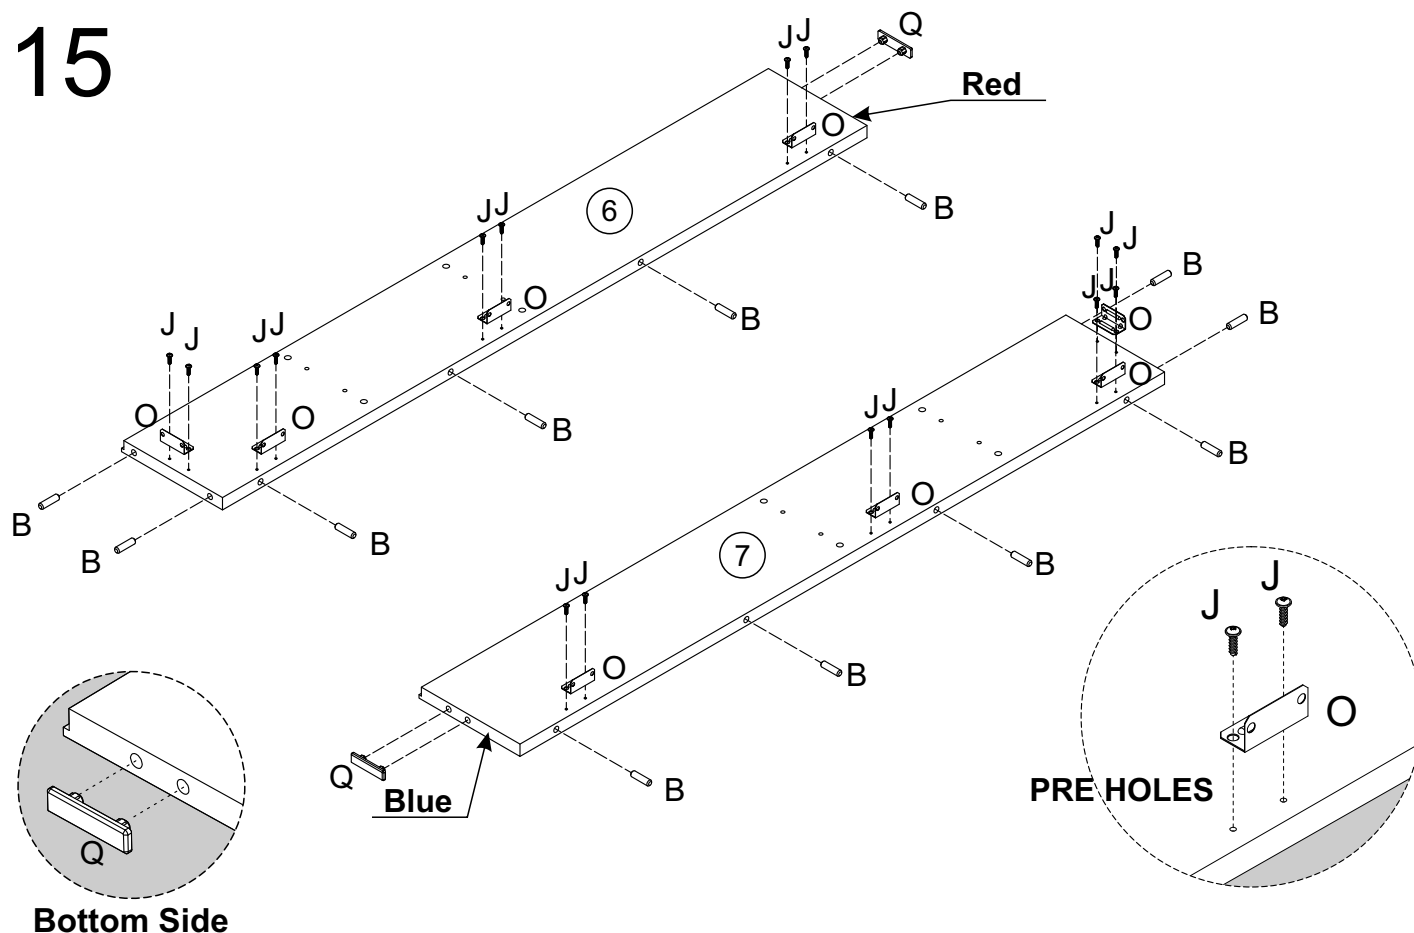



B  **Qty 12**
1 3/16" Wooden Dowel

J  **Qty 16**
15/32" Screw


O  **L-Bracket Qty 08**

Q  **Qty 02**
Slider Legs



16

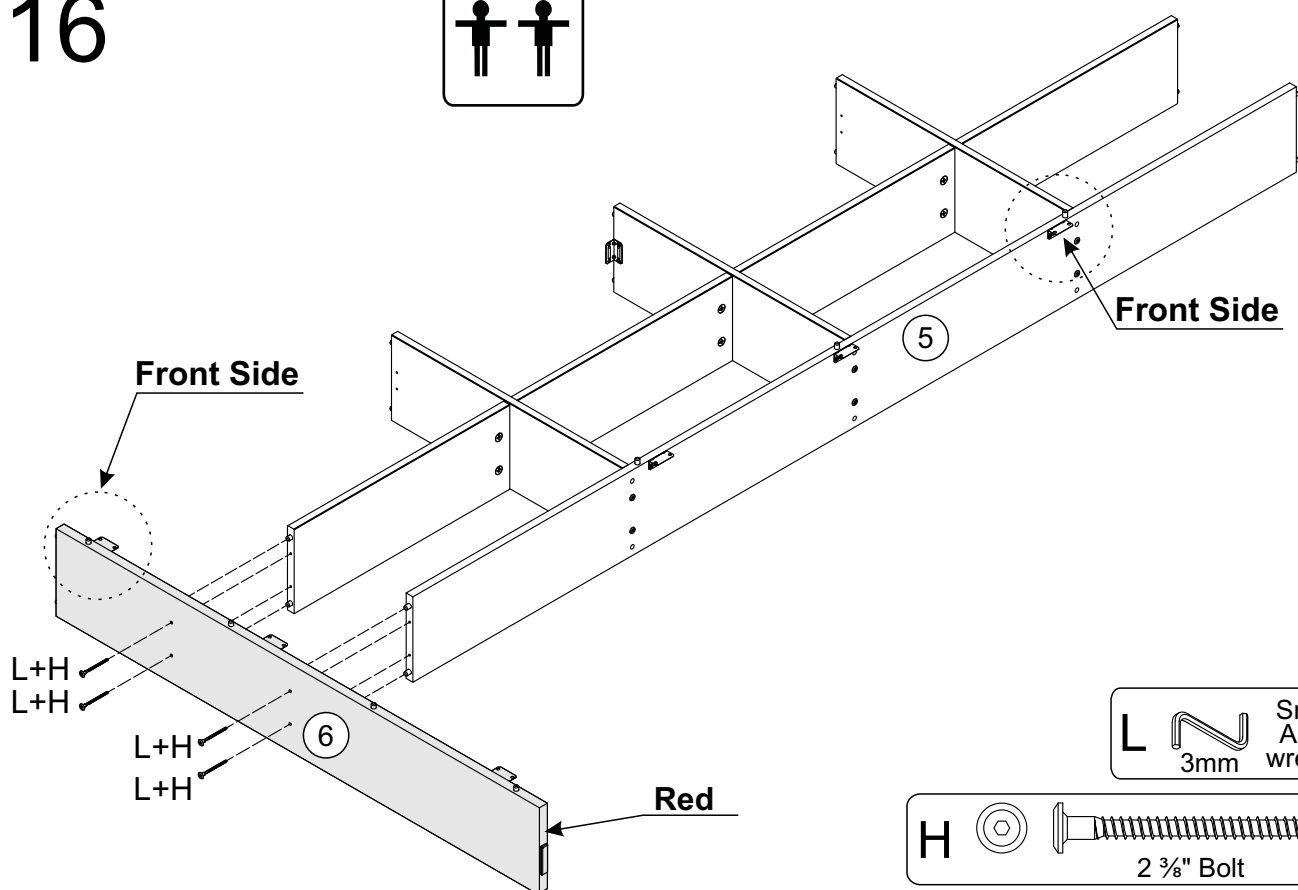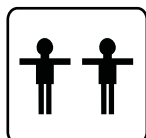





L  **Small Qty 01**
3mm Allen wrench

H  **Qty 04**
2 3/8" Bolt

17

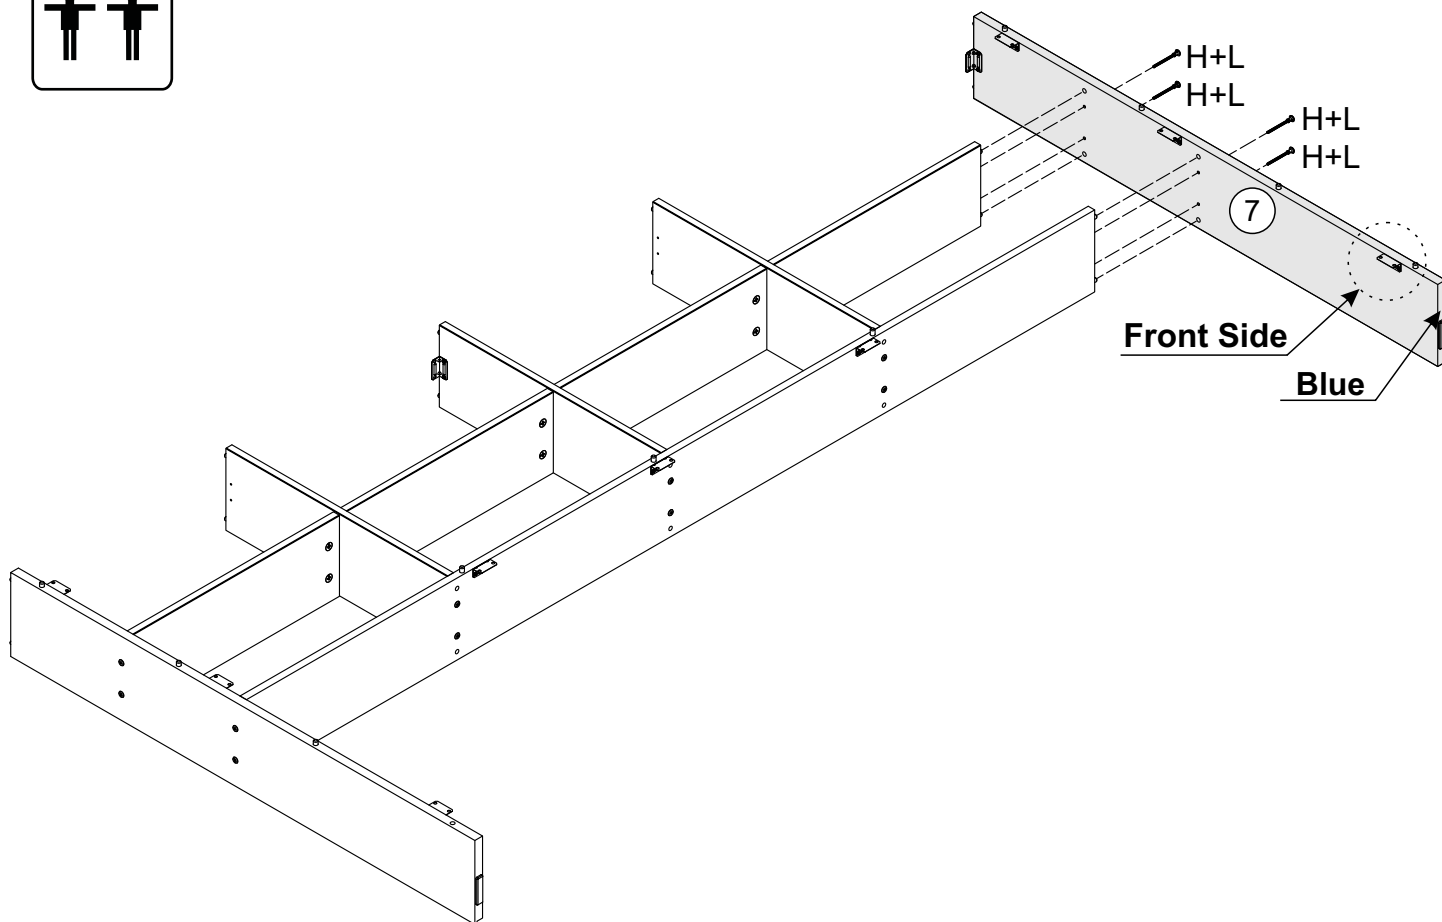

18

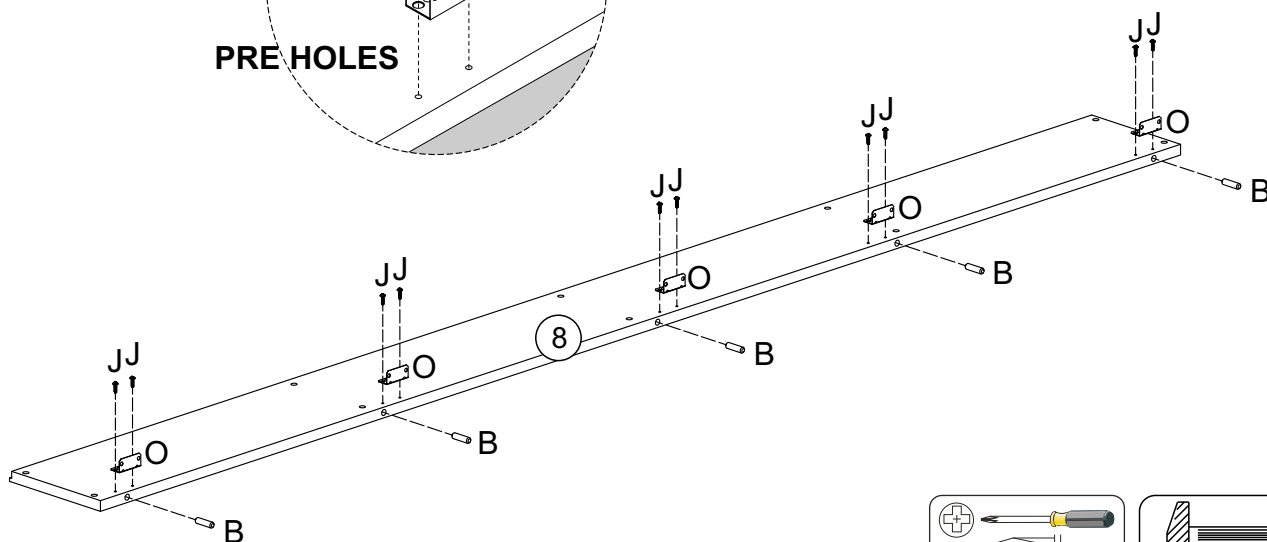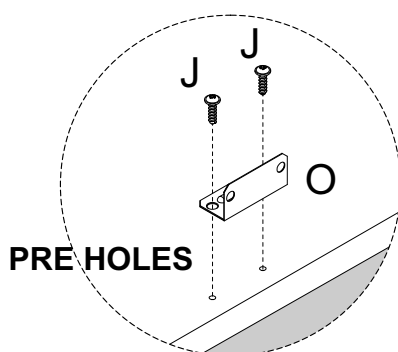


19



**KEEP THE BOOKCASE
ON THE FLOOR
TILL STEP #28**





Front Side

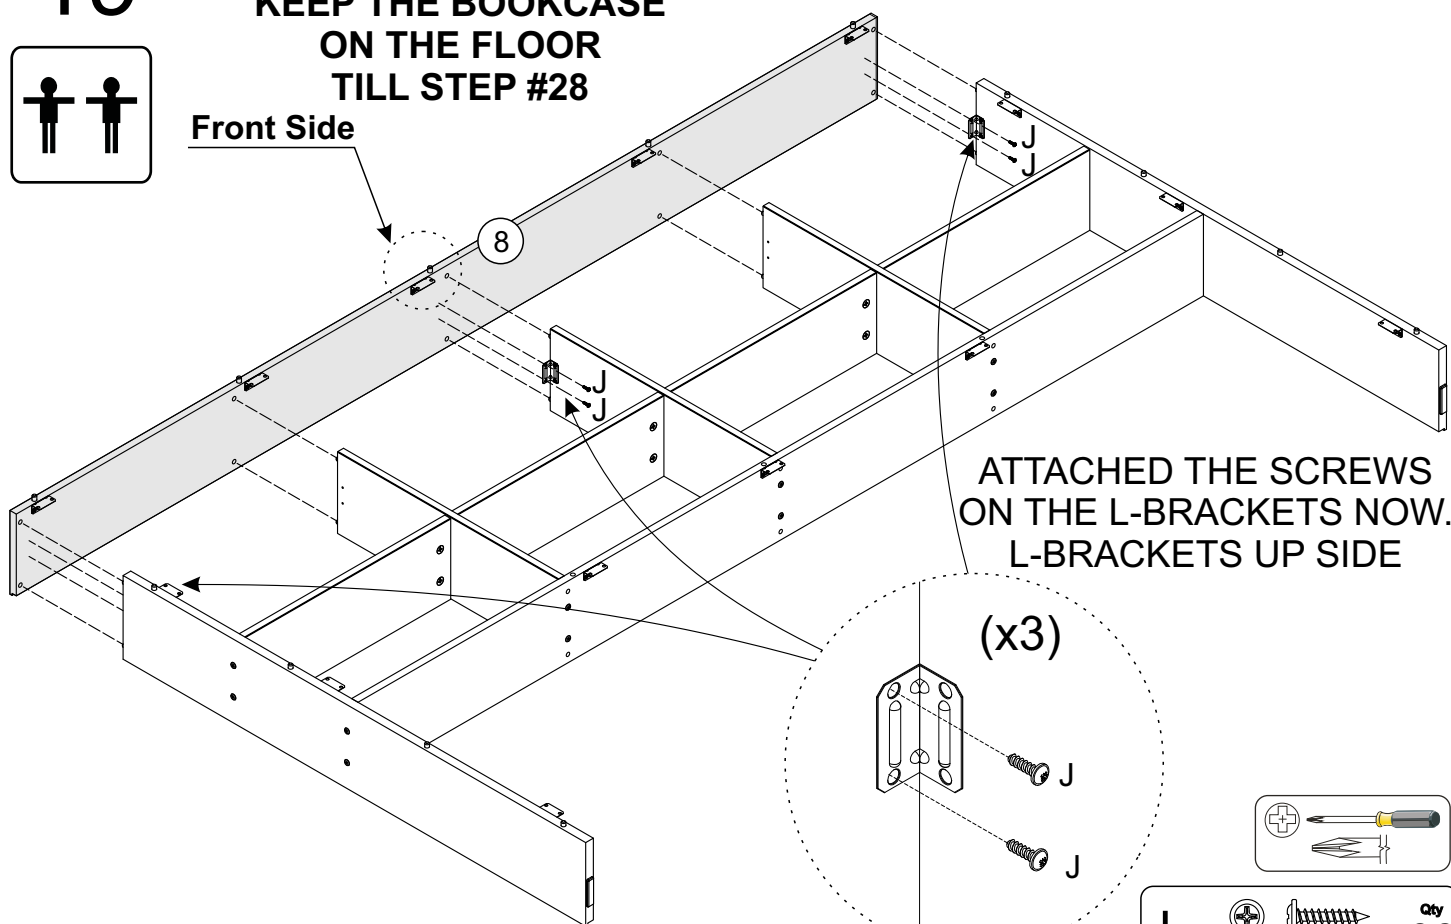



**ATTACHED THE SCREWS
ON THE L-BRACKETS NOW.
L-BRACKETS UP SIDE**

(x3)

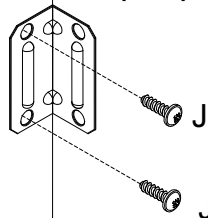

J  **15/32" Screw** **Qty 06**




20

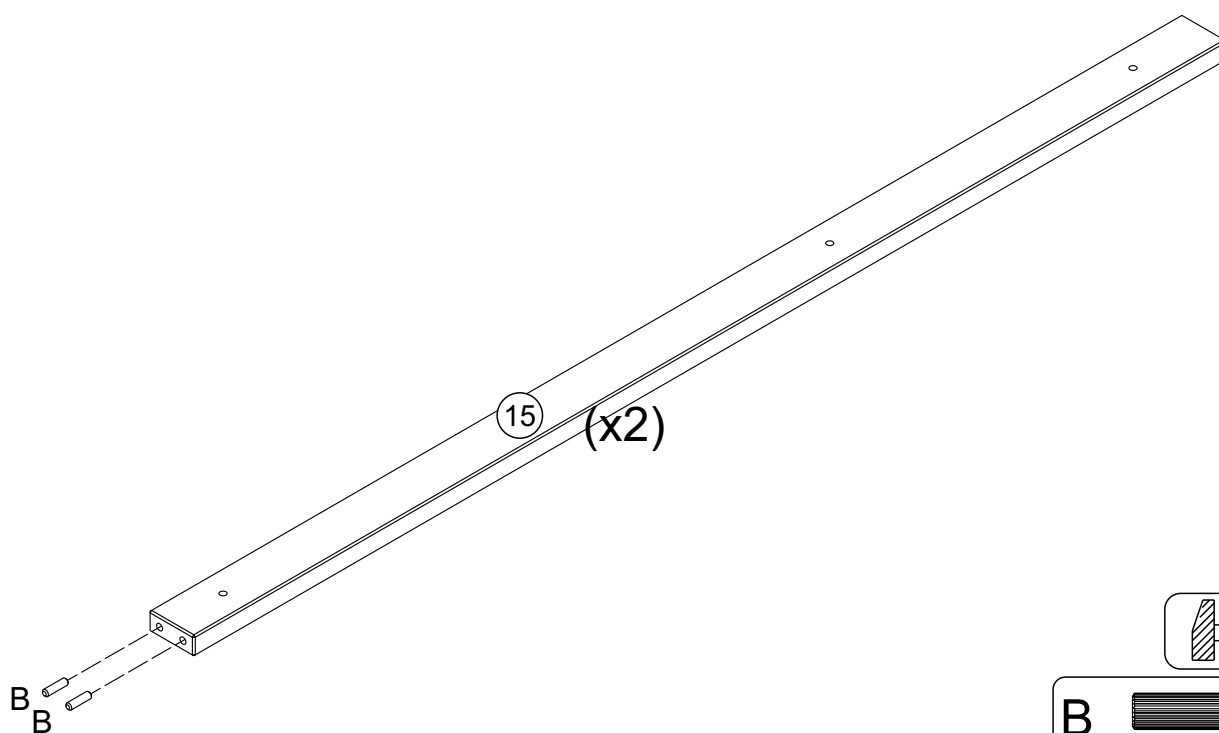

B  **1 3/16" Wooden Dowel** **Qty 04**



**ATTENTIVE TO ATTACHED
THE L-BRACKET
ON THIS STEP.**

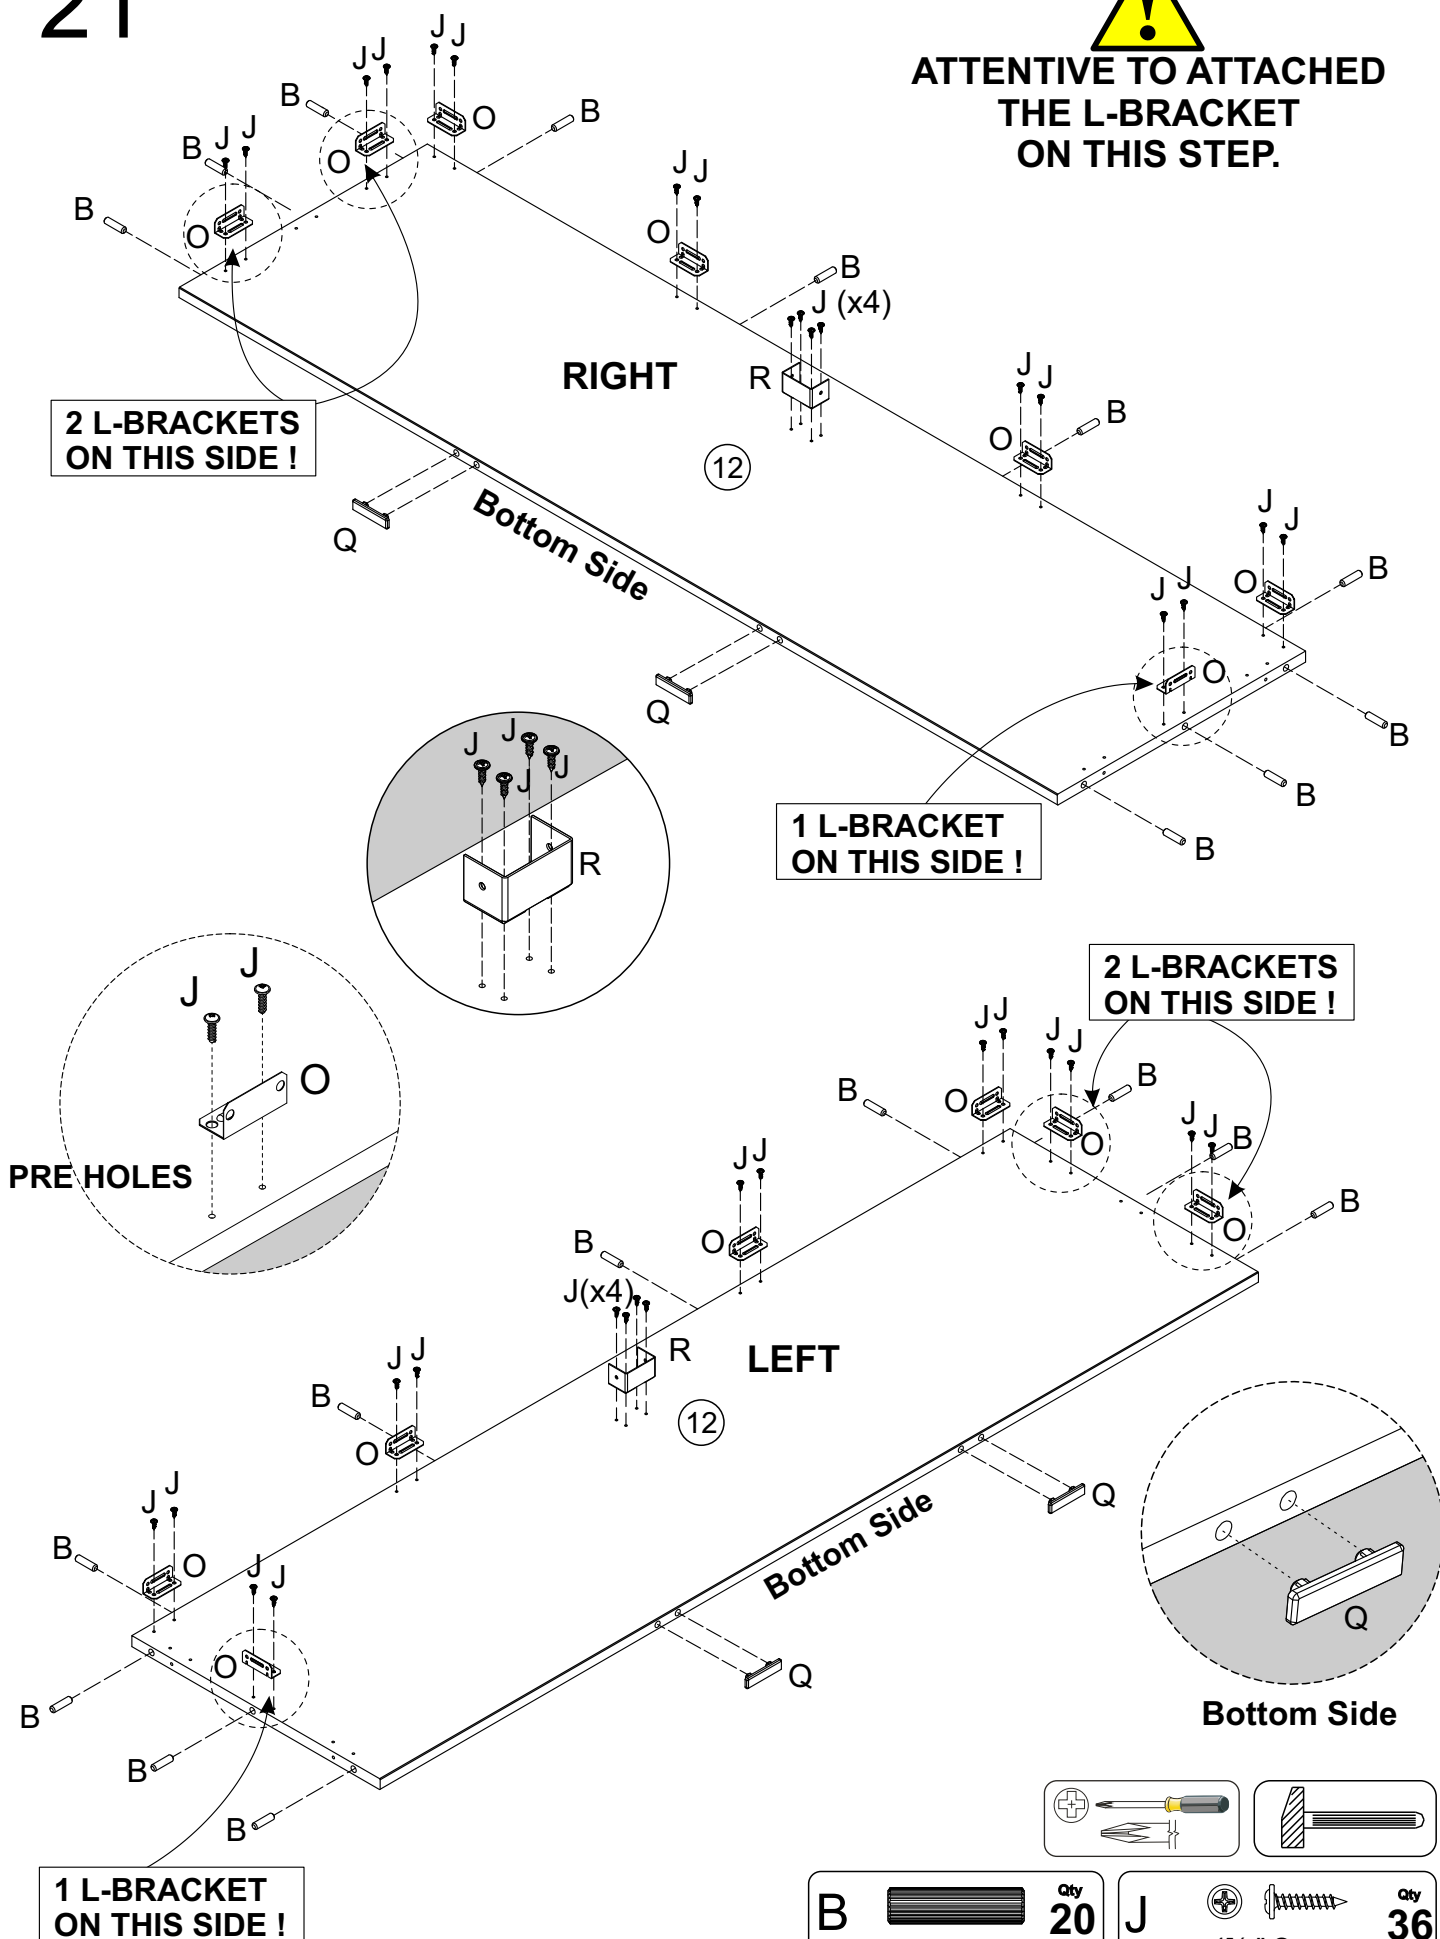

B  Qty **20**
1 3/16" Wooden Dowel

J  Qty **36**
15/32" Screw

O  L-Bracket Qty **14**





Q  Qty **04**
Slider Legs


R  Qty **02**

22




PLEASE NOTE THAT
IS 1 LEG EACH PANEL ONLY
BECAUSE THE PANELS
WILL BE 1 RIGHT AND
1 LEFT ON THE ENDS

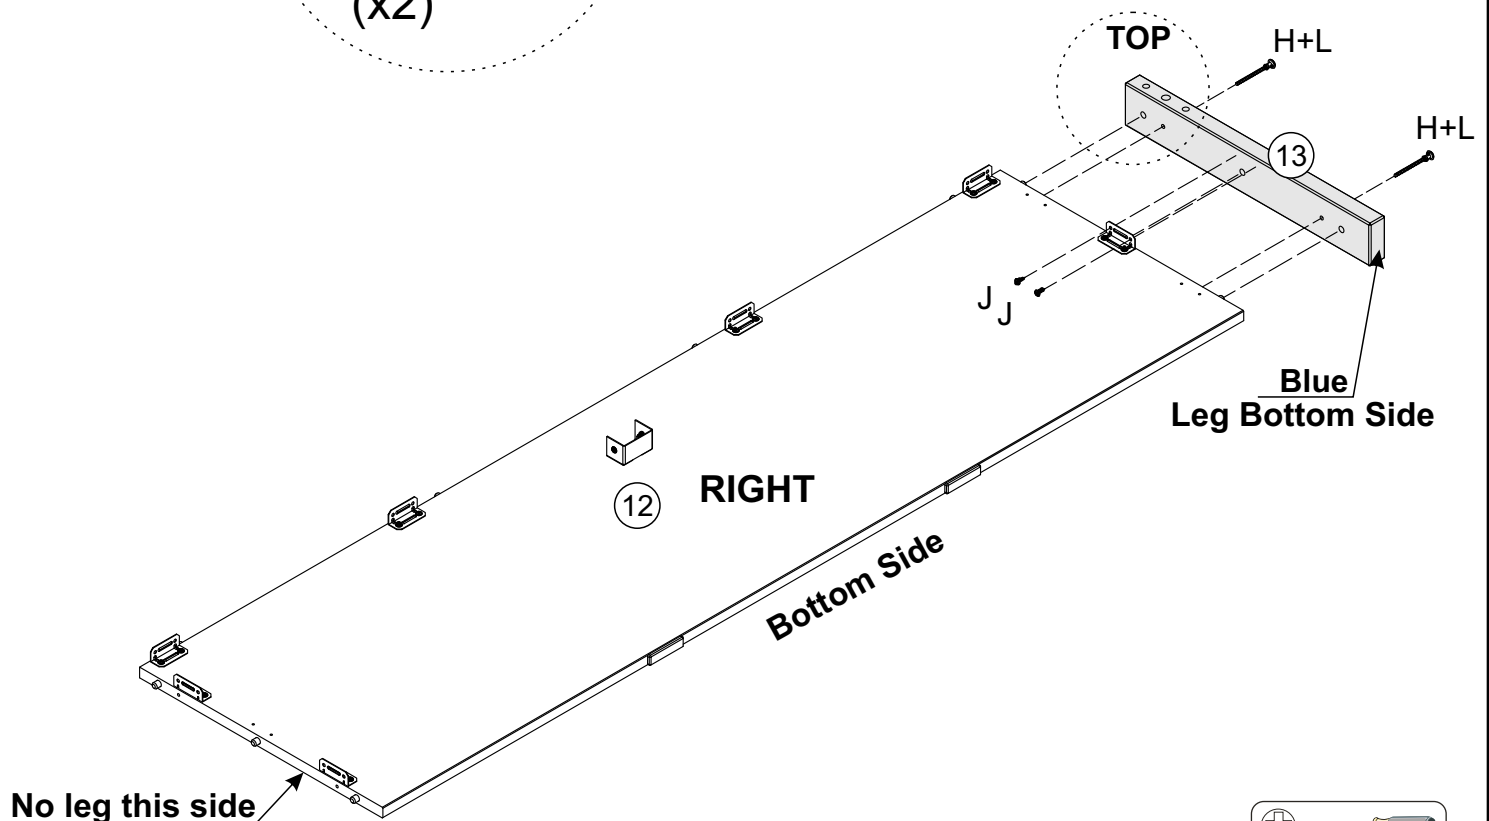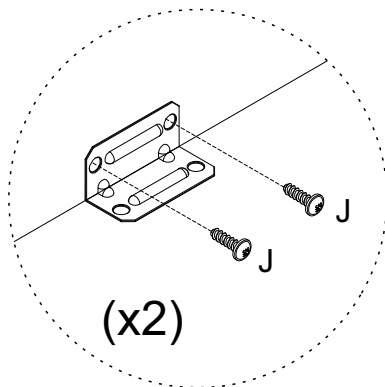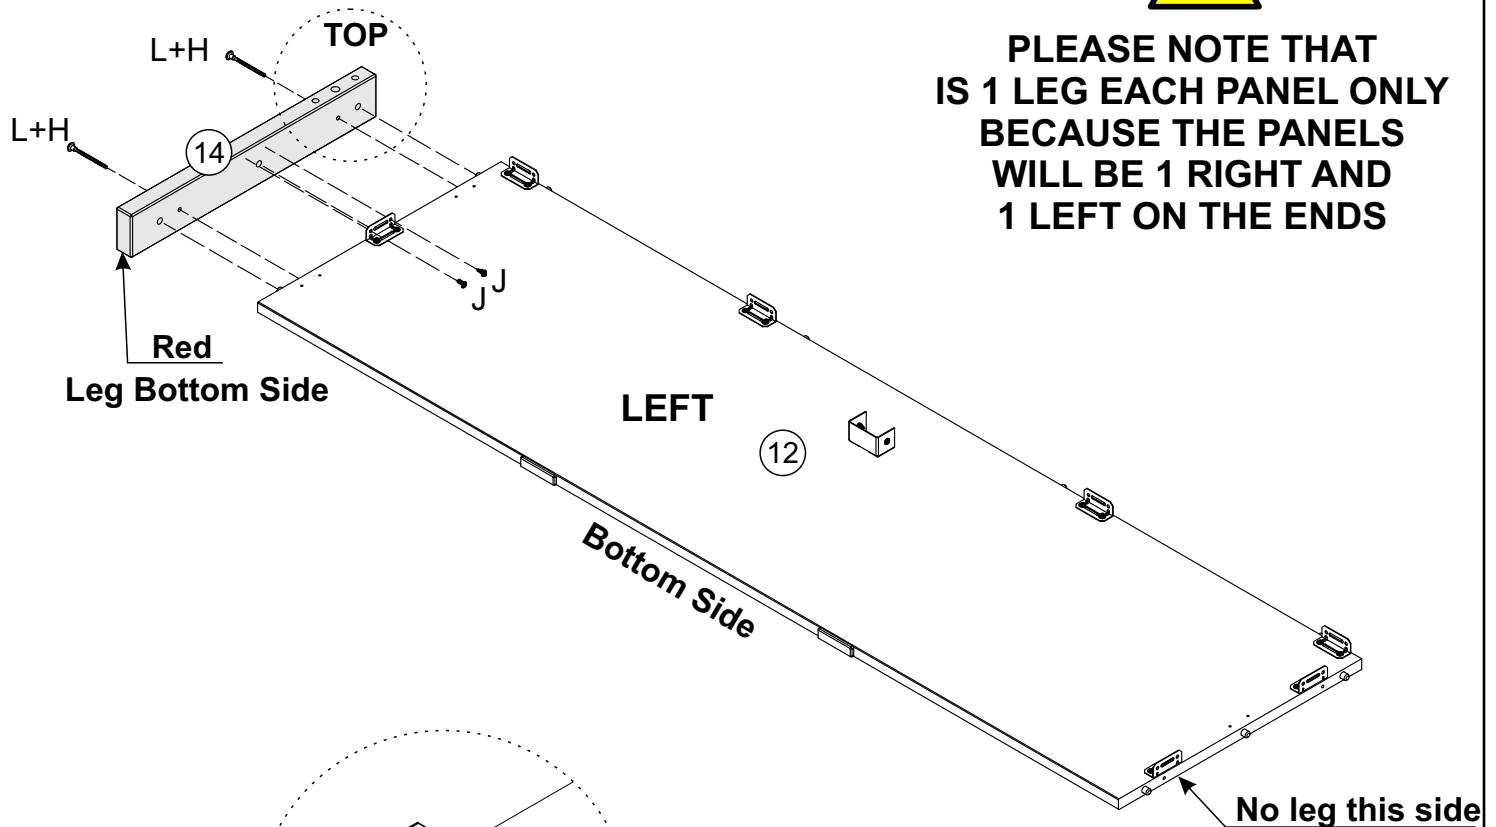

J  Qty 04
15/32" Screw


L  Small Allen wrench Qty 01
3mm

H  Qty 04
2 3/8" Bolt

23



**WOODEN DOWELS
THIS SIDE**

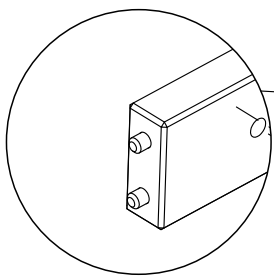


15

12
RIGHT



Blue

Bottom Side


(x8)

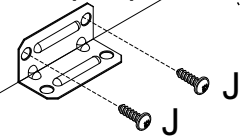

**WOODEN DOWELS
THIS SIDE**

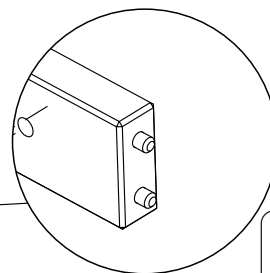



J  **15/32" Screw** **Qty 16**

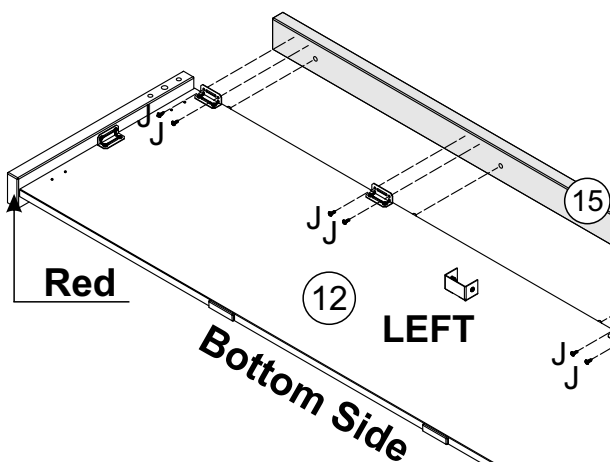


24



9

16


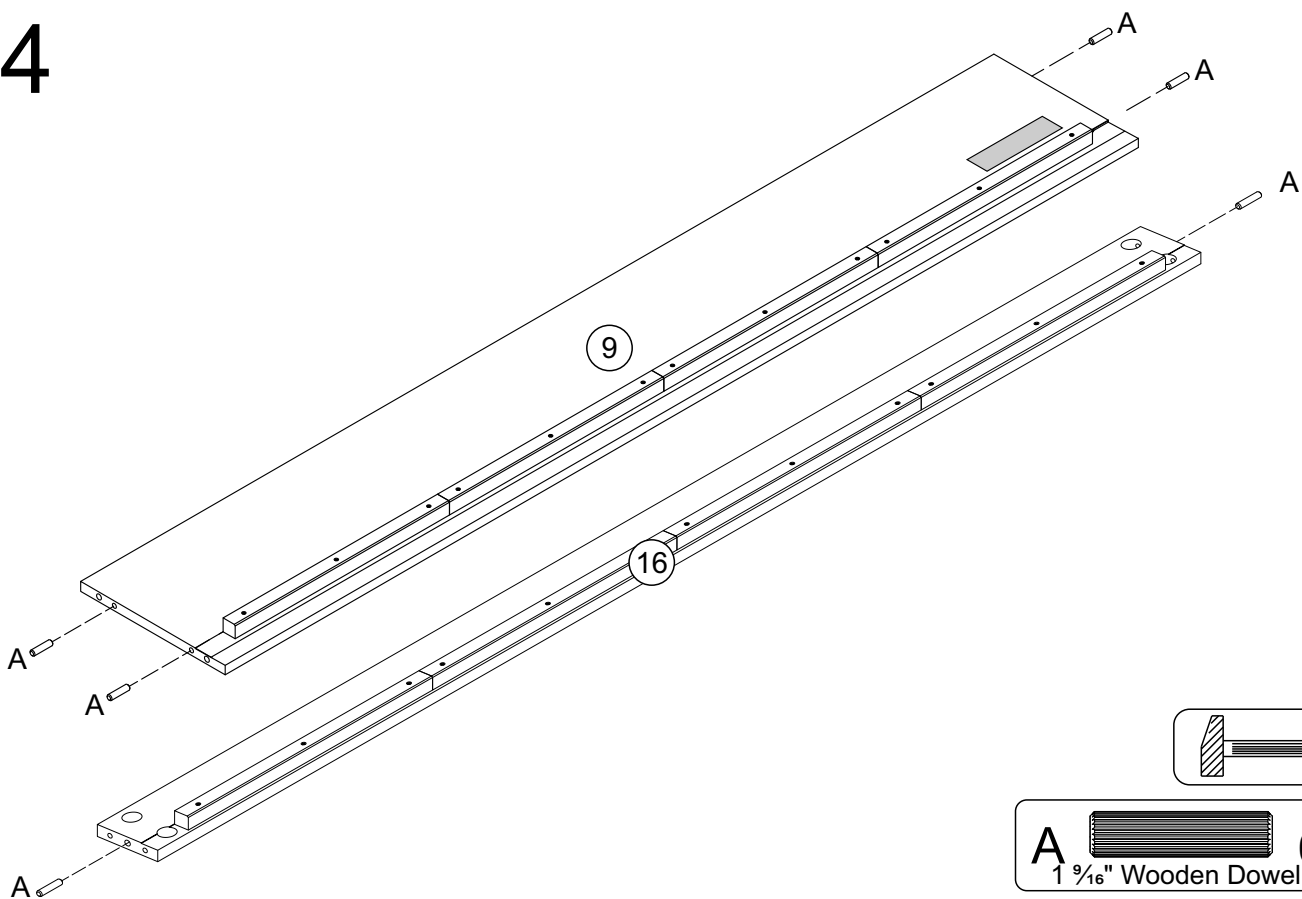


A  **Qty 06**
1 9/16" Wooden Dowel






25

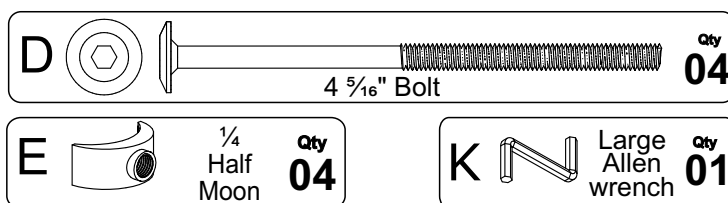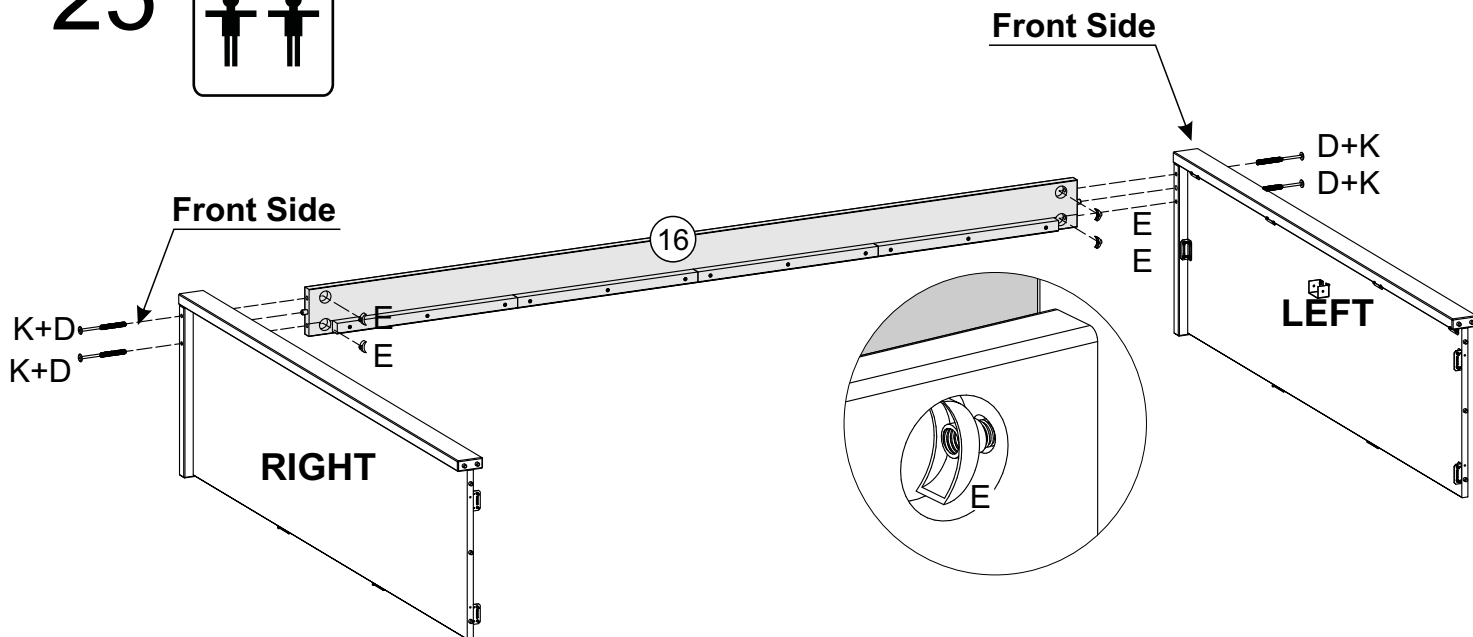



26

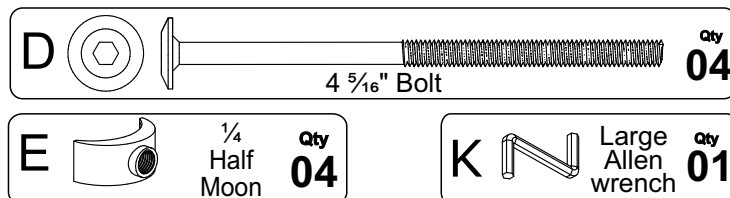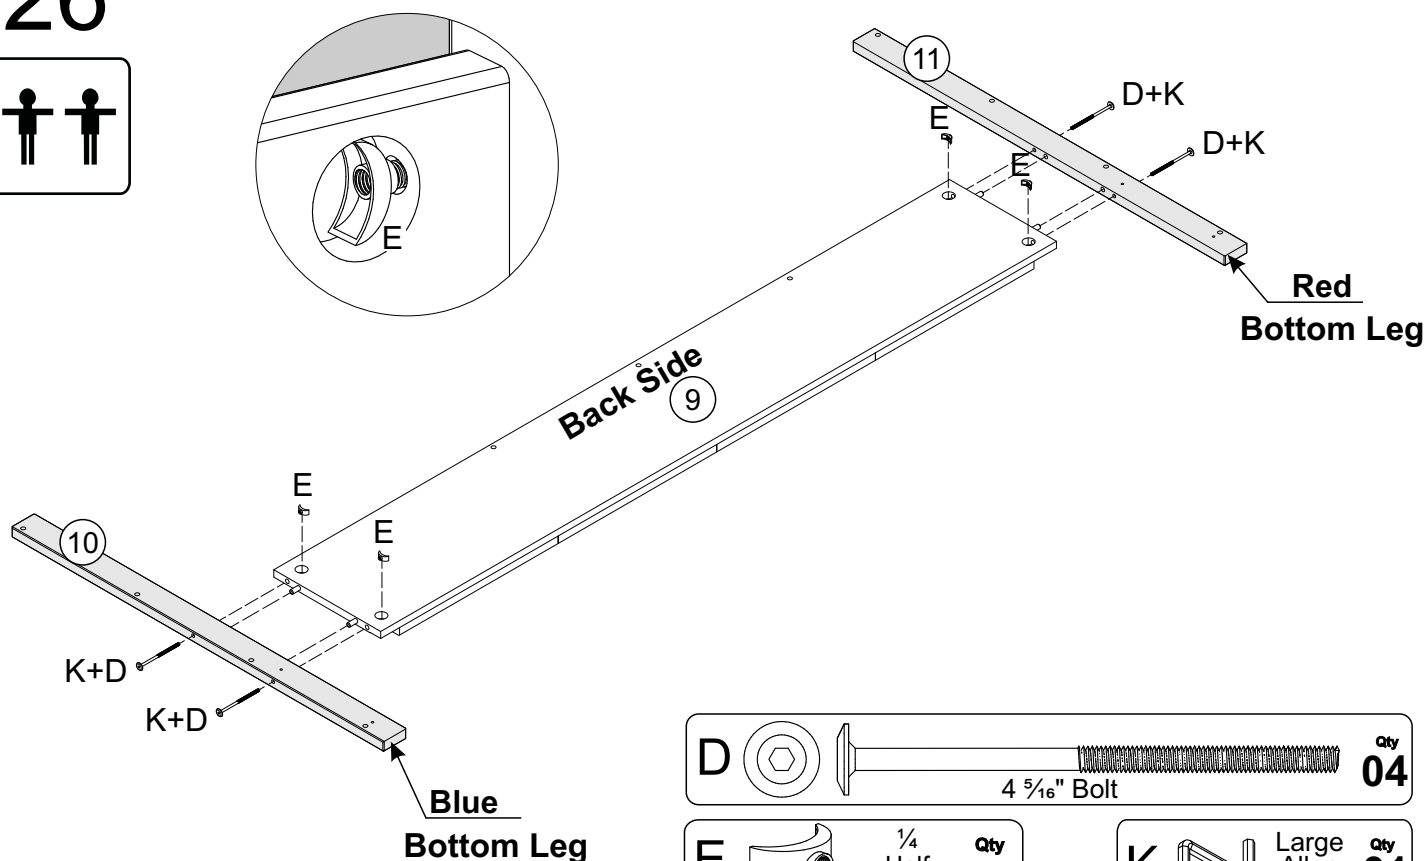

27


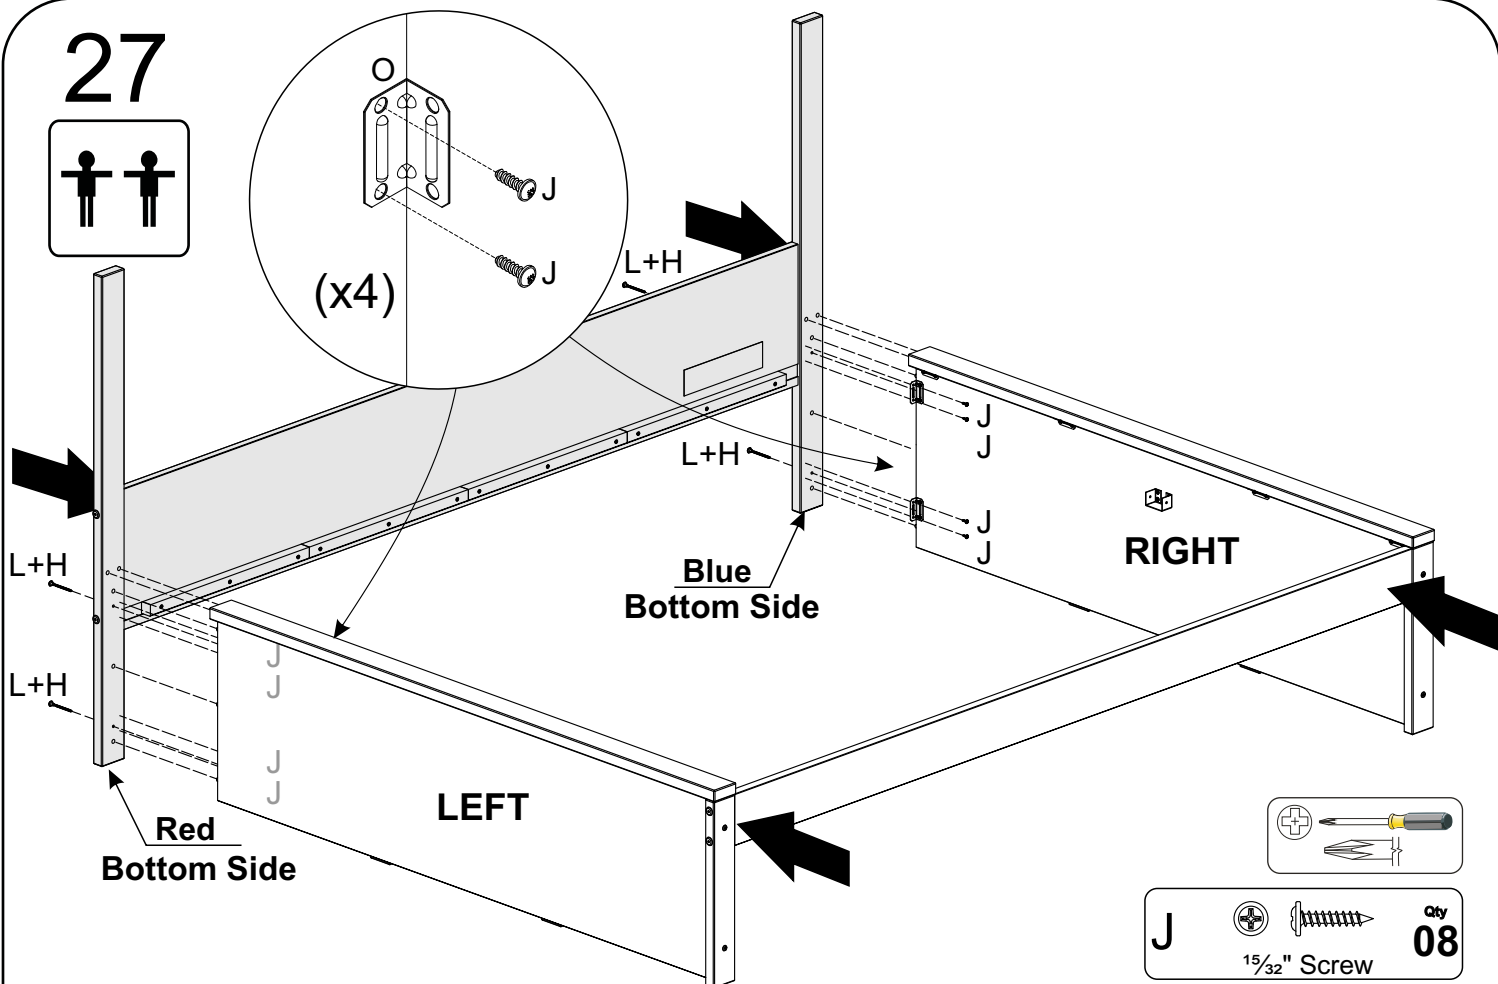
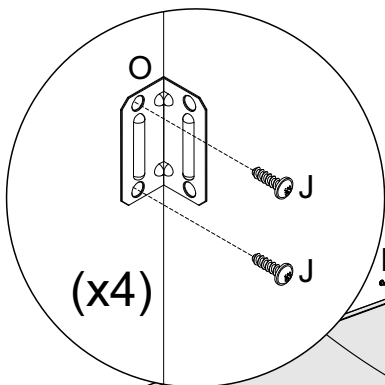


28

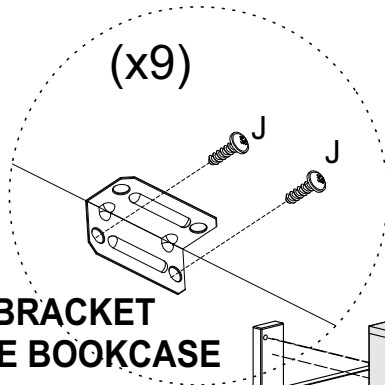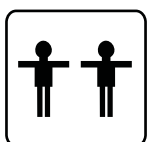


SCREW THE L-BRACKET ATTACHING THE BOOKCASE TO THE BED!

PLEASE BE CAREFUL IN THIS STEP TO NOT BREAK THE PARTS. YOU NEED TO LIFT THE BOOKCASE OFF THE FLOOR NOW.

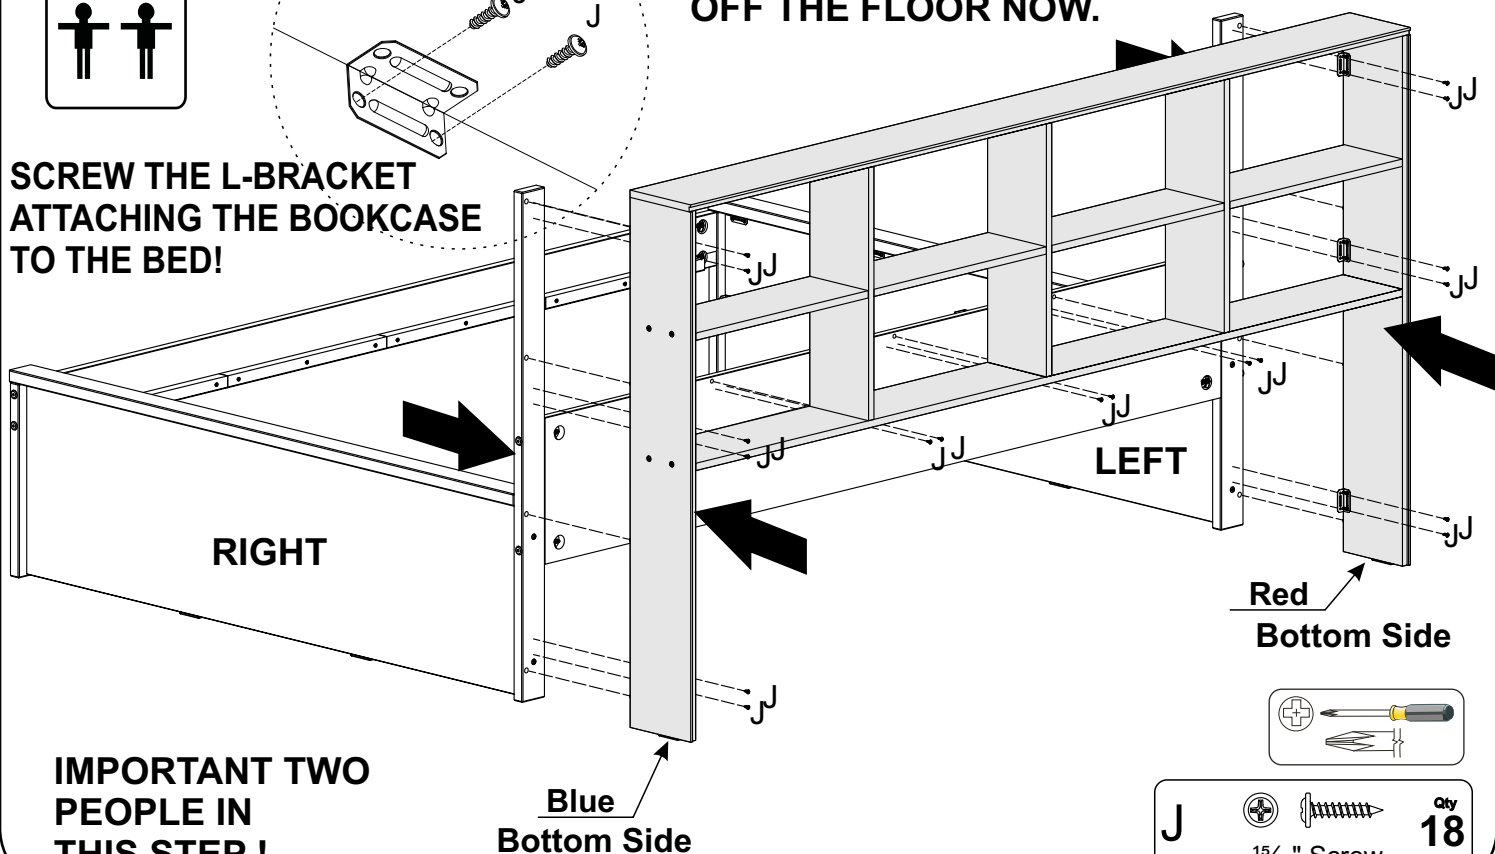


IMPORTANT TWO PEOPLE IN THIS STEP !


29

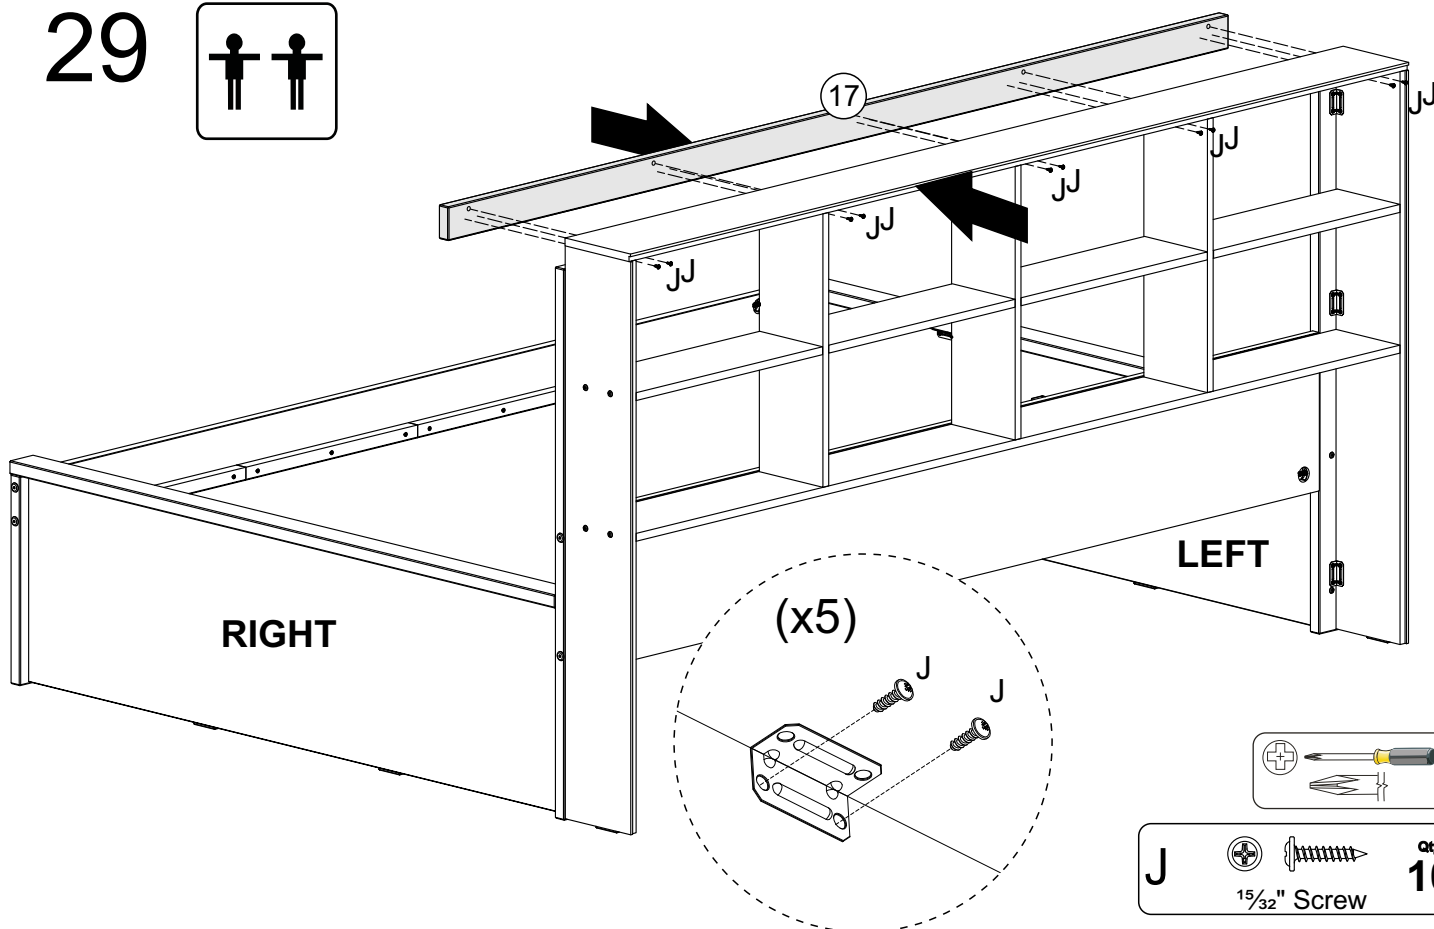

30

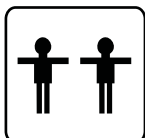


**PLEASE BE ATTENTIVE TO
NOT CAUSE DAMAGE
ON THIS STEP ON
THE BACK PANELS**

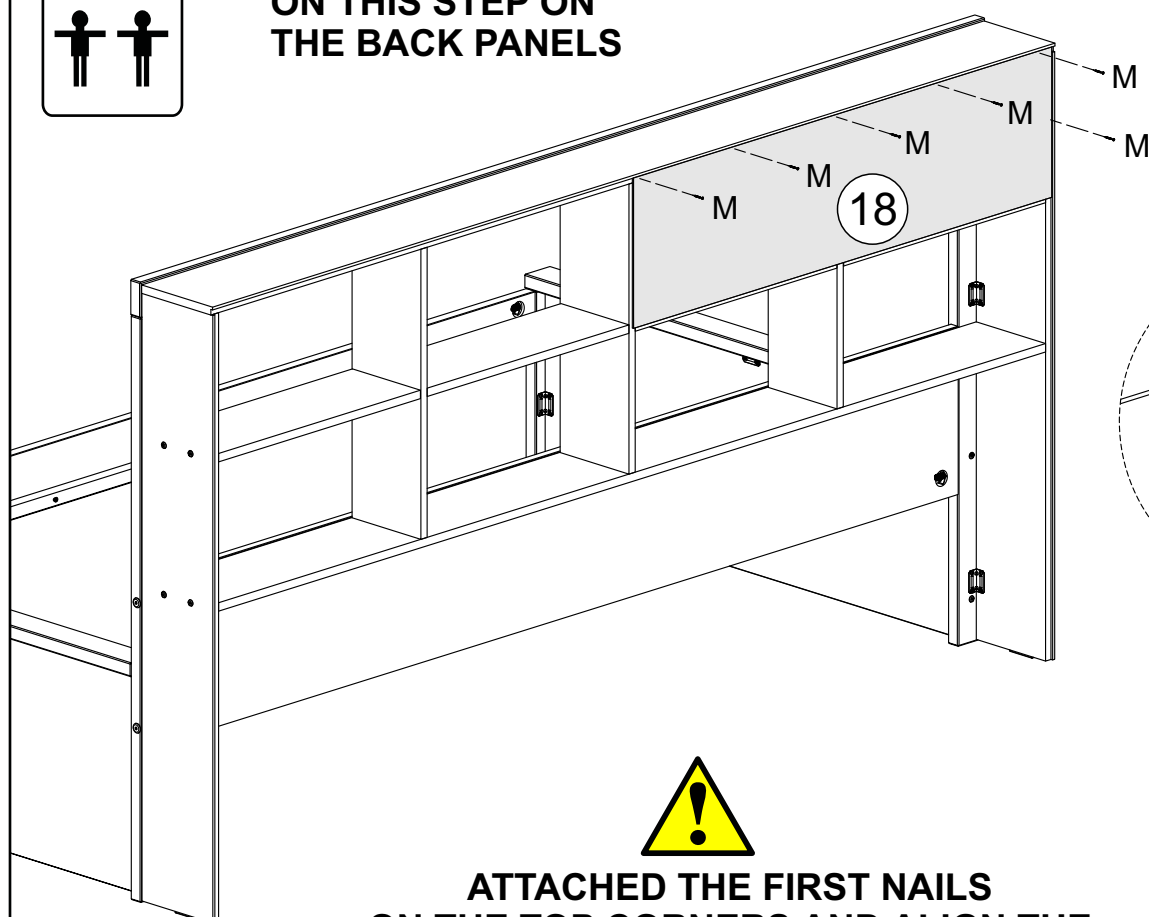



**ATTACHED THE FIRST NAILS
ON THE TOP CORNERS AND ALIGN THE
PANELS ACCORDINGLY !**




31

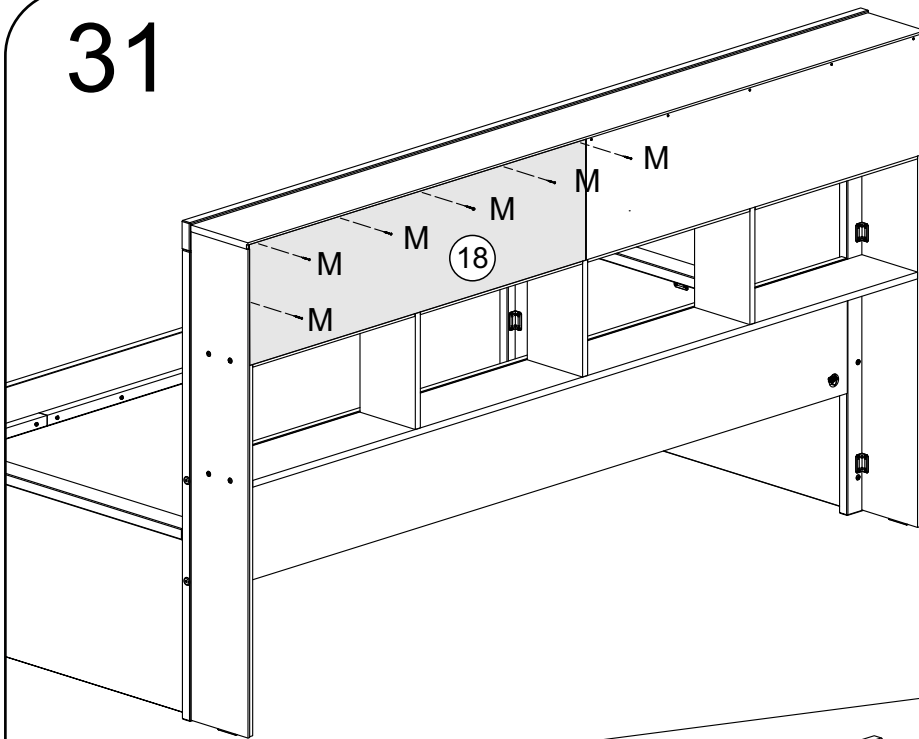


32

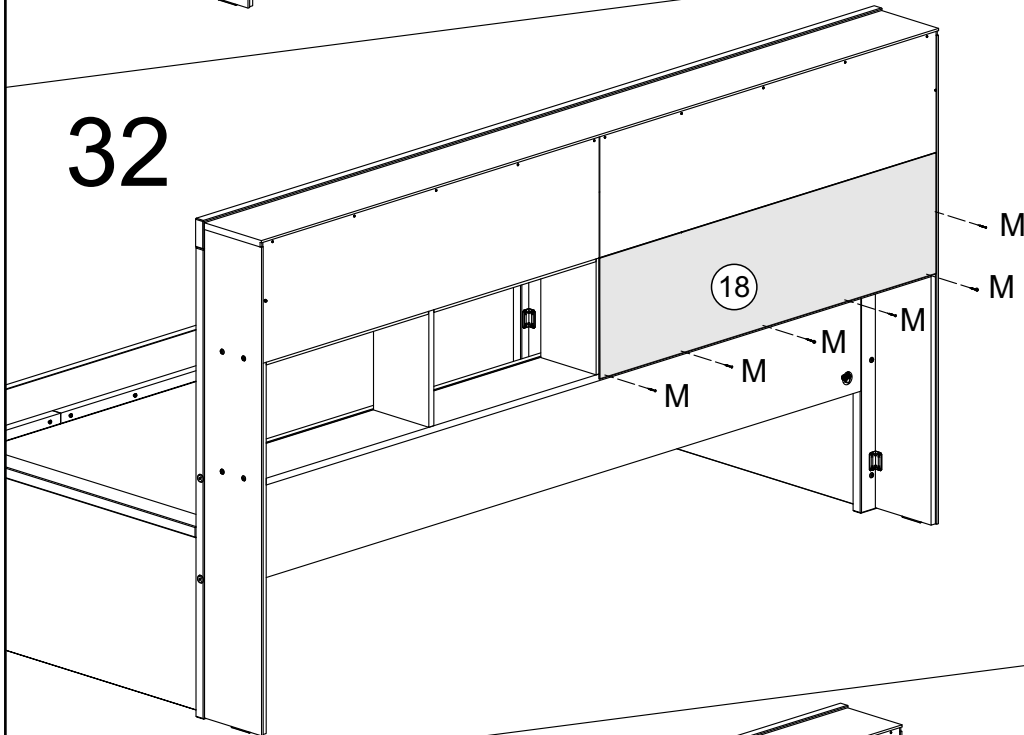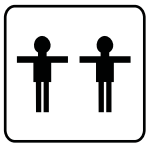

33

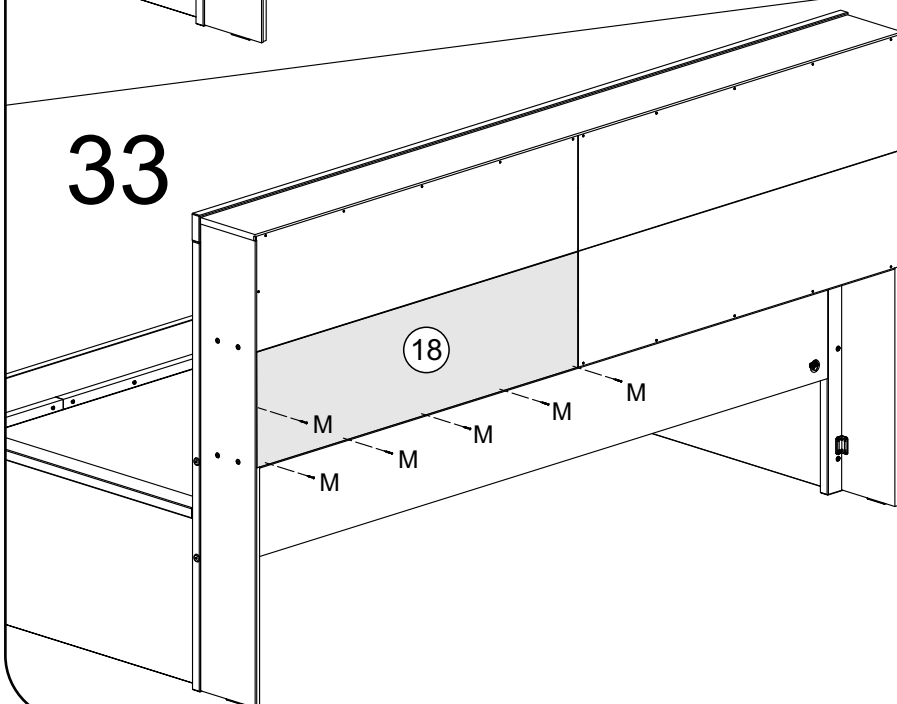


34


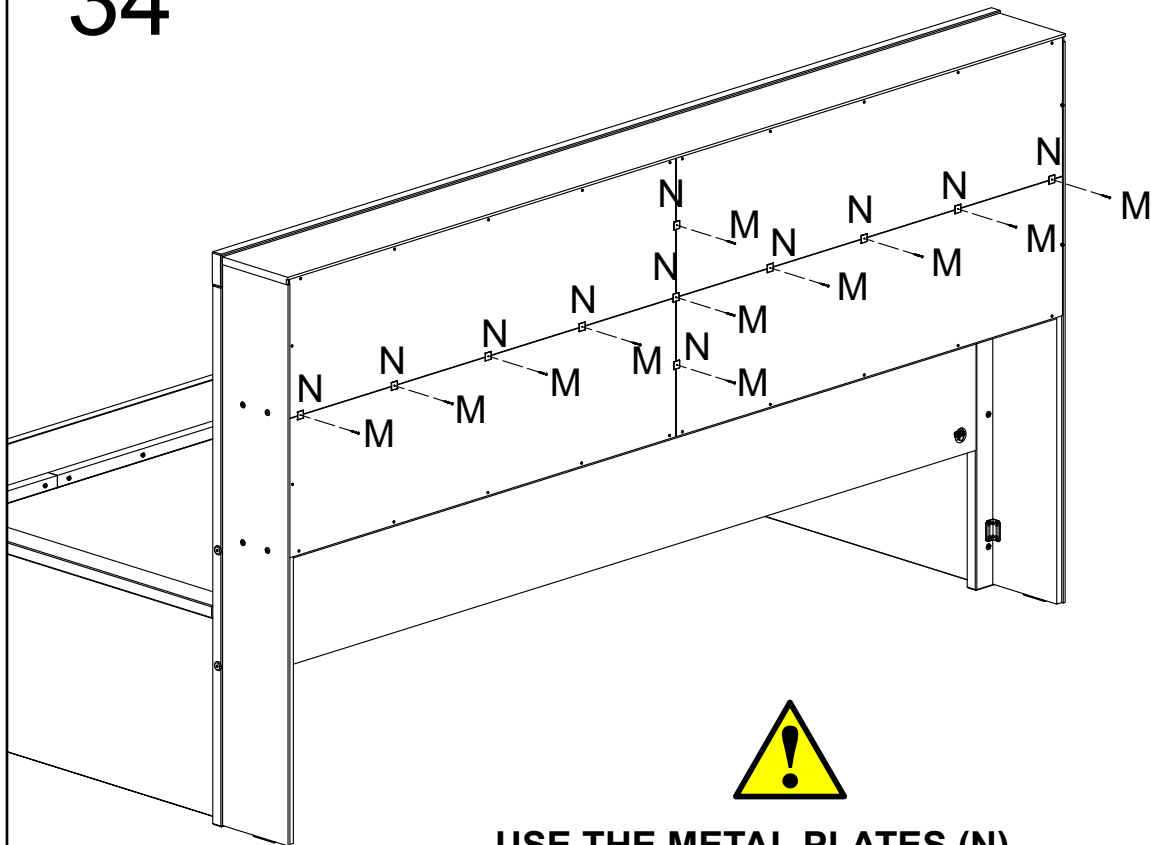


**USE THE METAL PLATES (N)
ON THE BACK PANELS CONNECTION !**

M  Nail Qty **11**

N  Metal Plate Qty **11**





35

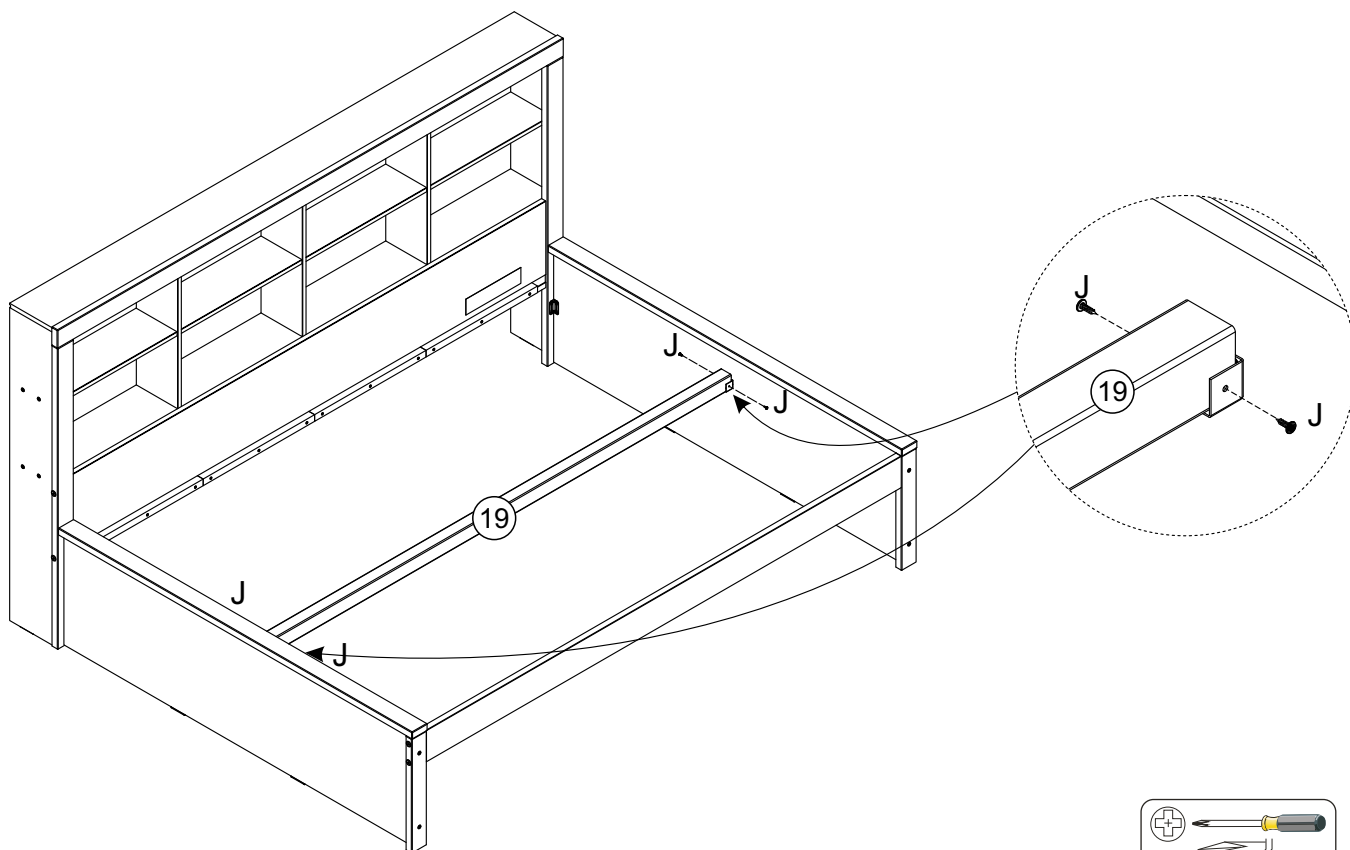





J  $1\frac{5}{32}$ " Screw Qty **04**

36


Attach the first slat using the wood spacer (P) at each end of the headboard.

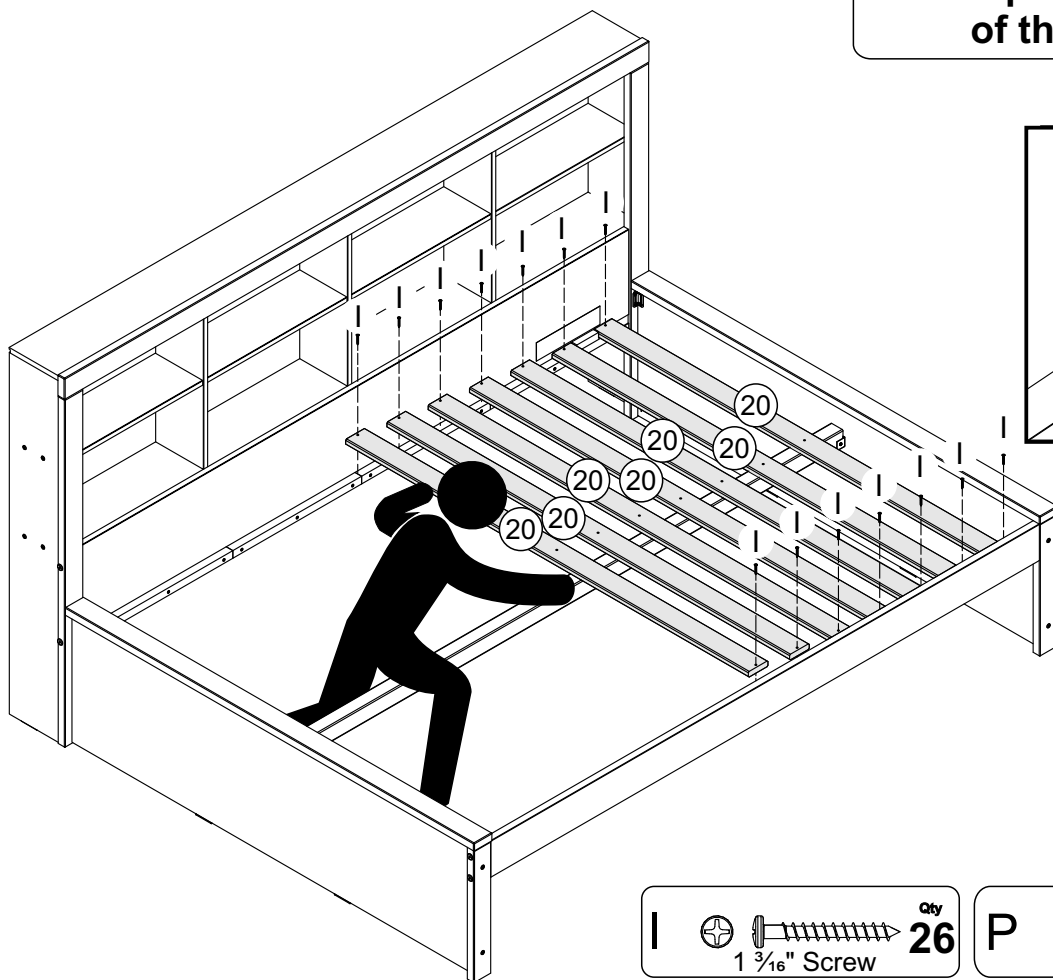


37

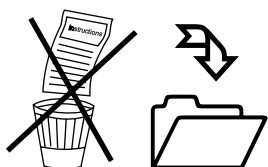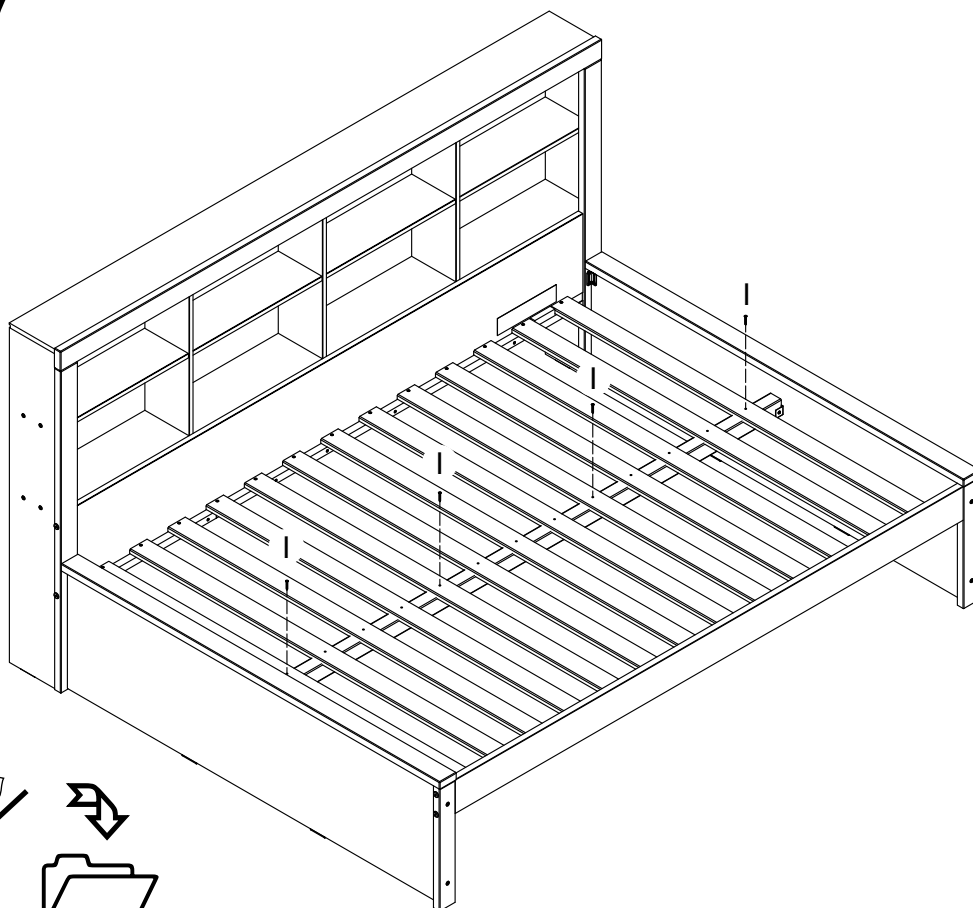

OPTIONAL COMPONENTS

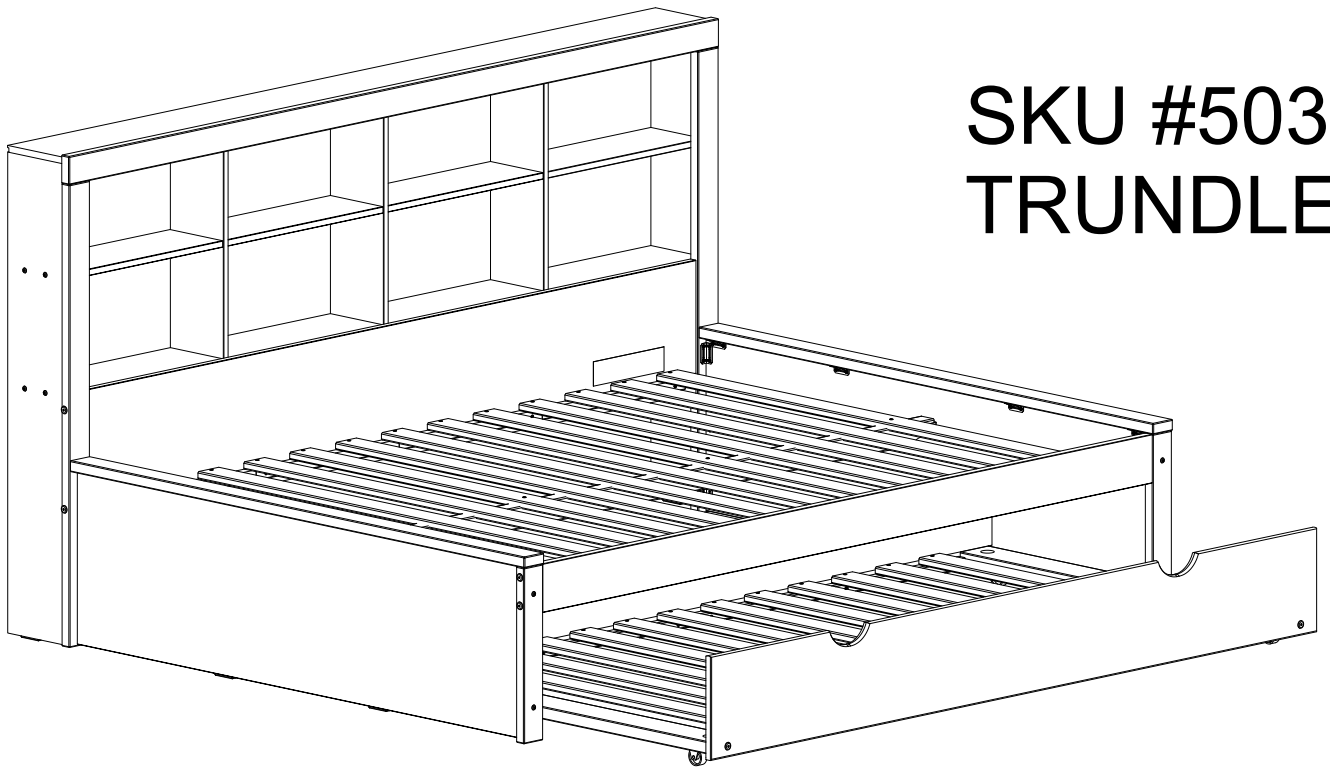

**SKU #503
TRUNDLE**

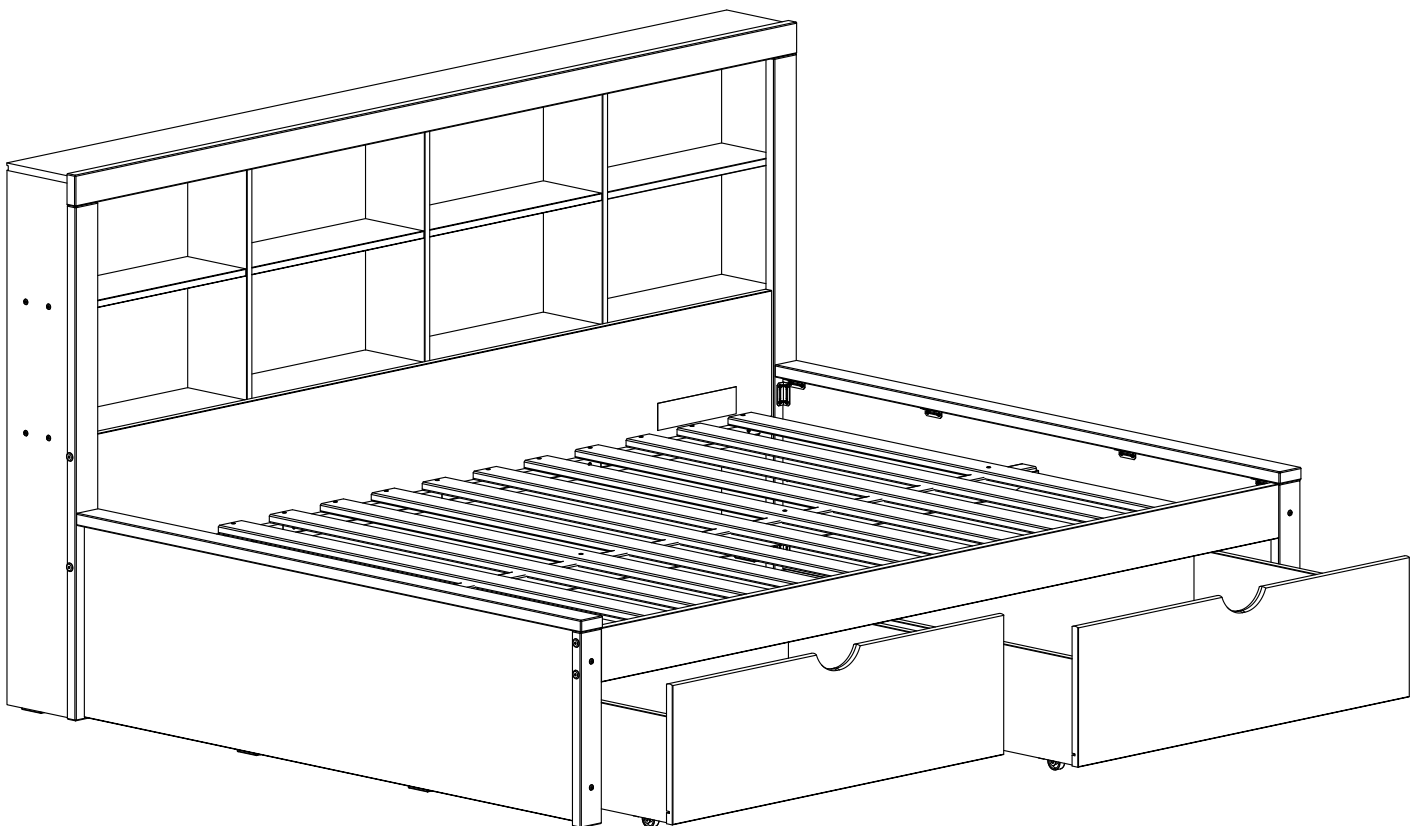

**SKU #505
DUAL UNDERBED DRAWERS**