
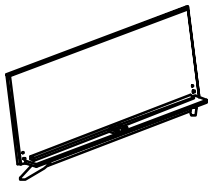
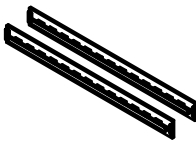



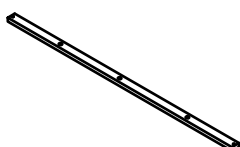


Product Assembly Instructions


LOFT-KB200

 A: Headboard x1	 B: Footboard x1	 C: Side Rail (L+R) x2	 G: Bolt M8*40mm x4  H: Washer x4  I: Screw nut M8 x4  J: Bolt M6*10mm x4  K: BoltM6*60mm x3  L: ScrewM4*30mmx30  M: Allen keyM4 x1  N: Wrench x1  O: Allen keyM5 x1
 D: Middle Rail x1	 E: Center Leg x3	 F: Slat Frame x 14	

STEP 1

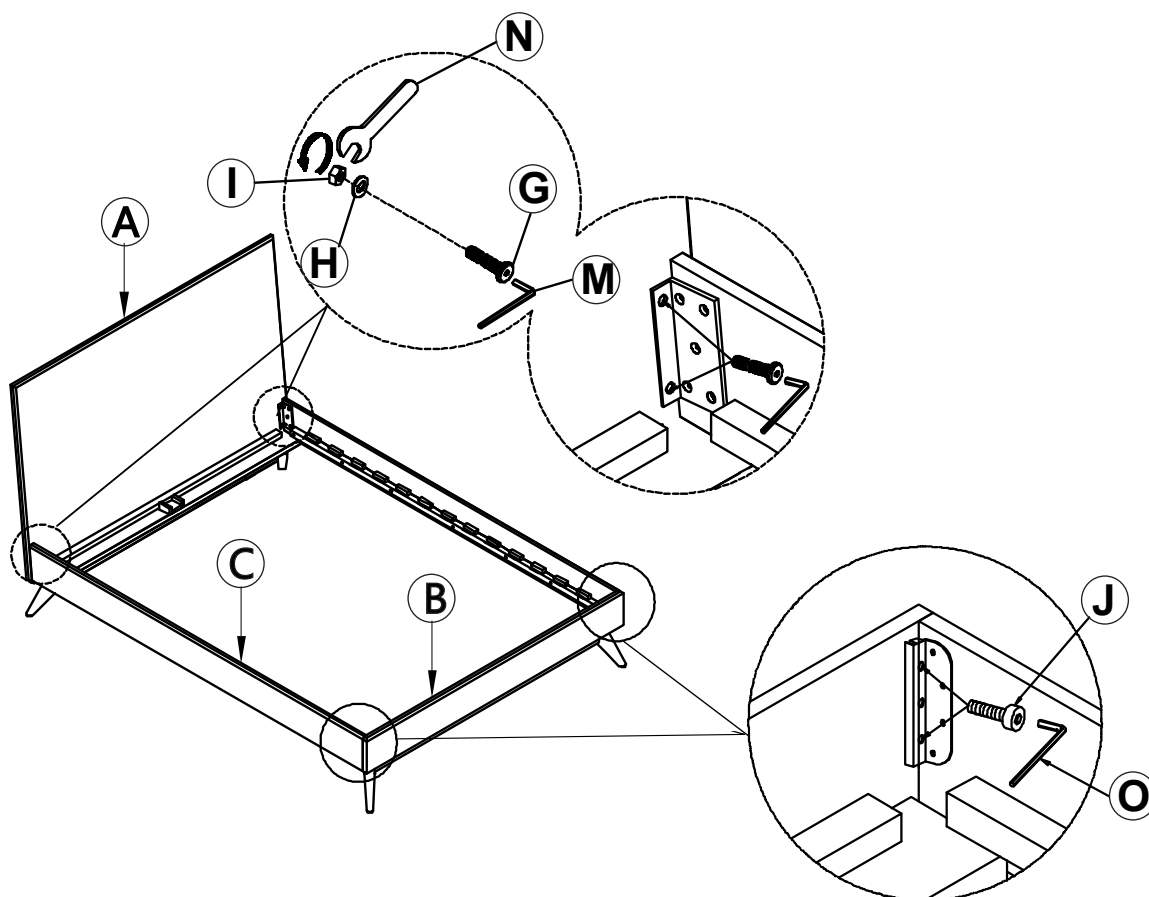

STEP 2

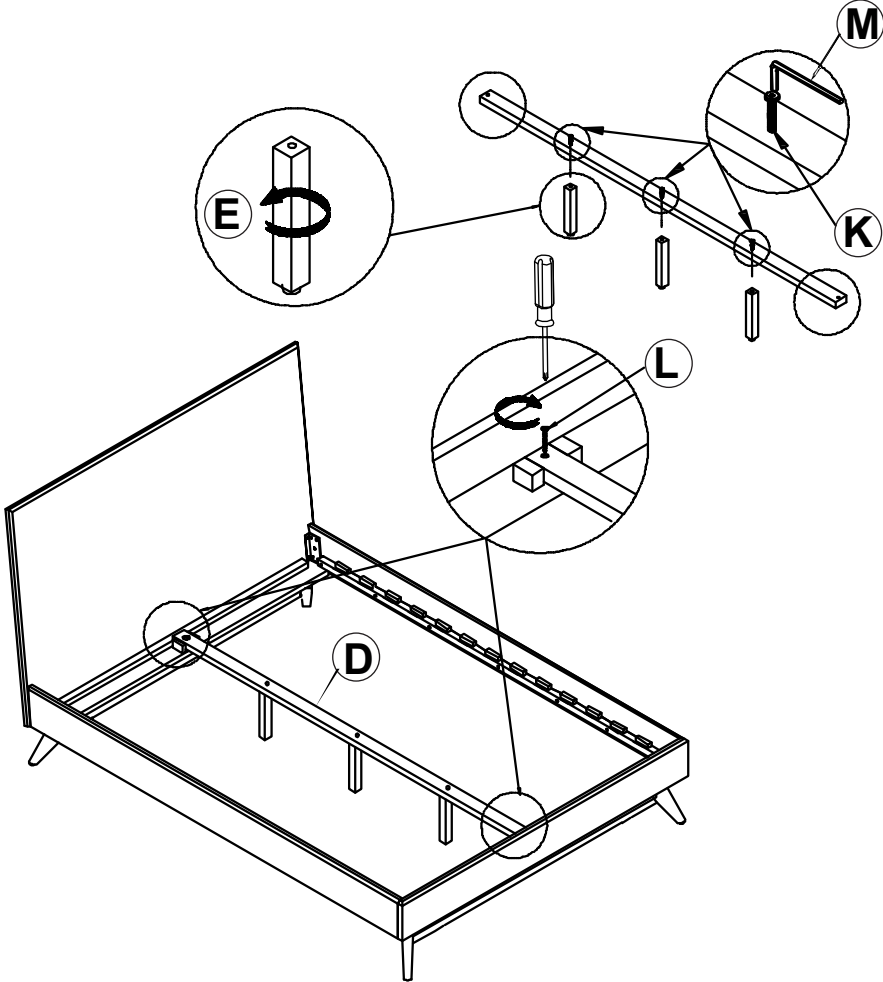

STEP 3

