

Assembly Instructions

D058 B / W-25 / 26: PRAIRIE POINT BACKLESS BENCH

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the PARTS LIST and/or HARDWARE LIST shown bellow.

Caution: Please read the instructions thoroughly before assembly.


- 1. We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- 2. Please do not over tighten screws or bolts until the assembly is completed.
- 3. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PARTS LIST

NO.	COMPONENT	DRAWING	Q'TY
A	CUSHION		1 PC
В	LEG		4 PCS
С	STRETCHER		2 PCS

HARDWARE LIST

NO.	COMPONENT	DRAWING	Q'TY
1	BOLT 5/16" x 2-3/8"		8 PCS
2	LOCK WASHER 5/16" Dia	6	8 PCS
3	FLAT WASHER 5/16" Dia	0	8 PCS
4	OPEN WRENCH		1 PC
5	SHORT SCREW #8 x 1"		1 PC
6	LONG SCREW #8 x 1-1/2"		4 PCS

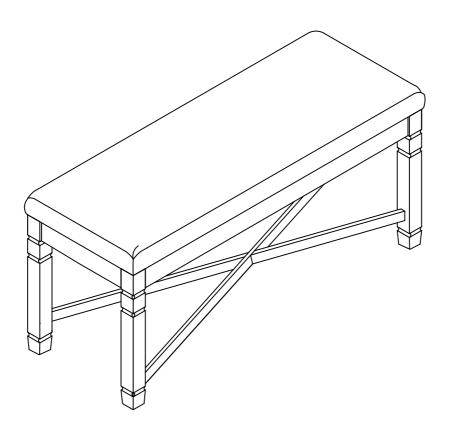

MADE IN VIET NAM


PAGE: 1 OF 2



Assembly Instructions


D058 B / W-25 / 26: PRAIRIE POINT BACKLESS BENCH



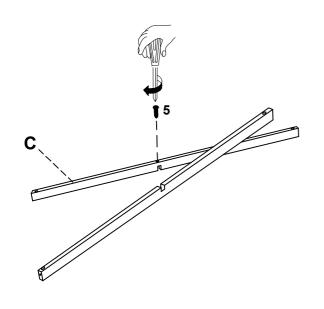


STEP 2

Do NOT tighten any bolts before stretcher is assembled

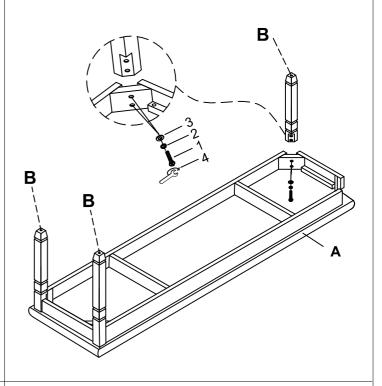

STEP 3

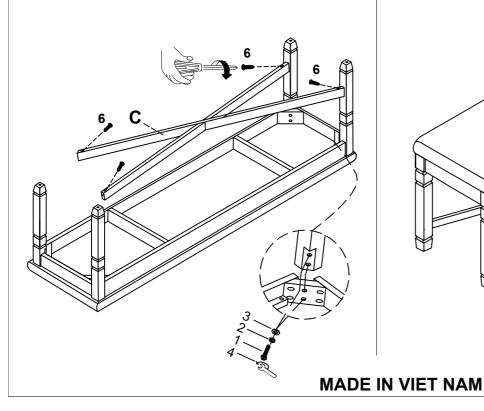

STEP 4

