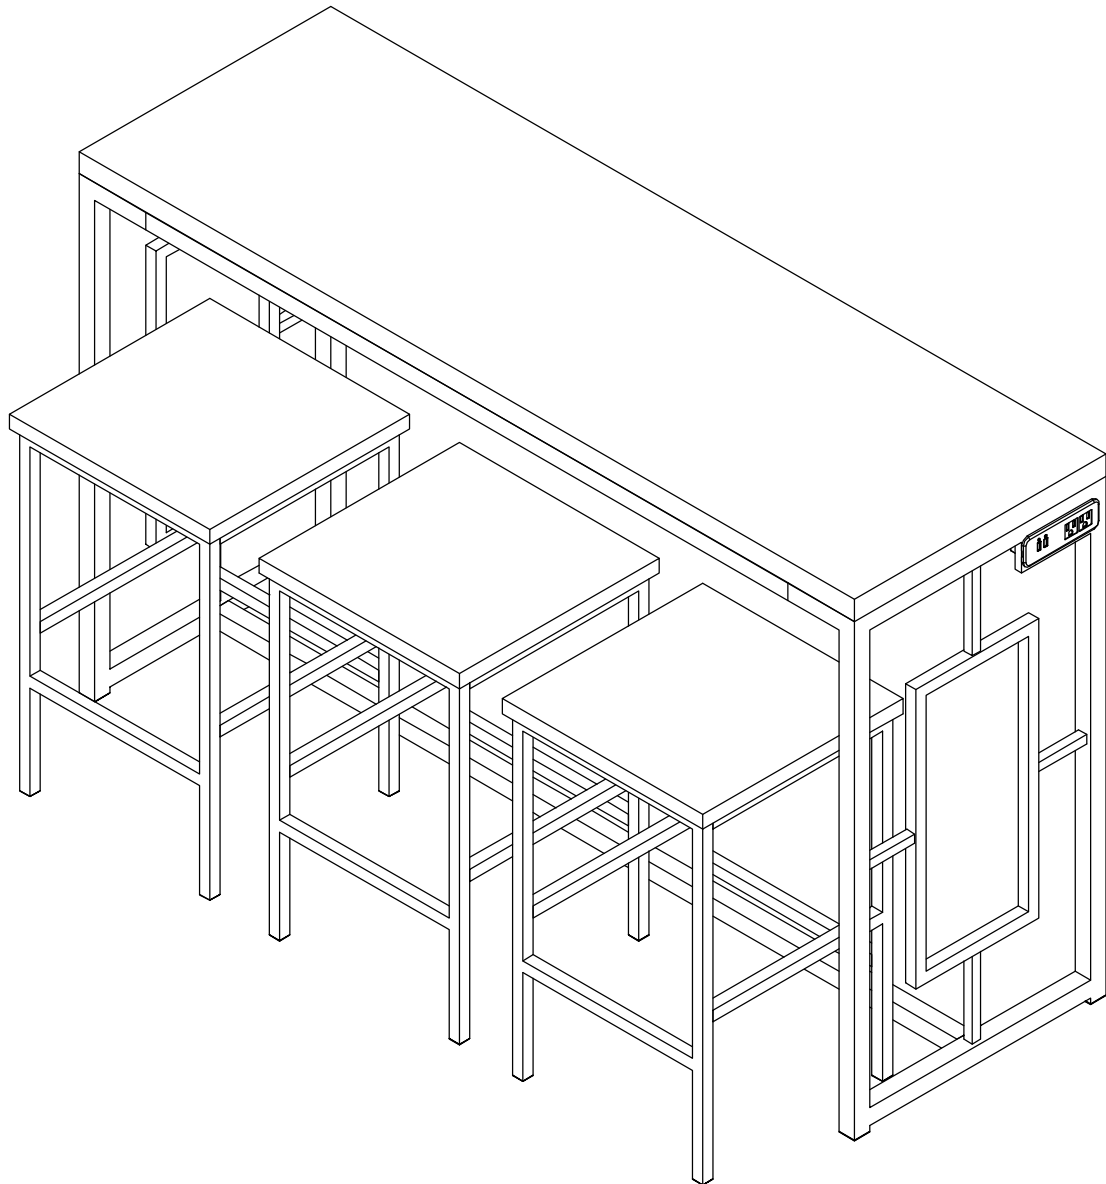







Bar Table + 3 Stools (Black)
Item #: 400026475
ASSEMBLY INSTRUCTIONS















ASSEMBLY INSTRUCTIONS

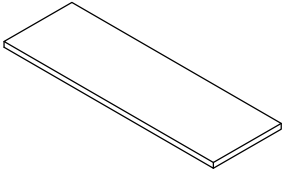
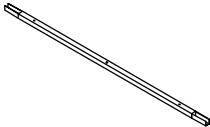
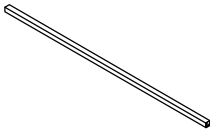
Item #: 400026475

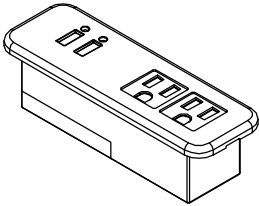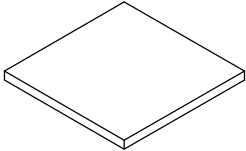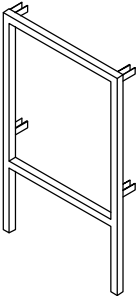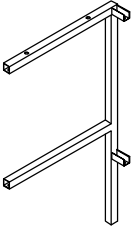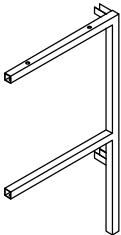Please identify and locate all assembly parts (see parts list) before discarding any packing materials.
Some parts may have become loose during transit.


PARTS LIST			
NO.	SKETCH	DESCRIPTION	QYT
1		BAR TABLE TOP PANEL	1PC
2		BAR TABLE LEFT FRAME	1PC
3		BAR TABLE RIGHT FRAME	1PC
4		BAR TABLE TOP CROSSBAR	2PCS
5		BAR TABLE BOTTOM CROSSBAR	1PC

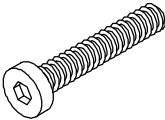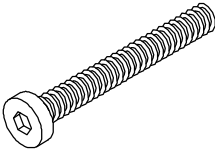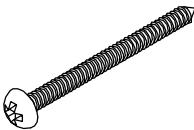NO.	SKETCH	DESCRIPTION	QYT
6		POWER	1PC
7		CHAIR TOP PANEL	3PCS
8		CHAIR FRONT FRAME	3PCS
9		CHAIR LEFT FRAME	3PCS
10		CHAIR RIGHT FRAME	3PCS
11		CHAIR CROSSBAR	6PCS


NO.	SKETCH	DESCRIPTION	QYT
12		SHORT BOLT 1/4" x 12mm	60PCS
13		MEDIUM BOLT 1/4" x 32mm	12PCS
14		LONG BOLT 1/4" x 45mm	8PCS
15		SCREW 4.0 x 45mm	6PCS
16		POWER BOLT 3/16" x 12mm	2PCS
17		CAP 20 x 20mm	12PCS

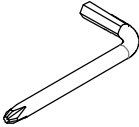NO.	SKETCH	DESCRIPTION	QYT
18		LARGE CAP 30 x 30mm	4PCS
19		WASHER Ø16mm	6PCS
20		ALLEN KEY 4mm	1PC

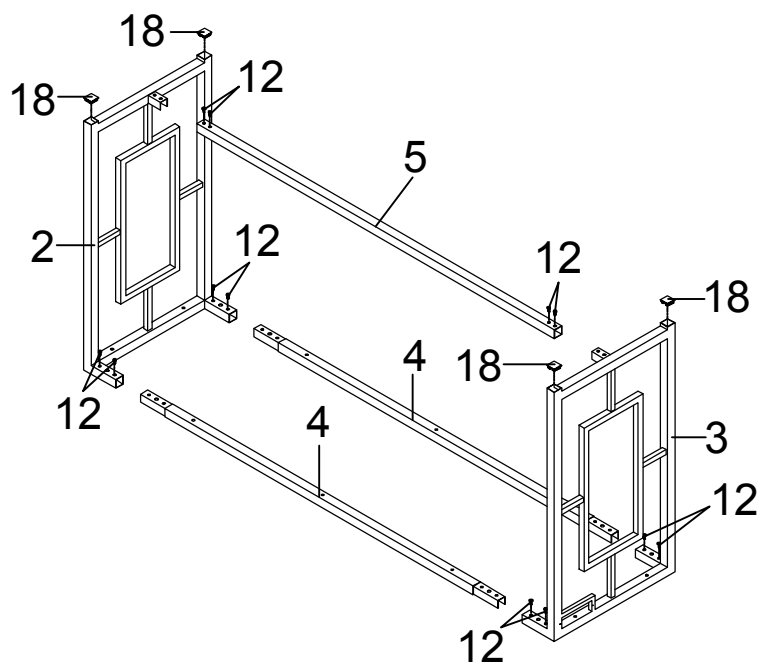
NOTE: Do not tighten until each step is completed or instructed.



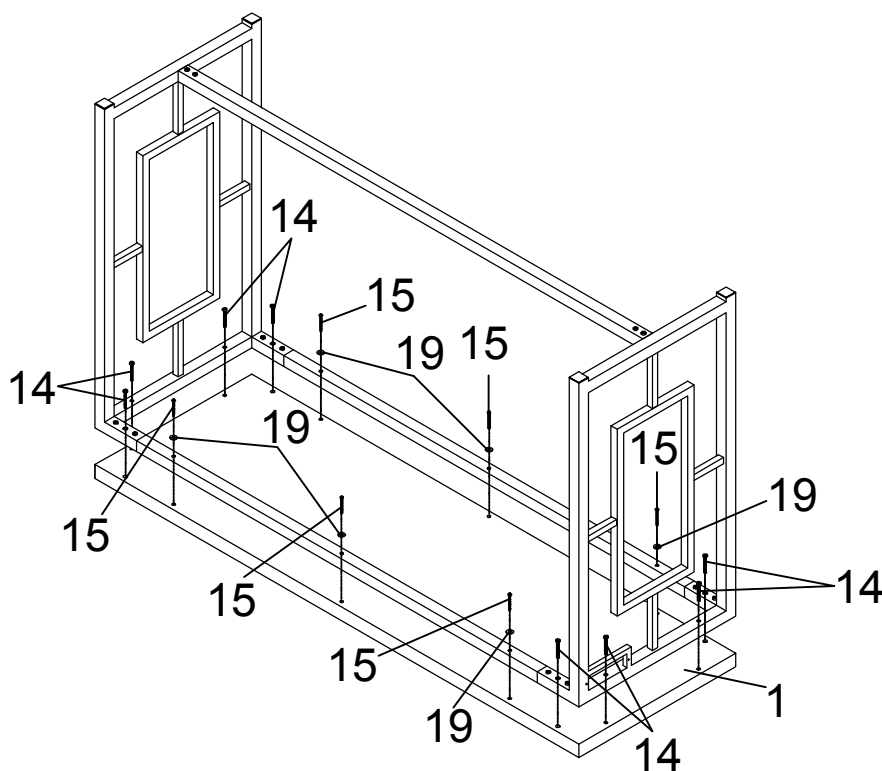
- Step 1: 1. Insert Large Cap (18) into Bar Table Left Frame (2) and Bar Table Right Frame (3) as shown .
2. Attach Bar Table Top Crossbar (4) and Bar Table Bottom Crossbar (5) to Bar Table Left Frame (2) and Bar Table Right Frame (3) using Short Bolt (12) as shown.



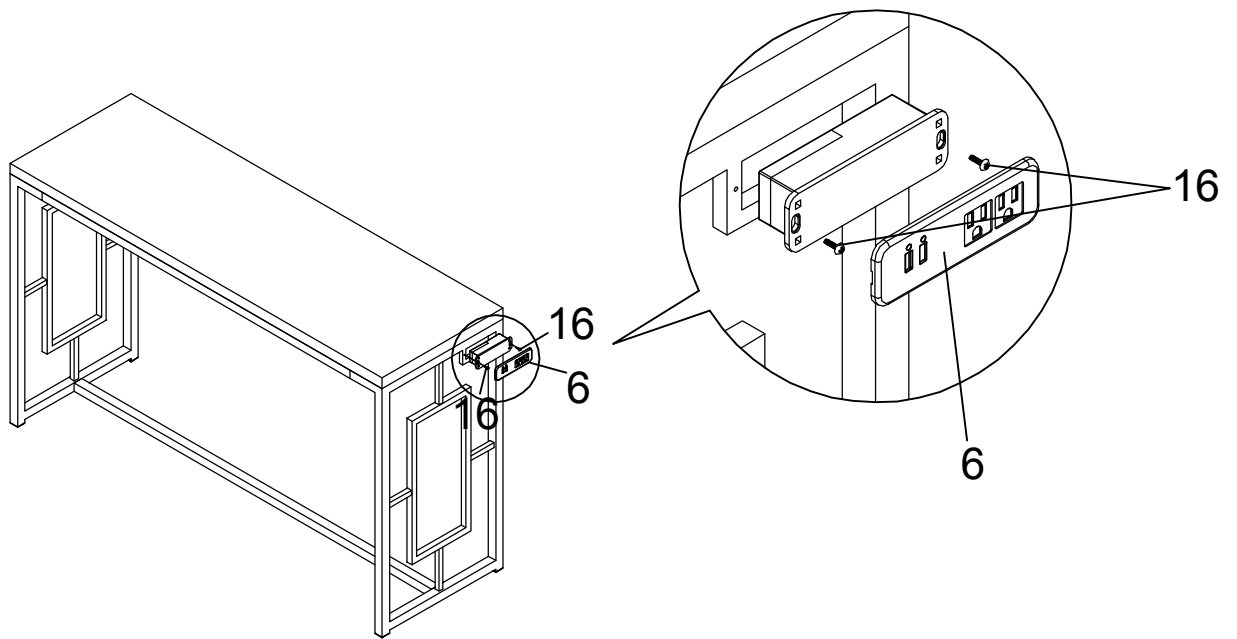
- Step 2: 1. Attach the assembly in Step 1 to Bar Table Top Panel (1) using Long Bolt (14) , Screw (15) and Washer (19) as shown.



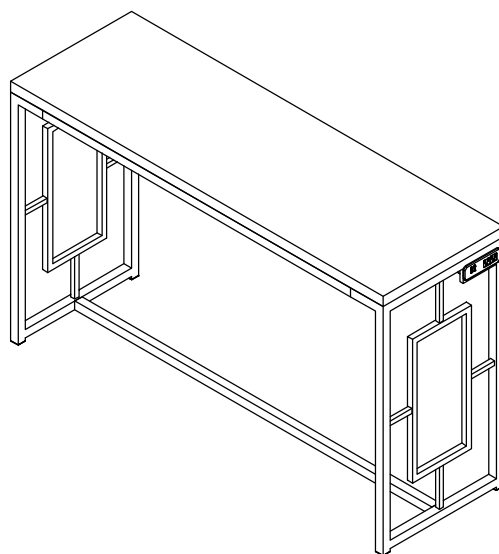
Step 3: Insert Power (6) into Bar Table Right Frame (3) using Power Bolt (16) as shown.



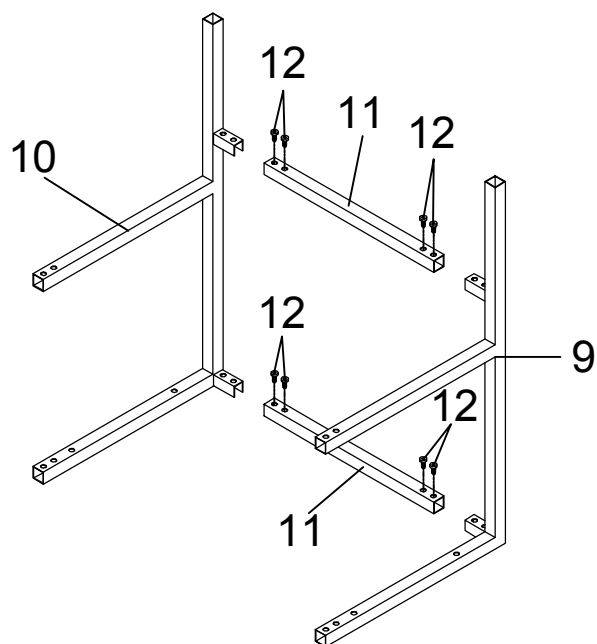
Complete. Congratulations on your assemble success.



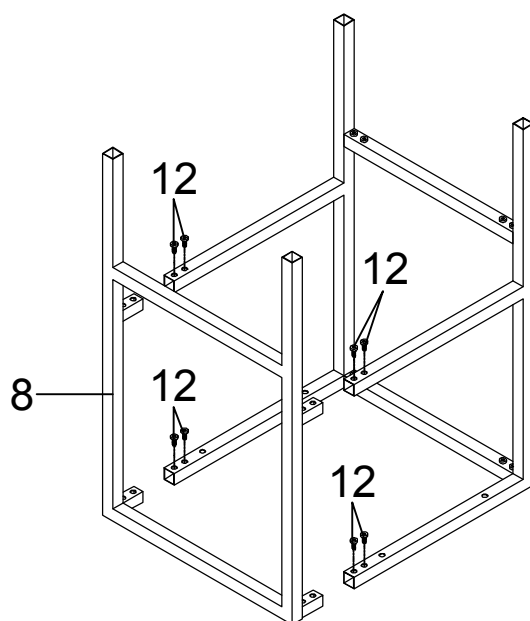
Step 4: Attach Chair Crossbar (11) to Chair Left Frame (9) and Chair Right Frame (10) using Short Bolt (12) as shown.



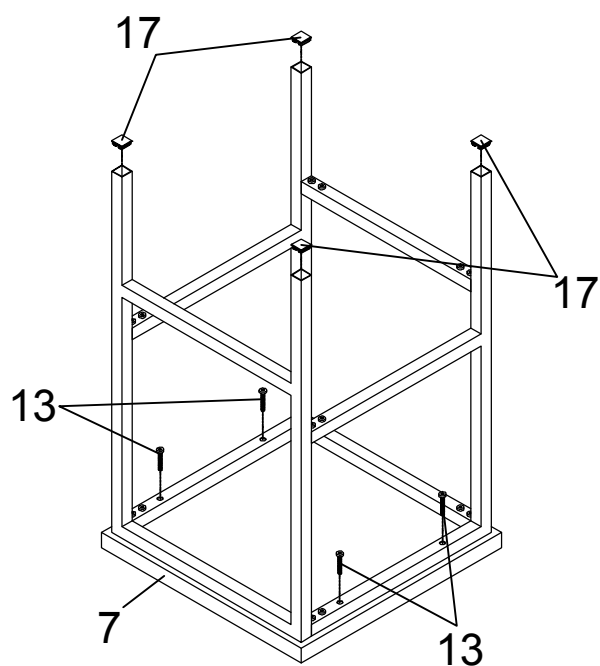Step 5: Attach the assemble in Step 4 to Chair Front Frame (8) using Short Bolt (12) as shown.



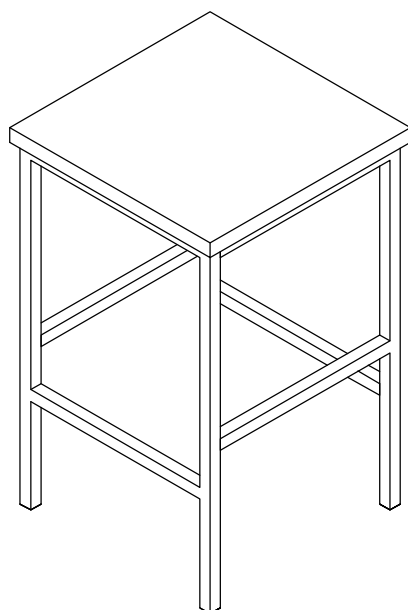Step 6: 1. Attach the assemble in Step 5 to Chair Top Panel (7) using Medium Bolt (13) as shown.
2. Insert Cap (17) into the assemble in Step 5 as shown.



Complete. Congratulations on your assemble success.