



STEP 1

WITH THE HELP OF SOMEONE ELSE TURN THE TABLE AND
PLACE THE TOP ON A FLAT SURFACE
ALING THE LEGS HOLES WITH THE APRON HOLES

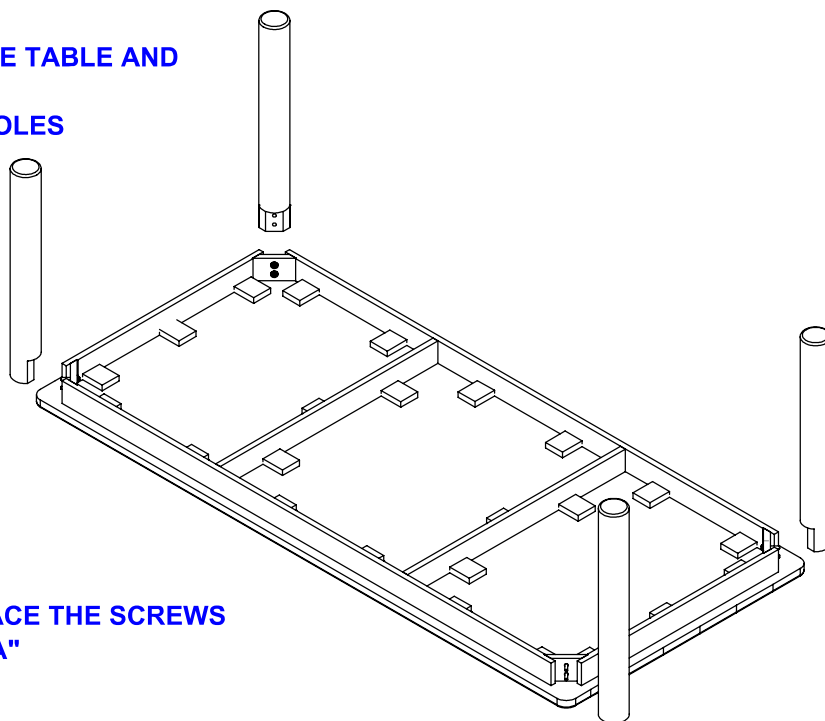

STEP 2

ONCE THE HOLES HAVE BEEN MATCHED PLACE THE SCREWS
AND THE WASHERS AS SHOWN IN FIGURE "A"
AND TIGHTEN THE SCREWS INTO THE LEGS

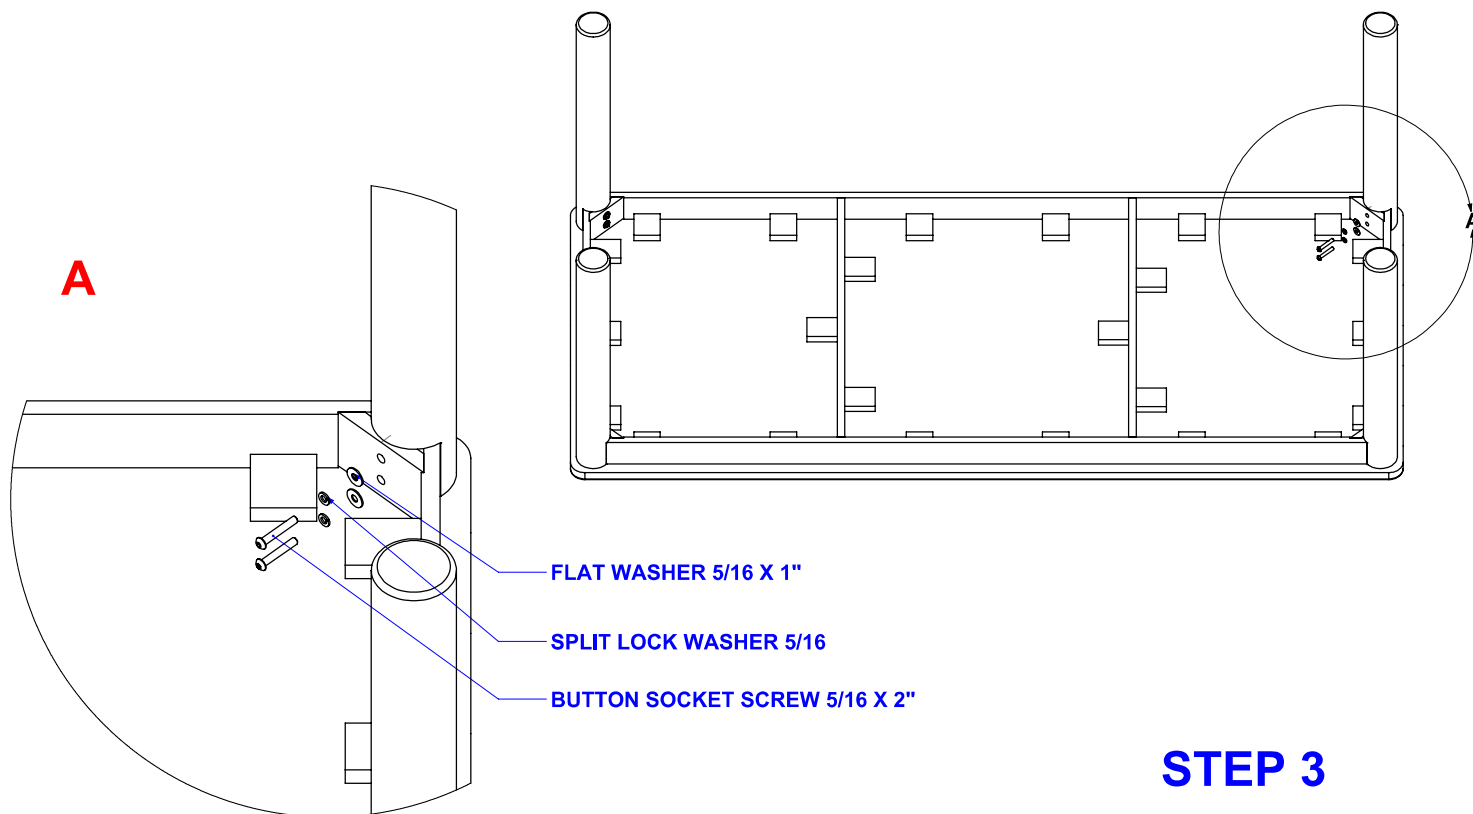

STEP 3

ONCE THE SCREWS HAVE BEEN TIGHTENED,
WITH THE HELP OF SOMEONE ELSE GET
THE TABLE UP RIGHT AND PLACE IT IN THE DESIRED LOCATION

ifd

INTERNATIONAL
FURNITURE DIRECT, LLC

**ASSEMBLING
INSTRUCTIONS**

I-TBL-E024

DESCRIPTION	#
FLAT WASHER 5/16 X 1"	8
SPLIT LOCK WASHER 5/16	8
BUTTON SOCKET SCREW 5/16 X 2"	8
ALLEN KEY 3/16	1

ITEM	DESCRIPTION	#
1RON003	RONDANA PLANA 5/16 X 1"	8
1RON011	RONDANA DE PRESION 5/16	8
1TOR004	TORNILLO ALLEN 5/16 X 2"	8
1HER251	LLAVE ALLEN 3/16	1



INTERNATIONAL
FURNITURE DIRECT, LLC

ASSEMBLING INSTRUCTIONS

I-TBL-E024