

## ASSEMBLY INSTRUCTION

1611BKT-1: TWIN METAL BED

## PART LIST:









3PCS









E:FOOTBOARD 1PC

F:SIDE RAIL 2PCS

1PCS

G:SIDE RAIL 2PCS

H:CENTER CROSS BAR 1PC



I:SUPPORT LEG 3PCS



J:SUPPORT LEG 2PCS



K:SIDE CROSS BAR 2PCS



L:CENTER RAIL SUPPORT BAR 2PCS



M:BRACKET 1PC



N:SLAT 14PCS



0:SLAT CONNECTOR 28PCS

## HARDWARE SET:



1:Bolt 1/4\*17.5mm X 12pcs



2:Bolt 1/4\*22mm X 4pcs



3:Bolt 5/16\*19mm X 8pcs



4:Bolt 1/4\*40mm X 4pcs





6:Nut 1/4 X 4psc



7:Washer 1/4 X 20psc




8: L-Allen Key X 1pc



9: Wrench X 1PC


Page: 1/3

Note: Please do not tighten all bolts until the bed is assembled completely.

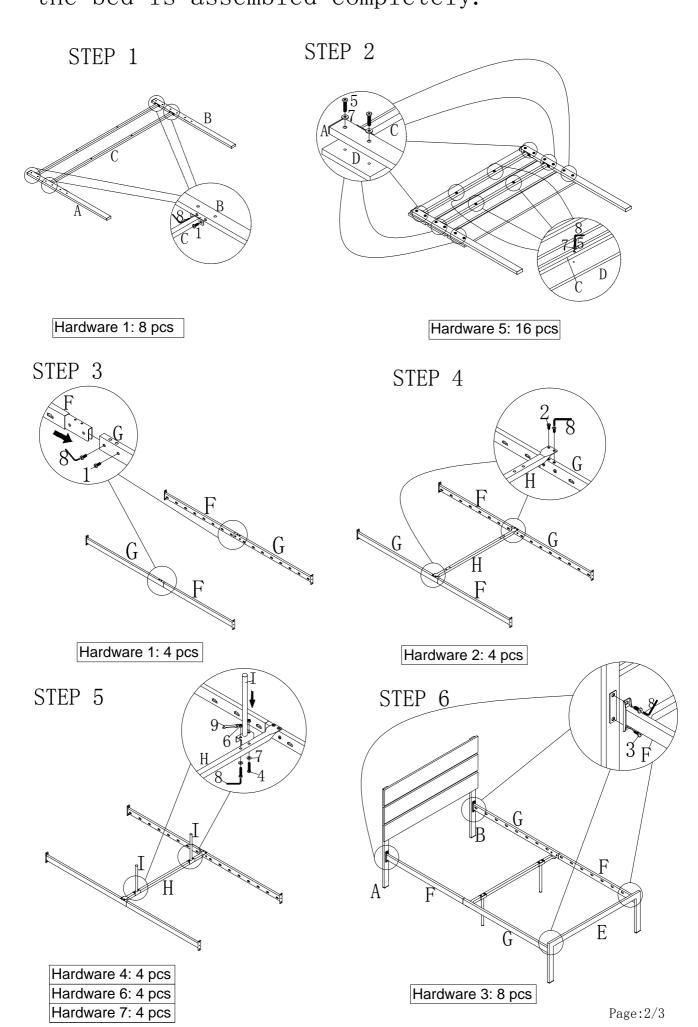

Note: Please do not tighten all bolts until the bed is assembled completely.

STEP 9

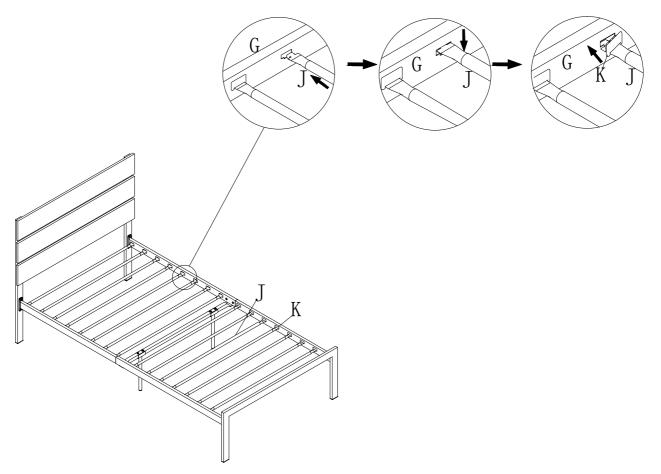

COMPLETED



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/ scratches and discoloration.  $\frac{1}{2}$ 

Page:3/3