

FLAT WASHER 5/16" x 1"

SLIT LOCK WASHER 5/16"

SCREW
8 x 3/4"

SOCKET BOTTOM SCREW
5/16" x 1"

DETAIL C

STEP 1

1.- ALIGN THE RAILS TO THE PLATFORM,
THE METAL SUPPORT MUST BE ALIGNED
THE HOLES

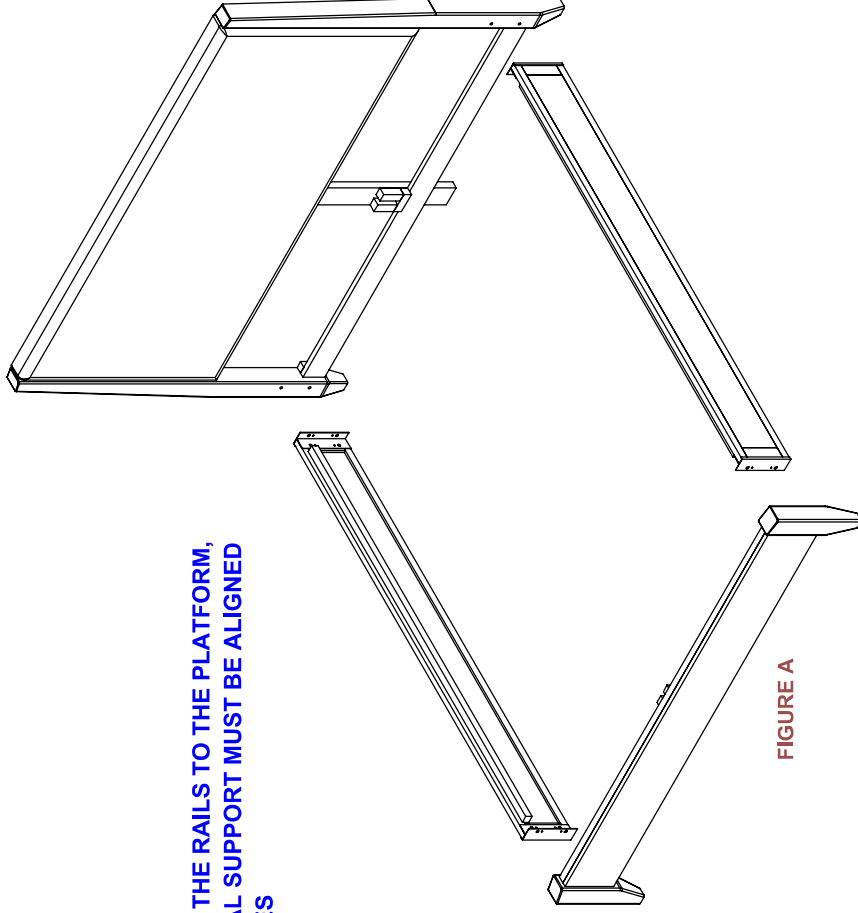


FIGURE A

STEP 2

2.- WHEN THE RAILS ARE ALIGNED INSERT
THE SCREWS AS SHOWN IN DETAIL A AND
B, FIRT THE PLATFORM SIDE AND THEN
THE HEADBOARD SIDE


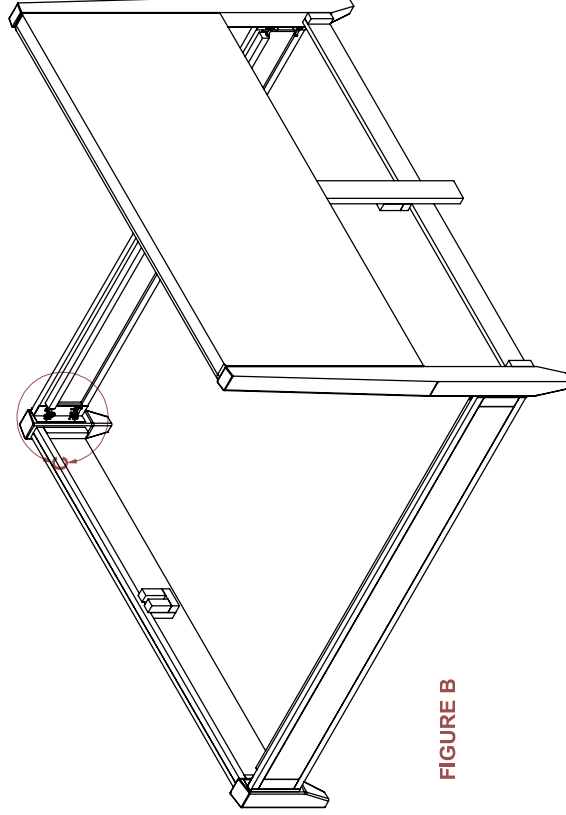



FIGURE B

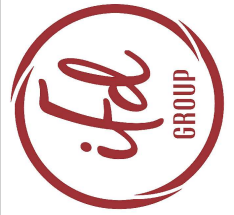

ASSEMBLING INSTRUCTIONS

I-IFD6212QUEEN

ITEM #	DESCRIPTION	#
1	SCREW 8 x 3/4"	8
2	BUTTOM SOCKET SCREW 5/16" x 1"	8
3	FLAT WASHER 5/16"	8
4	SLIT LOCK WASHER 5/16"	8
5	ALLEN KEY 1/4"	1

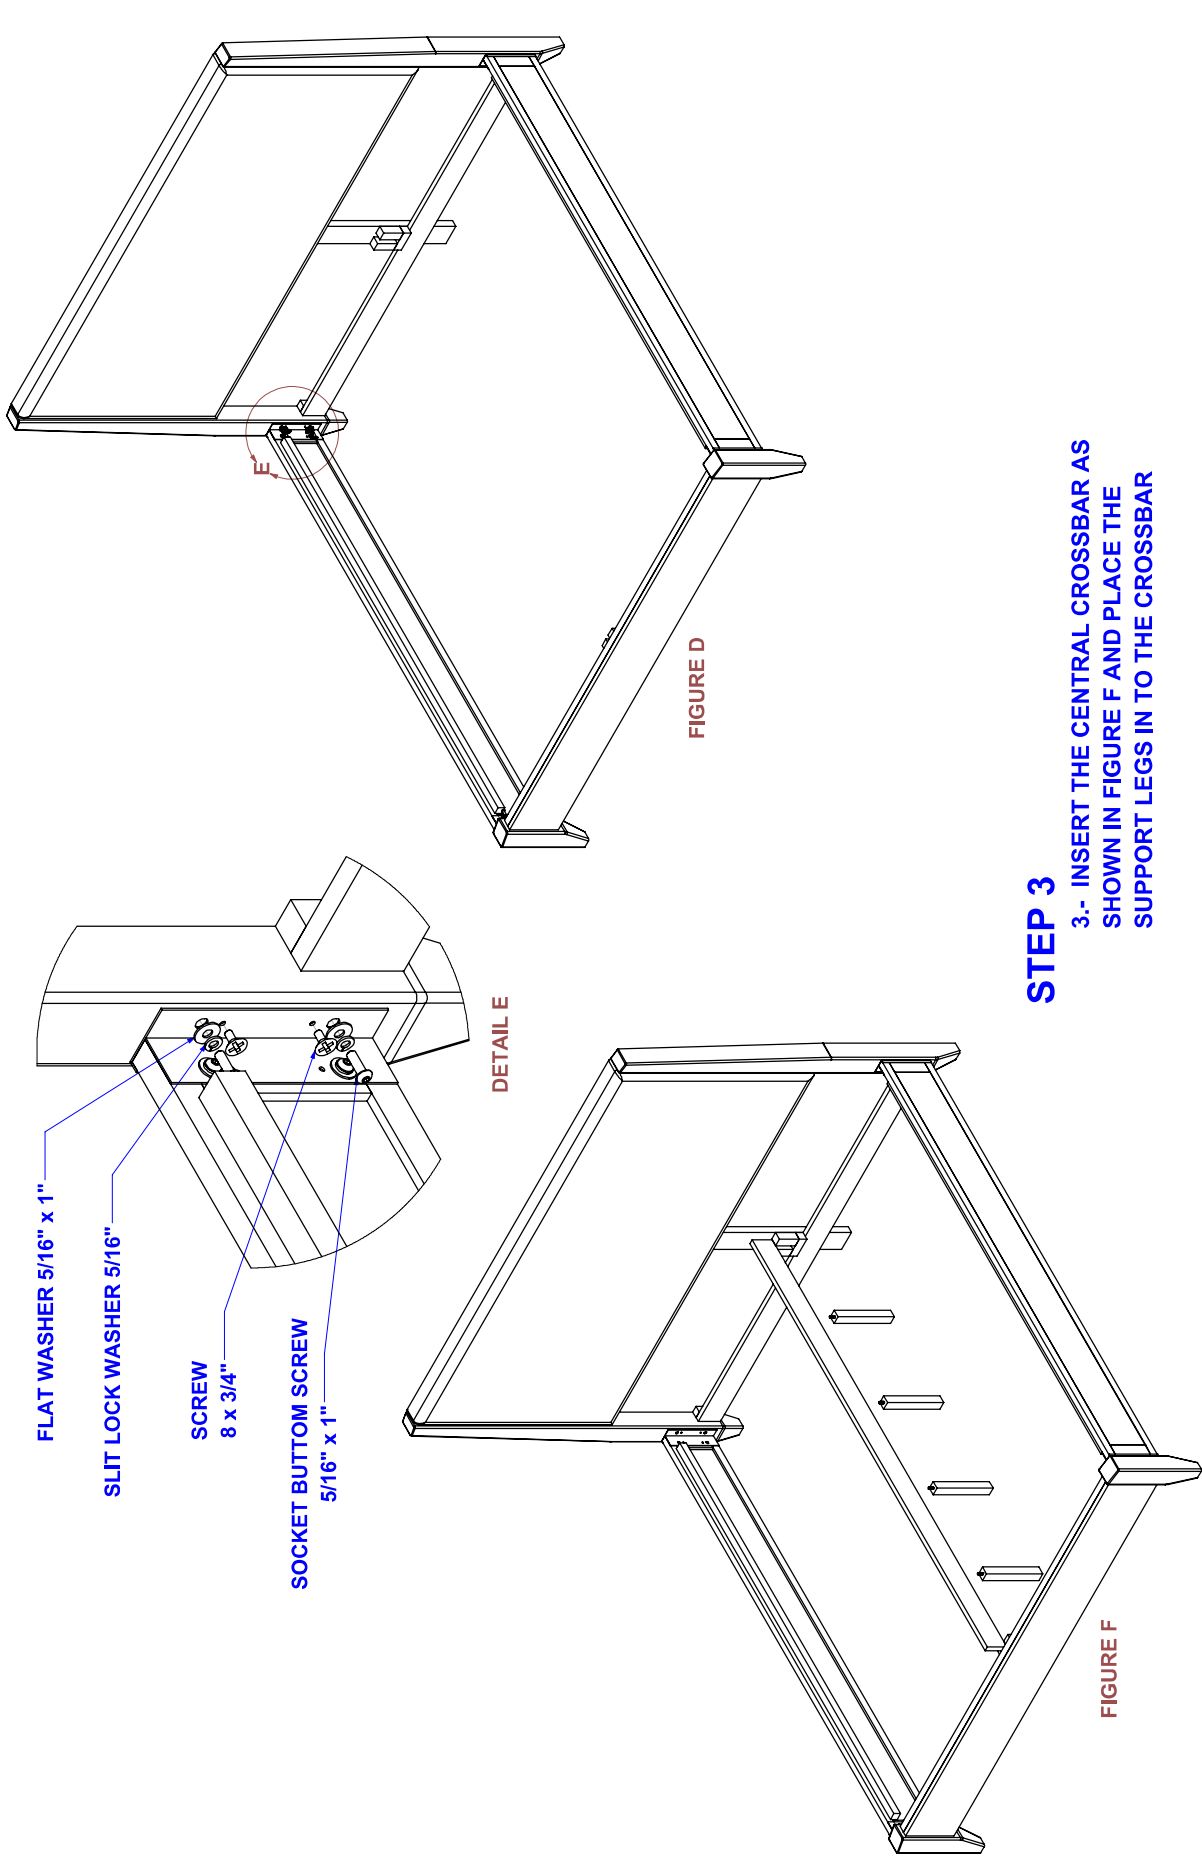

STEP 3
3.- INSERT THE CENTRAL CROSSBAR AS
SHOWN IN FIGURE F AND PLACE THE
SUPPORT LEGS IN TO THE CROSSBAR



ASSEMBLING INSTRUCTIONS
I-IFD6212QUEEN

ITEM #	DESCRIPTION	#
1	SCREW 8 x 3/4"	8
2	BUTOM SOCKET SCREW 5/16" x 1"	8
3	FLAT WASHER 5/16"	8
4	SLIT LOCK WASHER 5/16"	8
5	ALLEN KEY 3/16"	1

STEP 4

4.- WHEN THE SUPPORTS LEGS AND THE CROSSBAR ARE IN THE RIGHT PLACE IS TIME TO PLACE THE SLATS THEM OVER THE RAILS AS SHOW IN FIGURE G

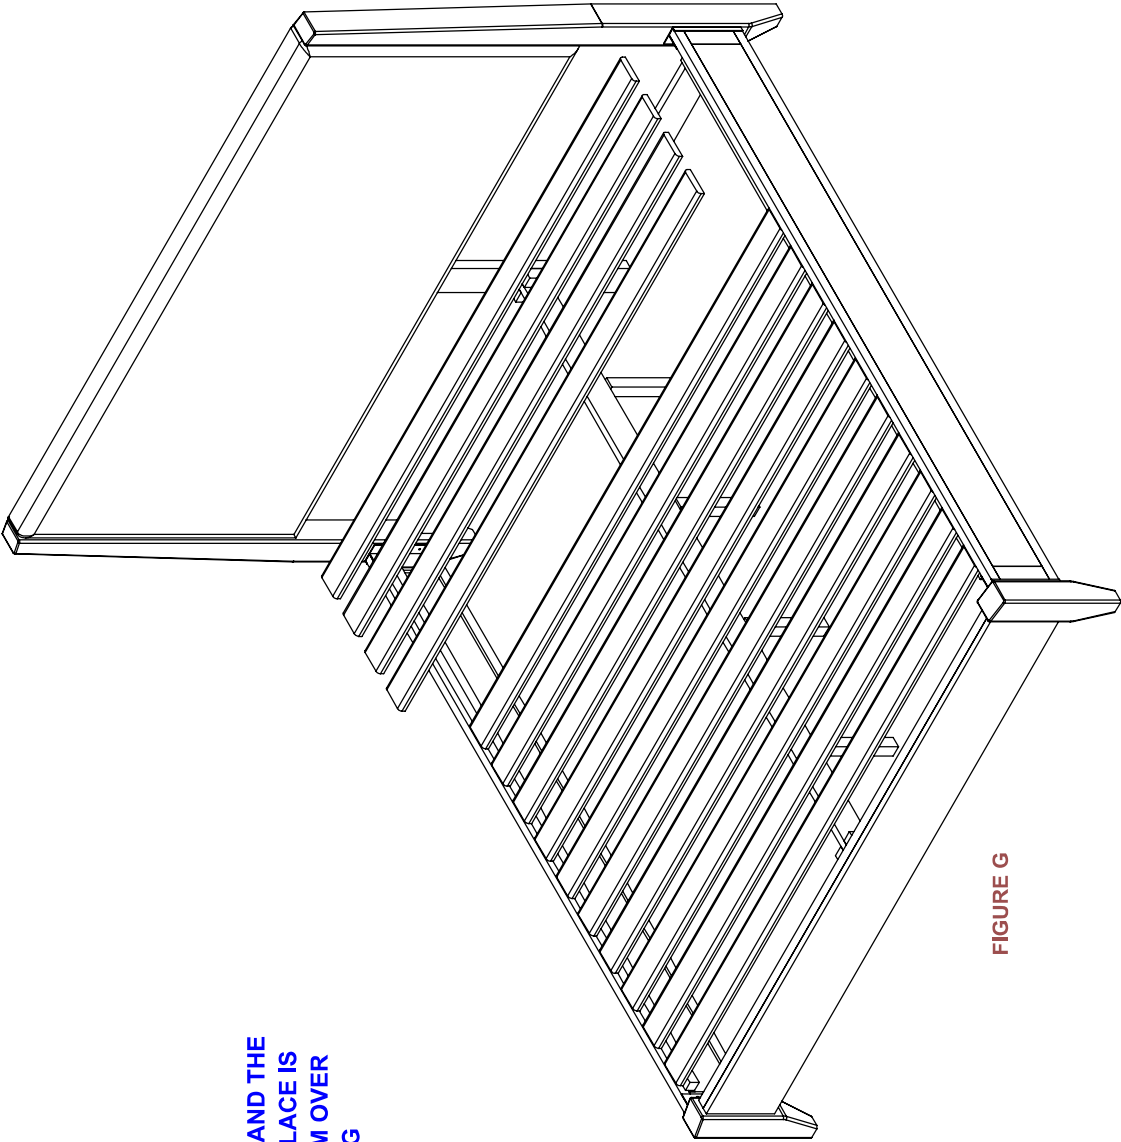


FIGURE G



ASSEMBLING INSTRUCTIONS

I-IFD6212QUEEN

ITEM #	DESCRIPTION	#
1PIJ036	SCREW 8 x 3/4"	8
1TOR008	BUTTOM SOCKET SCREW 5/16" x 1"	8
1RON003	FLAT WASHER 5/16"	8
1RON011	SLIT LOCK WASHER 5/16"	8
1HER251	ALLEN KEY 3/16"	1