ASSEMBLY INSTRUCTION FOR ACME FURNITURE MODEL #59297

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, indentify and count all parts and metal hardware. Compare with parts list to be sure all parts are pesent. If any parts(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed

*** Do not fully tighten screws until fully assembled***

PARTS LIST

HARDWARES REQUIRED

A) CHAIR BACK - 1PC

- (1) LONG BOLT Ø1/4" X 60MM 8PCS
- B) ARM REST (LEFT&RIGHT) 2PCS
- 2) SHORT BOLT Ø1/4" X 32MM 9PCS

C) CHAIR SEAT - 1PC

- (4) BIG FLAT WASHER Ø1/4" X 19MM 2PCS
- $\widehat{\mathbb{D}}$) LEG (LEFT&RIGHT) 2PCS
- 5) SMALL FLAT WASHER Ø1/4" X 12.5MM 15PCS


LOCK WASHER Ø1/4" X 10.5MM - 17PCS

- F) FRONT STRETCHER 1PC
- 6) BARREL NUT Ø1/4" X 13MM 6PCS

ALLEN WRENCH M4 - 1PC

F) BACK STRETCHER - 1PC

WOOD PLUG Ø13.5MM X 8MM - 9PCS

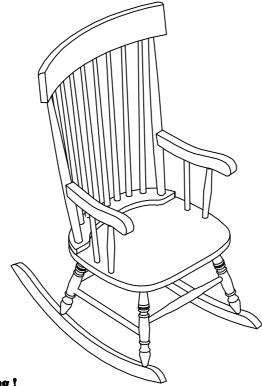




Warning!


- ${\bf 1}$. Don't attempt to repair or modify parts that are broken or defective . Please contact the store immediately .
- 2. This product is for home use only and not intended for commercial establishment.

ASSEMBLY INSTRUCTION FOR ACME FURNITURE MODEL #59297

STEP 1



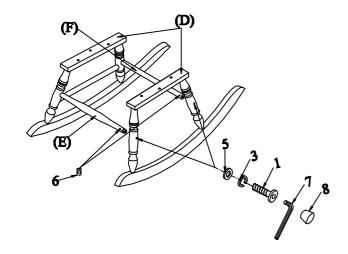

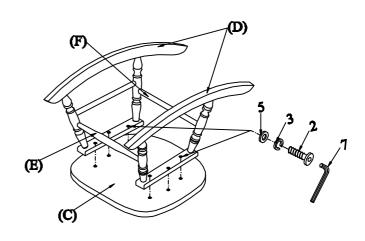

STEP 3

STEP 4

