


## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

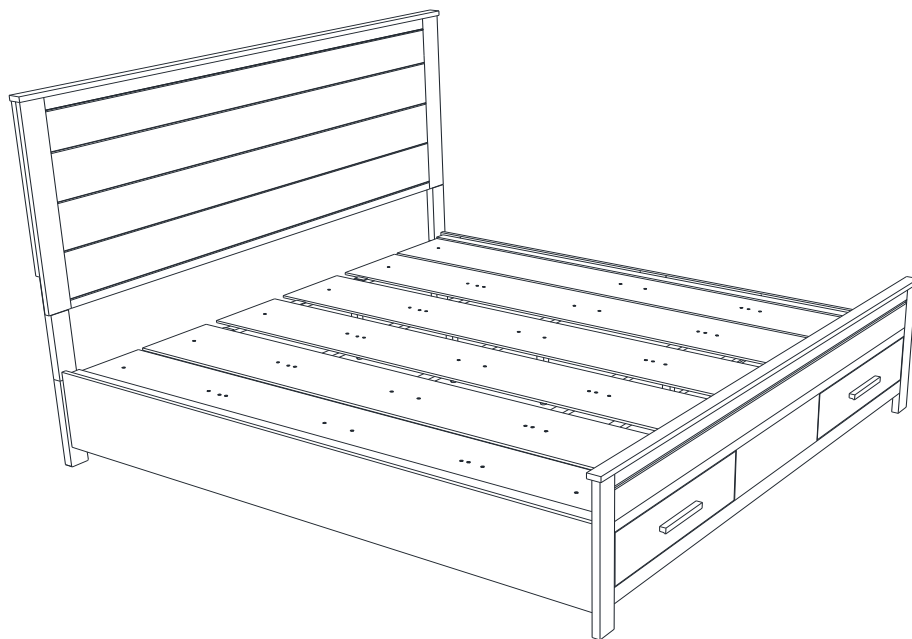

*Fine Furniture for every stage of life*

### **222631KW (B1-B3)** **California King Storage Bed**

# ITEM: 222631KW (B1-B3)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

20 MINUTES

## PARTS IDENTIFICATION


### B1 ( BOX 1)

A HEADBOARD  
PANEL



1PC


B FOOTBOARD  
FRAME

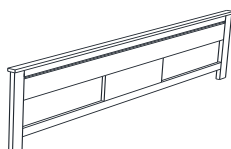

1PC


### B2 ( BOX 2)

E BED RAIL




2PCS

F BED SLAT




3PCS

G BED SLAT WITH  
MARKING

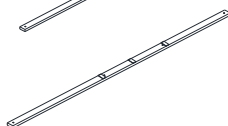


2PCS

H CONCEAL  
PANEL



4PCS

I CONCEAL  
PANEL WITH  
SIDE CROWN



2PCS

C RIGHT  
HEADBOARD  
LEG




1PC

D LEFT  
HEADBOARD  
LEG



1PC

J DRAWER  
BOTTOM  
TRESTLE BAR



1PC

K DRAWER  
SUPPORT RAIL



2PCS

L BED SLAT  
SUPPORT WITH  
LEVELER



10PCS


M DRAWER  
SUPPORT LEG  
WITH LEVELER



1PC


### B3 ( BOX 3)

N DRAWER BOX




2PCS

HB 222631KW(B1)  
FROM BOX 1  
HEADBOARD  
COMPLETE

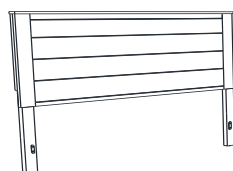

1PC

B 222631KW(B1)  
FROM BOX 1  
FOOTBOARD  
FRAME

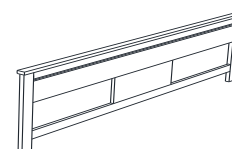

1PC

# ITEM: 222631KW (B1-B3)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




### WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 222631KW (B1)

1 **BOLT**  
(M6 x 30mm - BLK)  6PCS

2 **LOCK WASHER**  
(1/4" - BLK)  6PCS

3 **FLAT WASHER**  
(1/4" ID x 13mm - BLK)  6PCS

4 **ALLEN WRENCH**  
(M4 x 60mm - BLK)  1PC


### Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 222631KW (B2)


5 **FLAT HEAD SCREW**  
(M4 x 32mm - RBW)  14PCS

6 **PAN HEAD SCREW**  
(M3.5 x 20mm - BLK)  30PCS

7 **SHORT BOLT**  
(M6 x 35mm - BLK)  2PCS

8 **LONG BOLT**  
(M6 x 50mm - BLK)  11PCS

9 **LOCK WASHER**  
(1/4" - BLK)  2PCS

10 **FLAT WASHER**  
(1/4" ID x 13mm - BLK)  2PCS

11 **SMALL ALLEN WRENCH**  
(M4 x 60mm - BLK)  1PC


12 **BIG ALLEN WRENCH**  
(M5 x 65mm - BLK)  1PC

### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

## ASSEMBLY INSTRUCTIONS


### STEP 1

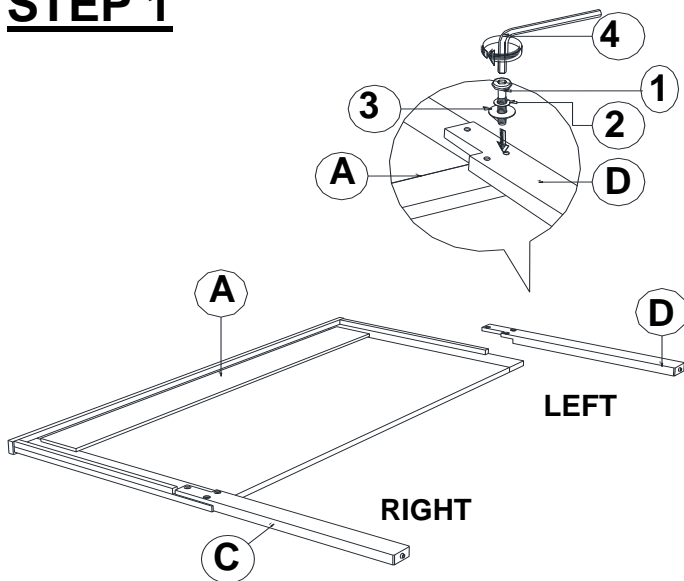


**\*\*BACK VIEW\*\***

Note : Please take note of the marking sticker (L&R) on the leg.


### STEP 2

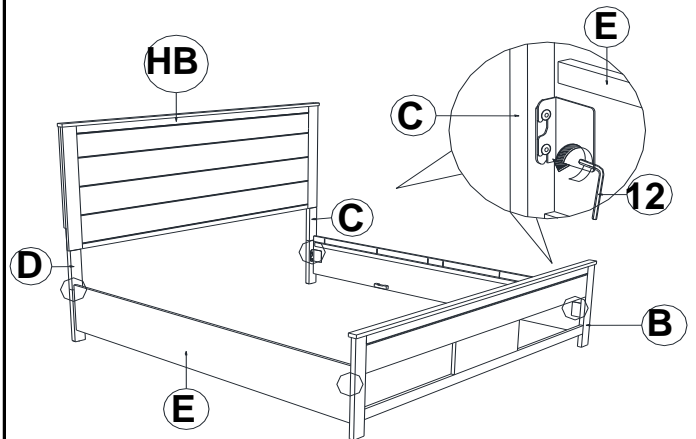

### STEP 3

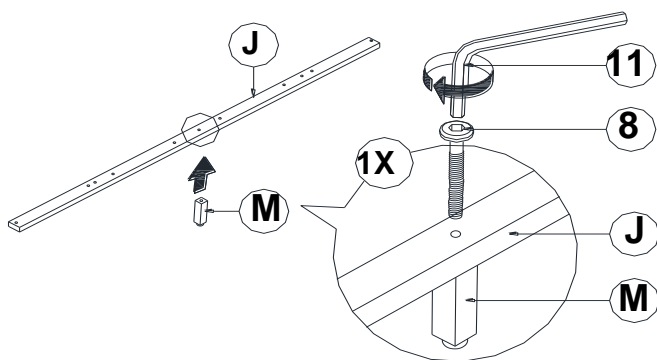


### STEP 4

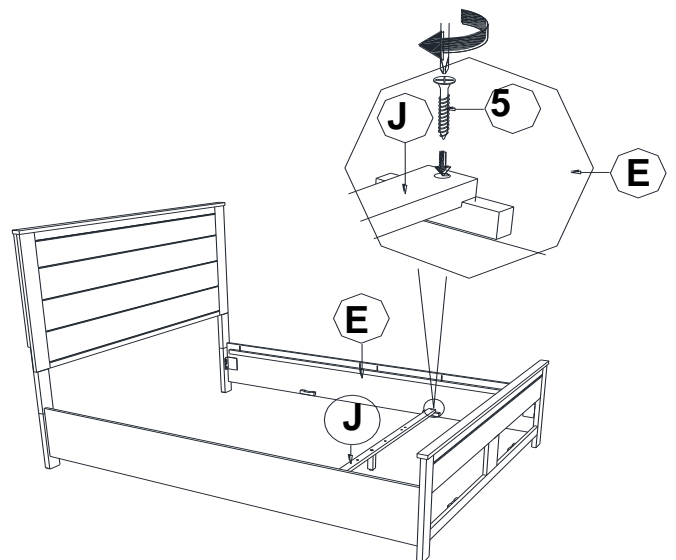


## ASSEMBLY INSTRUCTIONS


### STEP 5

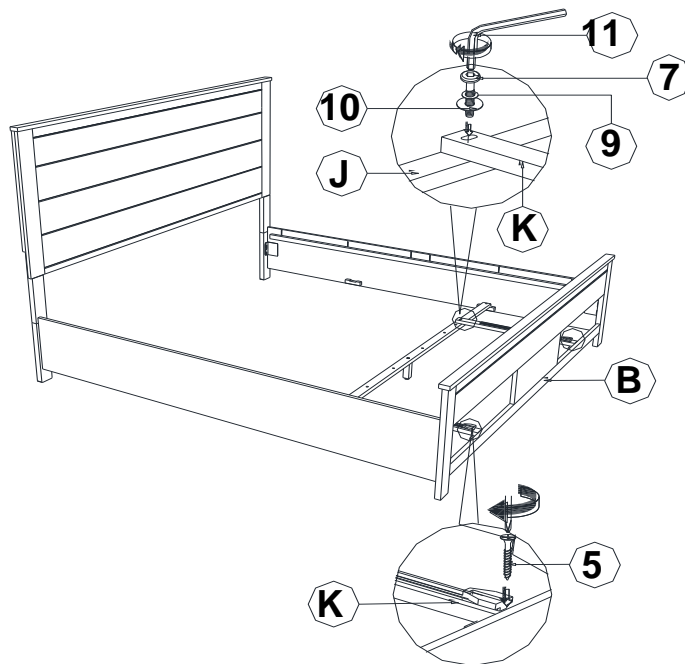


### STEP 6

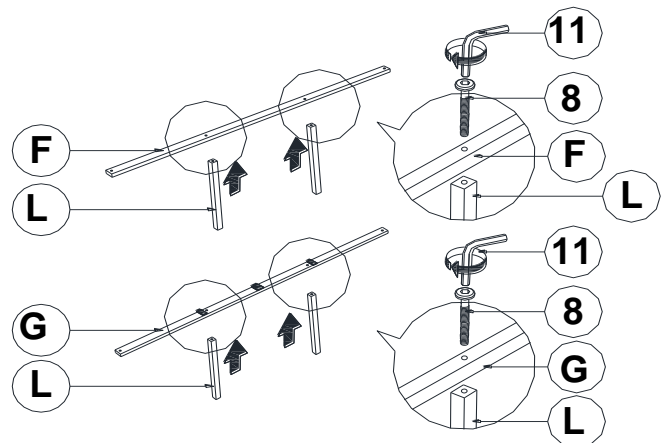

### STEP 7


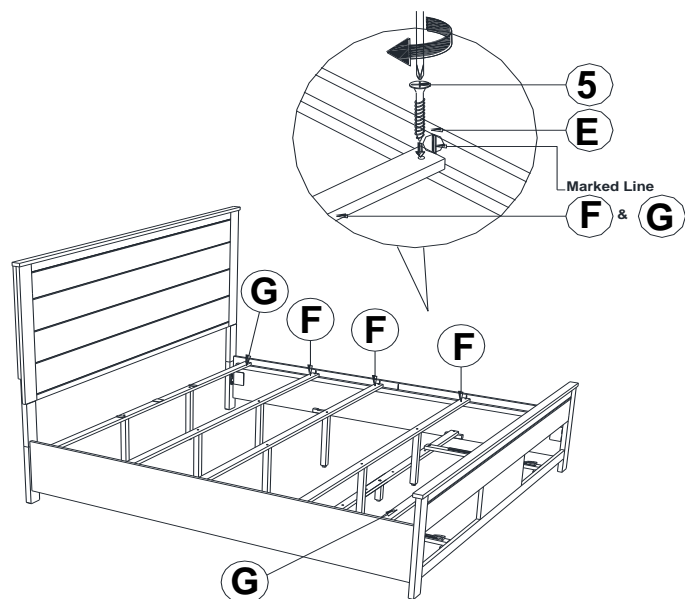


### STEP 8

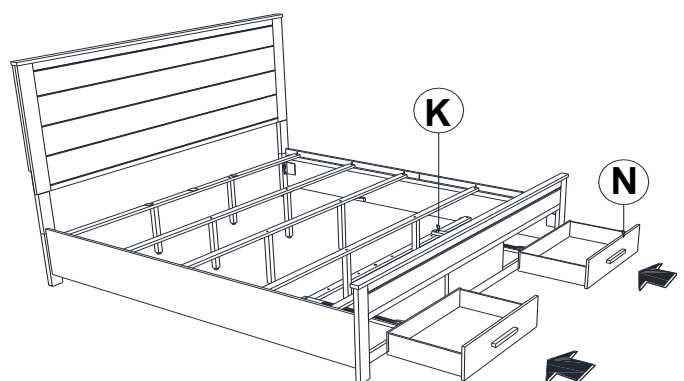


## ASSEMBLY INSTRUCTIONS

### STEP 9

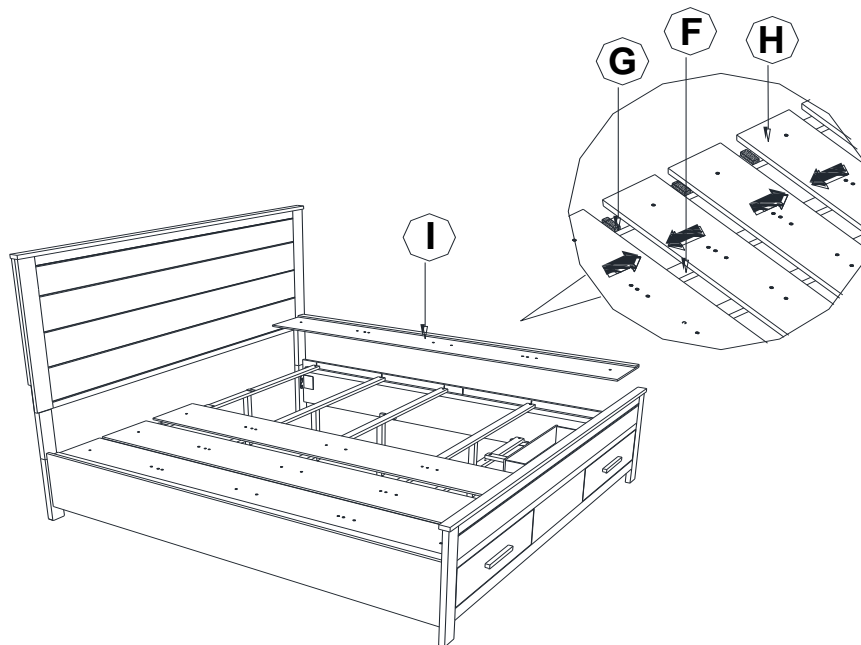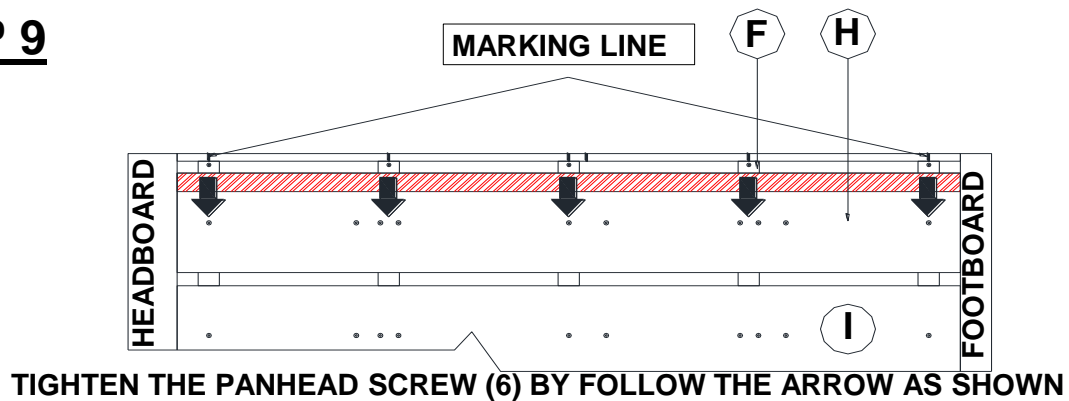

### STEP 10 COMPLETE

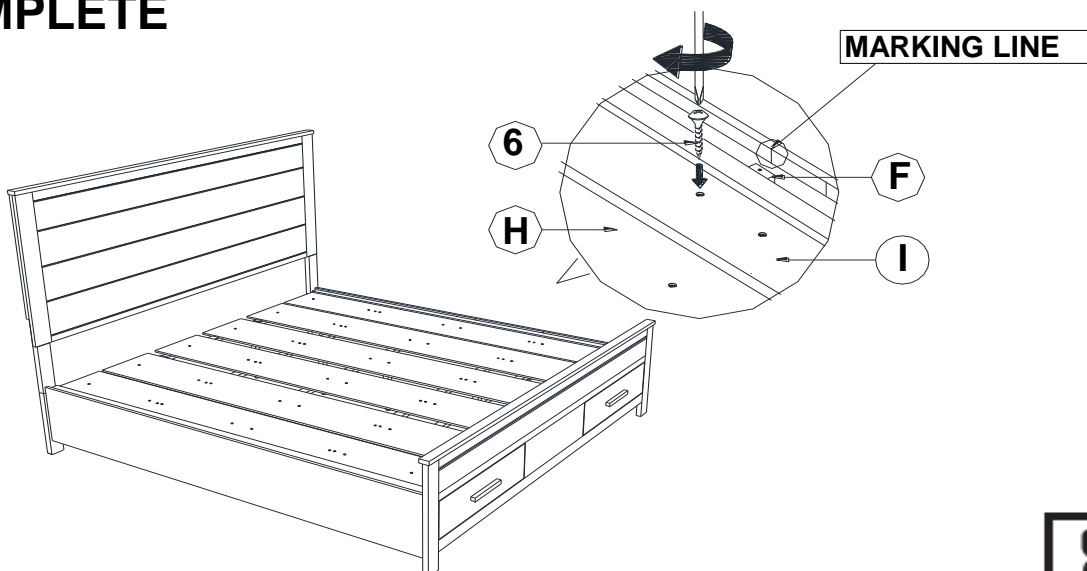


ITEM: **222631KW (B1-B3)**



**INNER SIZE: 76.97" x 85.98"**

**SLAT SUPPORT : 12.99" H**

**INNER SIZE OF DRAWER : 23.23" x 14.96" x 5.12"**

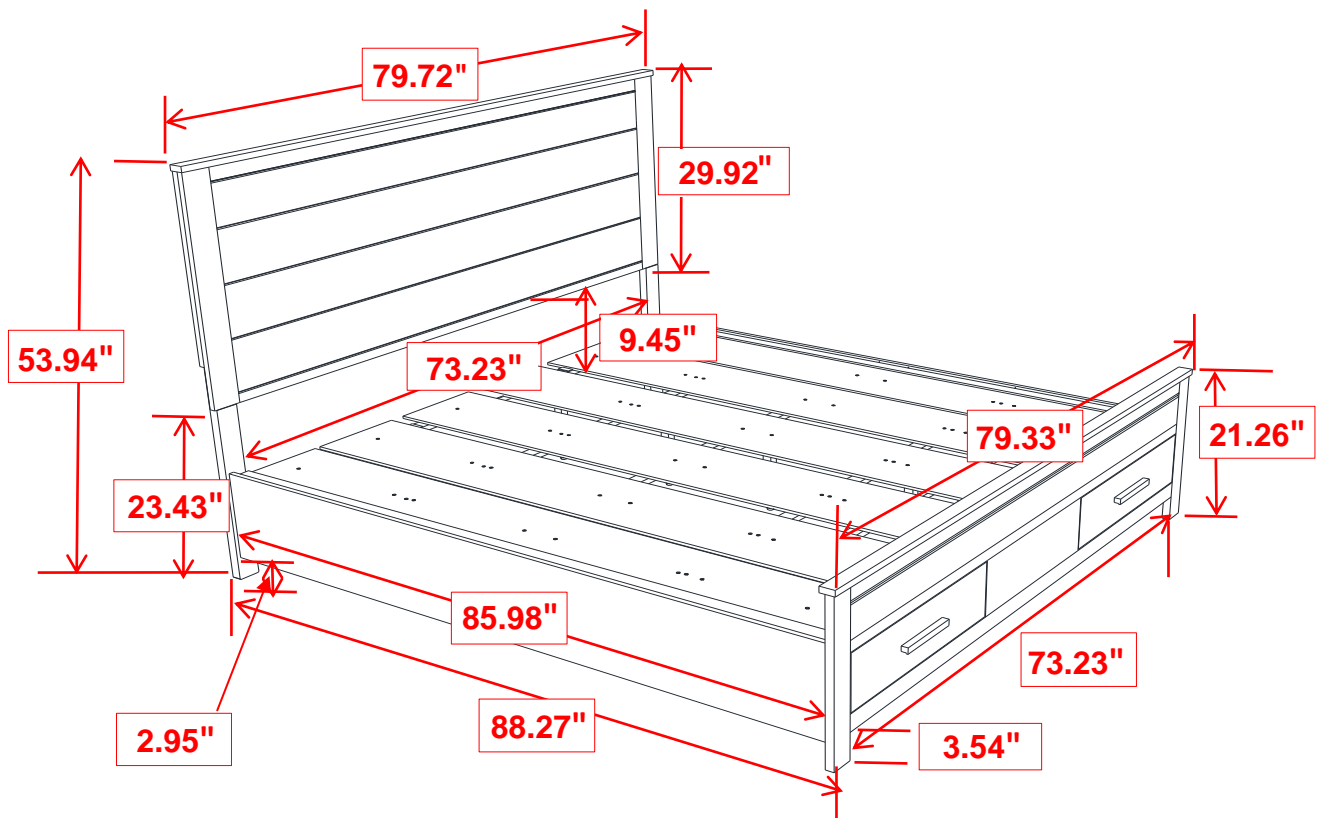

**Note :** Dimension tolerance  $\pm 5\%$