

Headboard hardware located in velcro pouch in back of headboard.  
Footboard hardware located in one end of the footboard/siderails.


## ASSEMBLY INSTRUCTIONS

Item No: BSOF#8000

Description: QUEEN BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

### Step 1:

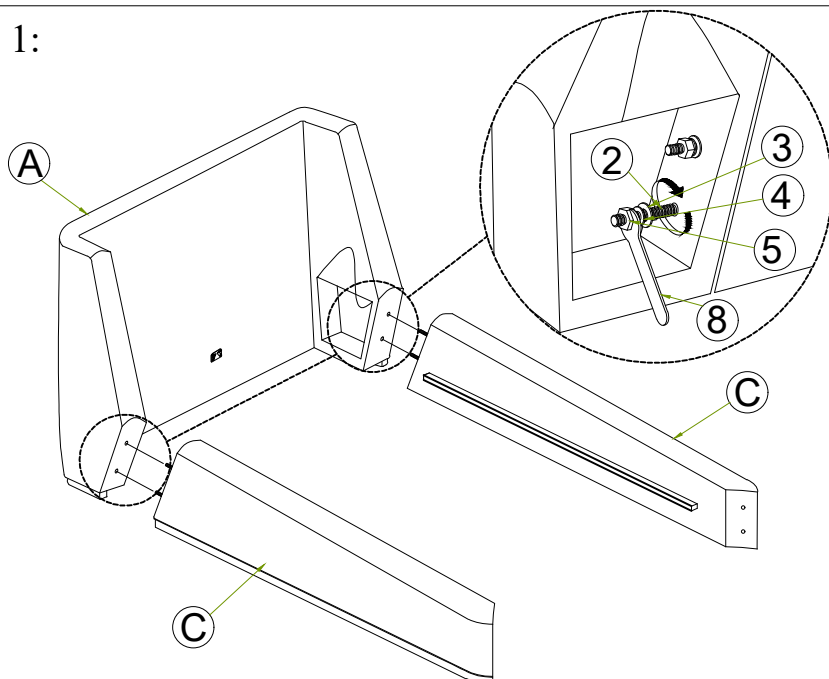

#### TOOLS REQUIRED (NOT PROVIDED)

Philips screwdriver

#### PART LIST


No.	Description	Sketch	Q'ty
A	Headboard		1 PC
B	Footboard		1 PC
C	Side Rail		2 PCS
D	Centre Rail		1 PC
E	Slats		13 PCS
F	Long Support Leg		3 PCS

2	BOLT Ø5/16x90mm		4 PCS
3	FLAT WASHER (Ø5/16)22mm		4 PCS
4	LOCK WASHER (Ø5/16)		4 PCS
5	Hex Nut Ø5/16" x 12 x 5mm		4 PCS
8	WRENCH M5 x 90mm		1 PC

#### HARDWARE LIST

No.	Description	Sketch	Q'ty
1	BOLT Ø5/16 x 50mm		3 PCS
2	THREAD BOLT Ø5/16 x 90mm		8 PCS
3	FLAT WASHER Ø5/16 x 22mm		11 PCS
4	LOCK WASHER (Ø5/16)		11 PCS
5	Hex Nut Ø5/16" x 12 x 5mm		8 PCS
6	SCREW (M4x38mm)		26 PCS
7	SCREW (M4x20mm)		4 PCS
8	WRENCH M5 x 90mm		1 PC
9	ALLEN KEY (30*75mm)		1 PC

### Step 2:

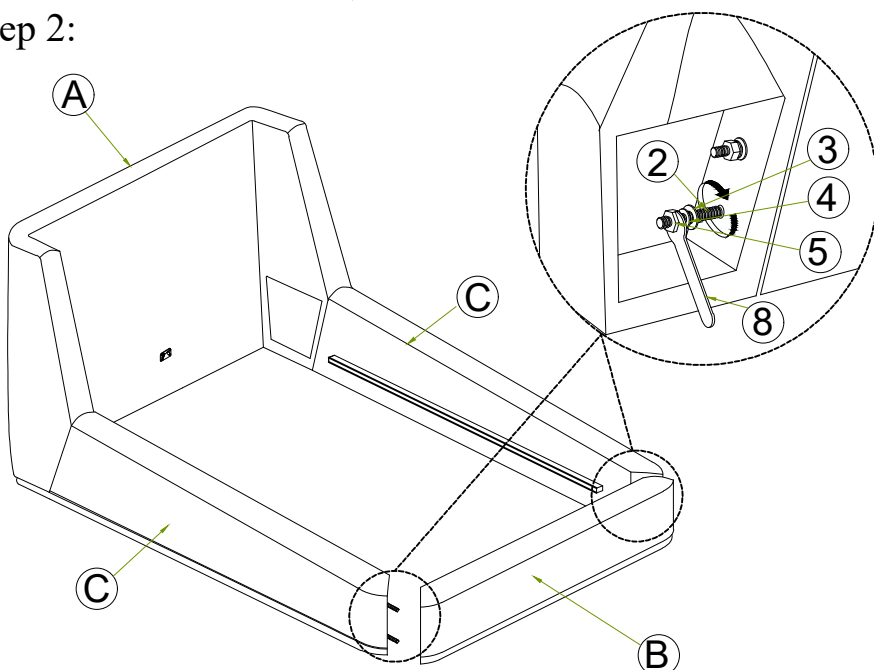

2	BOLT Ø5/16x90mm		4 PCS
3	FLAT WASHER (Ø5/16)22mm		4 PCS
4	LOCK WASHER (Ø5/16)		4 PCS
5	Hex Nut Ø5/16" x 12 x 5mm		4 PCS
8	WRENCH M5 x 90mm		1 PC

Headboard hardware located in velcro pouch  
in back of headboard.  
Footboard hardware located in one end of the  
foorboard/siderails.


## ASSEMBLY INSTRUCTIONS

Item No: BSOF#8000

Description: QUEEN BED


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

### Step 3:

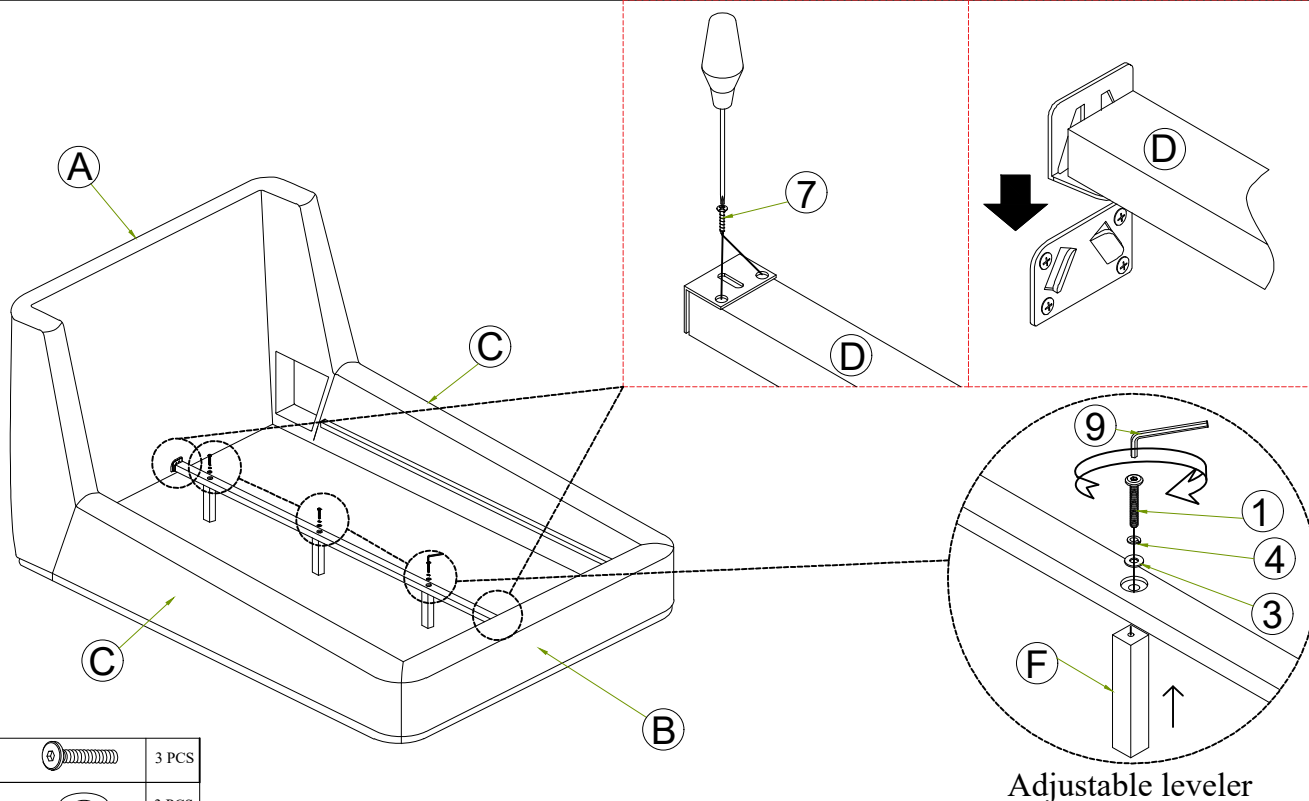

1	BOLT Ø5/16x50mm		3 PCS
3	FLAT WASHER (Ø5/16)22mm		3 PCS
4	LOCK WASHER (Ø5/16)		3 PCS
7	SCREW (M4x20mm)		4 PCS
9	ALLEN KEY (35*100mm)		1 PC

### Step 4:

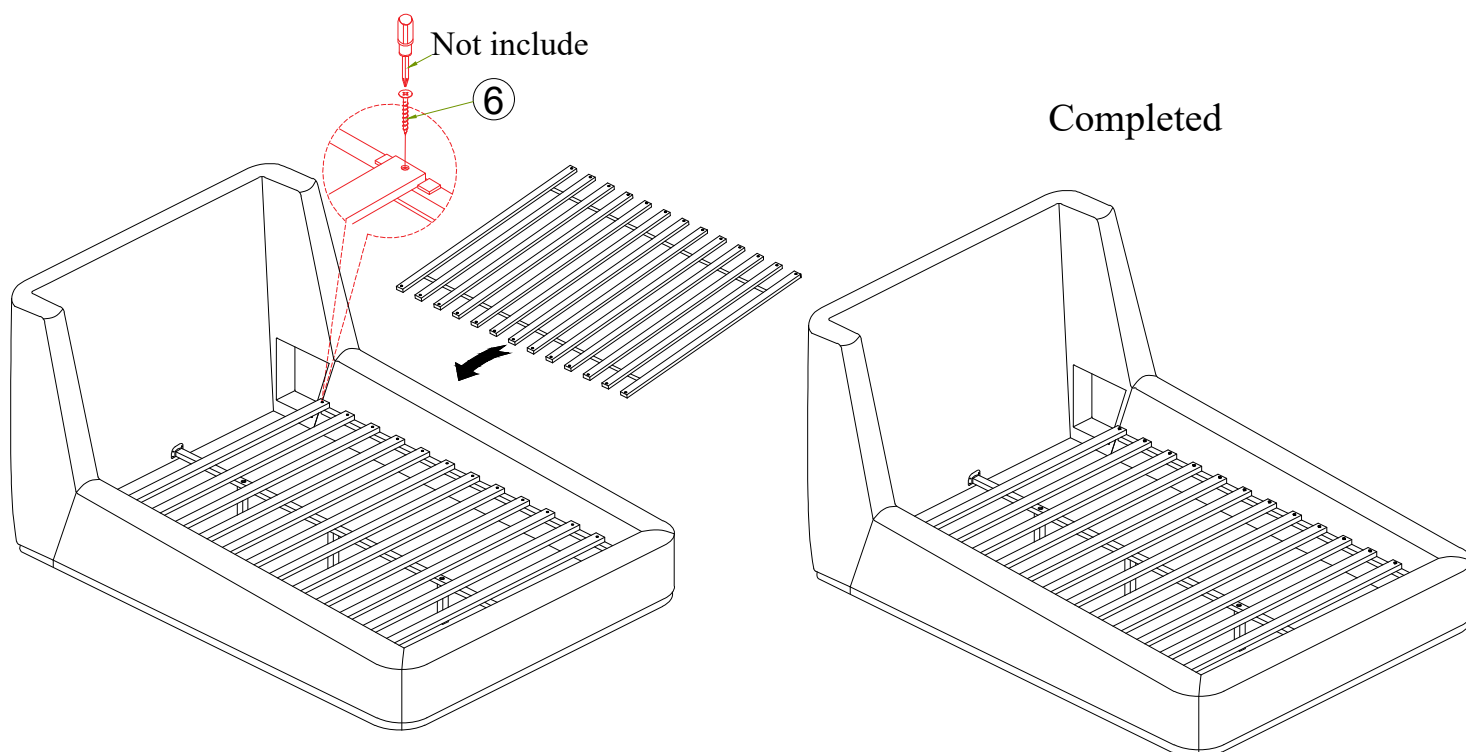

6	SCREW (M4x38mm)		26 PCS
---	-----------------	--	--------