


ASSEMBLY INSTRUCTIONS

3006 - TWIN TWIN ACTIVITY BUNK BED

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure that all parts are included.

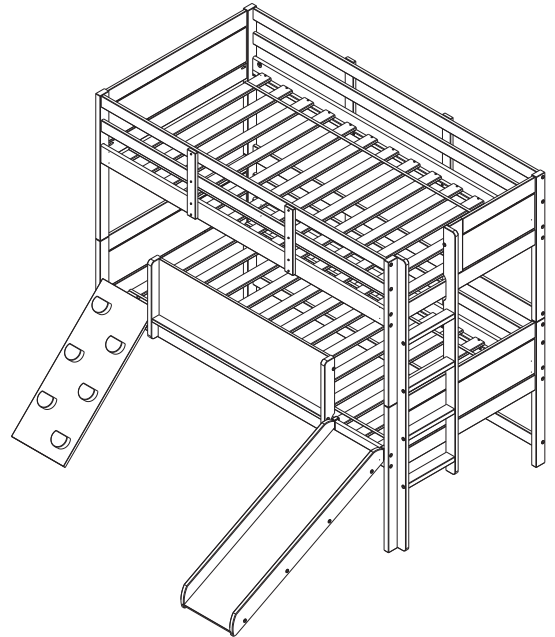

“DO NOT TIGHTEN SCREWS AND BOLTS UNTIL COMPLETELY ASSEMBLED”.

SIZE OF MATTRESS AND FOUNDATION

This bed is designed to use a Twin mattress (37½" - 38½" x 74"-75") and wooden slats sets, as provided by the manufacturer.

The total thickness of the mattress must not exceed 8" (inches).

Note: There must be at least 5" from top surface of mattress to top edge or guardrails.


REPLACEMENT PARTS:

Replacement parts, including additional guardrails, may be obtained from place of purchase or original distributor.


TO OBTAIN PARTS, PLEASE CONTACT: **DONCO TRADING COMPANY-FORT WORTH, TEXAS**

SAFETY WARNINGS!



- 1- Follow the information on the warning label appearing on the upper bunk end structure and on the carton.
Do not remove warning label from bed.
- 2- Always use the recommended size of mattress or mattress support, or both, to help prevent the likelihood of entrapment or falls.
- 3- The surface of mattress must be at least 5" below the upper edge of guardrails.
- 4- Do not allow children under 6 years of age to use the upper bunk.
- 5- Prohibit more than one person on upper bunk.
- 6- Periodically check and ensure that the guardrail, ladder and other components are in their proper position free from damage, and that all connectors are tight.
- 7- Do not allow horseplay on or under the bed and prohibit jumping on the bed.
- 8- Always use the ladder for entering and leaving the upper bunk.
- 9- Do not use substitute parts. Contact the distributor or dealer for replacement parts.
- 10- The use of a night light may provide added safety precaution for a child using the upper bunk.
- 11- If the bunk bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.
- 12- Always use guardrails on both long sides of the upper bunk.
- 13- The use of water or sleep flotation mattresses is prohibited.
- 14- Keep these instructions for future reference.
- 15- Strangulation Hazard - Never attach or hang items to any part of the bunk bed that are not designed for use with the bed: for example, but not limited to, hooks, belts, and jump ropes, etc.

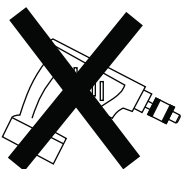



* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.

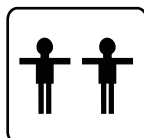

+

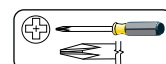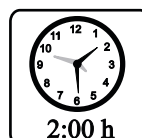

(Not included)

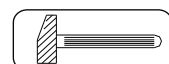

(Not included)



Tools Required


IMPORTANT: PLEASE READ INSTRUCTIONS BEFORE STARTING THE ASSEMBLY















**WARNING LABEL
DO NOT REMOVE**



**CERTIFICATION
LABEL
DO NOT REMOVE**


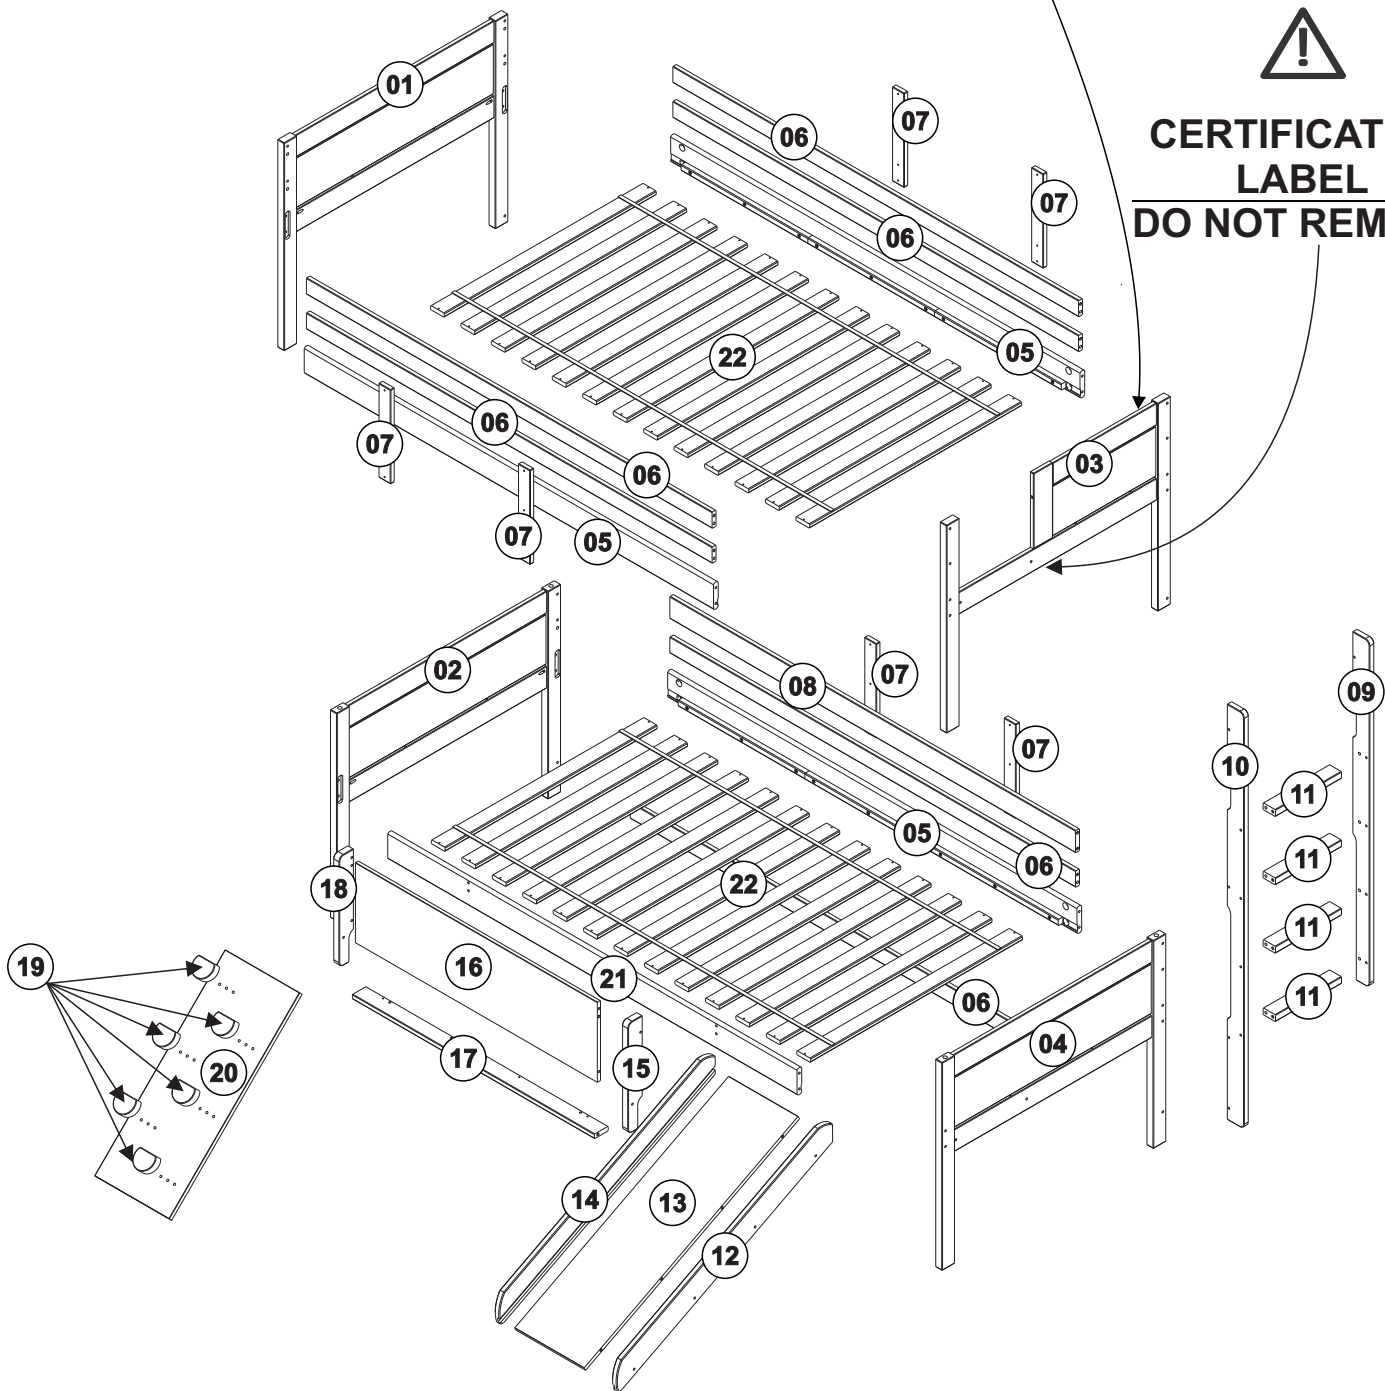


Identifying the Hardware-Identify the hardware using the illustrations below.

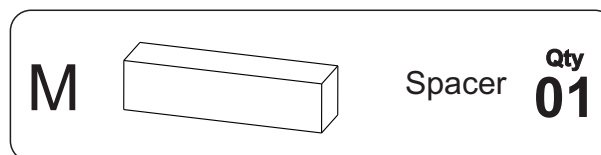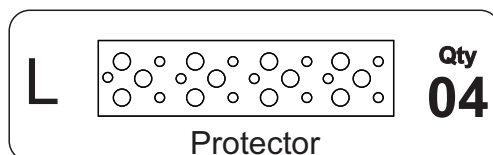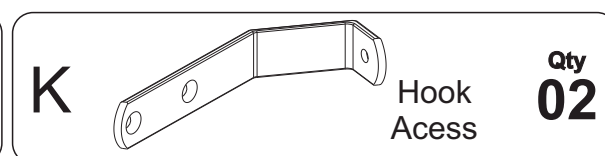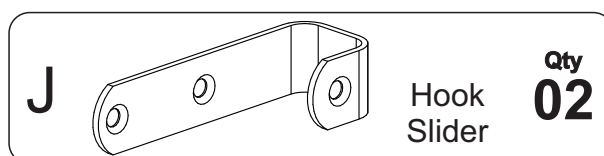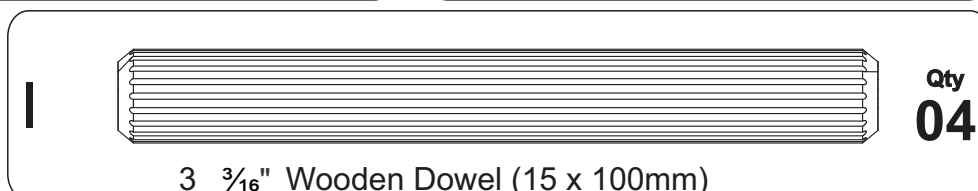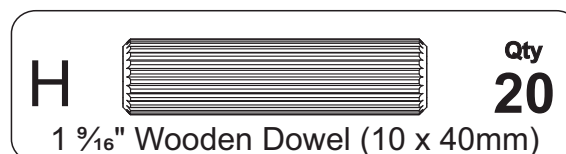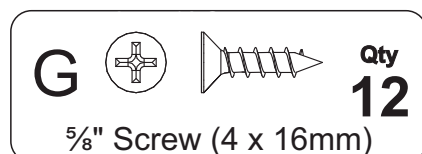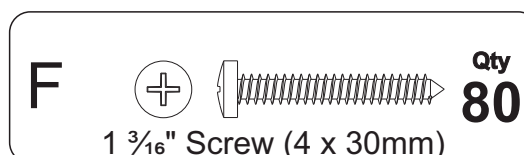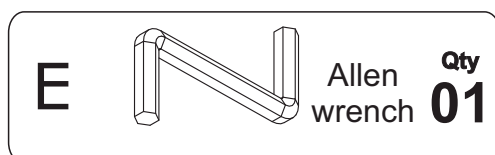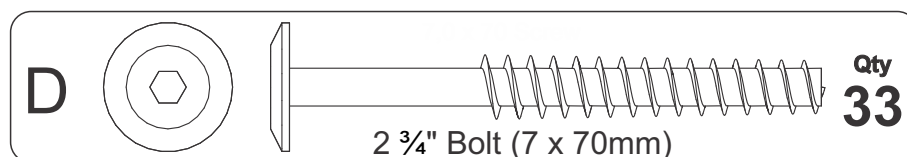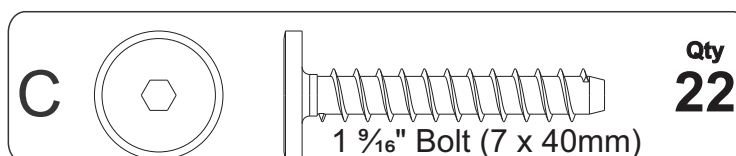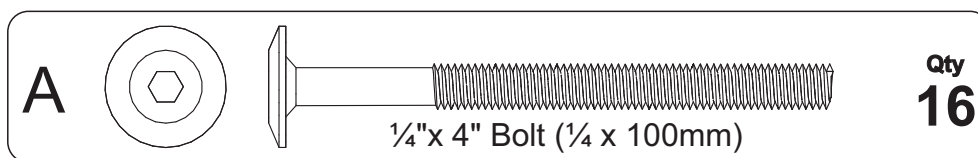



*Full size screws and bolts, for conference.

3006 - TWIN TWIN ACTIVITY BUNK BED OPTIONS

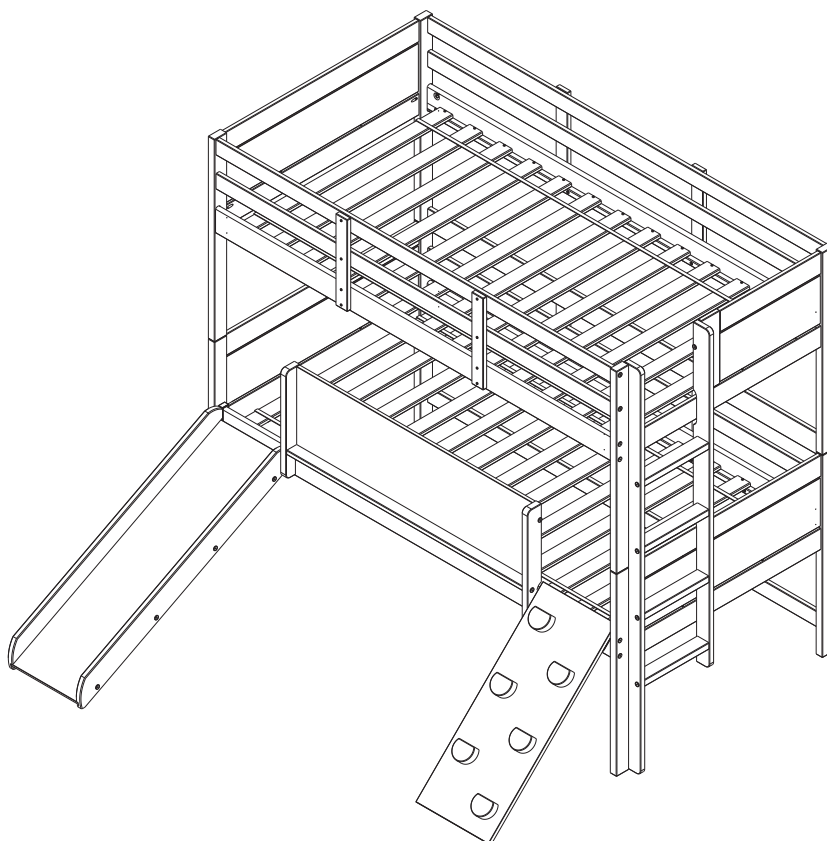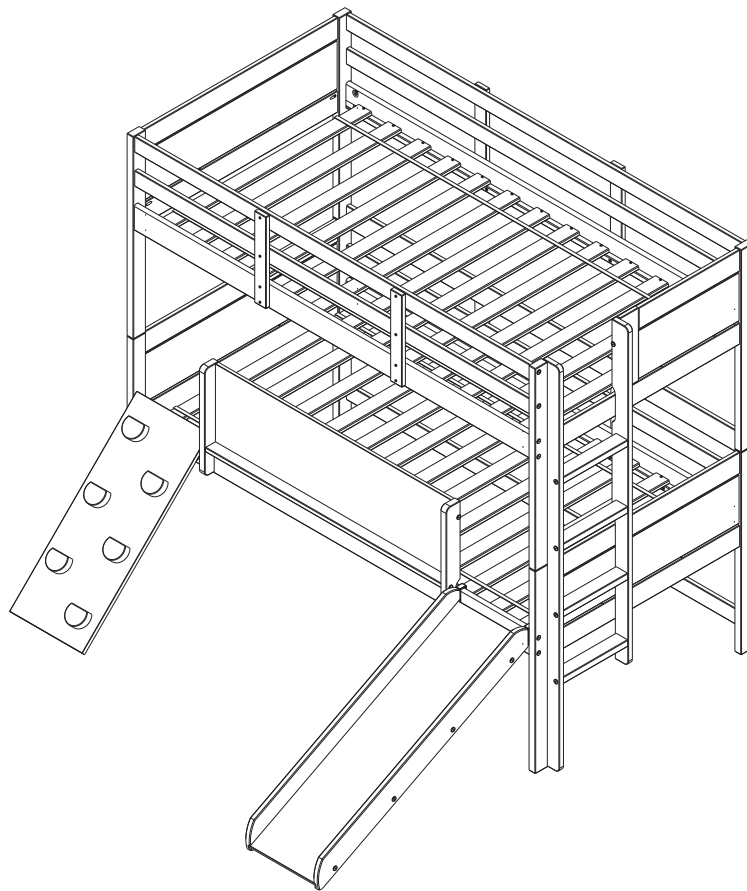

01

BOTTOM BED

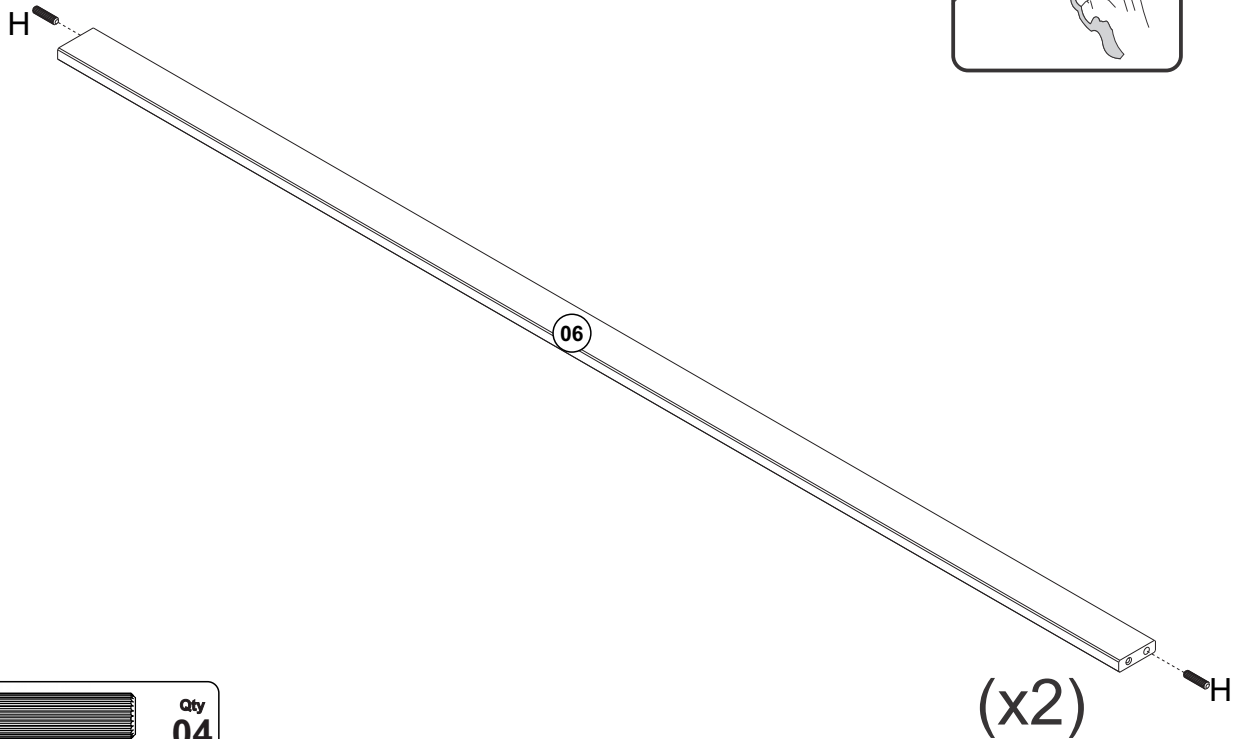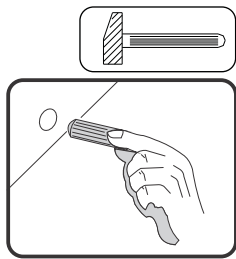

H






Qty
04

1 1/16" Wooden Dowel

02

BOTTOM BED

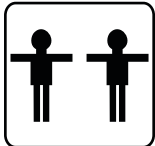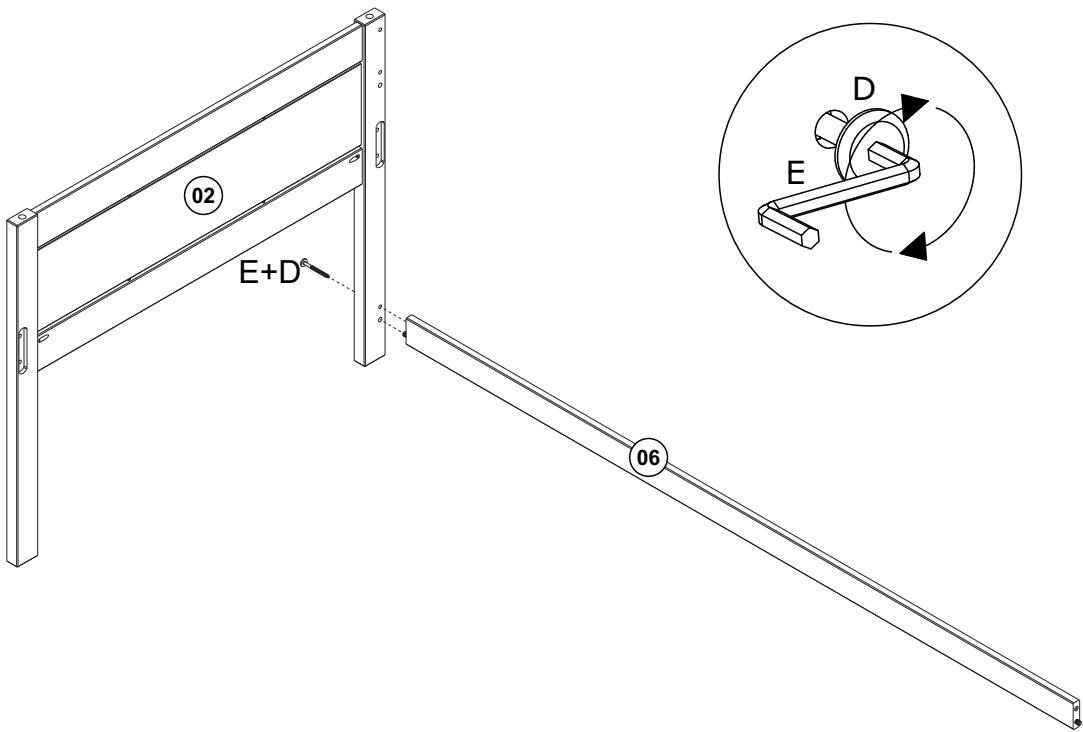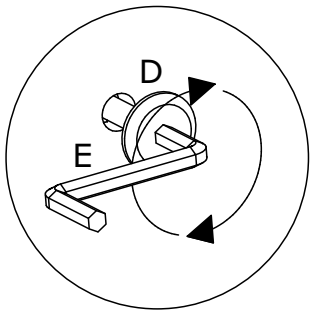

**IN THIS STEP IS NECESSARY 2 PEOPLE TO AVOID DAMAGE.
ONE TO ATTACH THE BOLTS THE HEADBOARD AND ONE
TO HOLD THE OTHER END OF THE CROSSBAR.**


D



Qty
01

2 3/4" Bolt



E





Allen
wrench

Qty
01


03

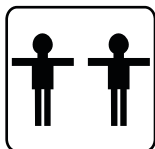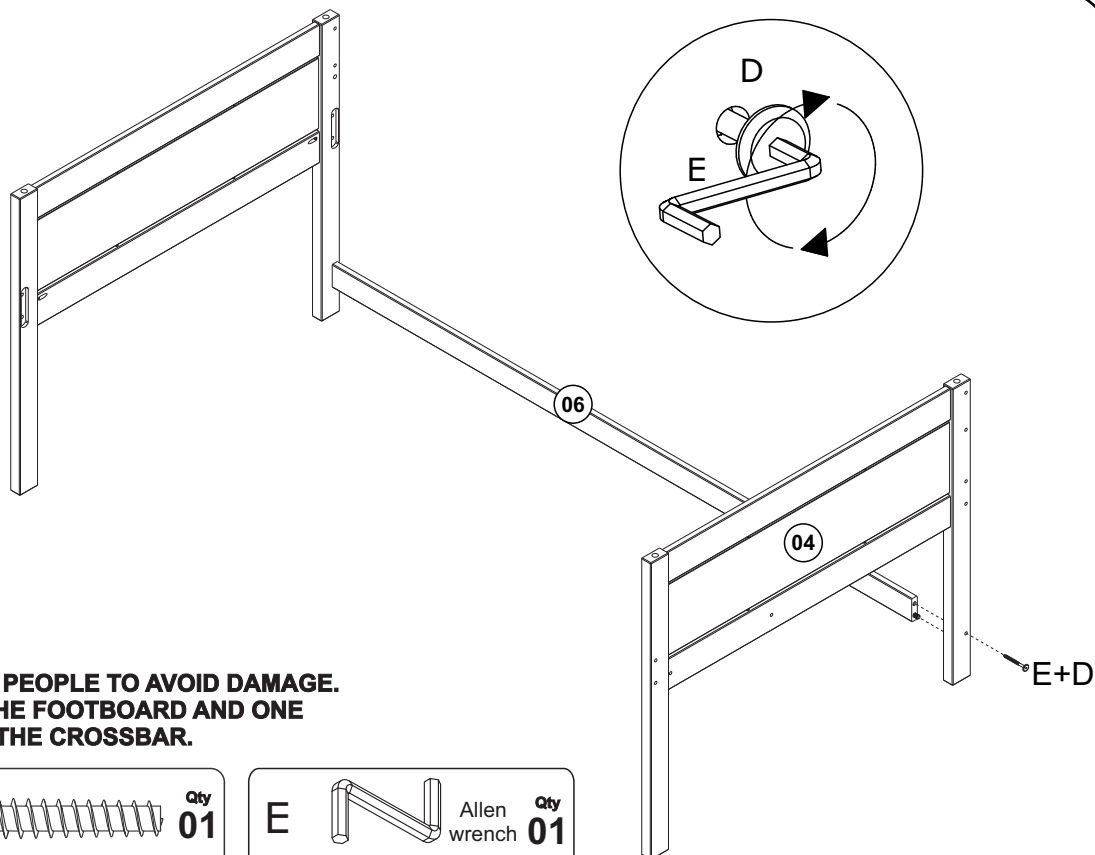


IN THIS STEP IS NECESSARY 2 PEOPLE TO AVOID DAMAGE.
ONE TO ATTACH THE BOLTS THE FOOTBOARD AND ONE
TO HOLD THE OTHER END OF THE CROSSBAR.






04

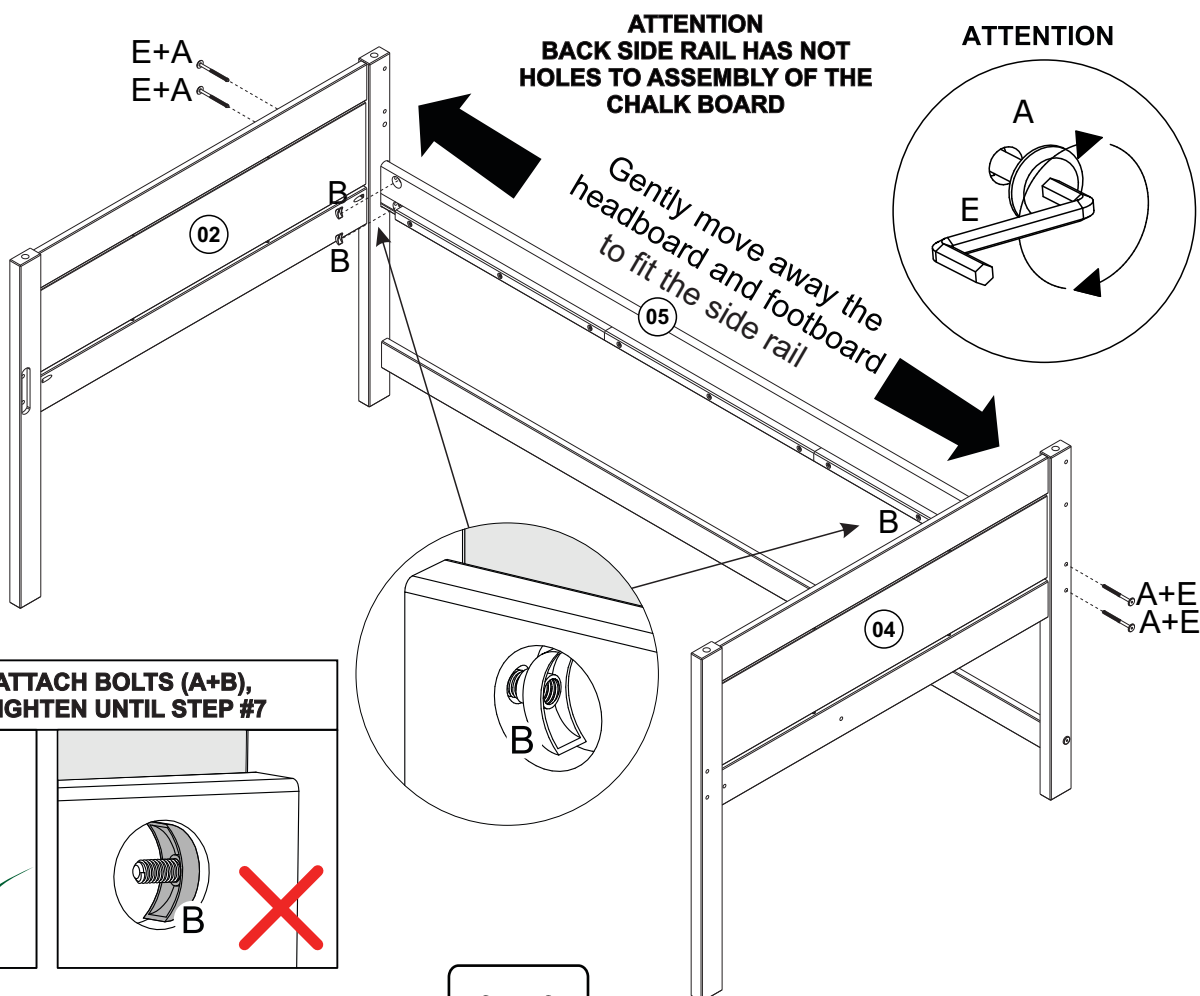

INSERT AND ATTACH BOLTS (A+B),
BUT DO NOT TIGHTEN UNTIL STEP #7



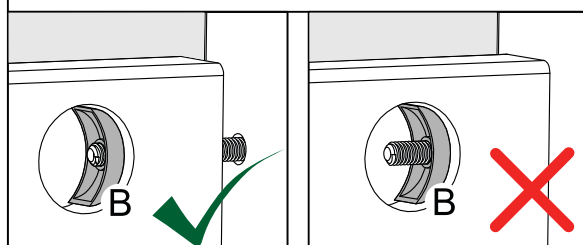


IN THIS STEP IS NECESSARY 2 PEOPLE TO AVOID DAMAGE.
ONE TO ATTACH THE BOLTS ON THE HEADBOARD AND ONE
TO HOLD THE OTHER END OF THE SIDE RAIL.

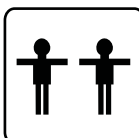


05

IN THIS STEP IS NECESSARY 2 PEOPLE TO AVOID DAMAGE. ONE TO ATTACH THE BOLTS ON THE HEADBOARD AND ONE TO HOLD THE OTHER END OF THE SIDE RAIL.




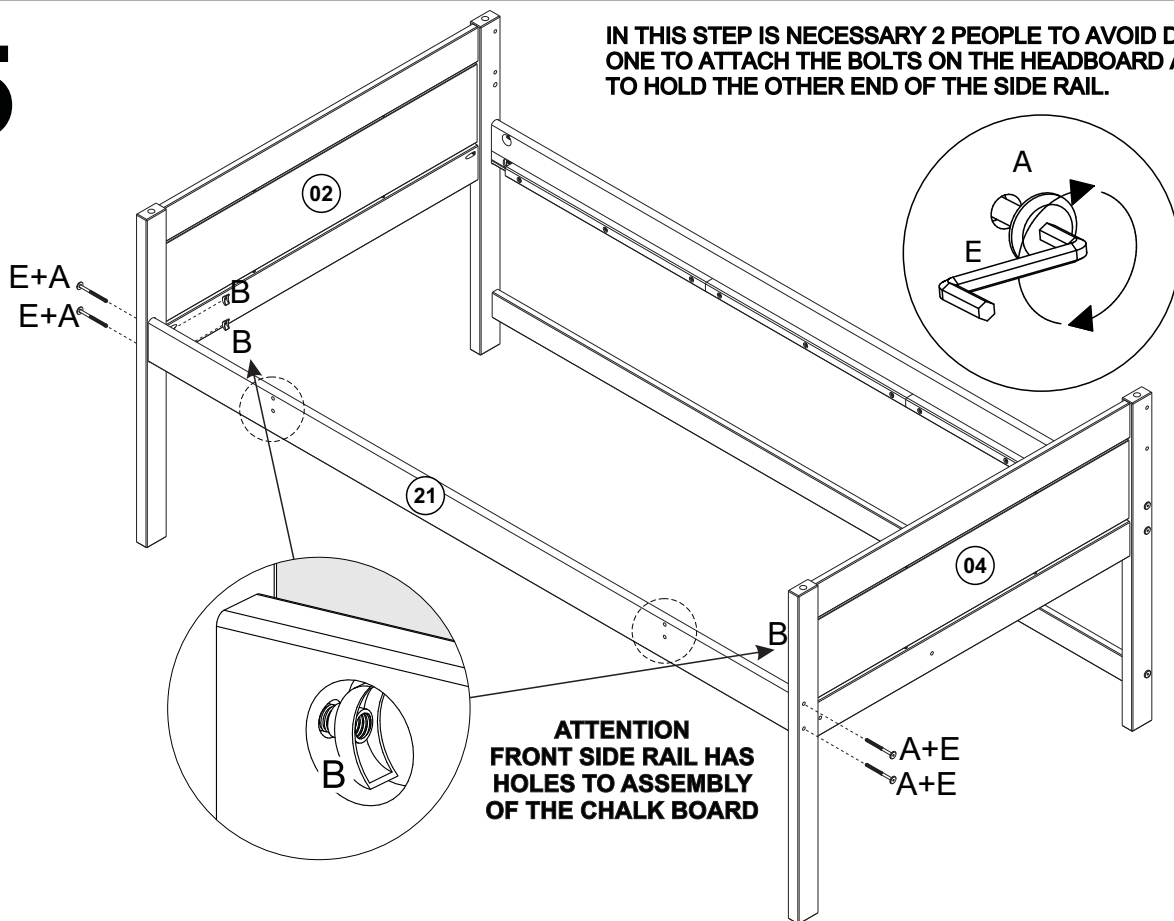


06


IN THIS STEP IS NECESSARY 2 PEOPLE TO AVOID DAMAGE. ONE TO ATTACH THE BOLTS THE HEADBOARD AND ONE TO HOLD THE OTHER END OF THE GUARDRAIL.

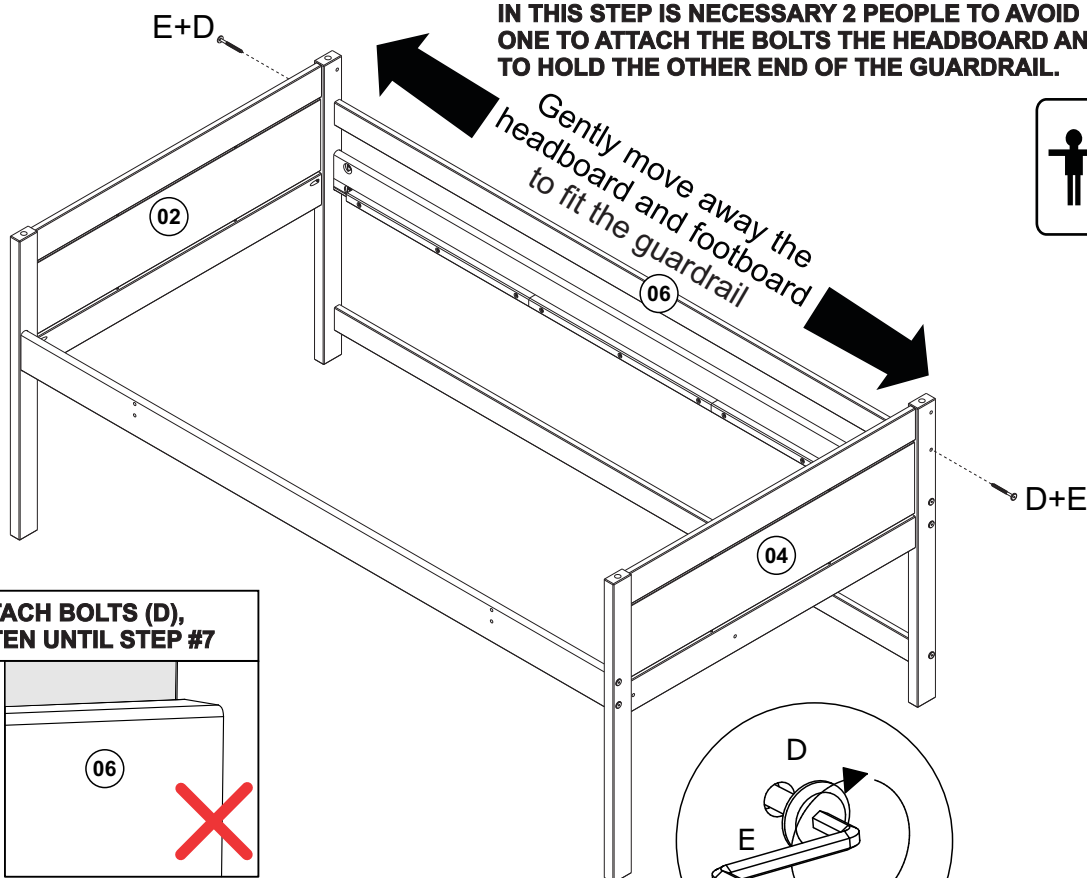


INSERT AND ATTACH BOLTS (D), BUT DO NOT TIGHTEN UNTIL STEP #7

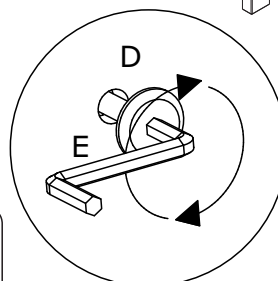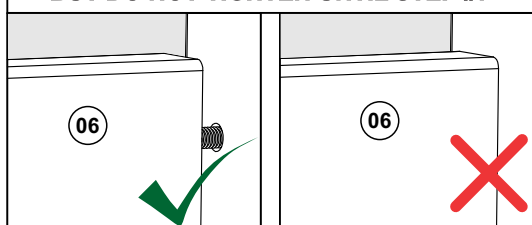


07

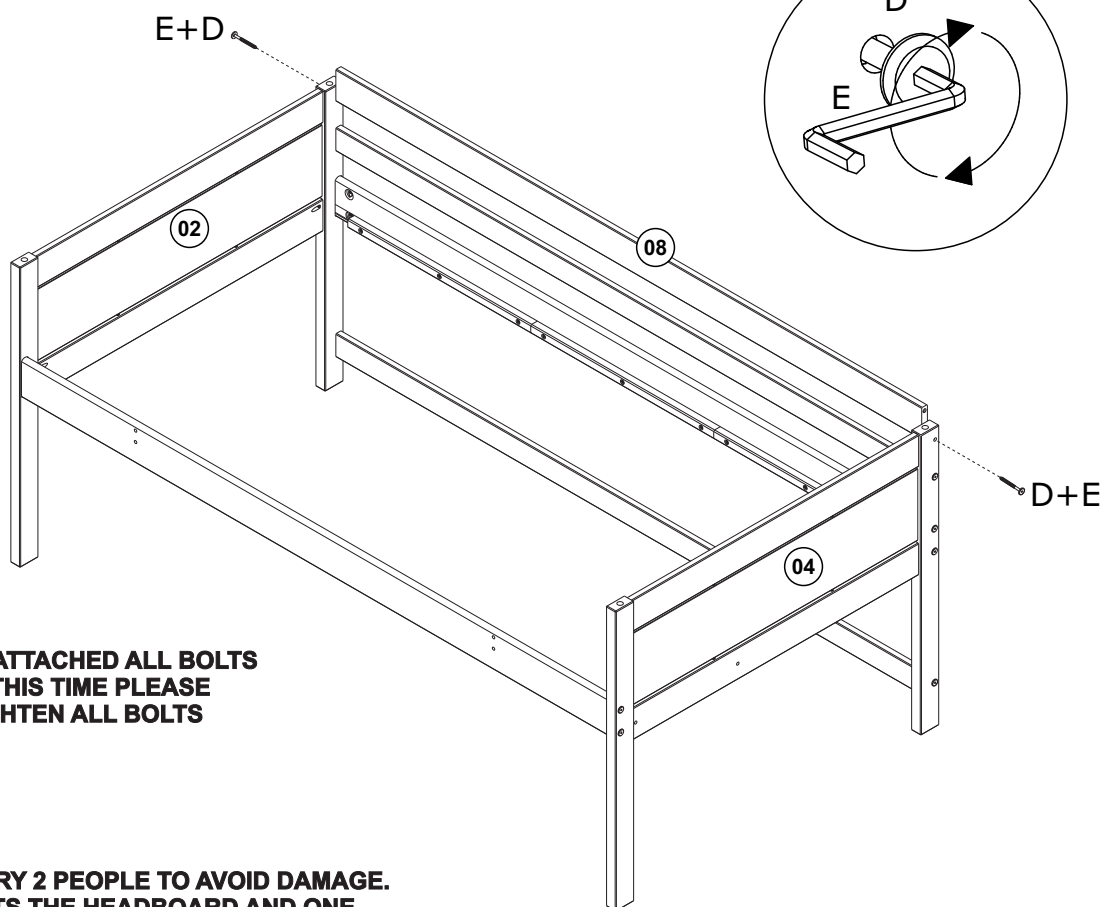

**AFTER ATTACHED ALL BOLTS
AT THIS TIME PLEASE
TIGHTEN ALL BOLTS**

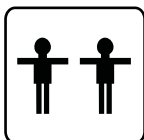

**IN THIS STEP IS NECESSARY 2 PEOPLE TO AVOID DAMAGE.
ONE TO ATTACH THE BOLTS THE HEADBOARD AND ONE
TO HOLD THE OTHER END OF THE GUARDRAIL.**







08

CHALK BOARD









**PLEASE ASSEMBLE
ON THE GROUND**

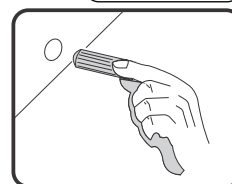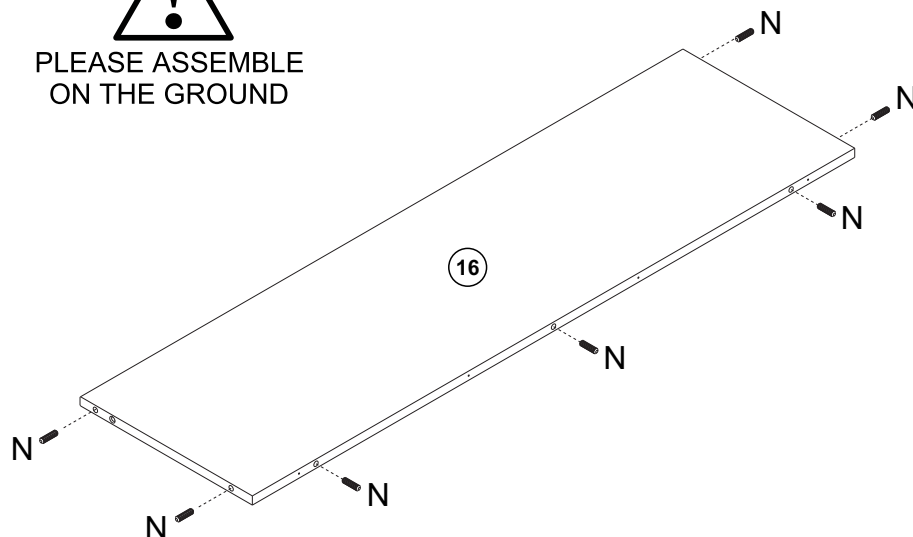





09





PLEASE ASSEMBLE
ON THE GROUND

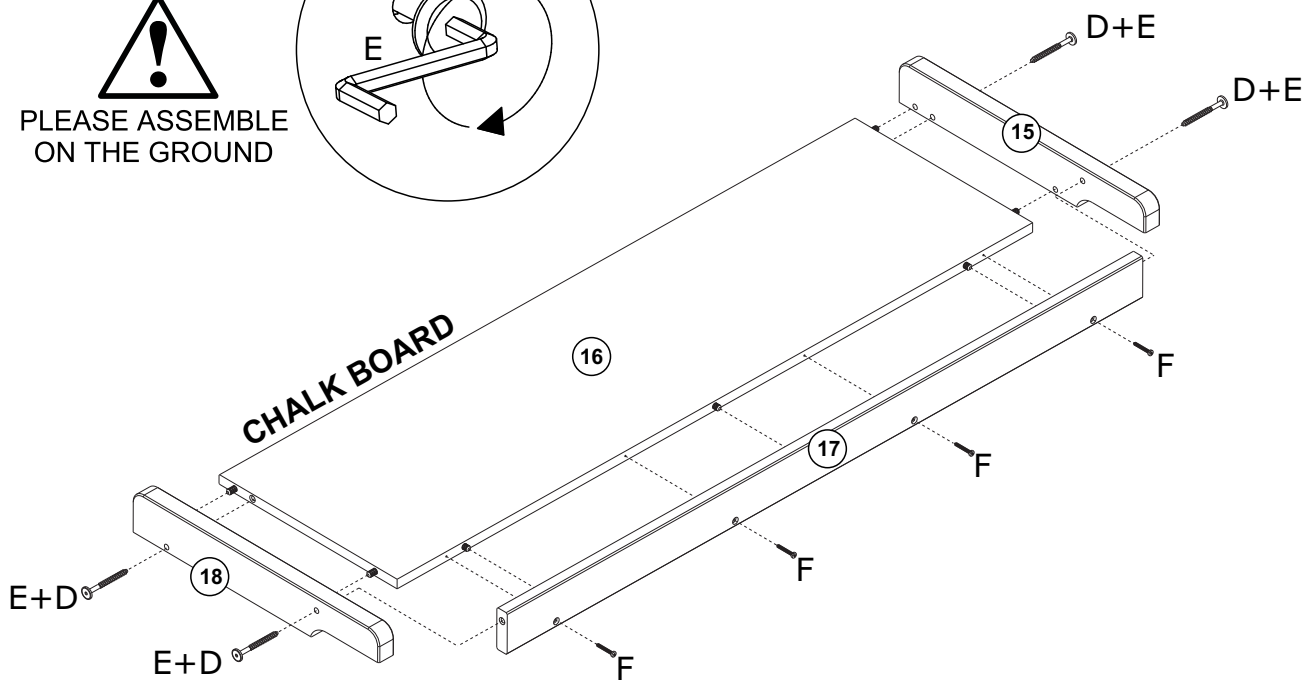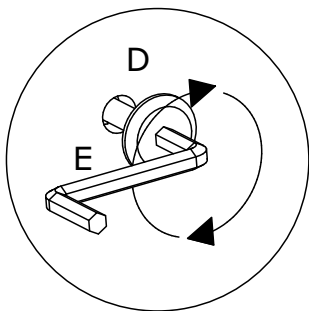

10

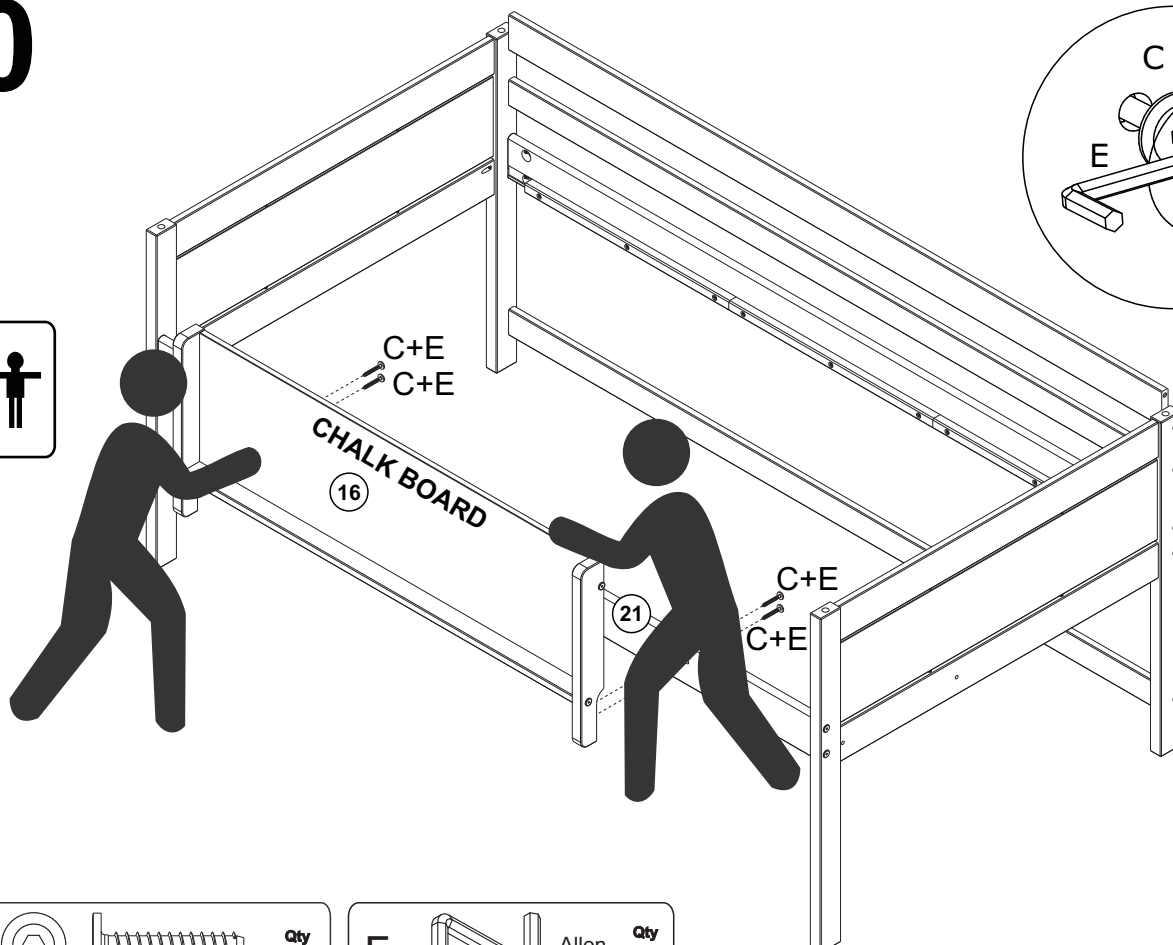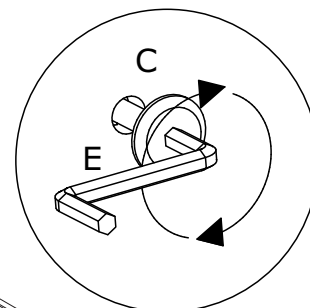


11

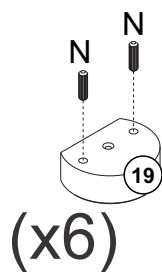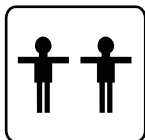





ACCESS



PLEASE ASSEMBLE
ON THE GROUND


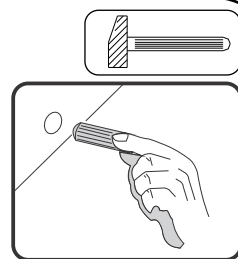


ATTENTION
Pre-drilled holes
for up





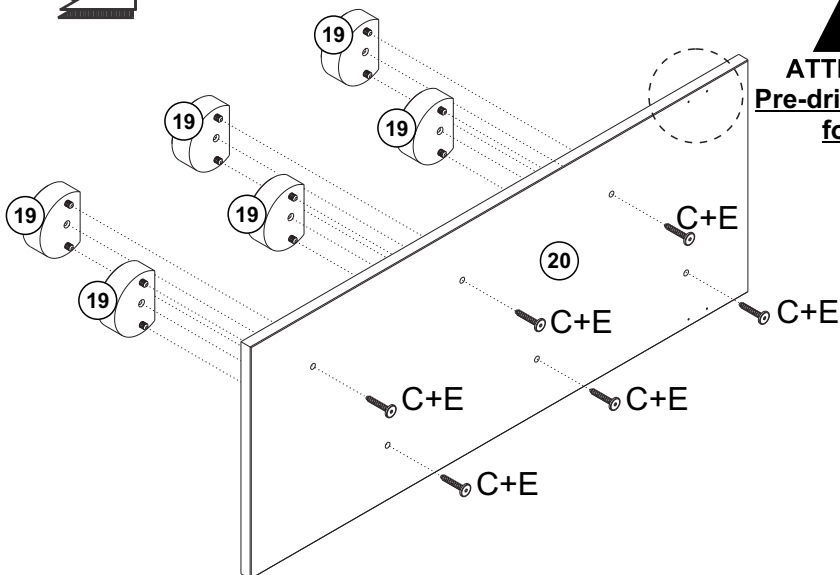
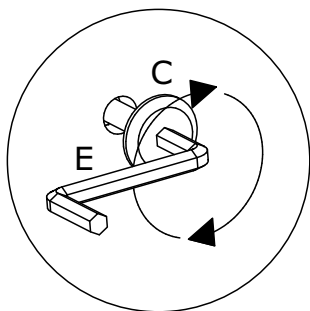


12


Step 1

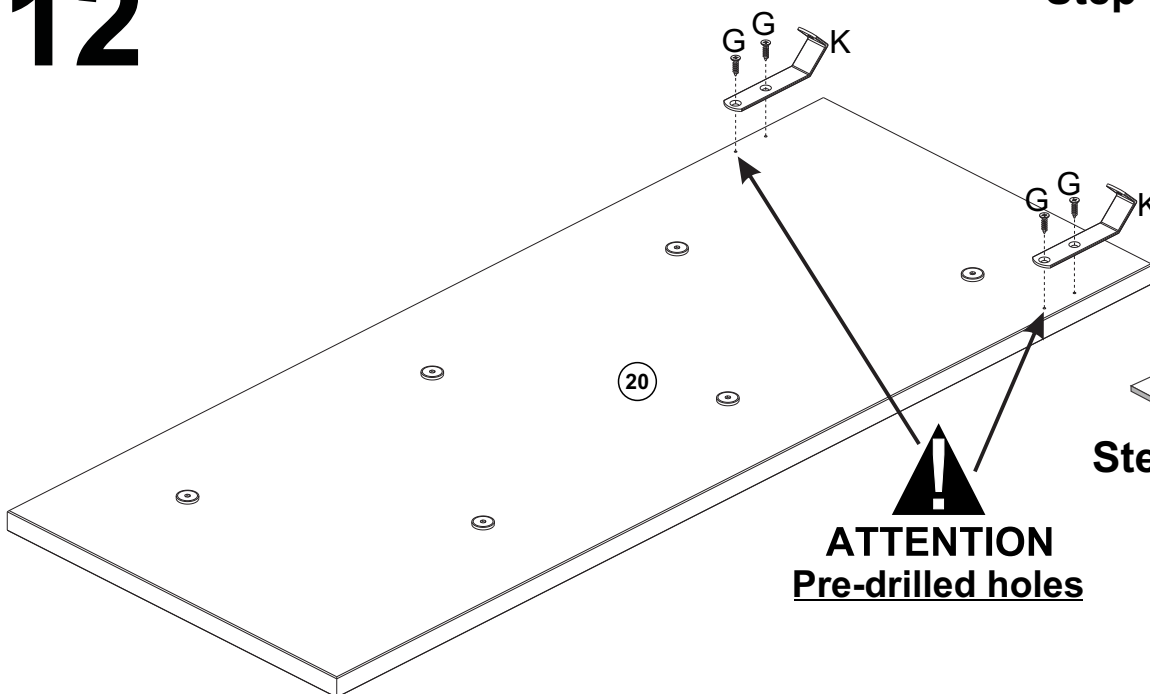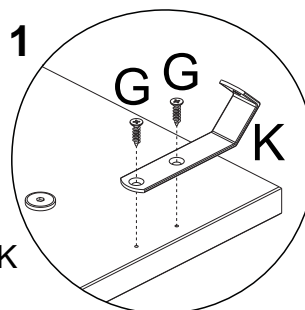

ATTENTION
Pre-drilled holes

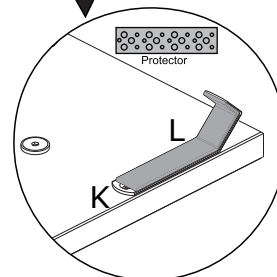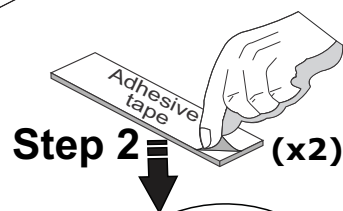

13

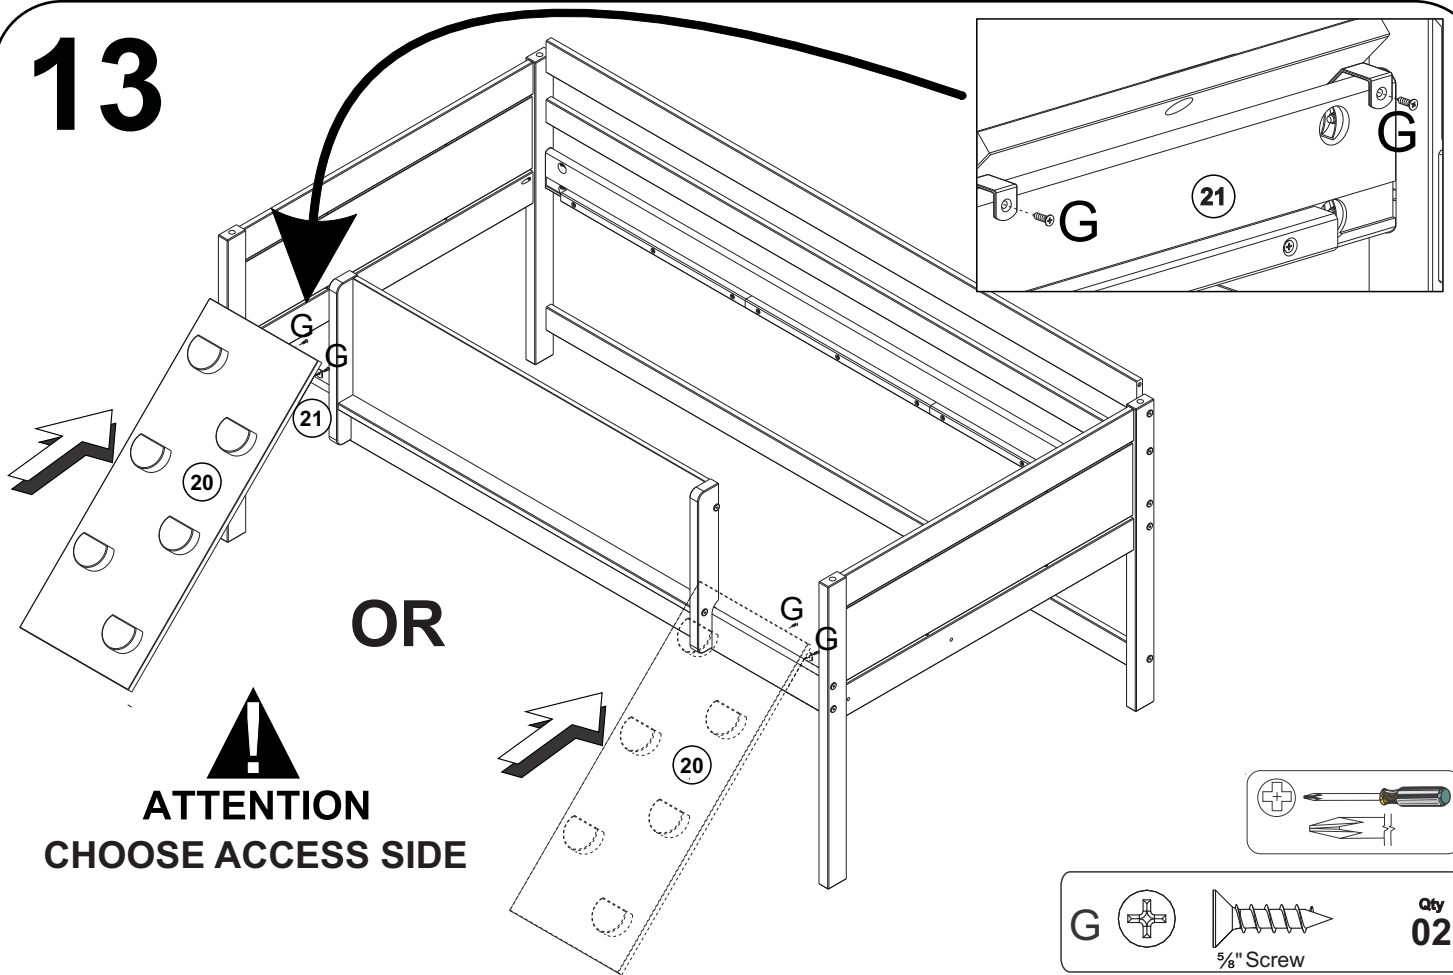


14

SLIDE


PLEASE ASSEMBLE ON THE GROUND

ATTENTION
Pre-drilled holes

Step 1

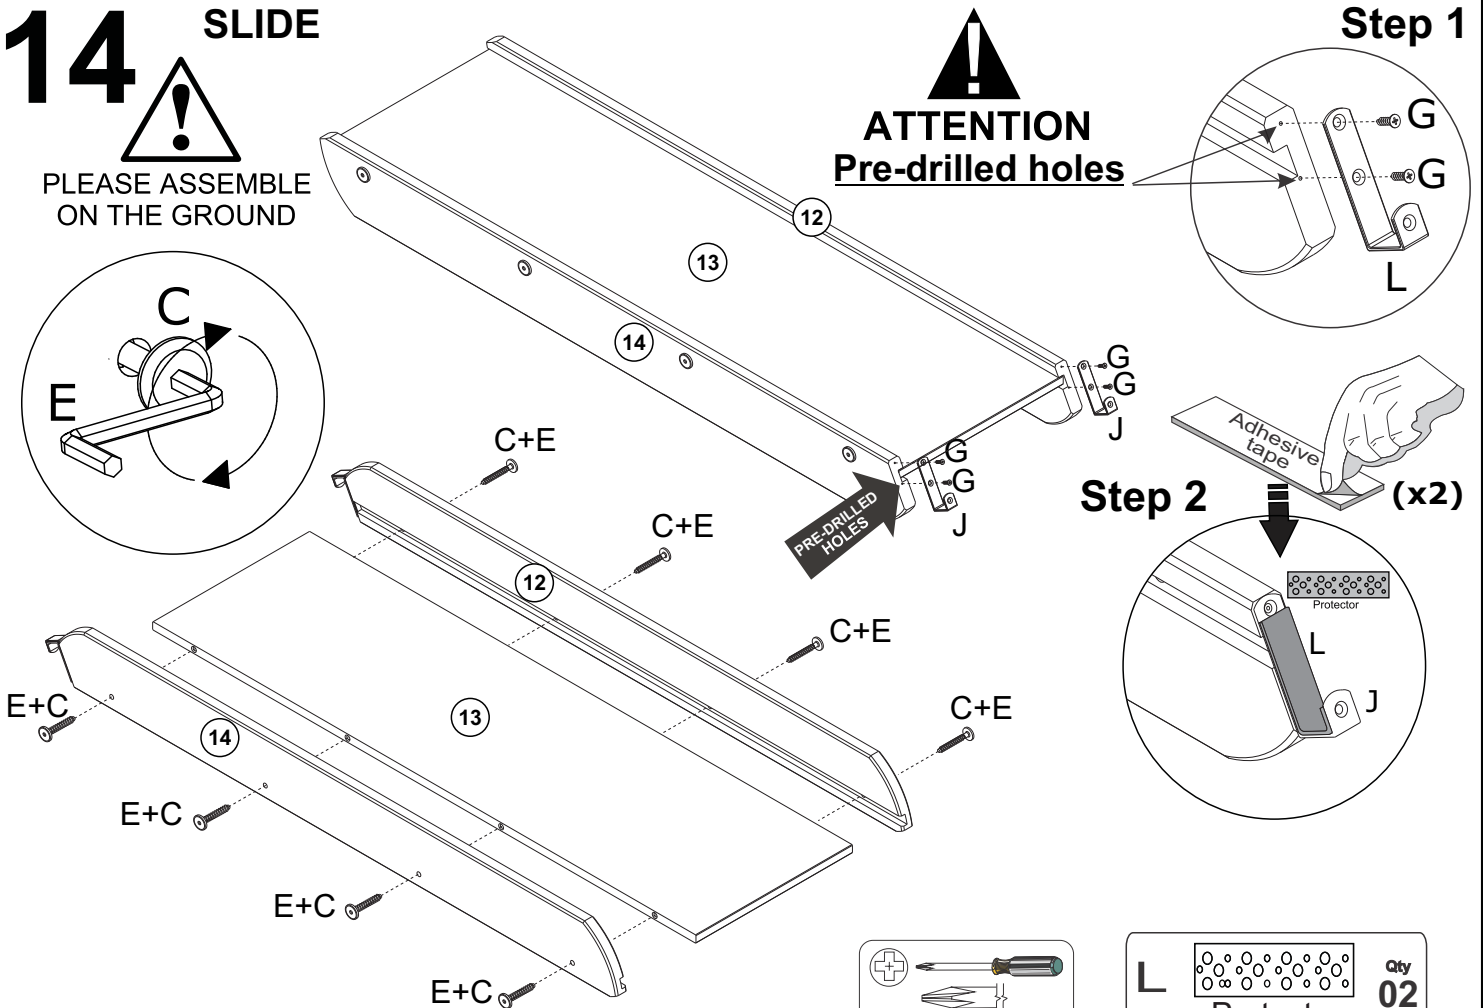


C



Qty **08**


J



Hook Slider




Qty **02**

G



Qty **04**







15

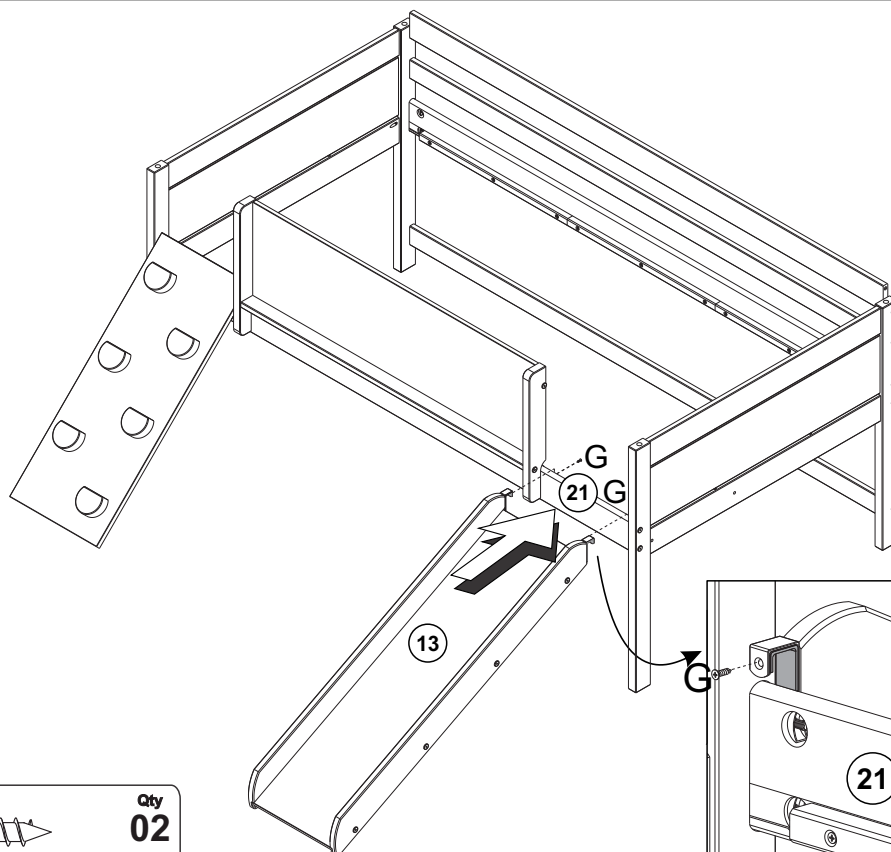

16



"PLEASE INSTALL SLAT KIT WITH THE SPACER TAPE ON TOP (FACING UP)"

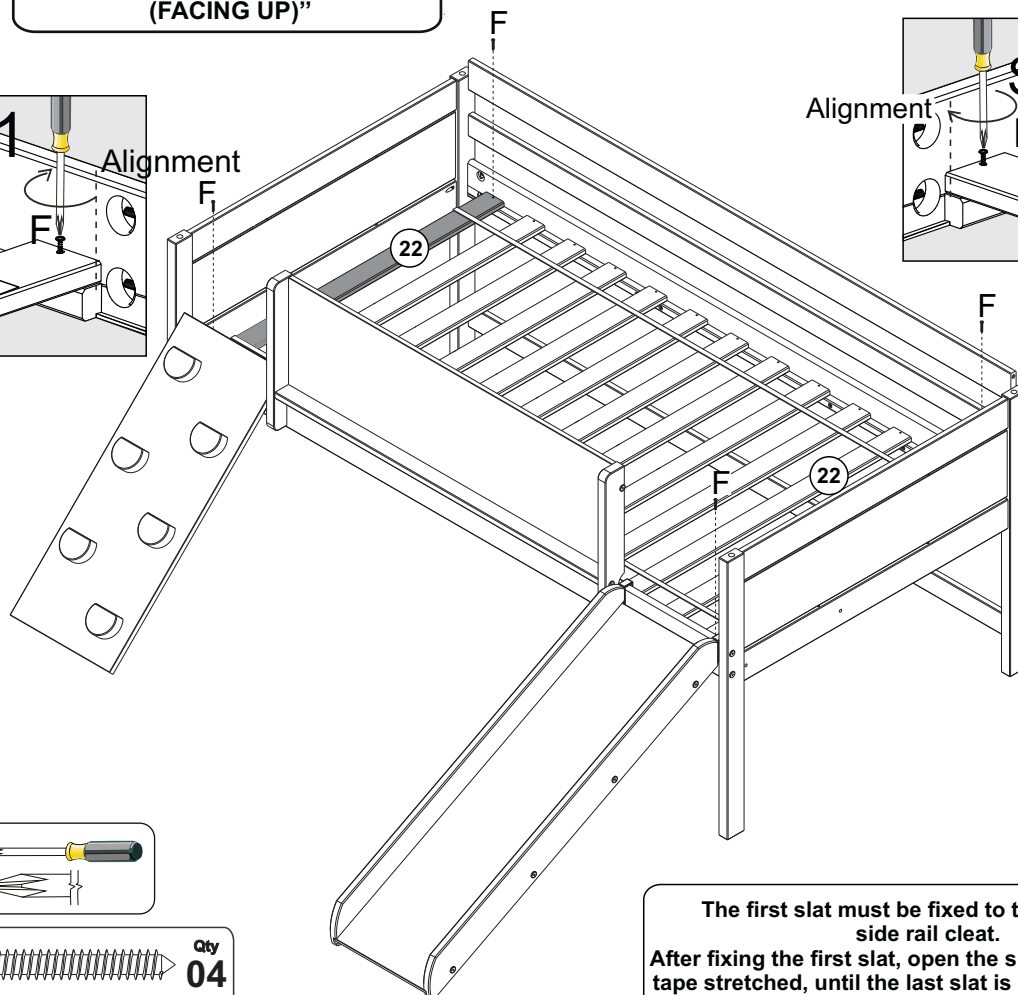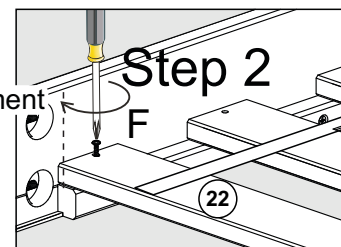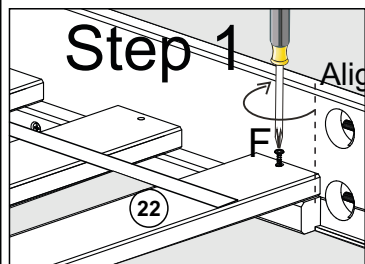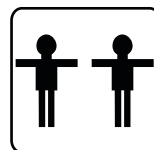

**The first slat must be fixed to the end of the side rail cleat.
After fixing the first slat, open the slat set, leaving the tape stretched, until the last slat is aligned at the end of the side rail cleat.**



17

IMPORTANT NOTE



Please note warping may occur because it is natural wood.

To facilitate the placement of the screws, you must press the two side rails simultaneously.

We suggest 2 people in this step to make it easier the placement of the screws.


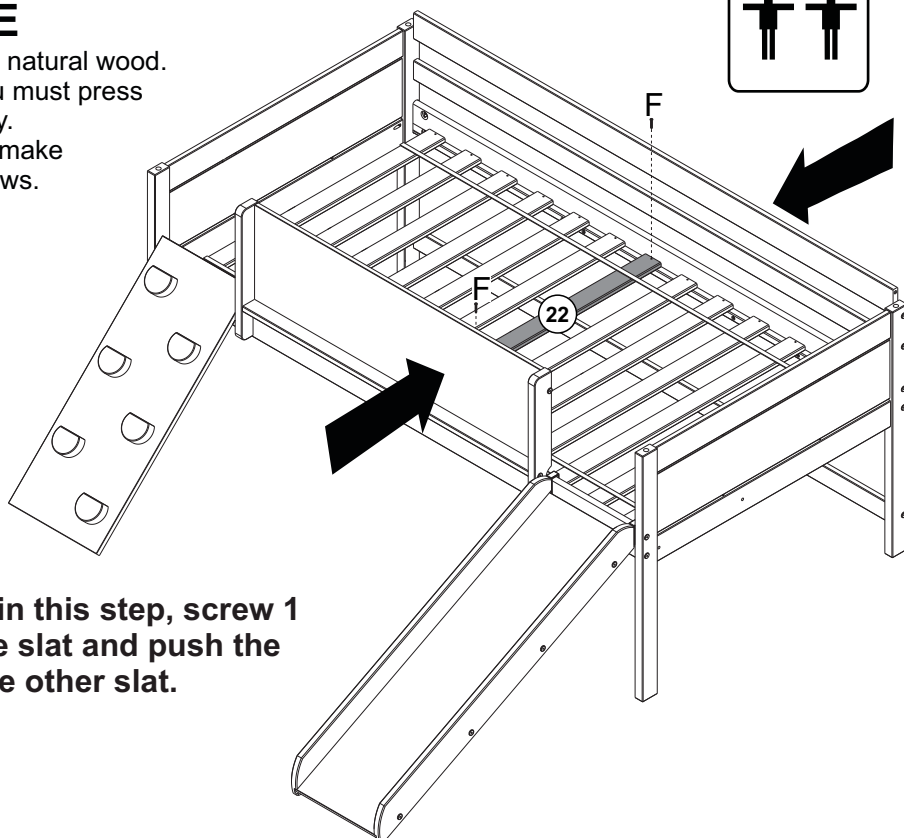
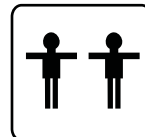


If you are alone in this step, screw 1 slat first, pull the slat and push the side rail to fix the other slat.



1 3/16" Screw






18

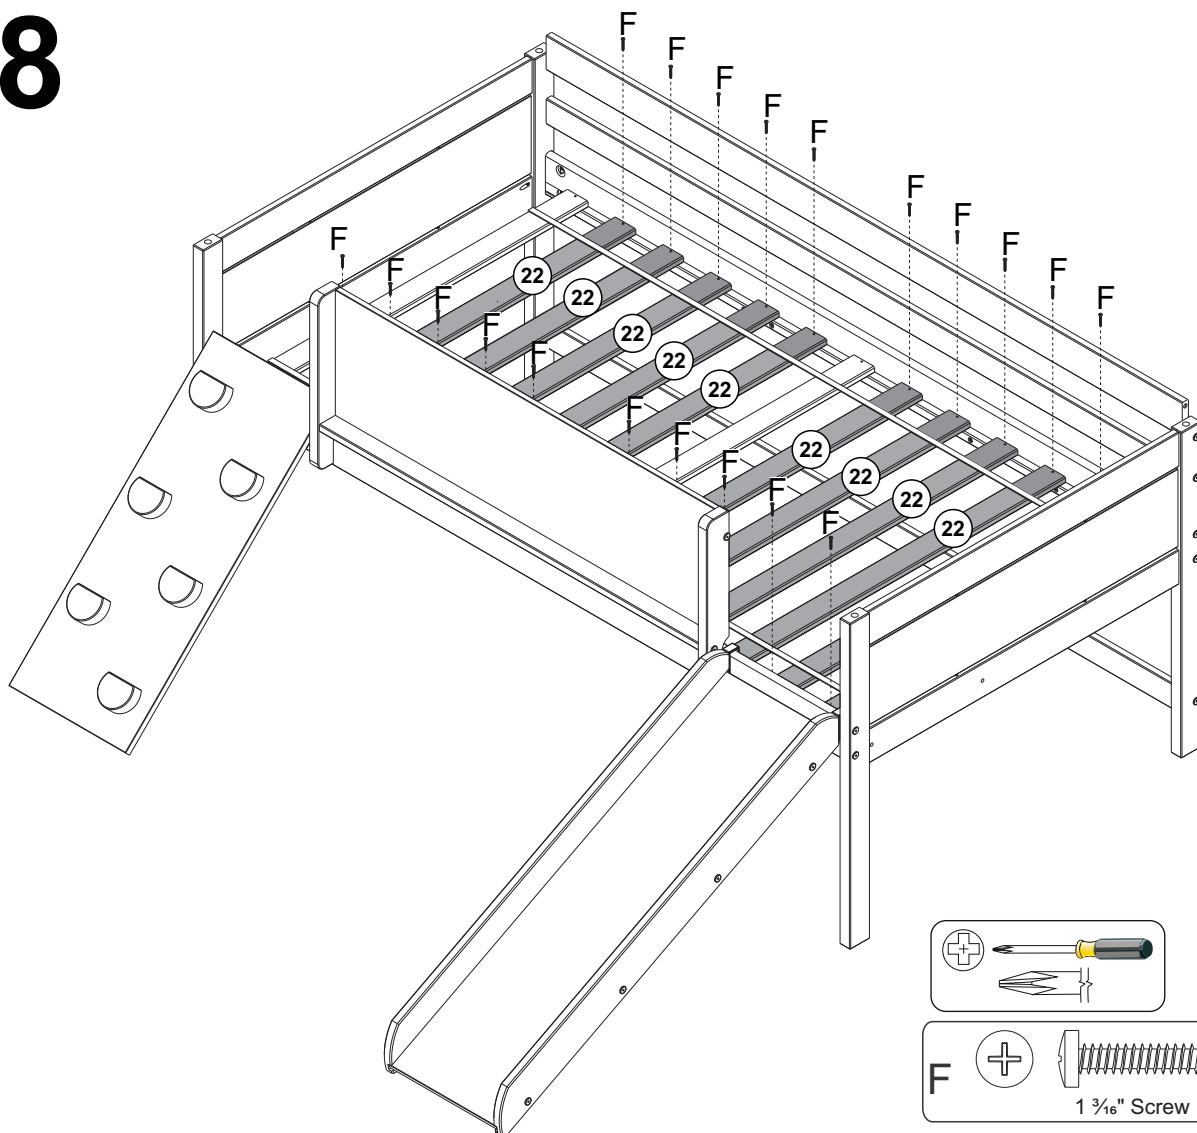




1 3/16" Screw

18A




PLEASE USE THE WOOD SPACER LETTER M TO CHECK THE DISTANCE BETWEEN EACH SLAT.
 THE SPACE BETWEEN EACH SLAT CANNOT EXCEED THE SPACER SIZE (3 2/16" OR 80 MM);
 IT CAN BE SMALLER, BUT NOT LARGER.
 IF THE SPACER IS LARGER, PLEASE REMOVE THE SCREWS AND MAKE SURE TO REATTACH
 THE SLATS TO ENSURE THEY DO NOT EXCEED THE SPACER SIZE.

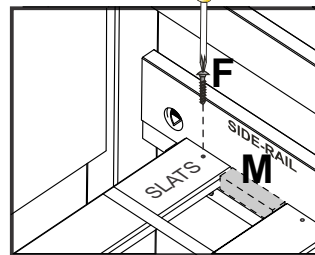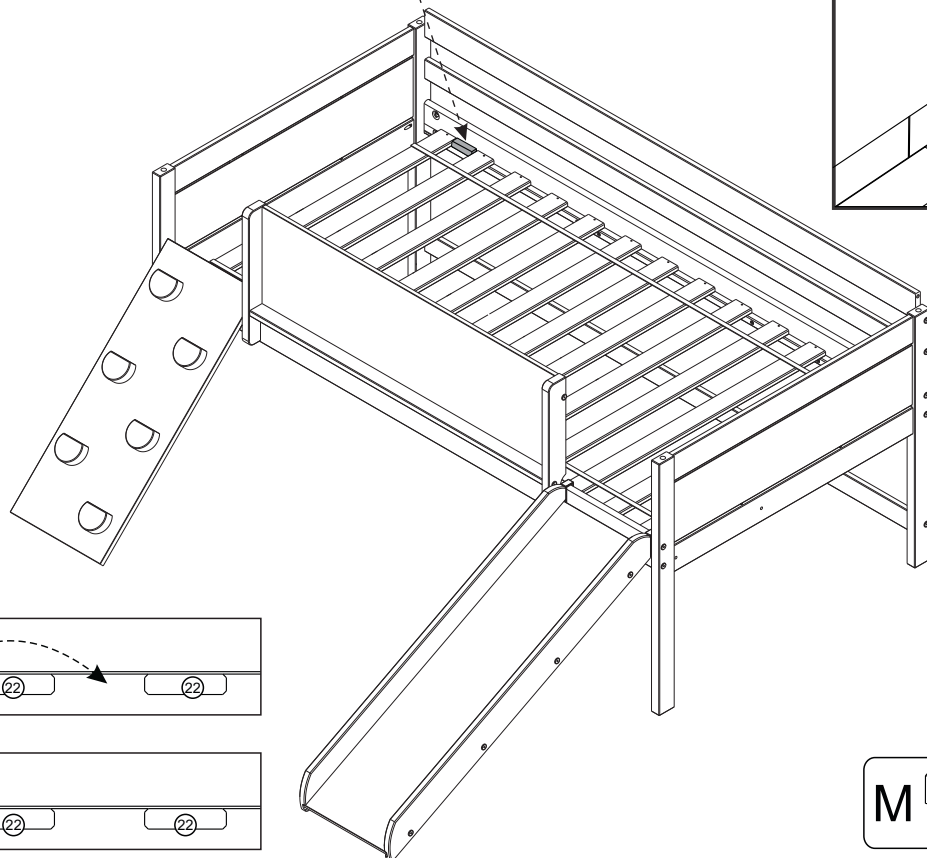





19

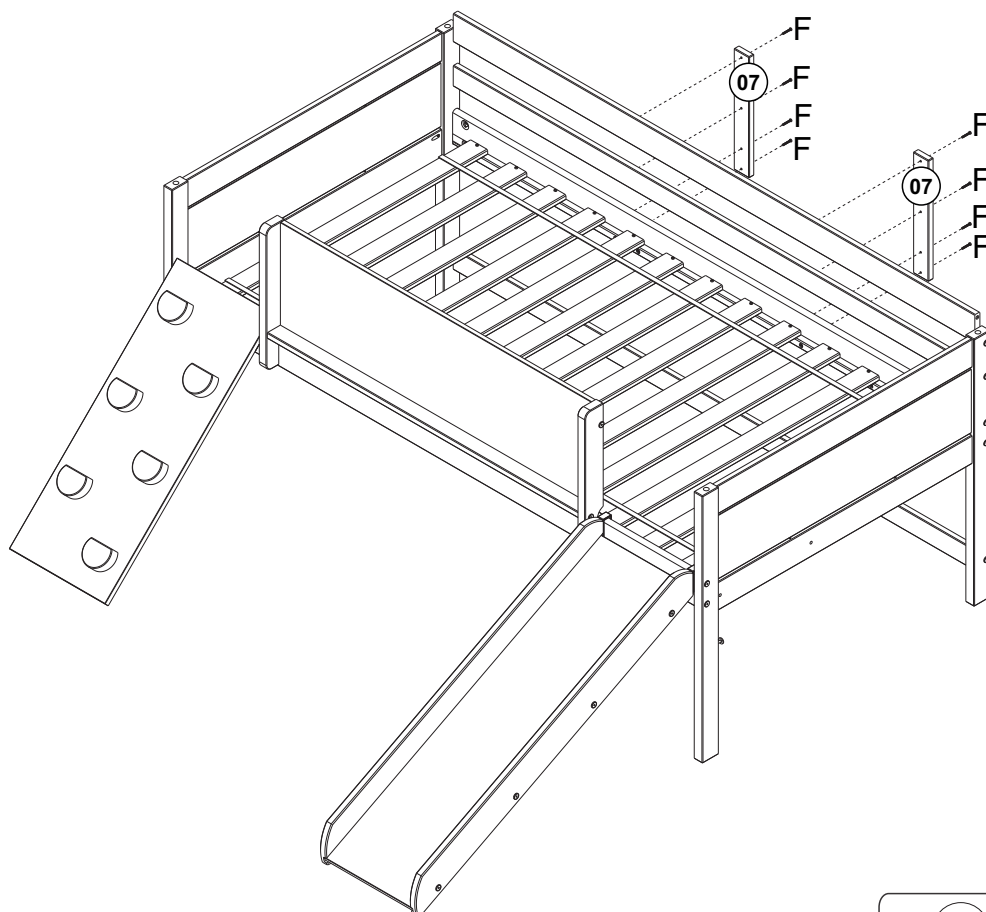

20 TOP BED

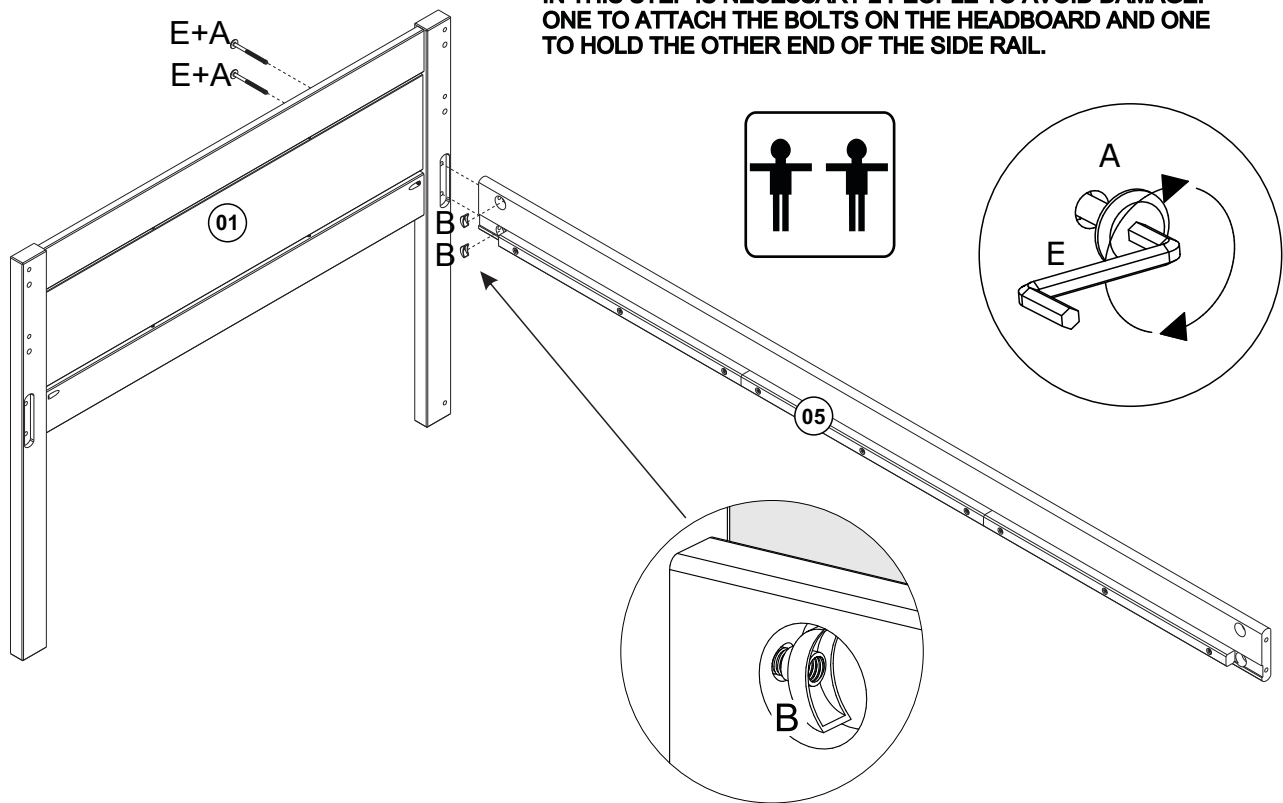


21

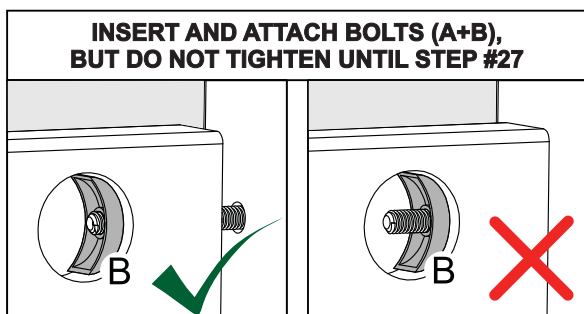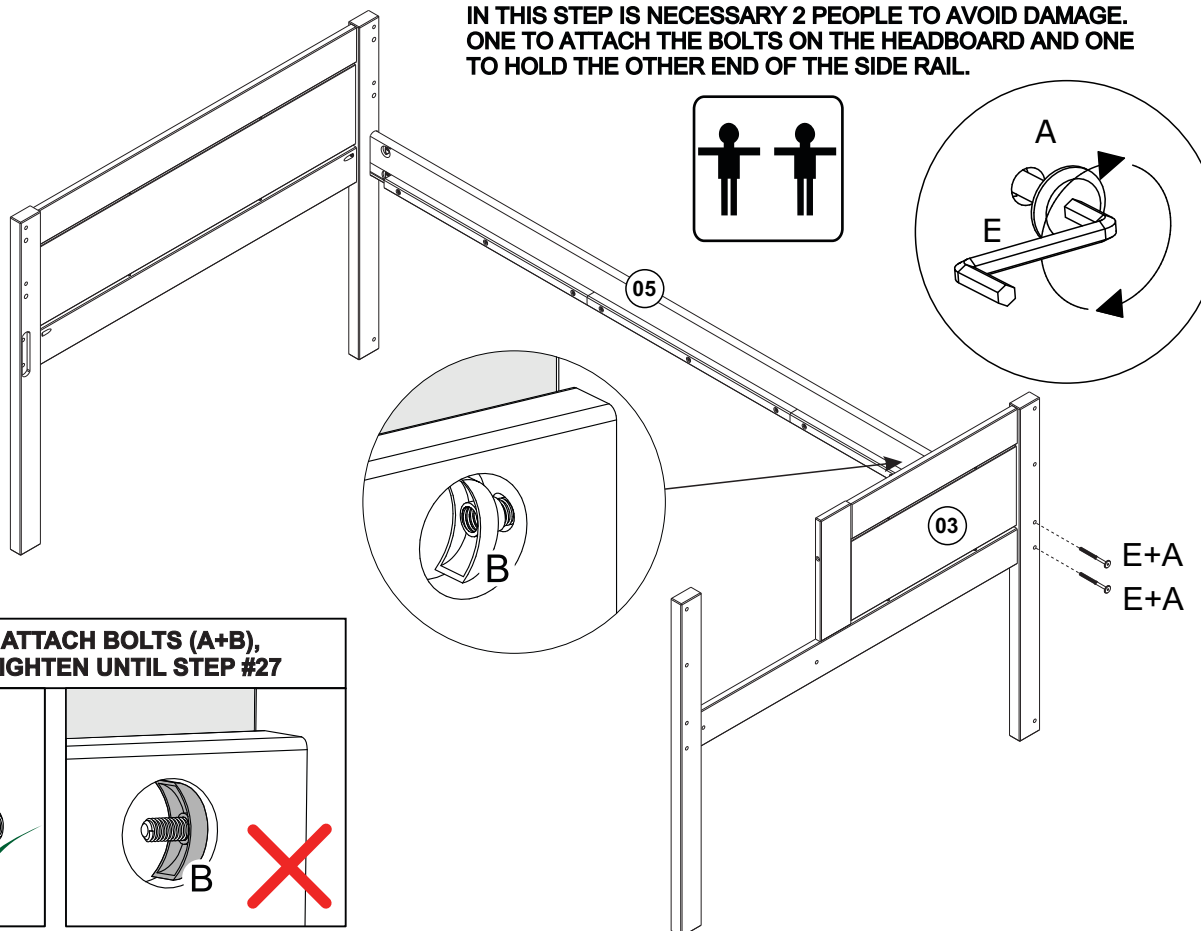

22

IN THIS STEP IS NECESSARY 2 PEOPLE TO AVOID DAMAGE. ONE TO ATTACH THE BOLTS ON THE HEADBOARD AND ONE TO HOLD THE OTHER END OF THE SIDE RAIL.

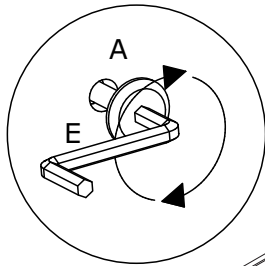

E+A
E+A

01

B
B

Gently move away the headboard and footboard to fit the side rail.

05



B

03


B

E+A
E+A

INSERT AND ATTACH BOLTS (A+B), BUT DO NOT TIGHTEN UNTIL STEP #27

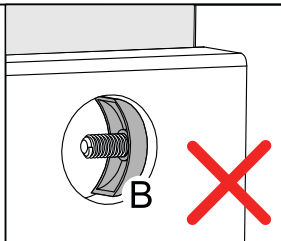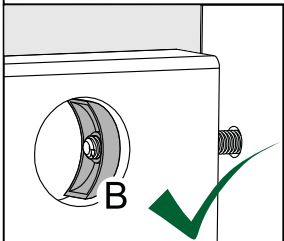


A



1/4"x 4" Bolt

Qty 04

E



Allen wrench

Qty 01

B



1/4" Elliptical Nut

Qty 04

23

H

06

(x4)


H

H



1 9/16" Wooden Dowel

Qty 08

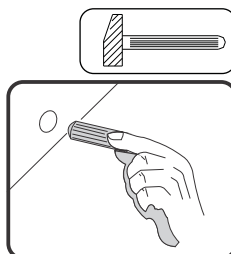


24



E+D

IN THIS STEP IS NECESSARY 2 PEOPLE TO AVOID DAMAGE.
ONE TO ATTACH THE BOLTS THE GUARDRAIL AND ONE
TO HOLD THE OTHER END OF THE GUARDRAIL.

Gently move away the
headboard and footboard
to fit the guardrail

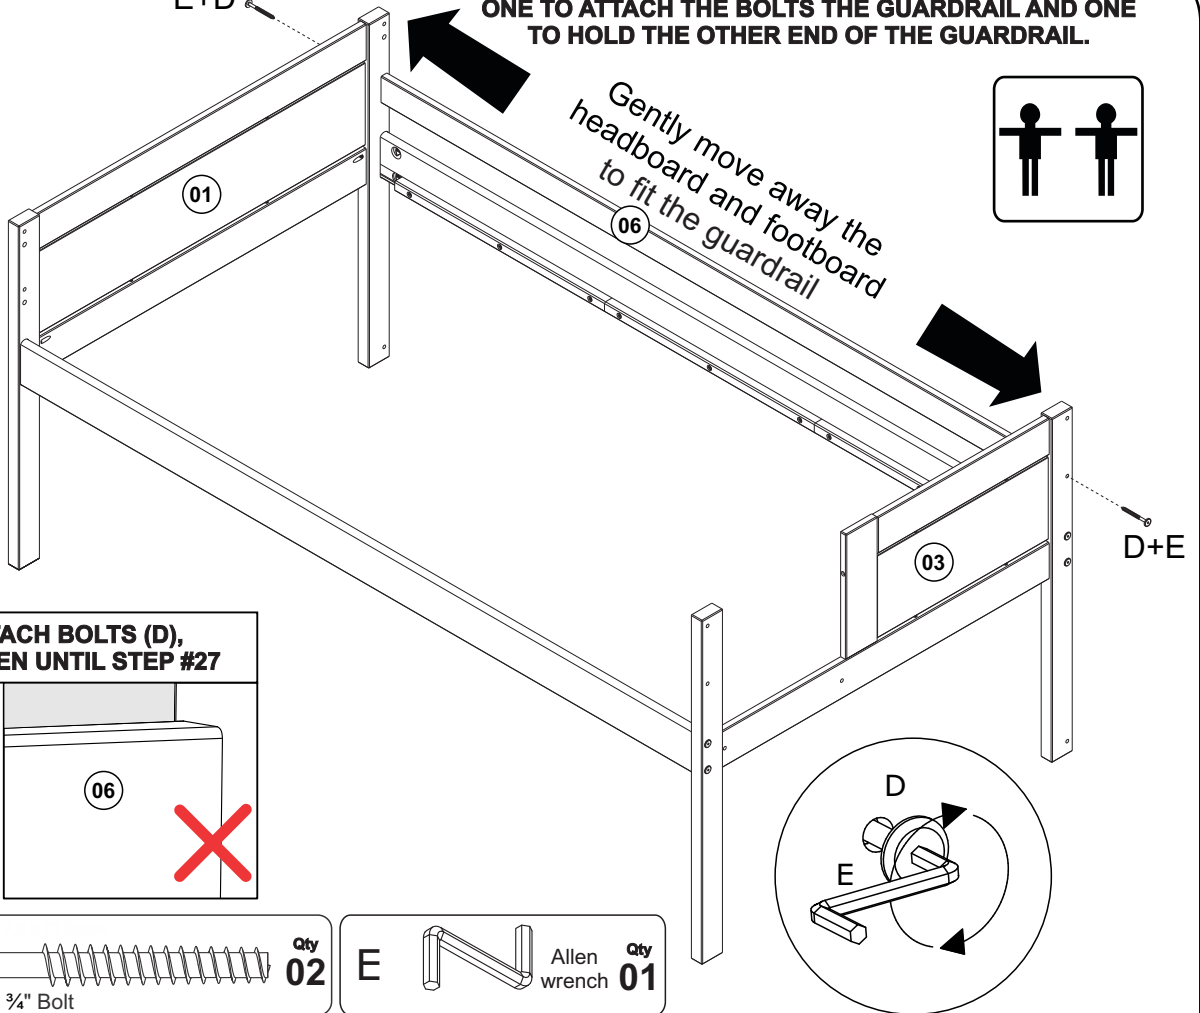

INSERT AND ATTACH BOLTS (D),
BUT DO NOT TIGHTEN UNTIL STEP #27

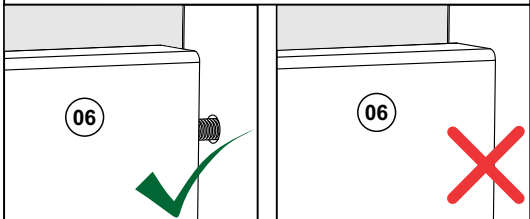


25




E+D

IN THIS STEP IS NECESSARY 2 PEOPLE TO AVOID DAMAGE.
ONE TO ATTACH THE BOLTS THE GUARDRAIL AND ONE
TO HOLD THE OTHER END OF THE GUARDRAIL.

Gently move away the
headboard and footboard
to fit the guardrail



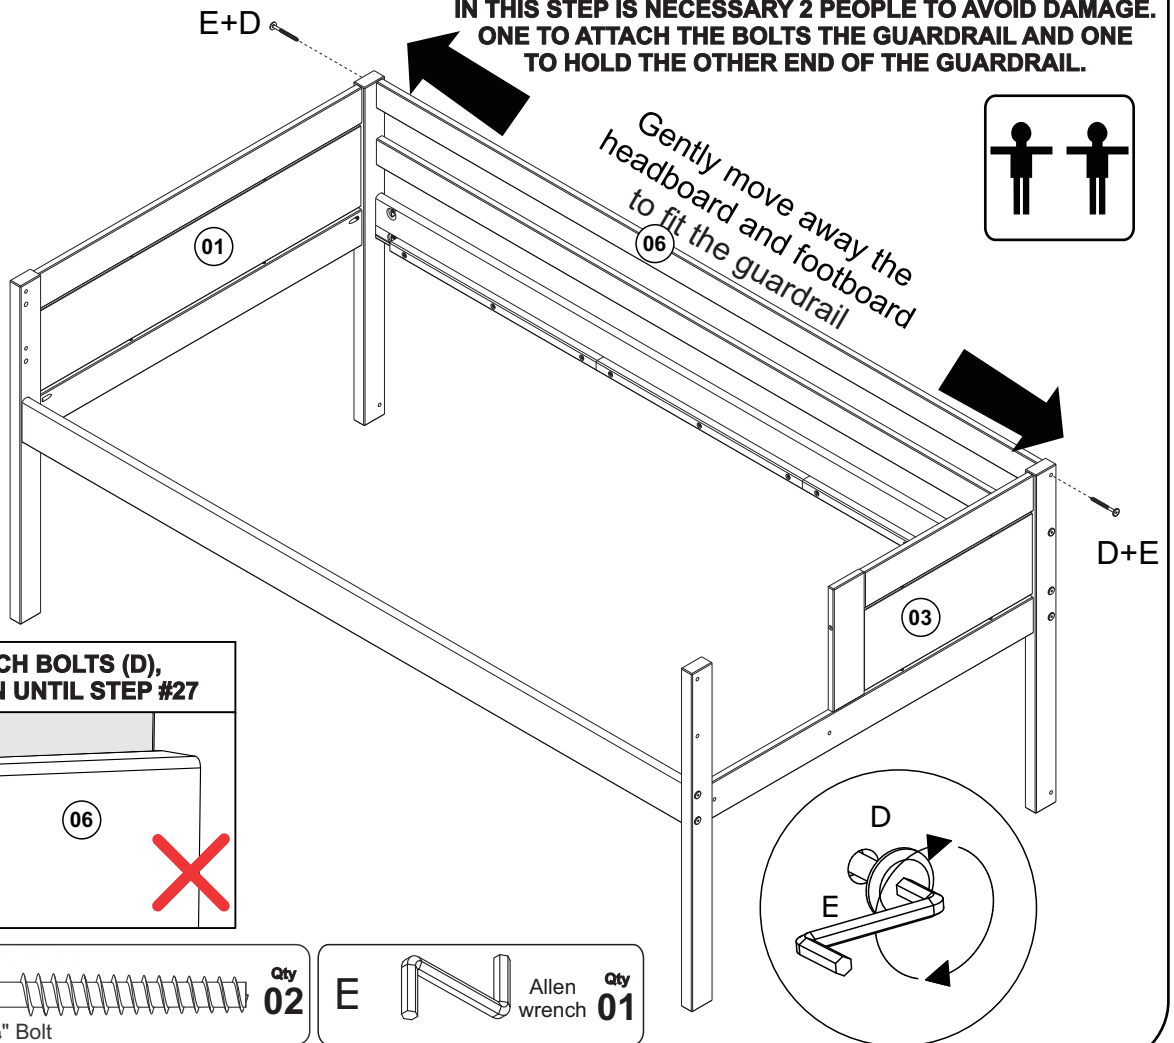


INSERT AND ATTACH BOLTS (D),
BUT DO NOT TIGHTEN UNTIL STEP #27



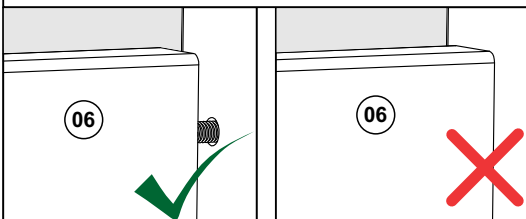


26

IN THIS STEP IS NECESSARY 2 PEOPLE TO AVOID DAMAGE.
ONE TO ATTACH THE BOLTS THE GUARDRAIL AND ONE
TO HOLD THE OTHER END OF THE GUARDRAIL.

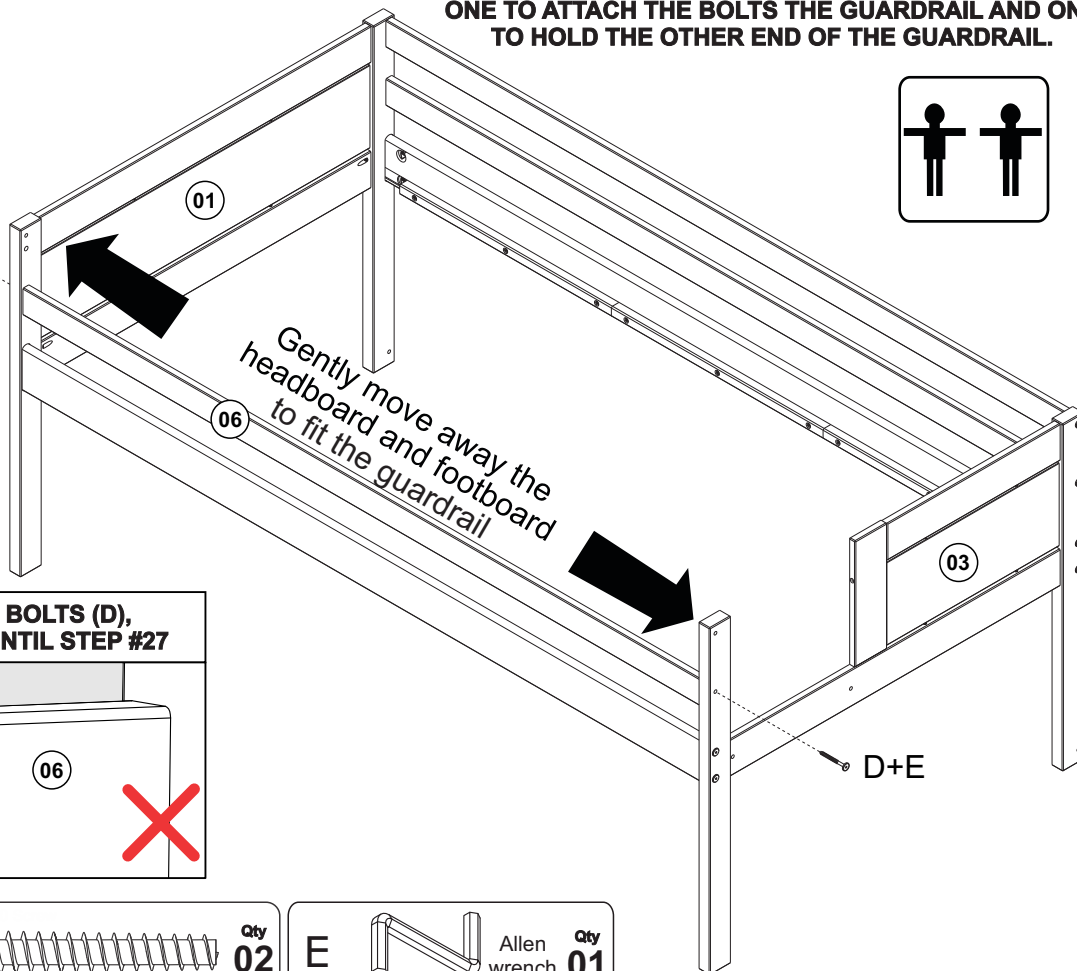
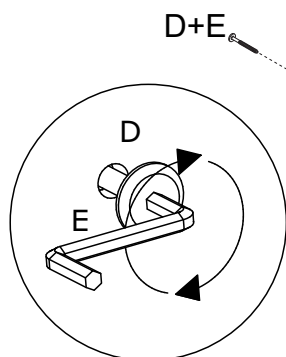
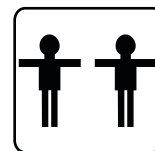


INSERT AND ATTACH BOLTS (D),
BUT DO NOT TIGHTEN UNTIL STEP #27


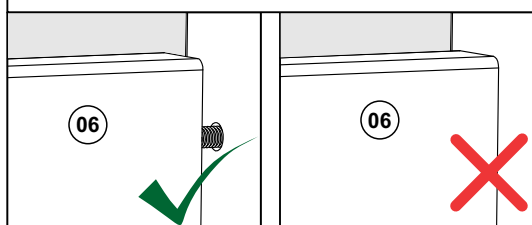


27

IN THIS STEP IS NECESSARY 2 PEOPLE TO AVOID DAMAGE.
ONE TO ATTACH THE BOLTS THE GUARDRAIL AND ONE
TO HOLD THE OTHER END OF THE GUARDRAIL.

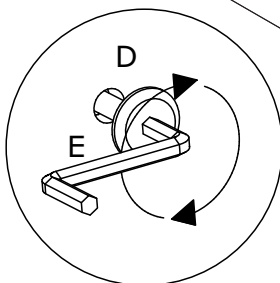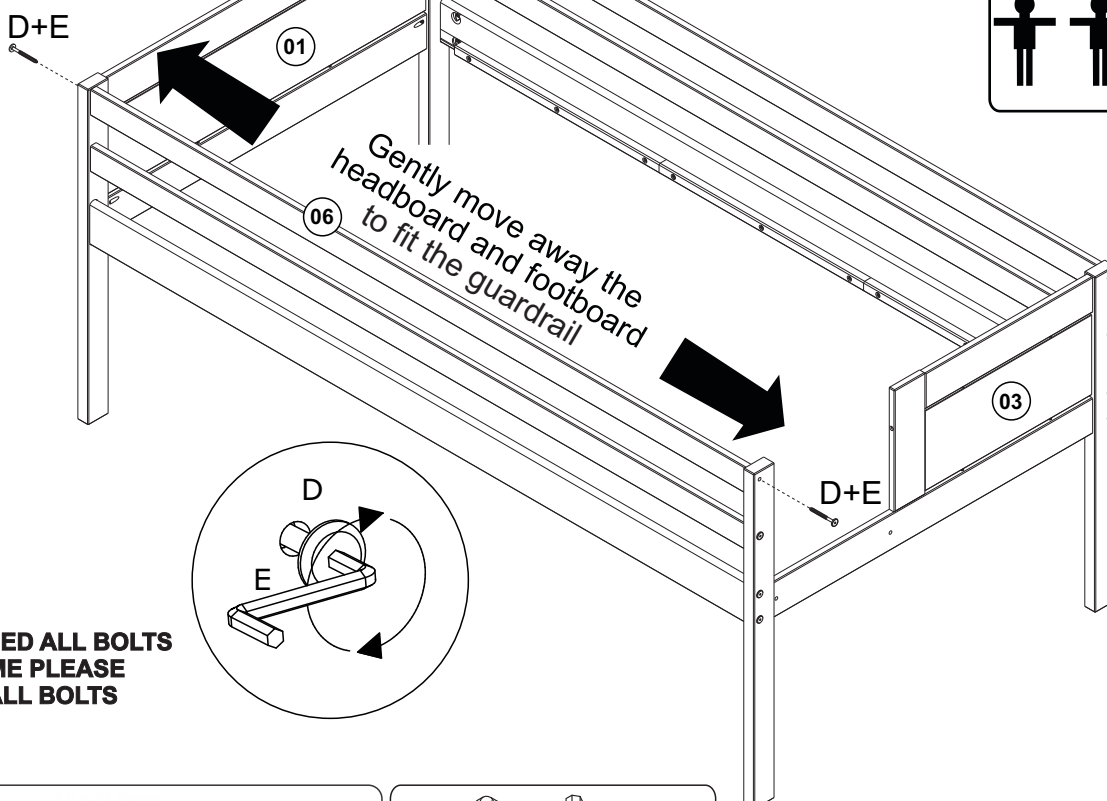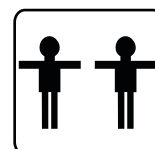







AFTER ATTACHED ALL BOLTS
AT THIS TIME PLEASE
TIGHTEN ALL BOLTS



28



If you are alone in this step, screw 1 slat first, pull the slat and push the side rail to fix the other slat.

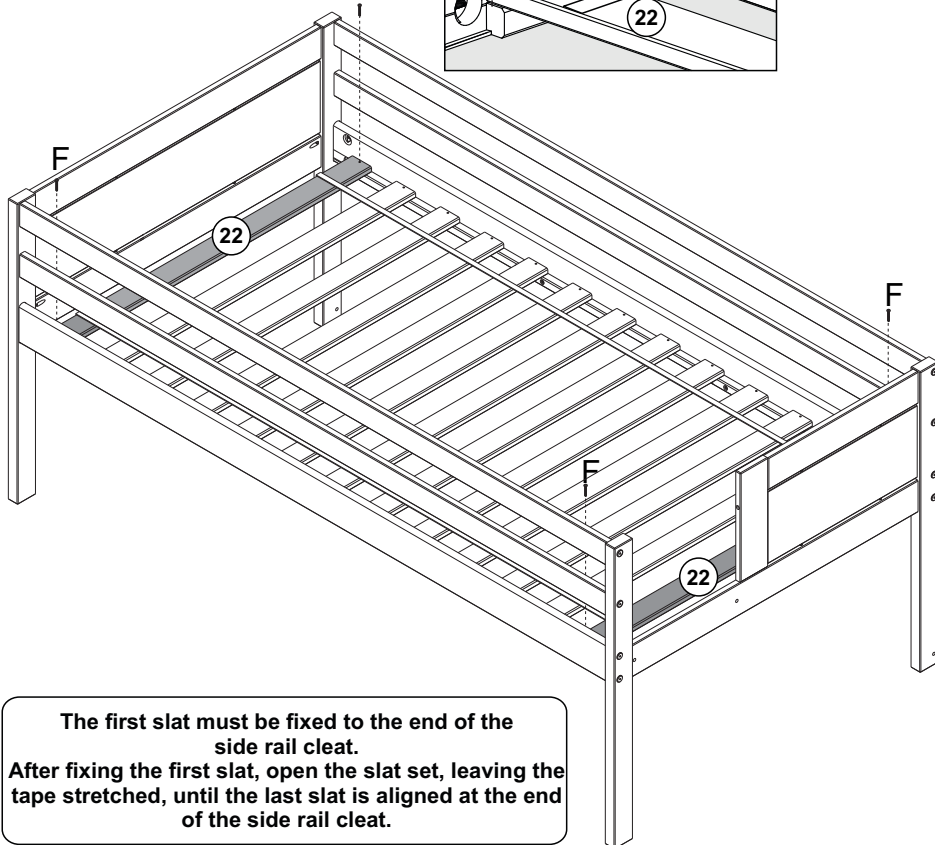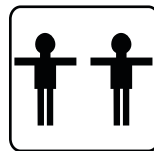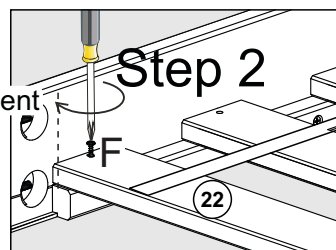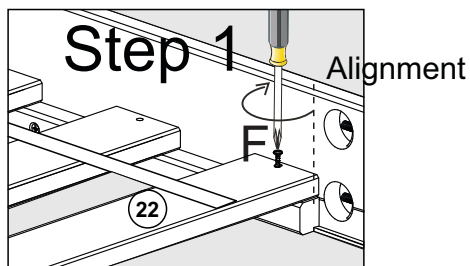

The first slat must be fixed to the end of the side rail cleat.
After fixing the first slat, open the slat set, leaving the tape stretched, until the last slat is aligned at the end of the side rail cleat.





29

IMPORTANT NOTE

Please note warping may occur because it is natural wood.




To facilitate the placement of the screws, you must press the two side rails simultaneously.

We suggest 2 people in this step to make it easier the placement of the screws.

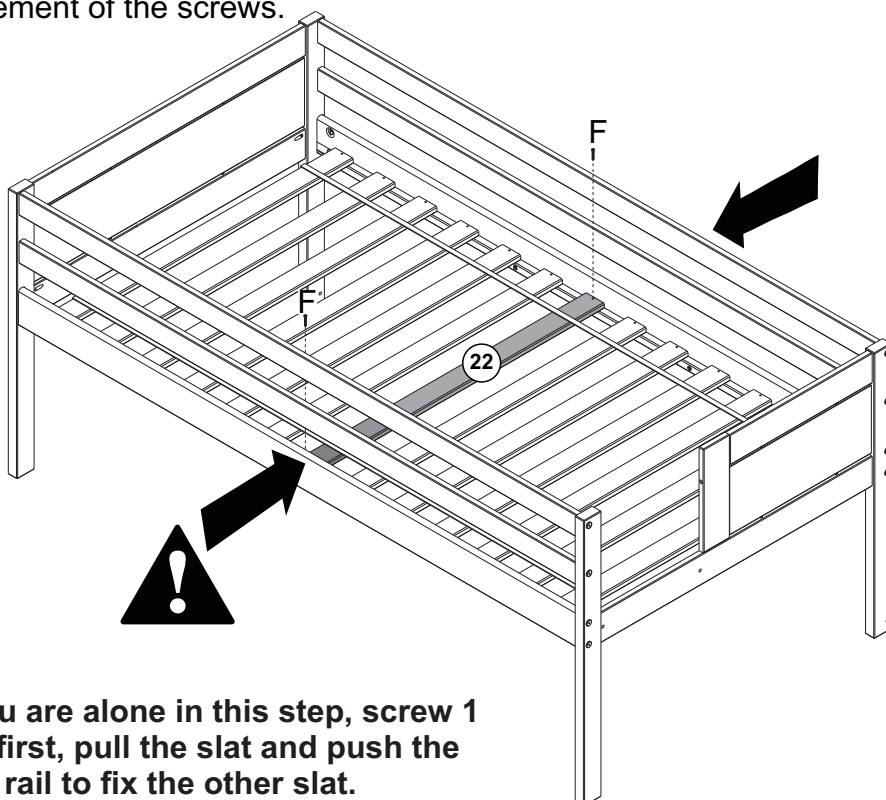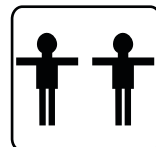






If you are alone in this step, screw 1 slat first, pull the slat and push the side rail to fix the other slat.

30



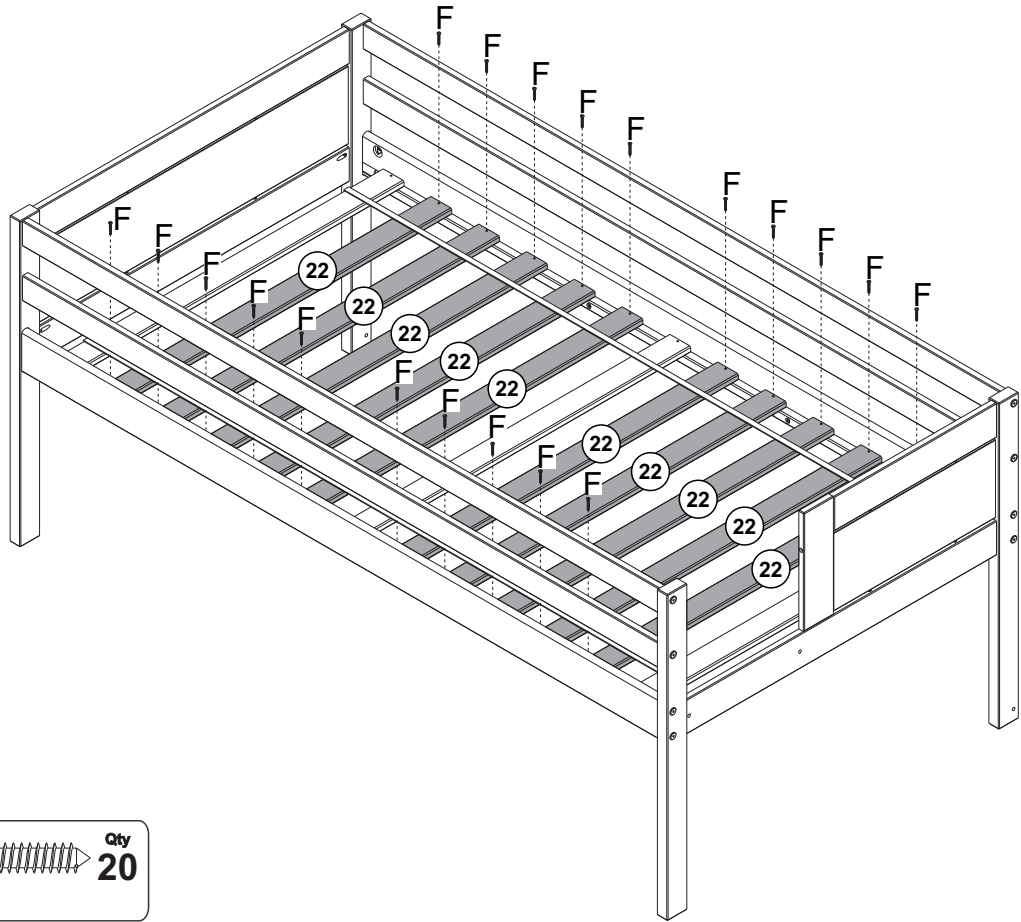


30A


PLEASE USE THE WOOD SPACER LETTER M TO CHECK THE DISTANCE BETWEEN EACH SLAT. THE SPACE BETWEEN EACH SLAT CANNOT EXCEED THE SPACER SIZE (3 2/16" OR 80 MM); IT CAN BE SMALLER, BUT NOT LARGER. IF THE SPACER IS LARGER, PLEASE REMOVE THE SCREWS AND MAKE SURE TO REATTACH THE SLATS TO ENSURE THEY DO NOT EXCEED THE SPACER SIZE.

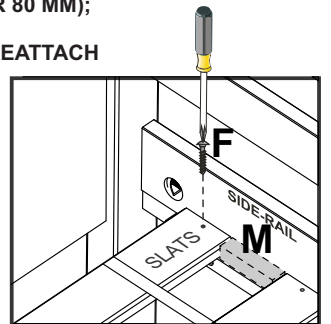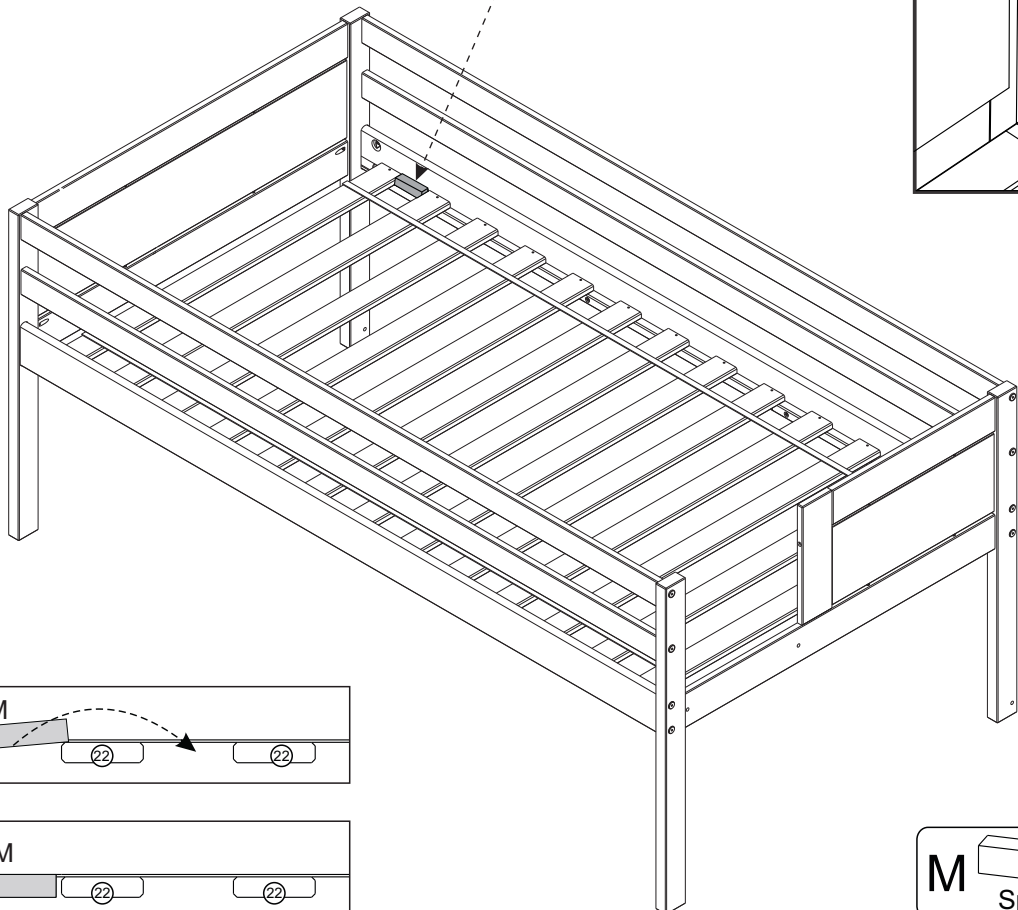

31

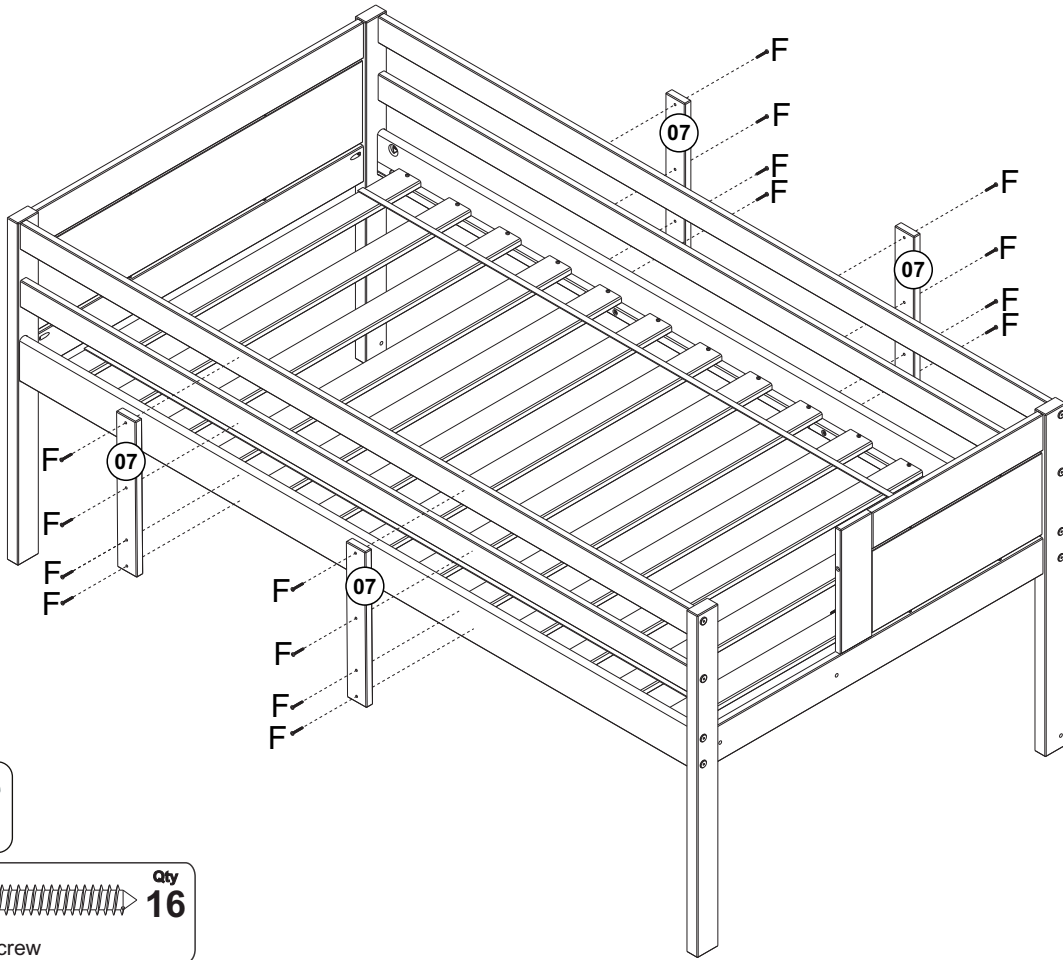


32

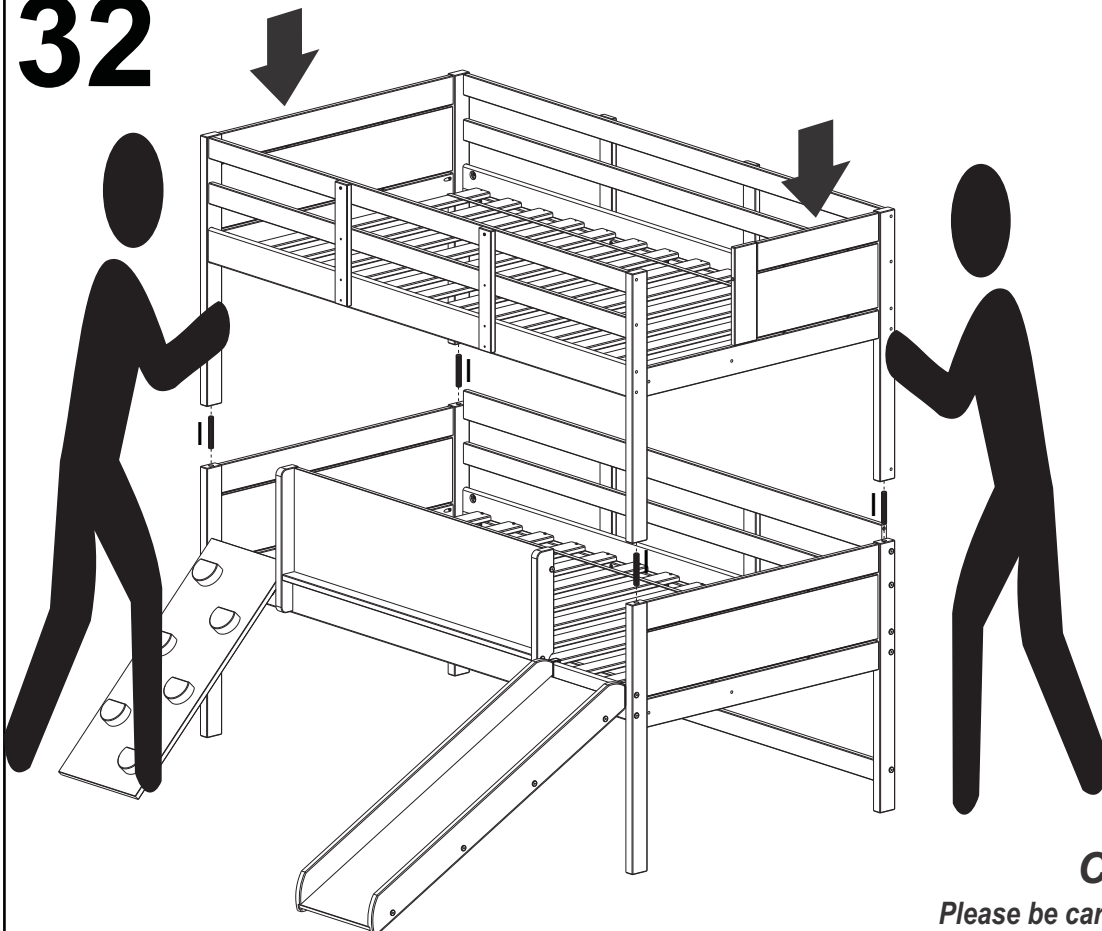




CAUTION!

Please be careful when assembling this product due the parts are extremely heavy. Also, please do not allow kids around when assembling this bed to avoid injuries!




33

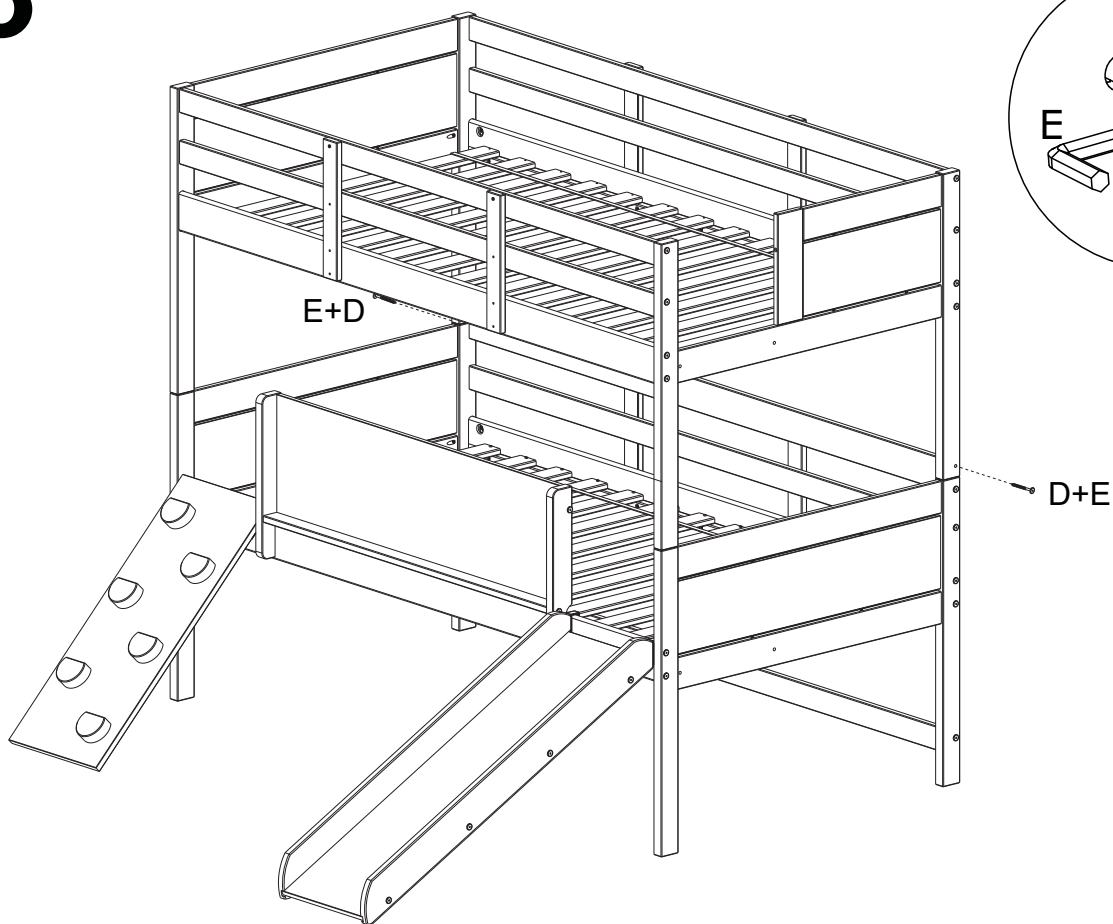


D 	 Qty 02	E  Qty 01 Allen wrench
--	---	--

34




LADDER

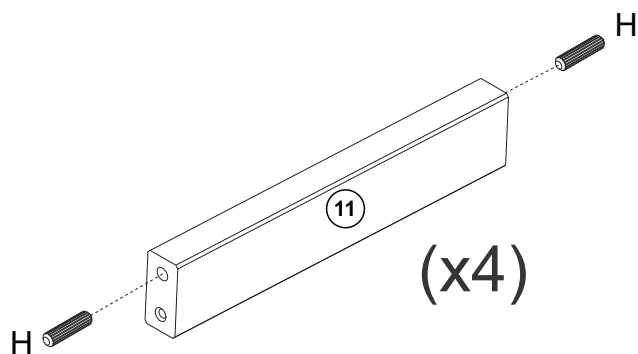


H  Qty 08 1 9/16" Wooden Dowel
--

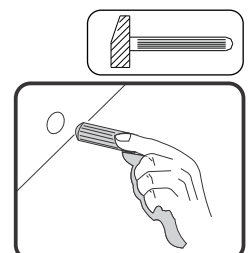





35

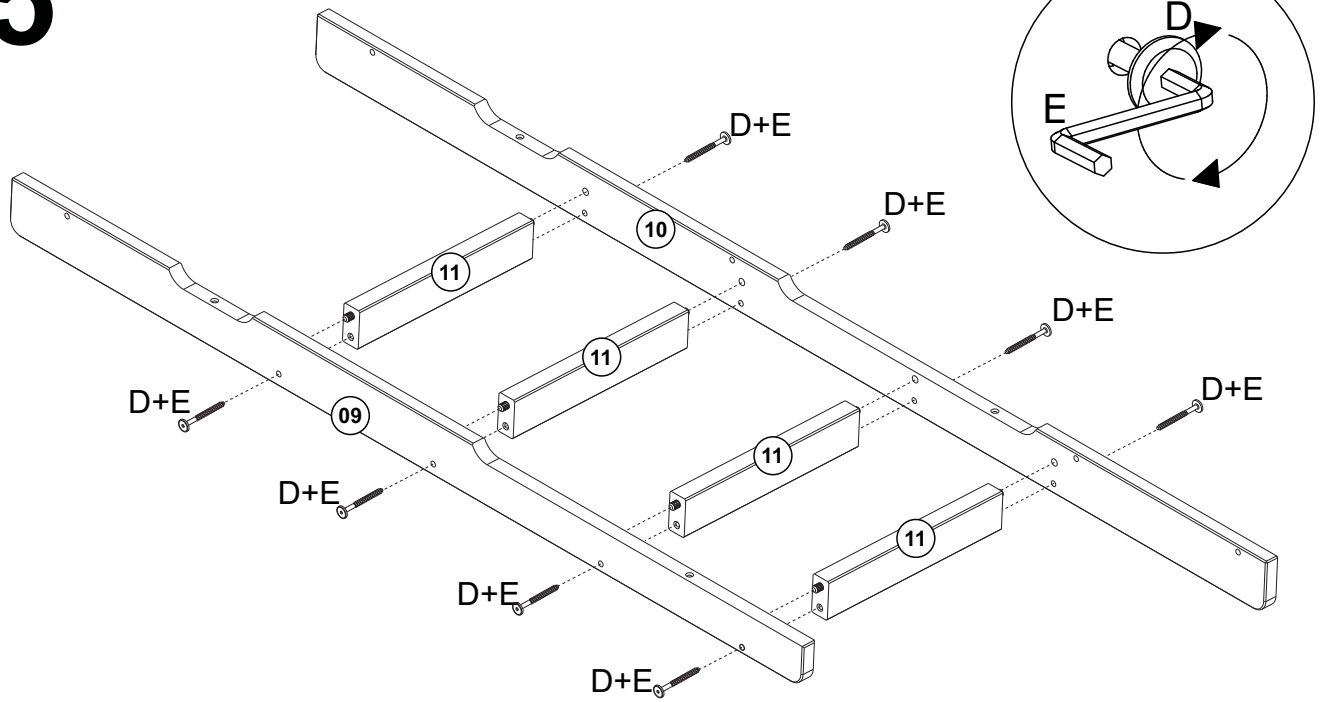

36

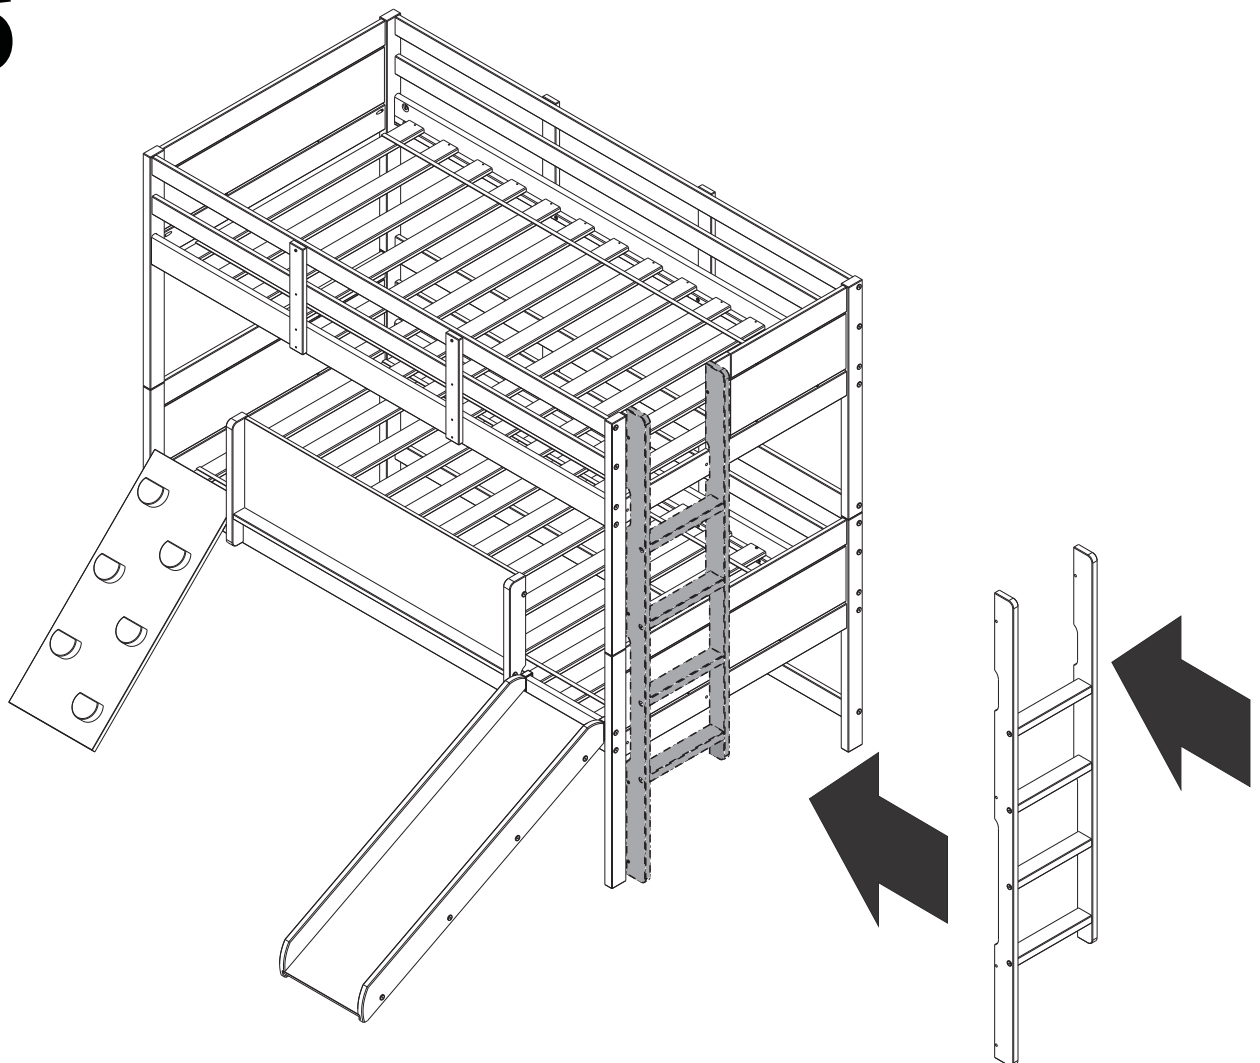

37

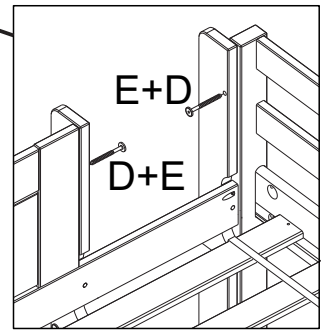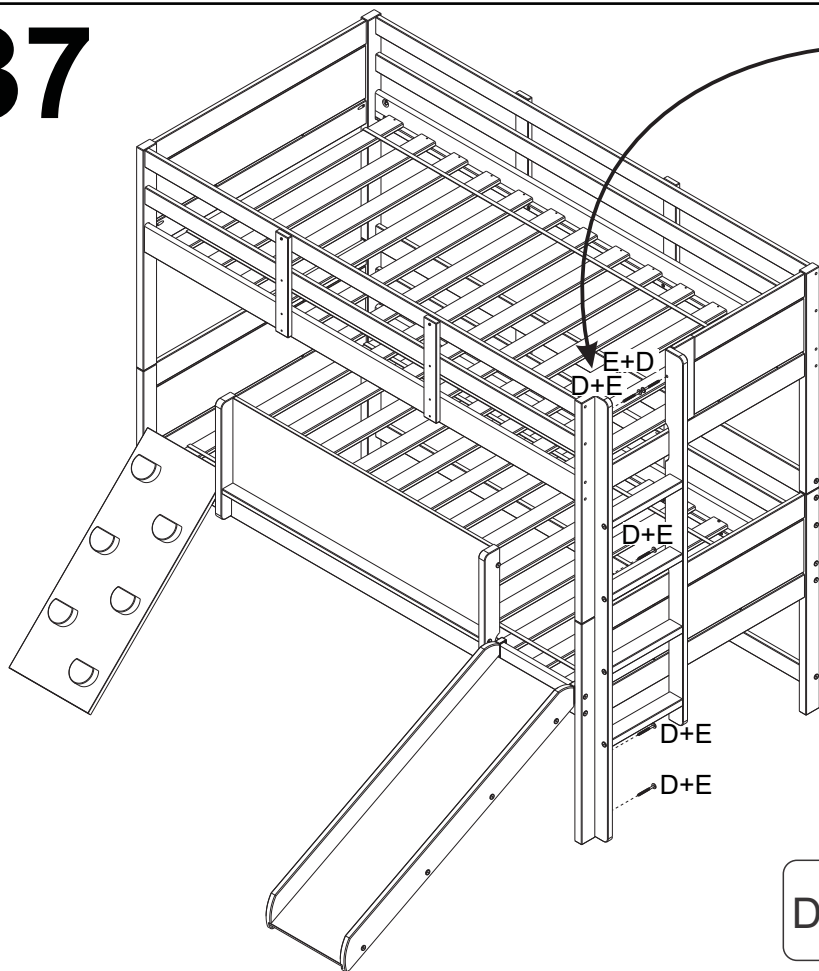

38

