
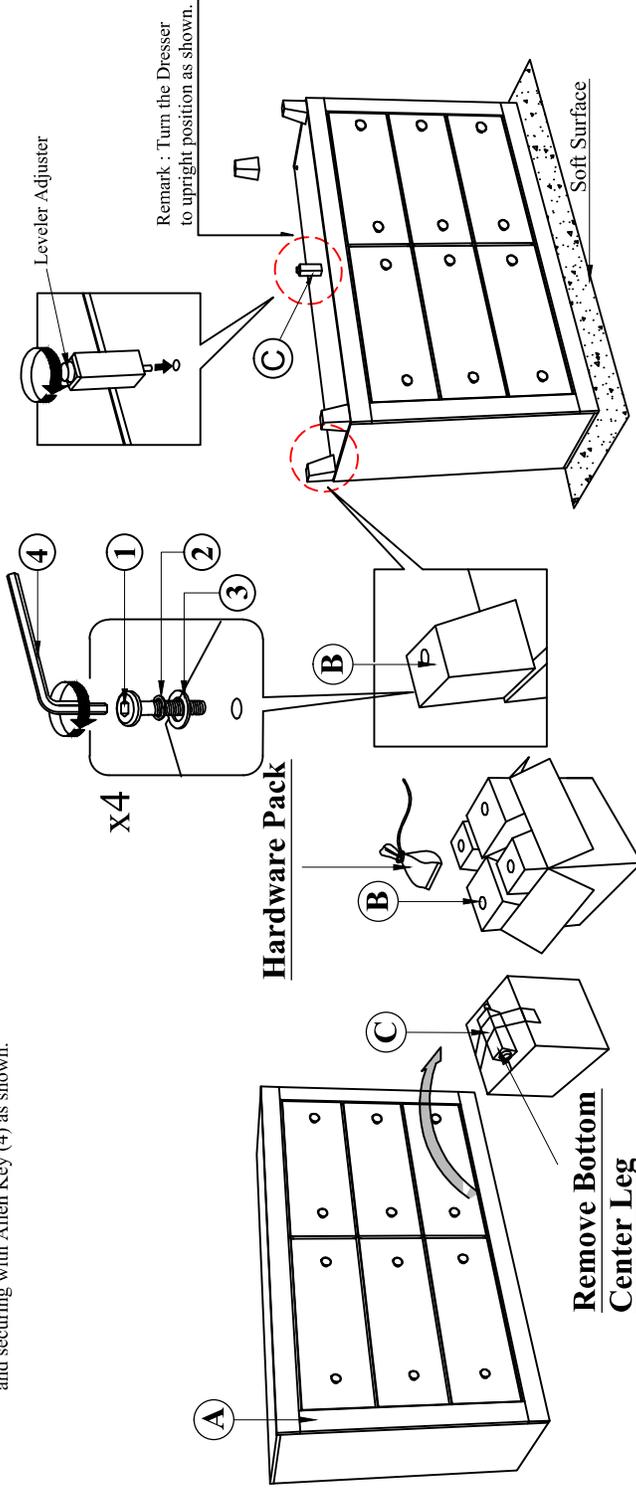


ASSEMBLY INSTRUCTIONS

STEP 1 : Pull the bottom drawer and take out the Bunfoot carton (B). Assemble the Bun Foot (B) with JCBC Bolt (1), Spring washer (2), Flatwasher (3) and securing with Allen Key (4) as shown.




Remove Bottom Center Leg

| CROWNMARK MODEL : B4510-1 DRESSER | | | |
|-----------------------------------|---|-------|--|
| (BOX 1) BOX OF DRESSER | | | |
| NO | ITEM | QTY | |
| A |  DRESSER | 1 pc | |
| B |  BUN FOOT | 4 pcs | |
| C |  BOTTOM CENTER LEG | 1 pc | |

(BOX 1) HARDWARE LIST

| NO | ITEM | QTY | |
|----|--|-------|--|
| 1 | JCBC Bolt m6x50mm Blk  | 4 pcs | |
| 2 | Spring Washer 1.4" Blk  | 4 pcs | |
| 3 | Flat Washer 1.4"TDx13mmOD Blk  | 4 pcs | |
| 4 | Allen Key m4x110mm With Ball Blk  | 1 pc | |

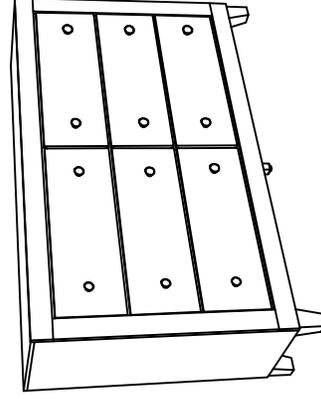

COMPLETED ASSEMBLY

NOTE : MUST TIGHTEN SCREWS **PERIODICALLY** WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.