ASSEMBLY INSTRUCTION FOR ACME FURNITURE

MODEL#AC02738


Thank you for purchasing the quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the cation during shipment. Seperate, identify and count all parts and metal hardware. Compare with all parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

*** Do not fully tighten screws until fully assembled ***

COMPONENT PARTS						
DESCRIPTION	PART NAME	QTY(PCS)				
1	TOP FRAME	1				
2	SHELF FRAME	3				
3	BOTTOM FRAME	1				
4	PILLAR	16				
(5)	FOOT	4				
6	MIRROR	4				
7	GLASS //	1				

HARDWARE REQUIRED

A		WRENCH		1 PCS
\bigcirc		FULLY-THREADED BOLT	ø1/4"*50mm	4 PCS
©		FULLY-THREADED BOLT	φ1/4"*64mm	16 PCS
D		NUT		16 PCS
E		WASHER	∮13mm	16 PCS
(F)		LEVELER		4 PCS
(G)		RUBBER MAT	Ø10mm	5 PCS
\bigoplus		PLASTIC BRACKET	21mm*48mm	2 PCS
(I)		SAFETY STRAP		2 PCS
\bigcirc	1	ANCHOR		4 PCS
\bigcirc		SCREW	∮4mm*38mm	4 PCS

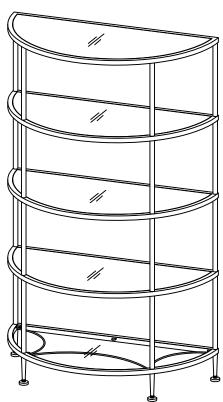


Attention







^{***} Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to ordering replacements. PAGE 2/7

How to assemble:

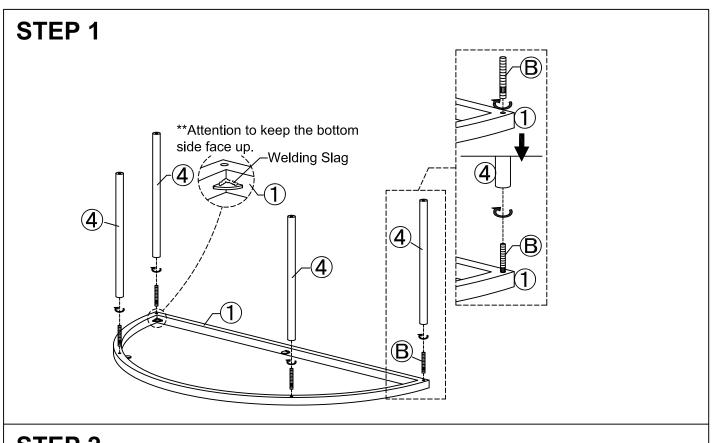

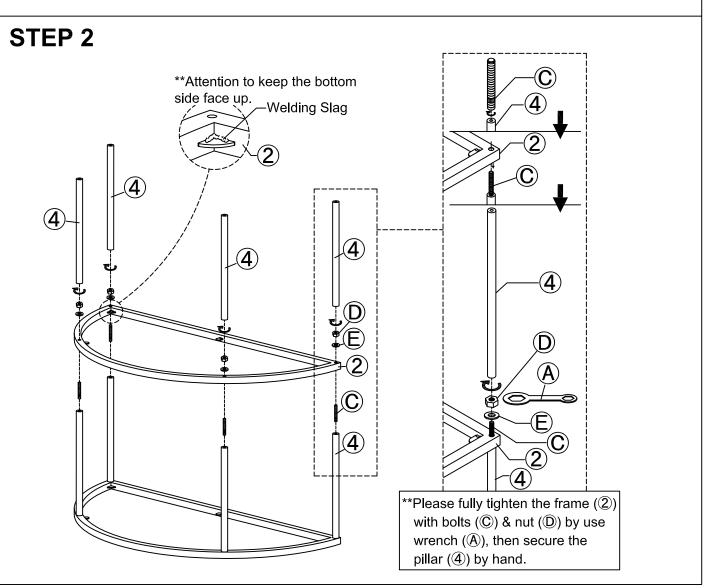

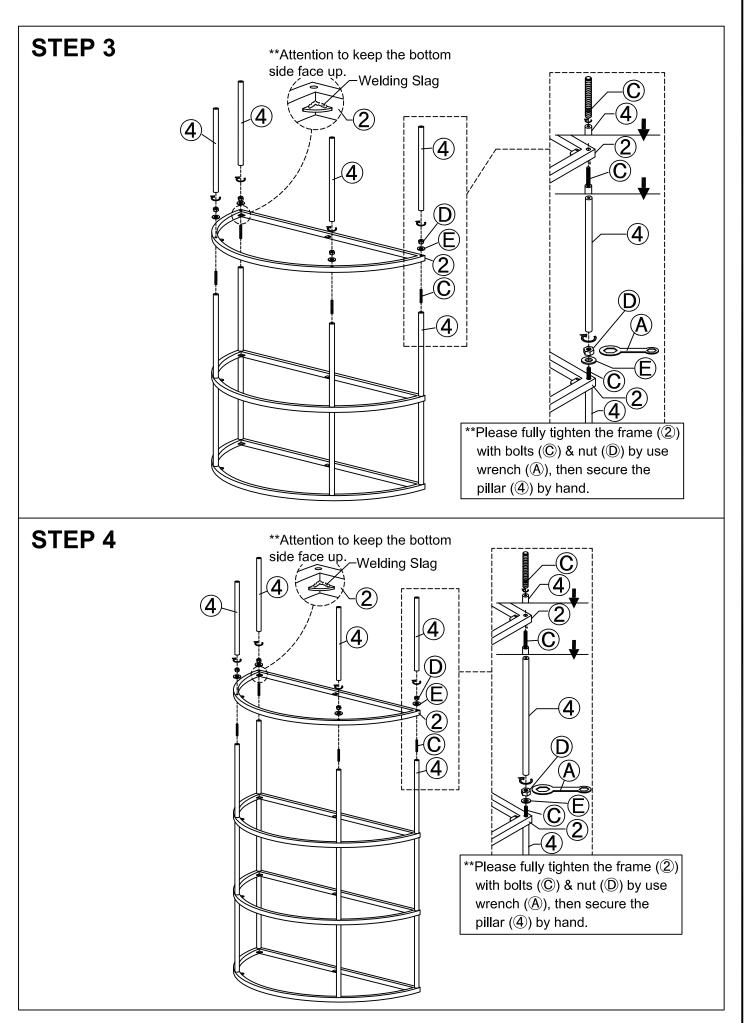

STEP 5 **Attention to keep the bottom side face up. -Welding Slag **Please fully tighten the frame (③) with bolts (©) & nut (D) by use wrench (A), then secure the foot (5) by hand.

STEP 6 **(F)**-STEP 7 6 / 6 / 6 / 6 / \bigcirc 1/7

