

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * Do not fully tighten the bolts until the product is assembled.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com





PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 10 minutes.
- * Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

Wipe spills immediately. Maintain with regular dusting and clean with mild soap and water, dry thoroughly and do not use a brass cleaner. Adhesive felt pads should always be used/applied in order to prevent damage to the furniture or surfaces on which the furniture is placed.

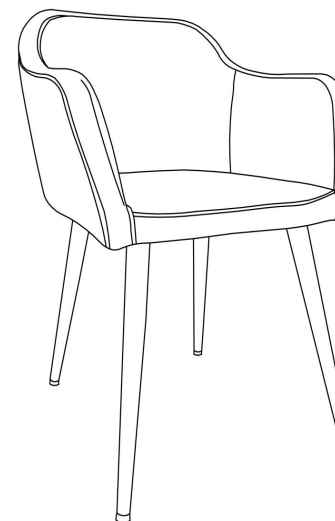
Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	SEAT		1X
B	LEG		4X
HW 1	HEX BOLT: M6X1X18MM		12X
HW 2	ALLEN KEY		1X



Model# ACH7500

Product Dimensions: 22"Wx23"Dx30.1"H



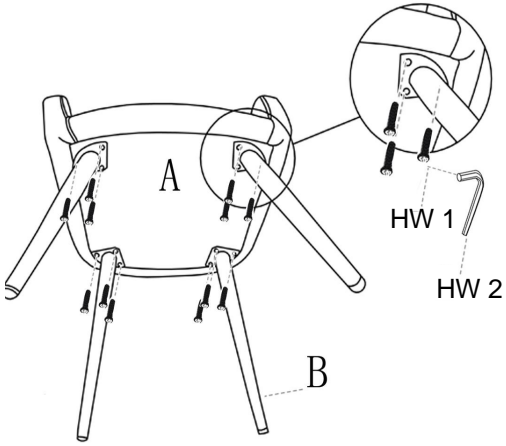
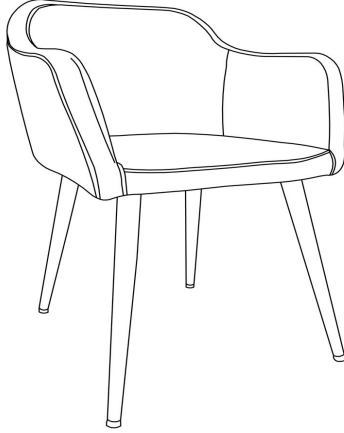
Weight capacity- 275LBS

WARNING: Do not stand on the Chair.

WARNING: Do not over torque bolts.

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 10 minutes.
- * Tools Required for Assembly (included): Allen Key
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

<div data-bbox="91 464 136 509">1</div> 	<div data-bbox="651 464 696 509">2</div> 
<div data-bbox="73 1074 633 1118">Step 1</div> <p data-bbox="103 1145 607 1262">Using the Allen key(HW2) to connect the legs(B) and the seat(A) with screws(HW1).</p>	<div data-bbox="633 1074 1164 1118">Step 2</div> <p data-bbox="701 1161 1010 1198">Assembly completed.</p>