

**ASSEMBLY INSTRUCTIONS**  
**COASTER FINE FURNITURE**



*Fine Furniture for every stage of life*

**930242(B1&B2)**  
***Vanity Set***

# ITEM : 930242(B1&B2)


## ASSEMBLY INSTRUCTIONS ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

### WARNING!



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

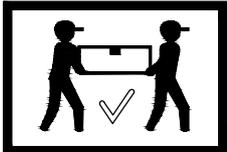

ASSEMBLY TIME

30 MINUTES

## PARTS IDENTIFICATION

### B1 (BOX 1)


A MIRROR



1PC

### B2 (BOX 2)

B DESK

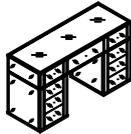

1PC

C MIRROR SUPPORT




2PCS

D DESK LEG



8PCS

E STOOL SEAT



1PC

F STOOL LEG



4PCS

## HARDWARE IDENTIFICATION

### Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 930242(B2)

1 LONG BOLT  
(Ø5/16" x 65mm - RBW)



8PCS

2 MEDIUM BOLT  
(Ø1/4" x 50mm - RBW)



8PCS

3 SHORT BOLT  
(Ø1/4" x 35mm - RBW)



8PCS

4 FLAT WASHER  
(5/16" x 19mm - RBW)



24PCS

5 LOCK WASHER  
(Ø1/4" - RBW)



16PCS

6 ALLEN WRENCH  
(4 x 57mm - RBW)



1PC


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufactures does not provide this item.


ITEM : **930242(B1&B2)**

**ASSEMBLY INSTRUCTIONS**

**STEP 1**

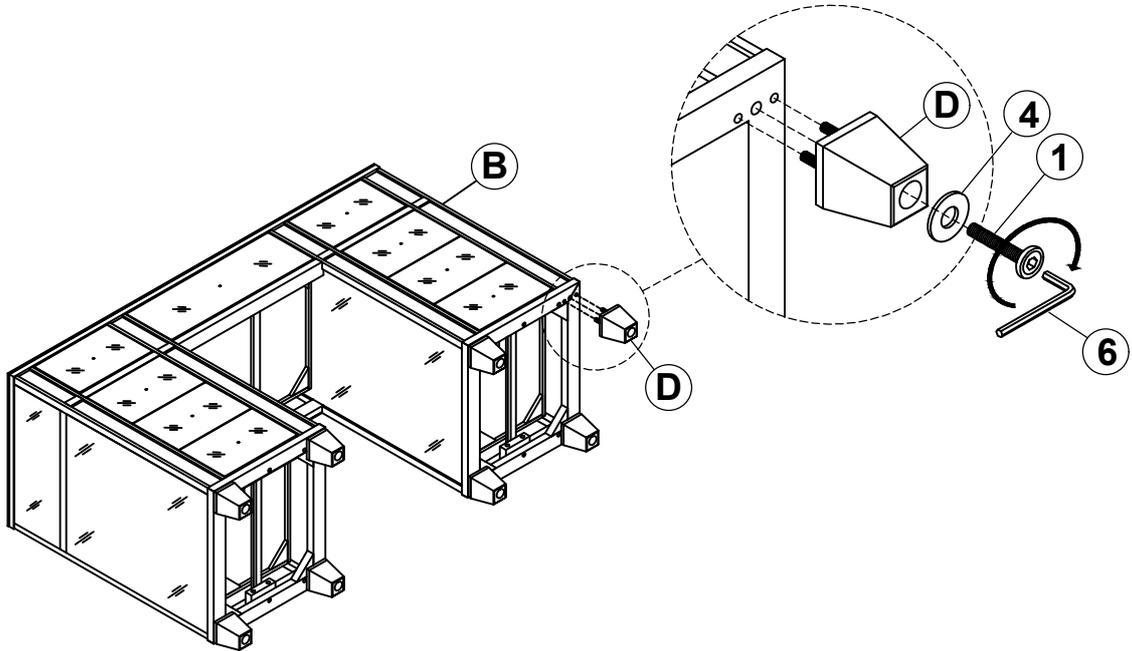


**STEP 2**

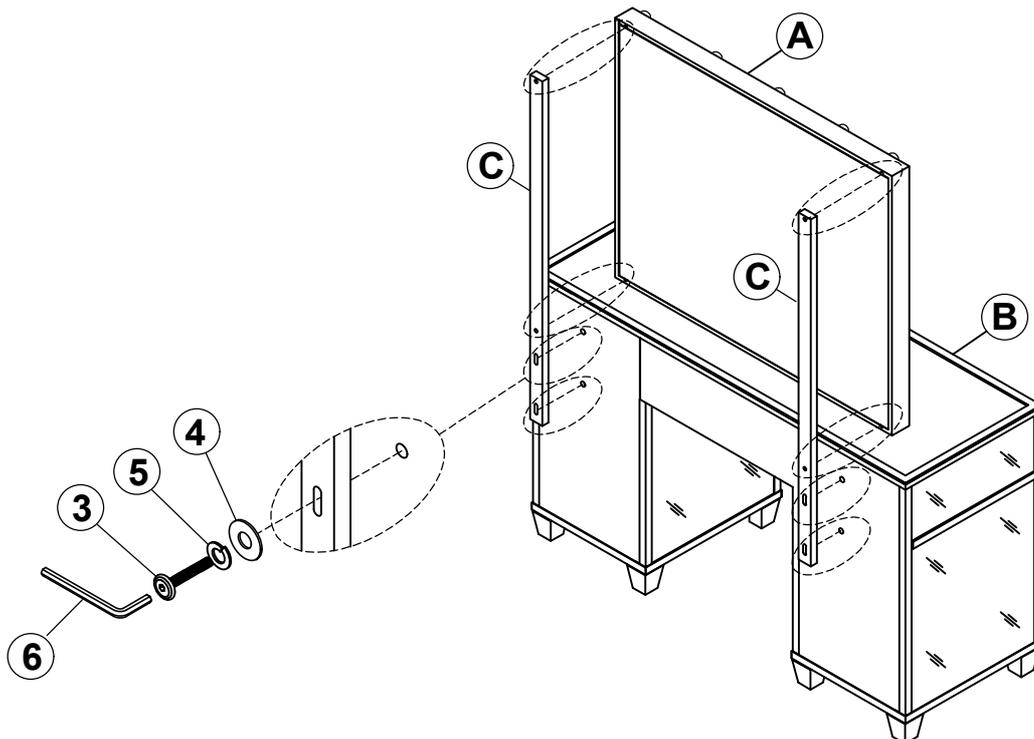


# ITEM : 930242(B1&B2)

## ASSEMBLY INSTRUCTIONS STEP 3

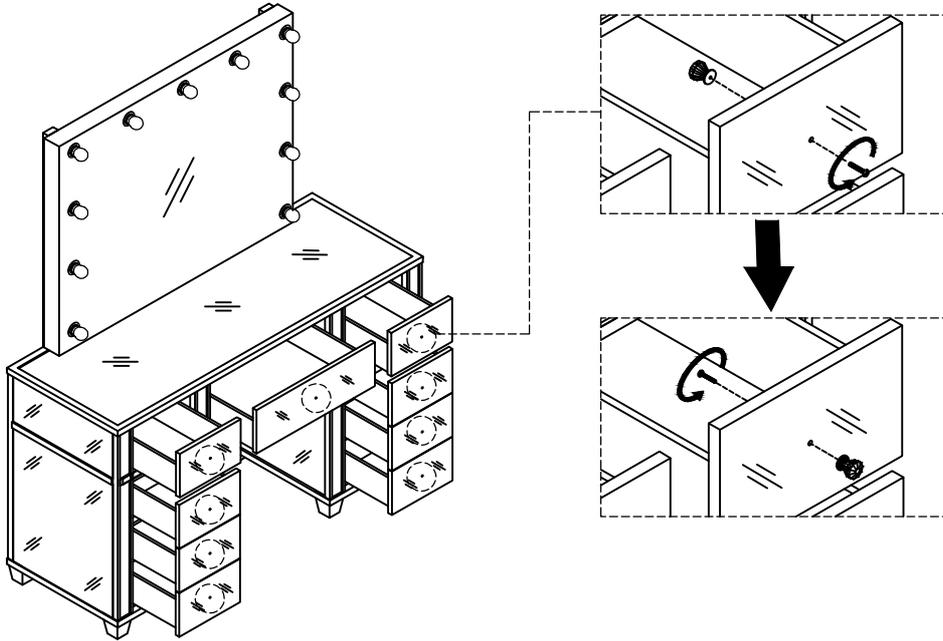


## STEP 4


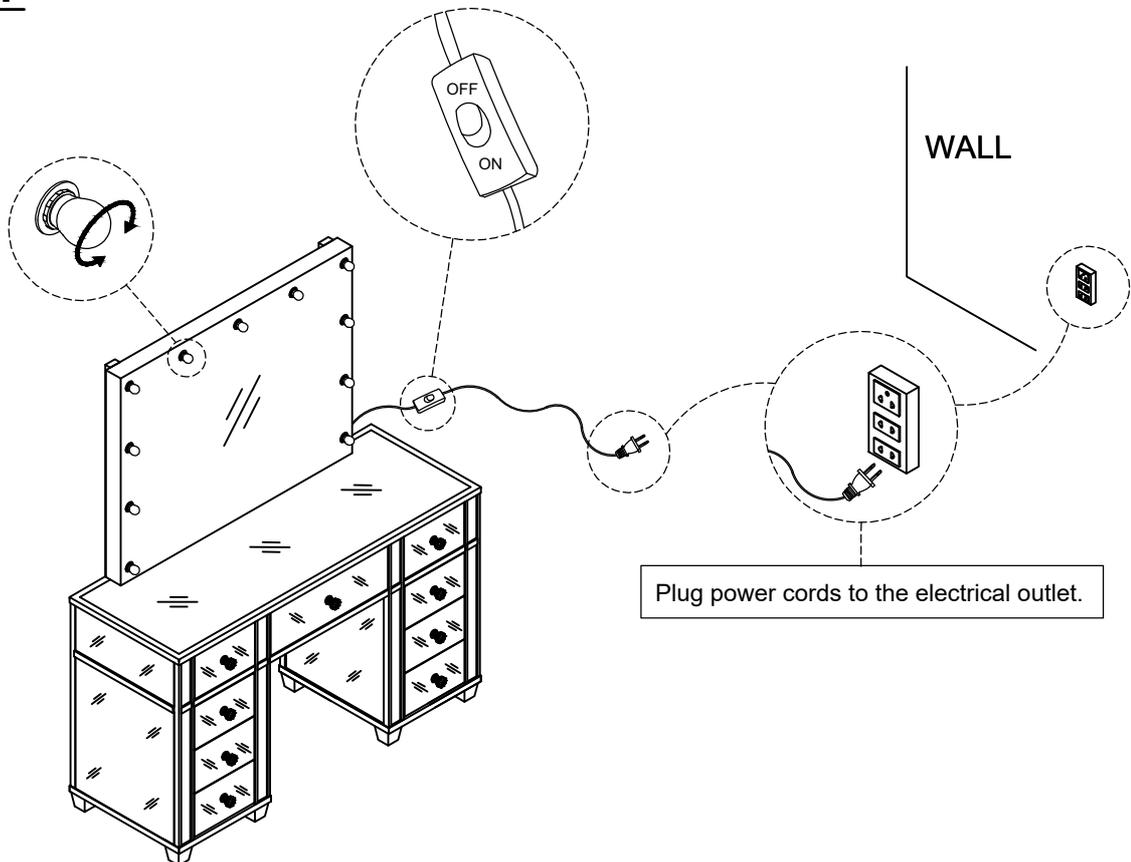


ITEM : **930242(B1&B2)**

**ASSEMBLY INSTRUCTIONS**  
**STEP 5**

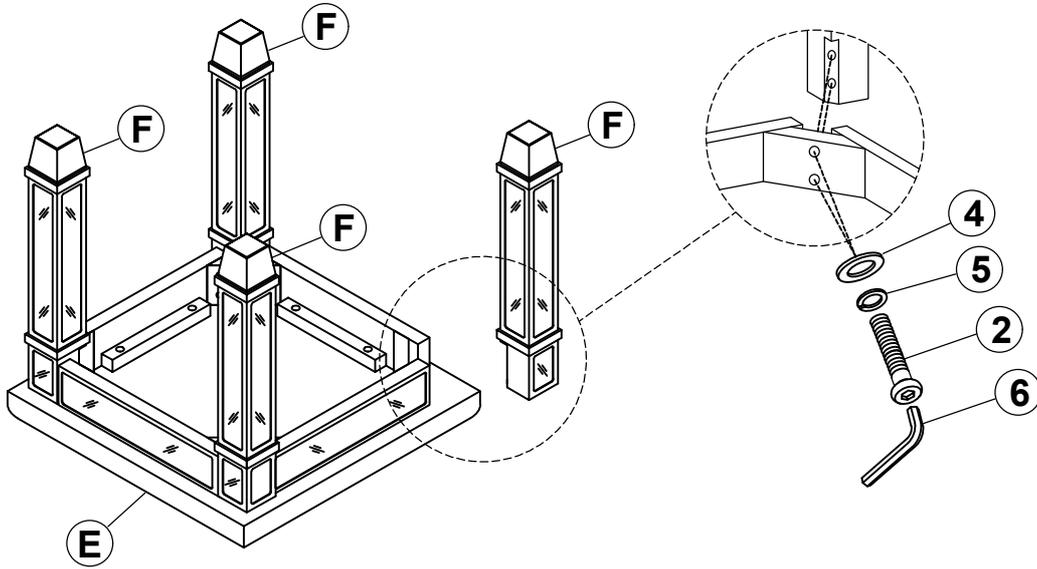

**STEP 6**  
**COMPLETE**

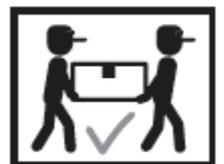
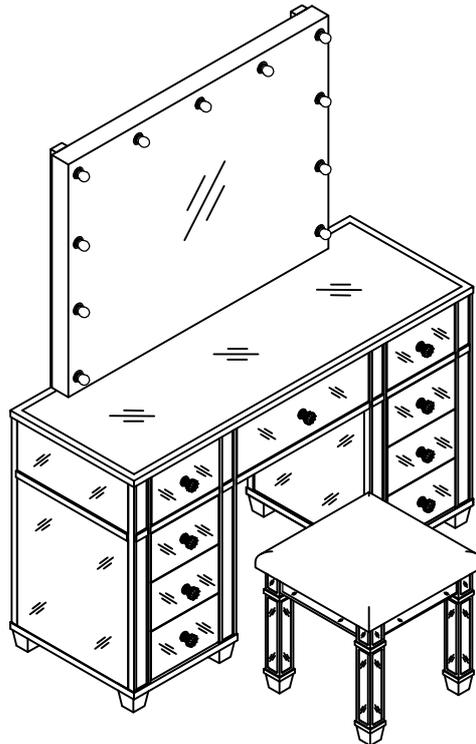


# ITEM : 930242(B1&B2)



Inner Size of Drawer A : 17.25"W X 13.25"D X 3.25"H X 0.50"T

Inner Size of Drawer B : 8.25"W X 13.25"D X 3.25"H X 0.50"T

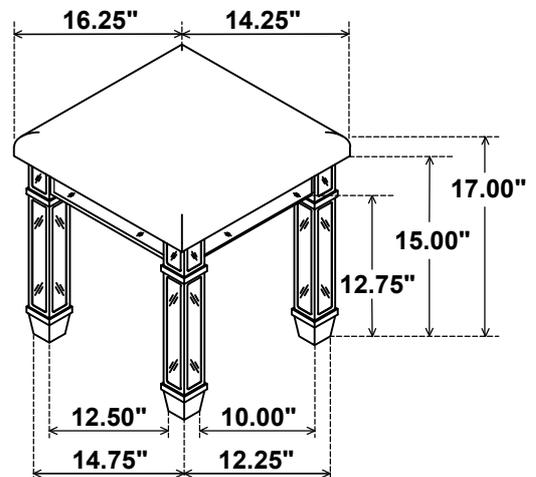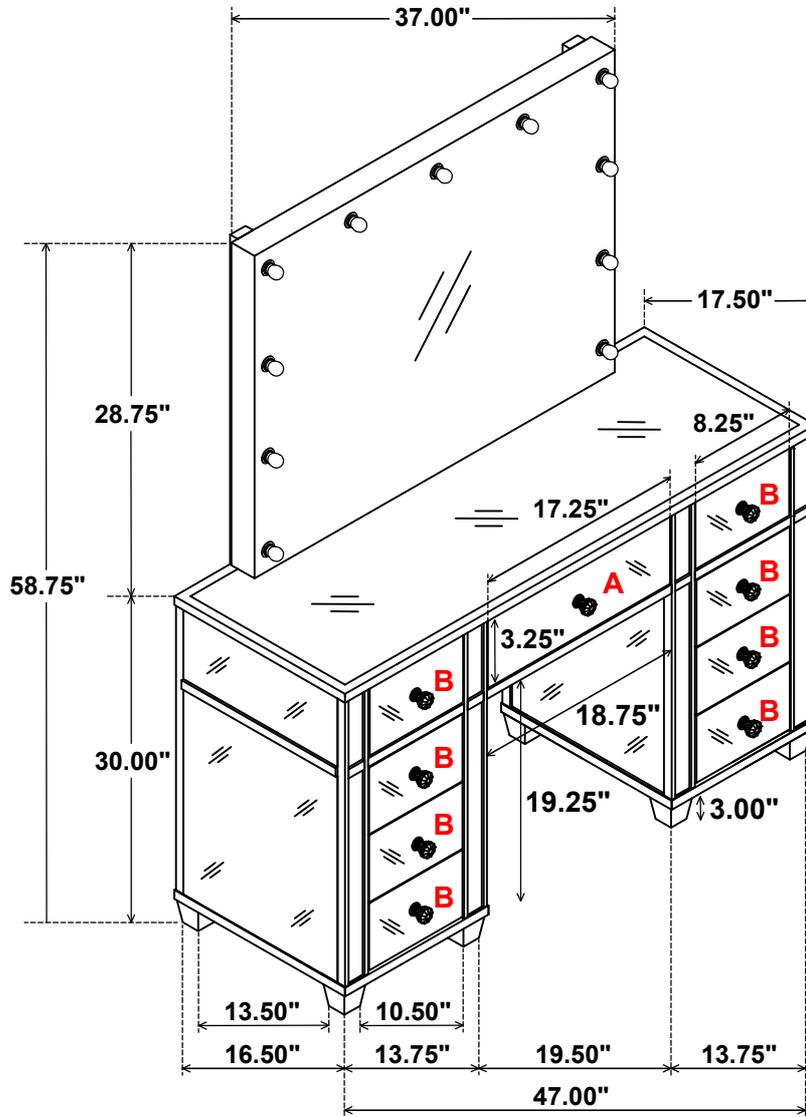

Note: Dimension tolerance  $\pm 5\%$