

ASSEMBLY INSTRUCTION

MADE IN VIETNAM


D360-37 60" BENCH

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.

Before you start assembly: Please read all instructions carefully before beginning the assembly process. It is recommended that 2 people work together during assembly to prevent personal injury and to ensure that heavy or cumbersome parts are not damaged during the process.

CAUTION: For your safety, this product requires two people to lift.



Assembled Dimensions

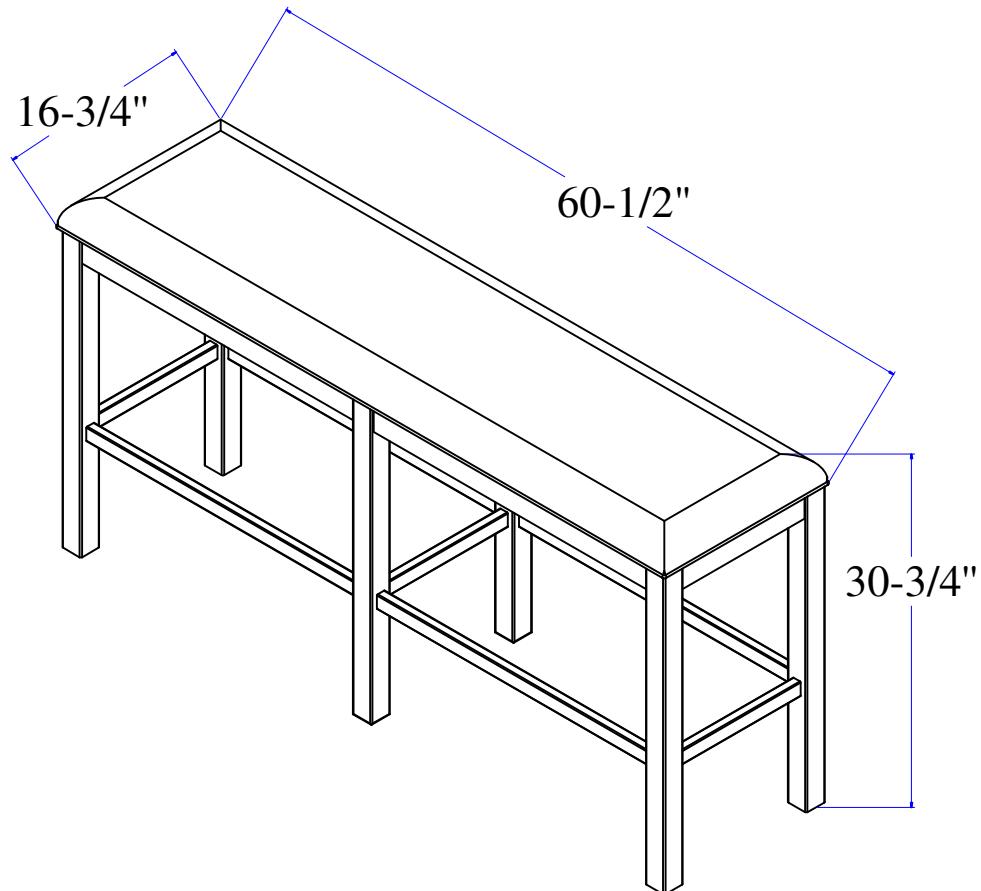

20 MINUTES


APPROXIMATE ASSEMBLE TIME

2 PERSON

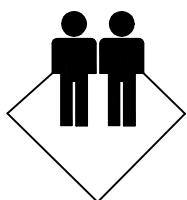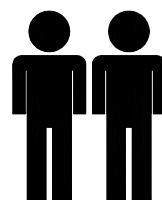

REQUIRED ASSEMBLY SPACE


RECOMMENDED ASSEMBLY TOOLS

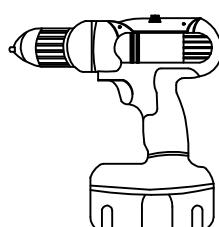

NOT PROVIDED

ITEM NO. : D360-37 60" BENCH

PART LIST

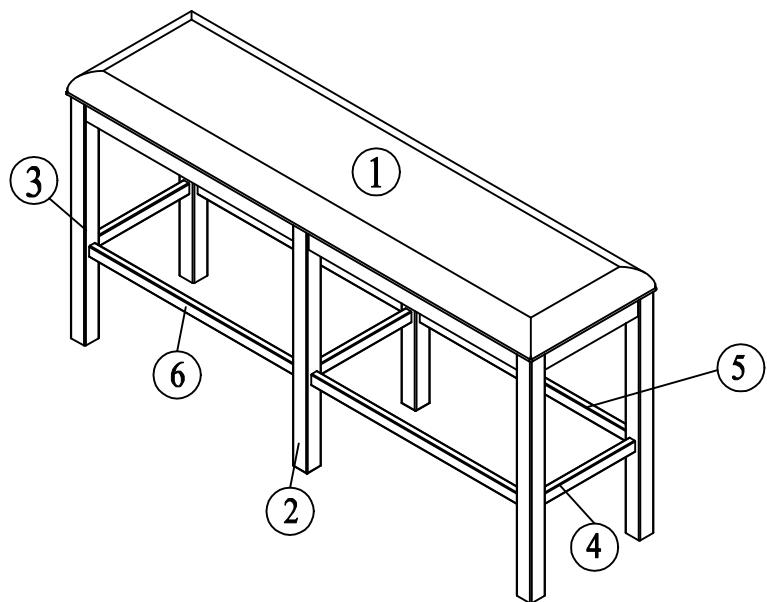

NO.		PART LIST	QTY
(1)		Seat Frame with Cushion EHF # N/A	1
(2)		Middle Leg EHF PD360-36/37CTRLG	2
(3)		Side Leg EHF PD360-36/37LG	4
(4)		Side & Middle Stretcher EHF PD360-37SMSTRCHR	3
(5)		Back Stretcher EHF PD360-37BKSTRCHR	2
(6)		Front Stretcher EHF PD360-37FRNTSTRCHR	2

ITEM NO. : D360-37 60" BENCH

HARWARE LIST


EHF # PD360-36/37HDWR

A




12X
 \varnothing 5/16" * 12 * 2mm
SPRING WASHER

B




12X
 \varnothing 5/16" * 19 * 2mm
FLAT WASHER

C




12X
 \varnothing 5/16" * 12mm
HEX NUT

D



1X
 \varnothing 5/16"
OPEN WRENCH




E






14X
 \varnothing 8 * 38mm
SCREW

ITEM NO. : D360-37 60" BENCH

STEP 1

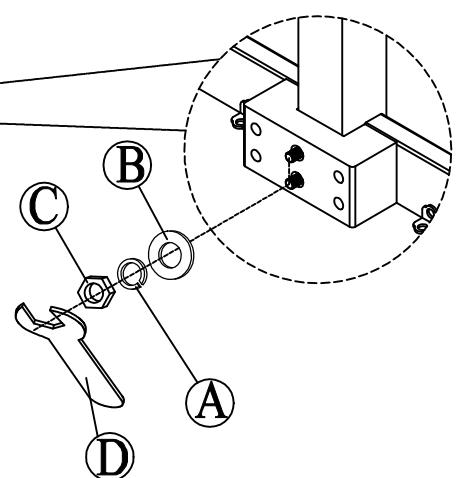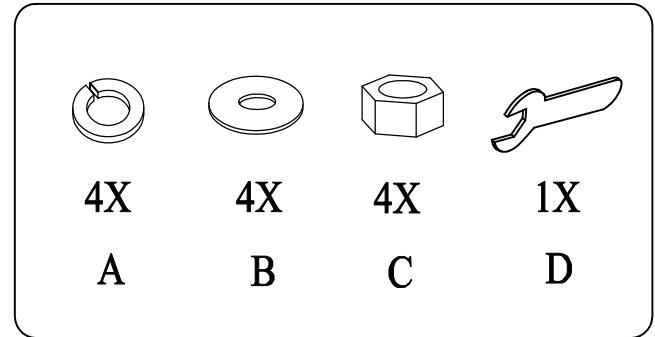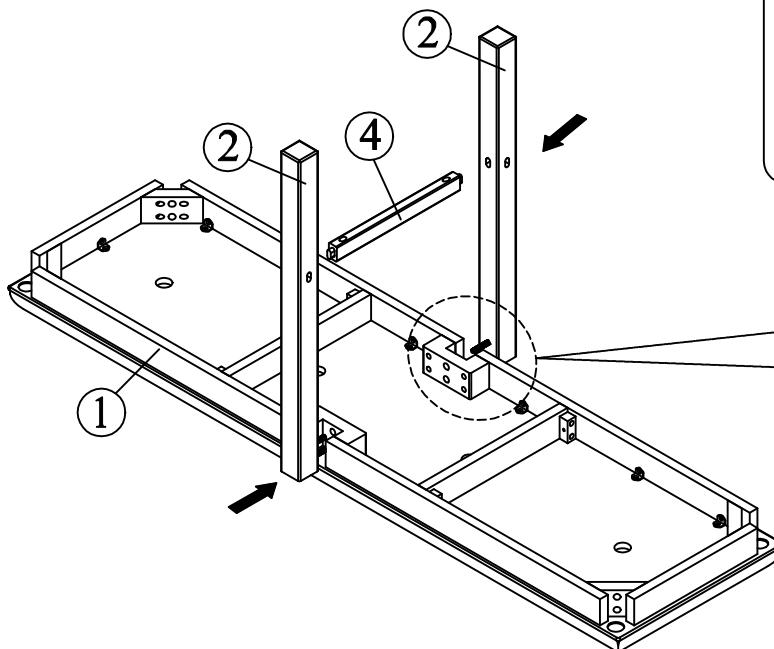


STEP 2

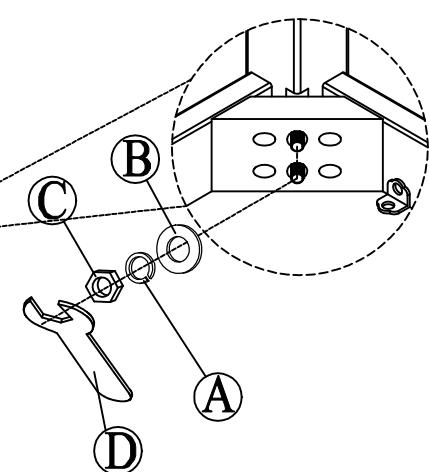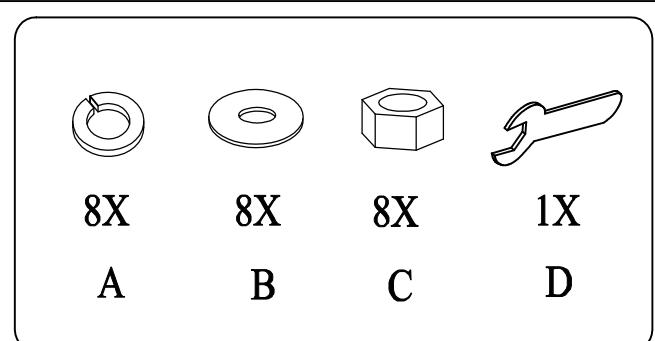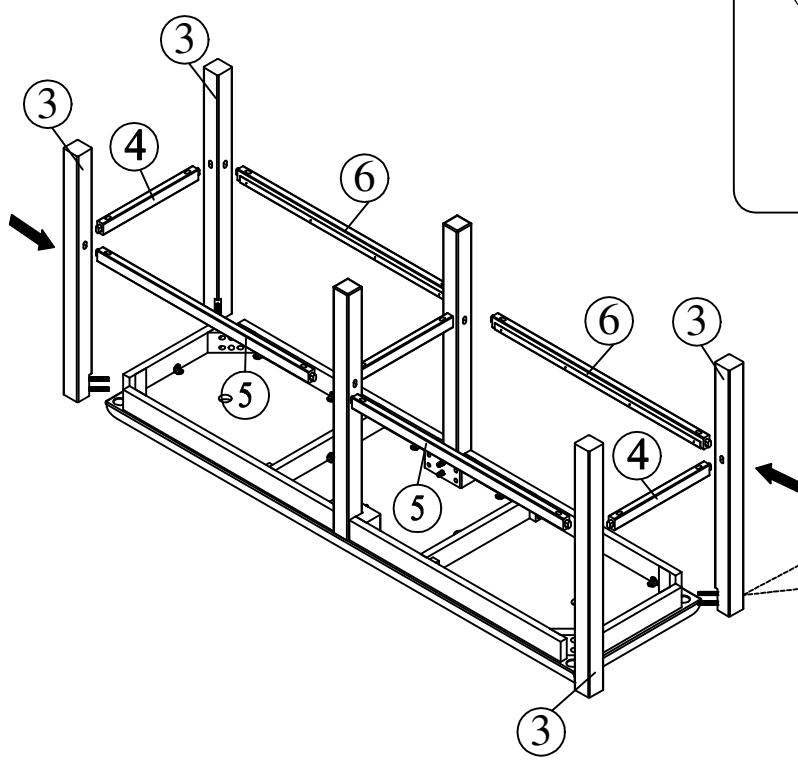

ITEM NO. : D360-37 60" BENCH

STEP 3

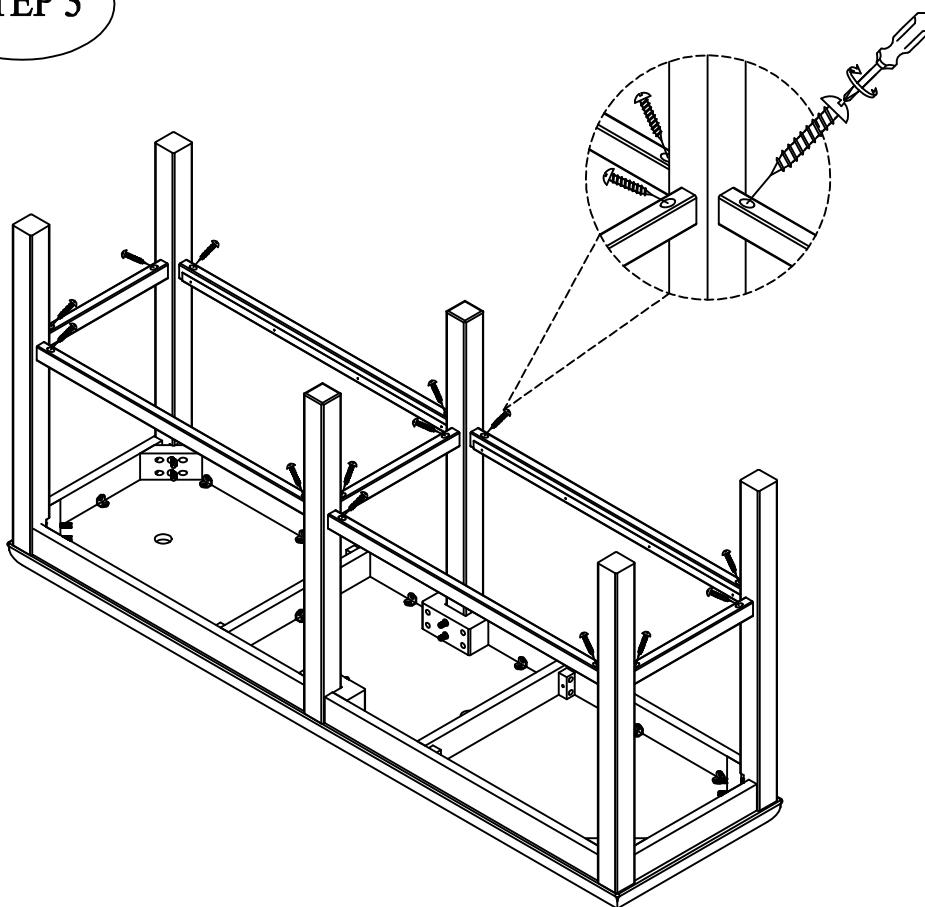

STEP 4

