

Milano Headboards

MODEL #167-49 4/6, 5/0

MODEL #167-67 6/6


Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. Customer Service Phone Number: 502-562-0000

PARTS LIST


- A (1) Headboard
- B (2) Leg Extensions
- C (2) Adapter Plates

HARDWARE LIST

- D (4) Long Allen Bolts
- E (4) Short Allen Bolts
- F (8) Metal Washers
- H (8) Spring Washers
- I (8) Hex Nuts
- J (1) Allen Wrench

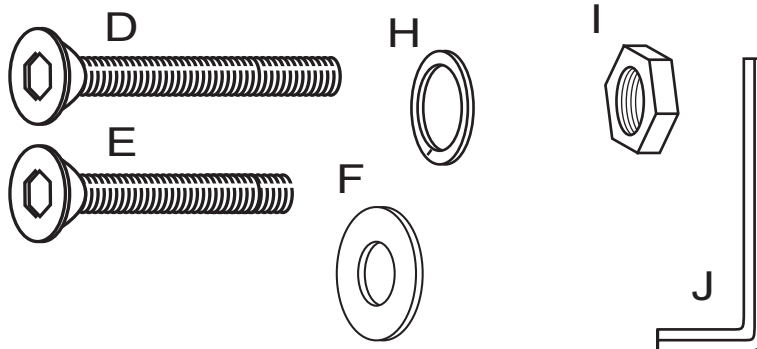



HARDWARE NOT
DRAWN ACTUAL SIZE

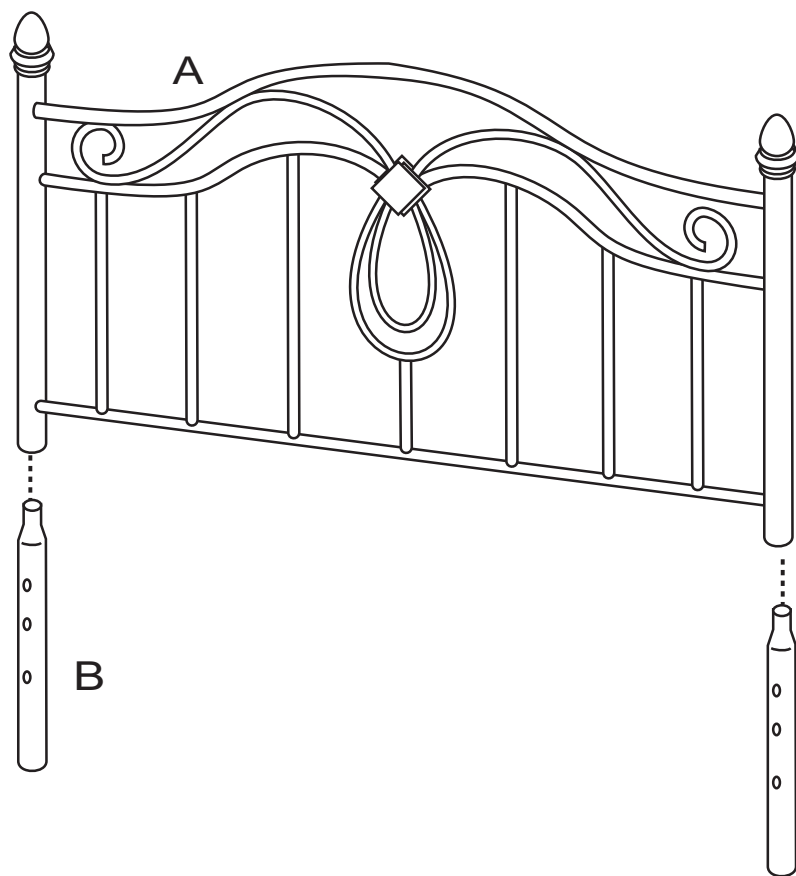

STEP 1 FOR MILANO HEADBOARDS.

ONE AT A TIME
CAREFULLY INSERT
EACH **LEG EXTENSION**
(**B**) INTO THE BOTTOM
OF EACH POST ON THE
HEADBOARD (A).

STEP 2 FOR MILANO KING AND QUEEN HEADBOARDS.

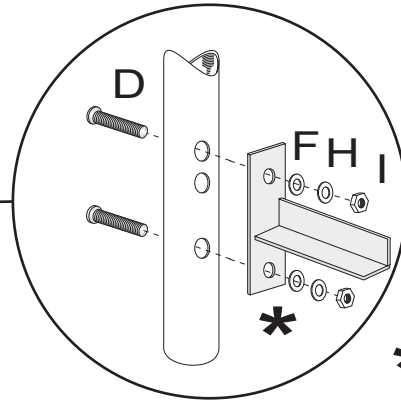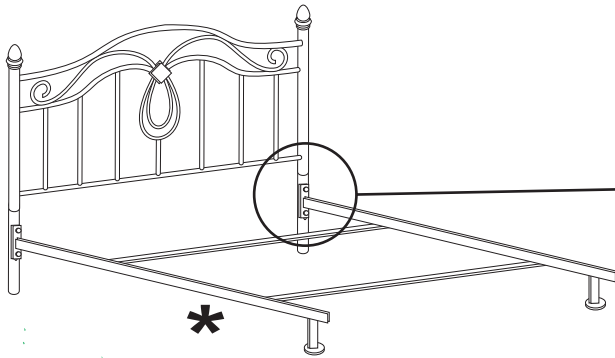

**BED FRAME
* NOT IN
INCLUDED**

WITH THE HELP OF A FRIEND, SECURE BED FRAME (NOT INCLUDED) TO LEG EXTENSIONS (B) ON THE HEADBOARD (A) USING 2 LONG ALLEN BOLTS (D), 2 METAL WASHERS (F), 2 SPRING WASHERS (H) AND 2 HEX NUTS (I) PER BED FRAME BRACKET.

STEP 2 FOR MILANO FULL HEADBOARD.

FIG. A


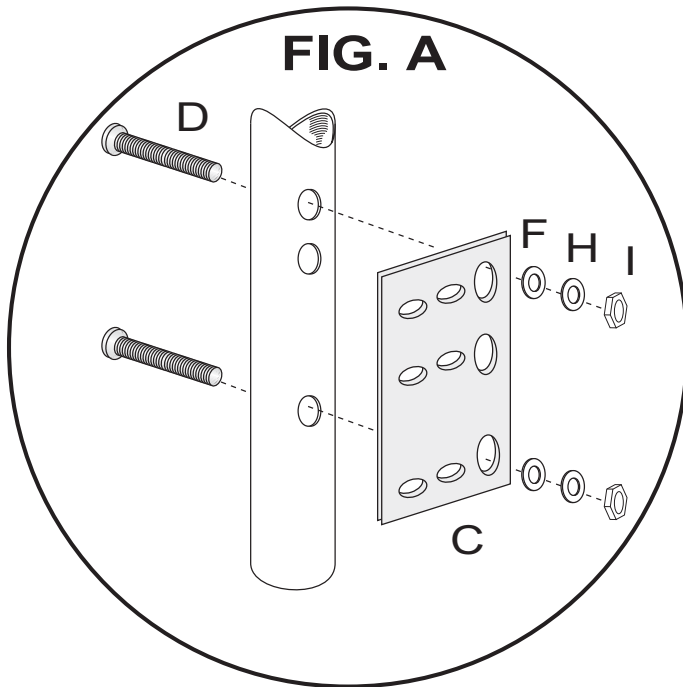


FIG. B

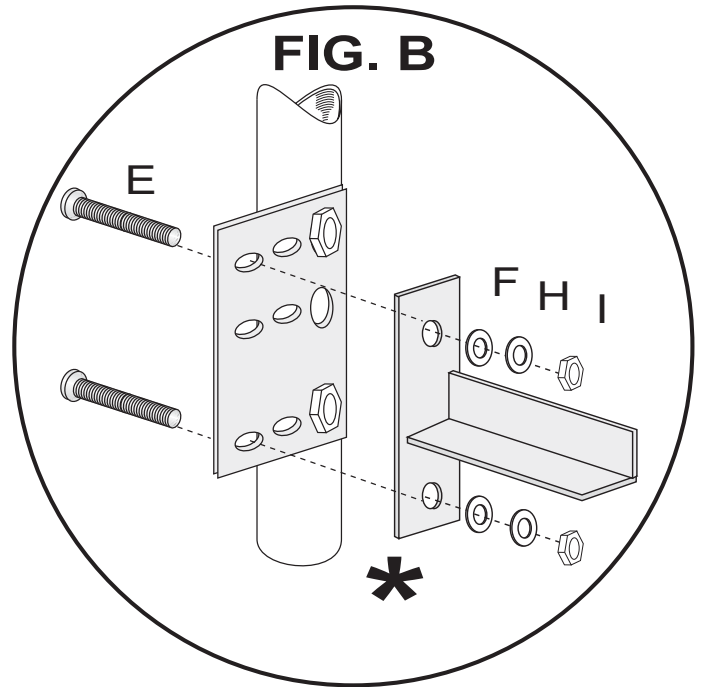

SECURE ONE **ADAPTER PLATE (C)** TO EACH LEG EXTENSION (B) ON THE HEADBOARD LEGS (A) USING 2 LONG ALLEN BOLTS (D), 2 RUBBER WASHERS (G), 2 METAL WASHERS (F), 2 SPRING WASHERS (H) AND 2 HEX NUTS (I) PER LEG. SEE FIGURE A.

STEP 3

SECURE BED FRAME (NOT INCLUDED) TO EACH **ADAPTER PLATE (C)** USING 2 **SHORT ALLEN BOLTS (E)**, 2 METAL WASHERS (F), 2 SPRING WASHERS (H) AND 2 HEX NUTS (I) PER PLATE (C).

CARE & MAINTENANCE: The touch of a soft cloth is all the maintenance the finish will ever need. Please do not use harsh or abrasive cleaners for polishing, as they may cause damage to the finish. Periodic checks are recommended to make sure that all bolts, screws and nuts are securely tightened.