

# ASSEMBLY INSTRUCTIONS

DESCRIPTION : QUEEN BED HEADBOARD, FOOTBOARD AND SLATS / QUEEN BED / KING BED SIDE RAILS

MODEL : CYPRESS-DARK GREY-QB-HB/FB/  
SLATS + CYPRESS-DARK GREY-  
QB/KB-SR + CYPRESS-DARK  
GREY-TW/FB/QB/KB-LEGS

REVISION : A

**NOTE :**

MUST TIGHTEN SCREWS PERIODICALLY WITH USE SCREW WILL BECOME LOOSE. CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

**Component List**

**Headboard & Footboard**

No	Descriptions	Qty
A	Headboard Panel	1
B	Footboard Panel	1

**Component List**

**Post set**

No	Descriptions	Qty
C	Headboard Post (L/R)	2


**Component List**

**Side Rail**

No	Descriptions	Qty
D	Side Rail	2
E	Slat	4
F	Slat Support	4



**Hardware List In Headboard & Footboard**

No	Descriptions	Qty
1	Wood Dowel 10mm x 30mm 	4
2	JCBC Screw M6 x 35mm 	6
3	Spring Washer Ø1/4" 	6
4	Flat Washer Ø1/4" x 20mm 	6
5	L Key M4 x 100mm 	1
6	L Key M5 	1
7	CSK M4 x 32mm 	8
8	Dc Adapter 	1

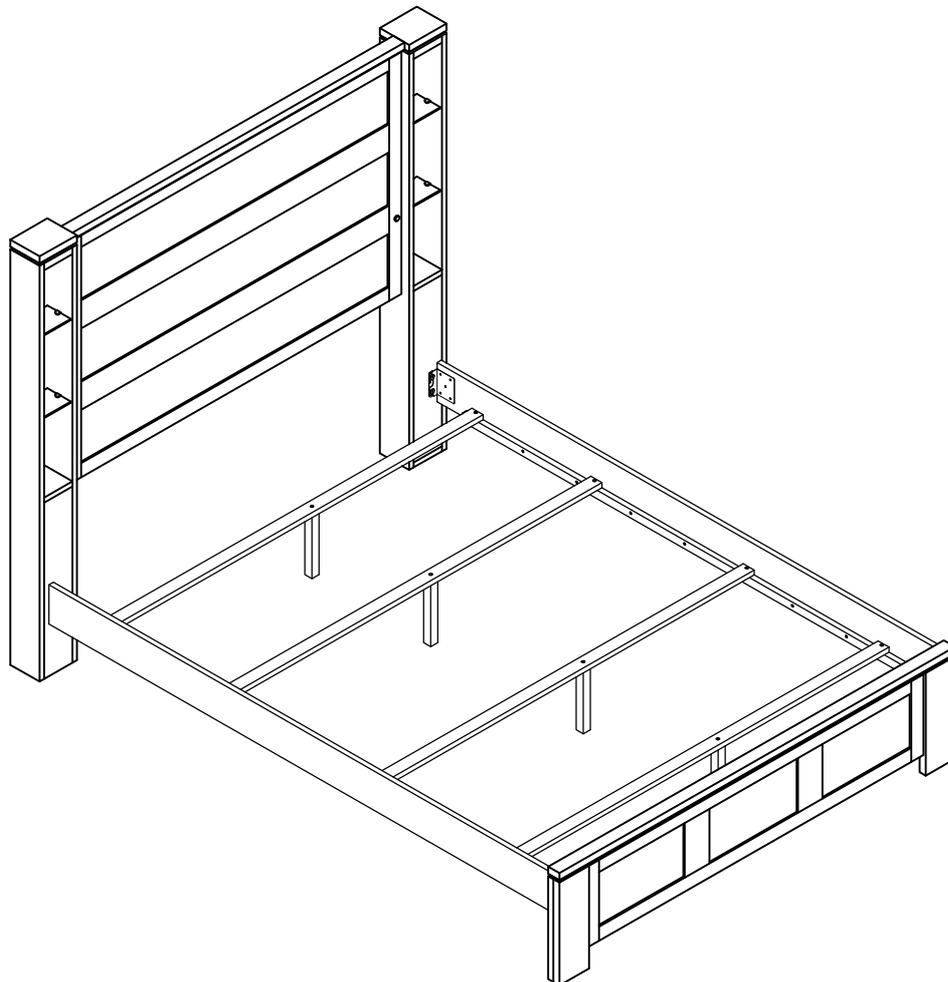



# ASSEMBLY INSTRUCTIONS

STEP 1 : Insert wood dowel (1) to the pre-drilled hole of headboard panel (A) and fix with the headboard post (C) by using JCBC Screw M6 x 35mm (2), springwasher (3) and flat washer (4) through the pre-drilled hole of headboard panel (A) then tighten by using Allen key (5).

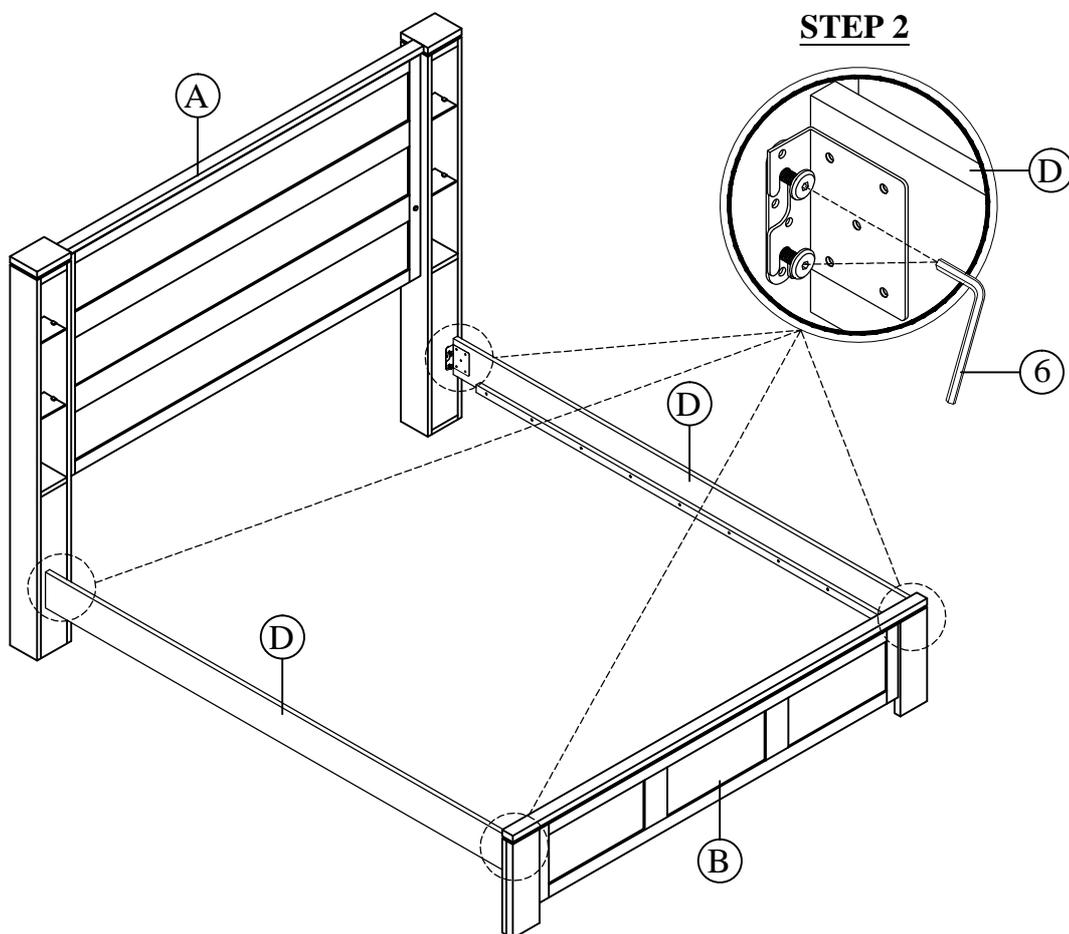
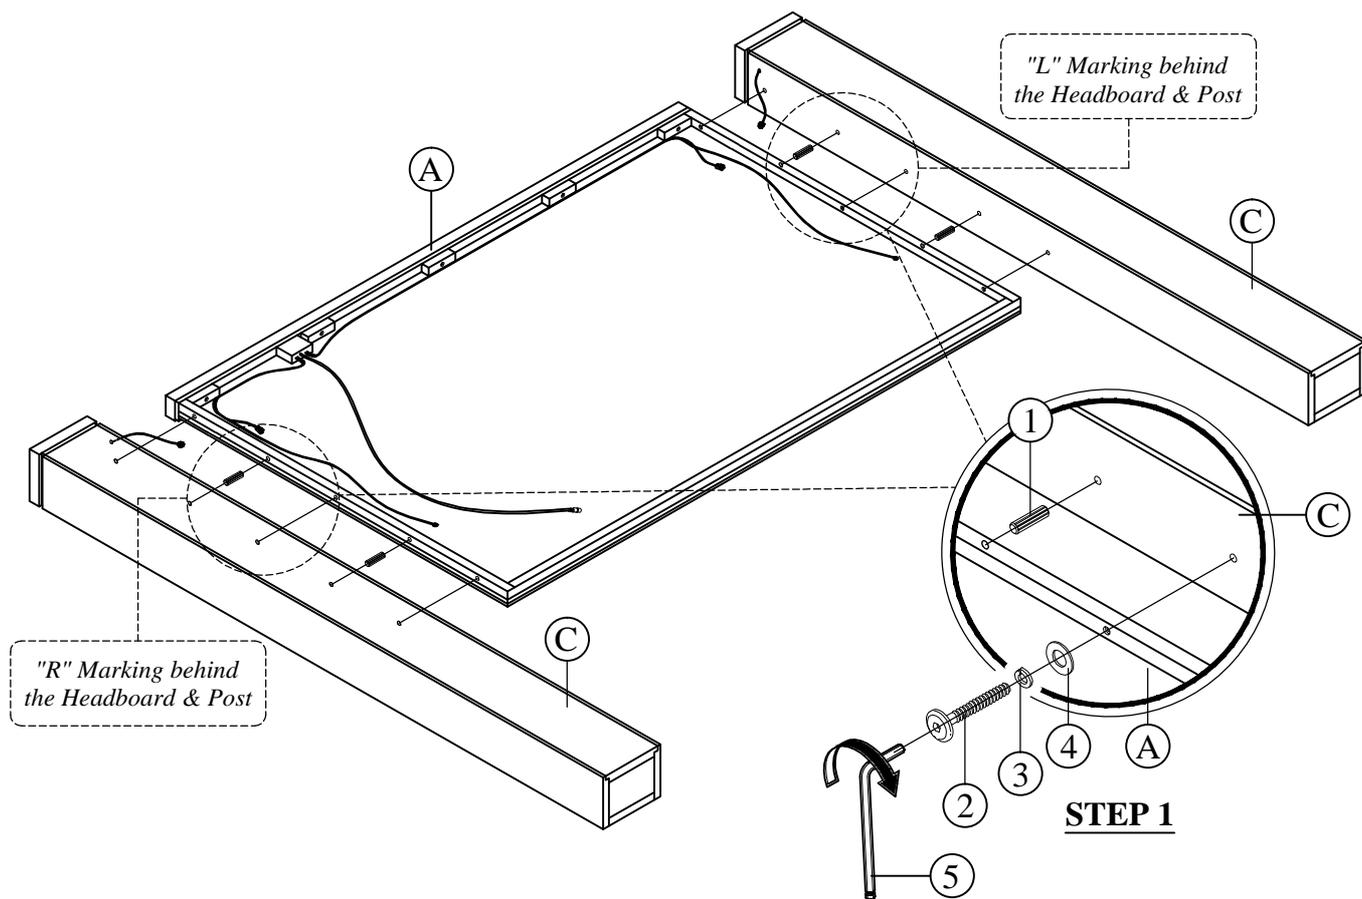


# ASSEMBLY INSTRUCTIONS


## STEP 3

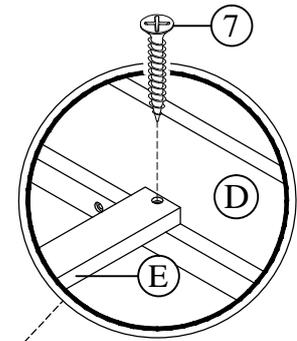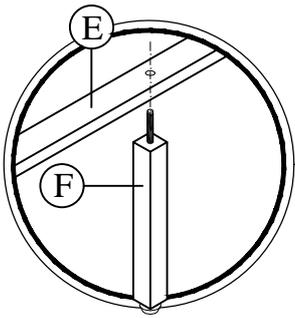

## STEP 4

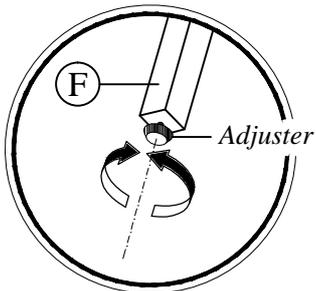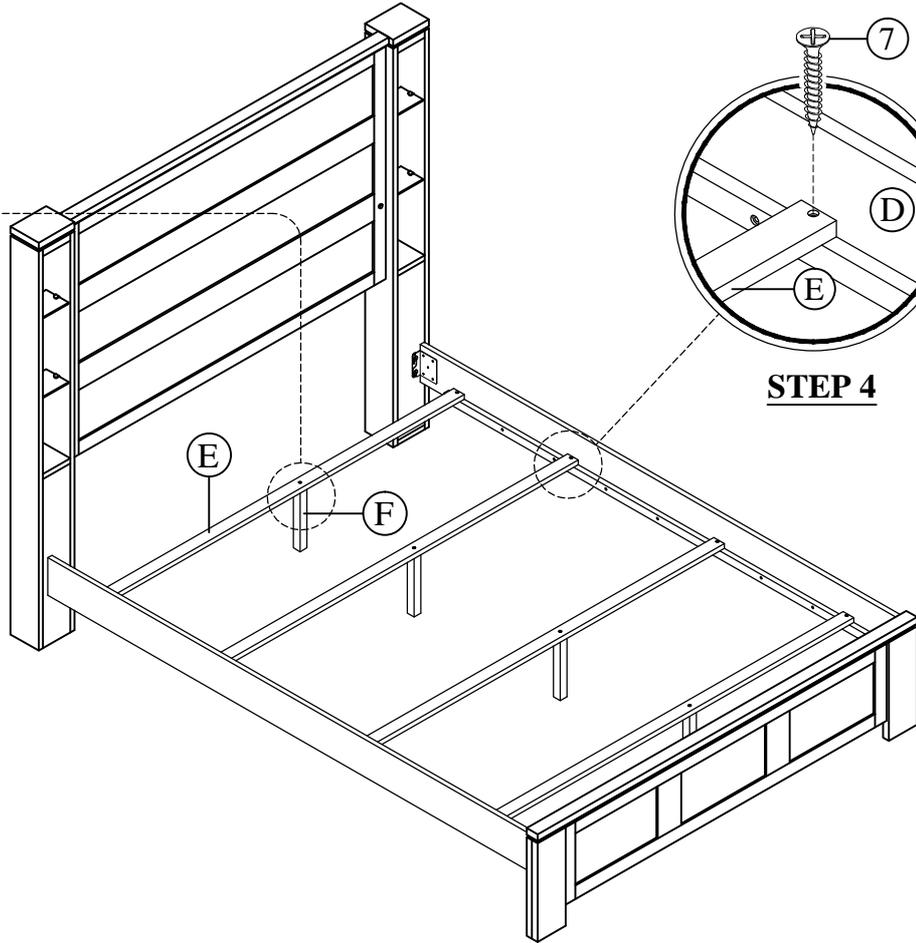


## STEP 5

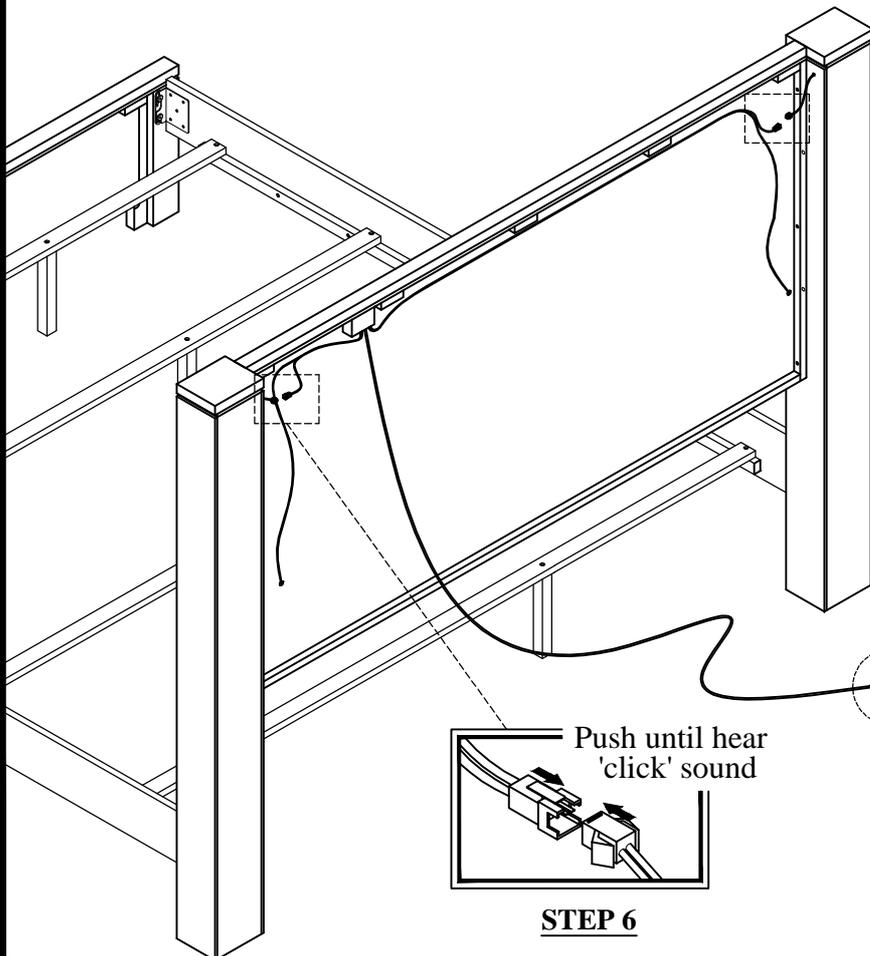

## STEP 6

Incoming power head

Connect the sensor box with DC adapter before the power supply is turn on.

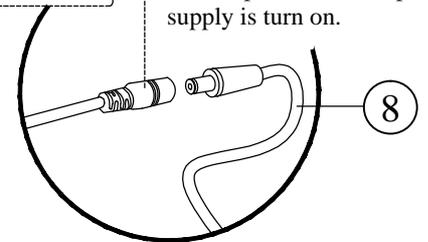

## STEP 7

### Warning !

**Caution !** : Please do not touch the chrome button with wet hand.