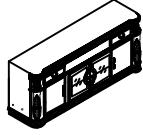
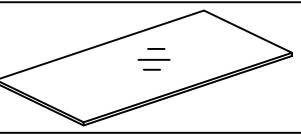


ASSEMBLY INSTRUCTION FOR ACME FURNITURE

MODEL#91313/#91318/#LV01521


Thank you for purchasing the quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with all parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

*** Do not fully tighten screws until fully assembled ***

| COMPONENT PARTS | | | |
|-----------------|-----------------|--|---|
| DESCRIPTION | PART NAME | Q'TY (PCS) | |
| ① | Tv Stand |  | 1 |
| ② | Front legs |  | 2 |
| ③ | Left Back Legs |  | 1 |
| ④ | Right Back Legs |  | 1 |
| ⑤ | Right Back Legs |  | 1 |
| ⑥ | Glass Shelf |  | 1 |

HARDWARE REQUIRED


| | | | | | |
|---|---|------------------------|--------------------|---|-----|
| Ⓐ |  | Bolt | $\phi 5/16''*2''$ | 8 | PCS |
| Ⓑ |  | Loch Washer | $\phi 5/16''*12mm$ | 8 | PCS |
| Ⓒ |  | Flat Washer | $\phi 5/16''*22mm$ | 8 | PCS |
| Ⓓ |  | Allen Wrench | 5mm | 1 | PC |
| Ⓔ |  | Layer board supporting | $\phi 6.2mm$ | 4 | PCS |

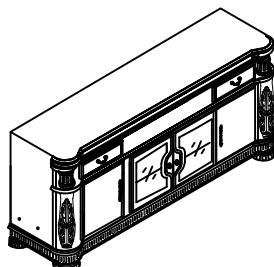

Attention

*** Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to ordering replacements.

How to assemble:

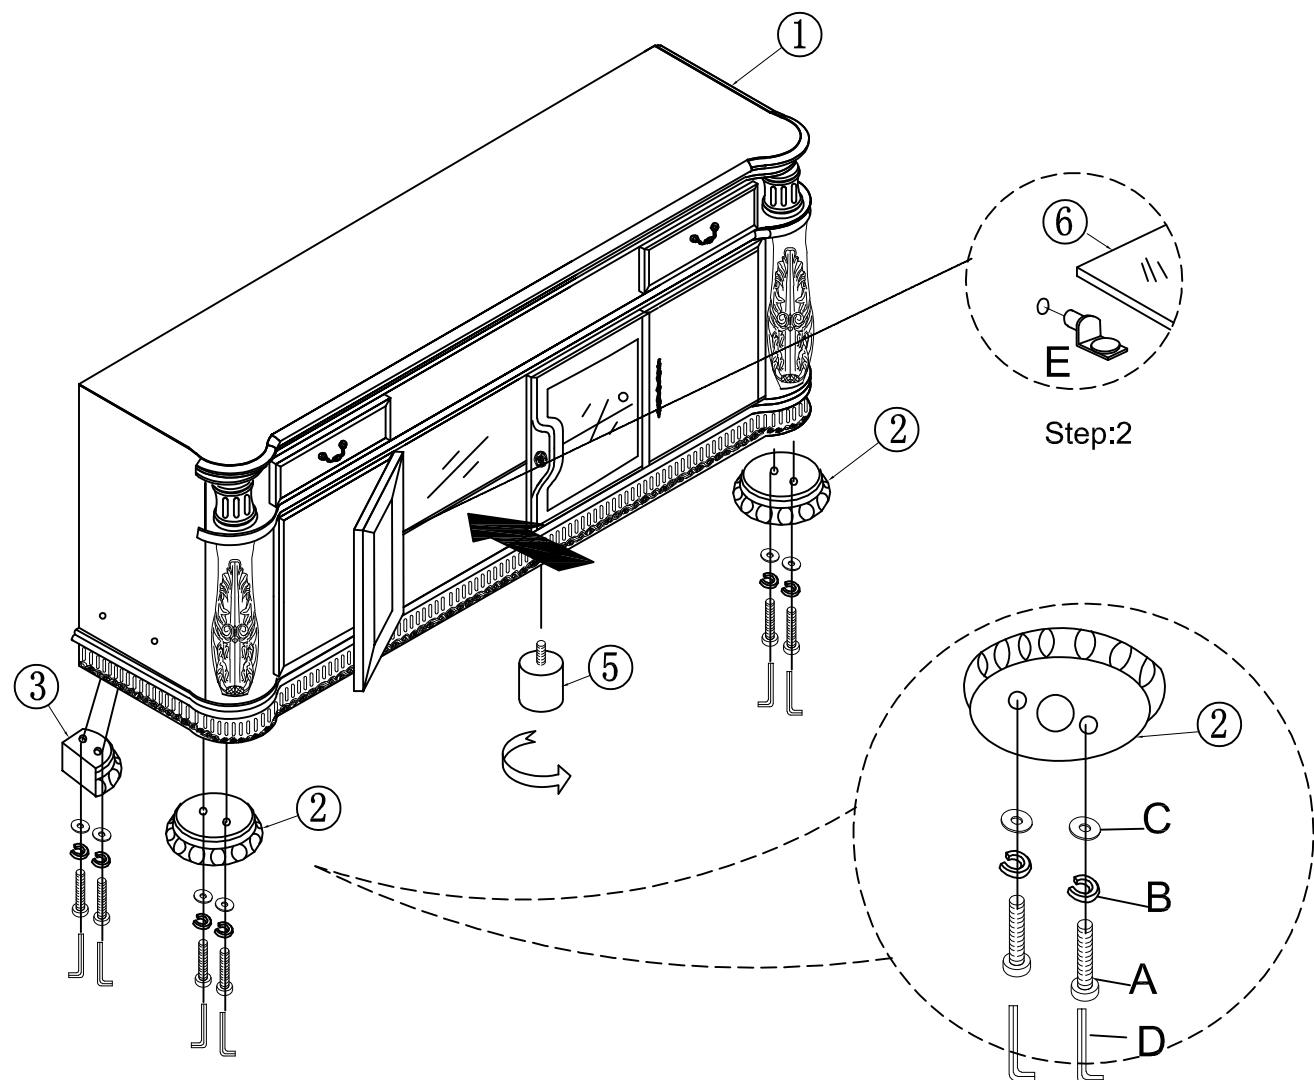

ASSEMBLY INSTRUCTION FOR ACME FURNITURE

MODEL#91310LP/#91315LP/#LV01520-1


Thank you for purchasing the quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with all parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

*** Do not fully tighten screws until fully assembled ***

| COMPONENT PARTS | | |
|-----------------|-----------------------|------------|
| DESCRIPTION | PART NAME | Q'TY (PCS) |
| ① | Ent. Center-Left Pier | |
| ② | Front legs | |
| ③ | Back legs | |
| ④ | Glass Shelf | |

HARDWARE REQUIRED


| | | | | |
|--|------------------------|----------------------|---|-----|
| | Bolt | $\phi 5/16'' * 2''$ | 8 | PCS |
| | Loch Washer | $\phi 5/16'' * 12mm$ | 8 | PCS |
| | Flat Washer | $\phi 5/16'' * 22mm$ | 8 | PCS |
| | Allen Wrench | 5mm | 1 | PC |
| | Connecting Bolt | $\phi 13X23mm$ | 4 | PCS |
| | Connecting Nut | $\phi 13X20mm$ | 4 | PCS |
| | Allen Wrench | 4mm | 2 | PC |
| | Layer board supporting | $\phi 6.2mm$ | 8 | PCS |

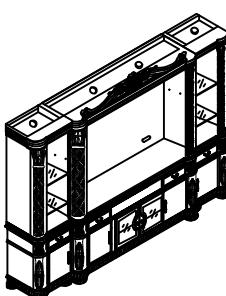

Attention

*** Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to ordering replacements.

How to assemble:



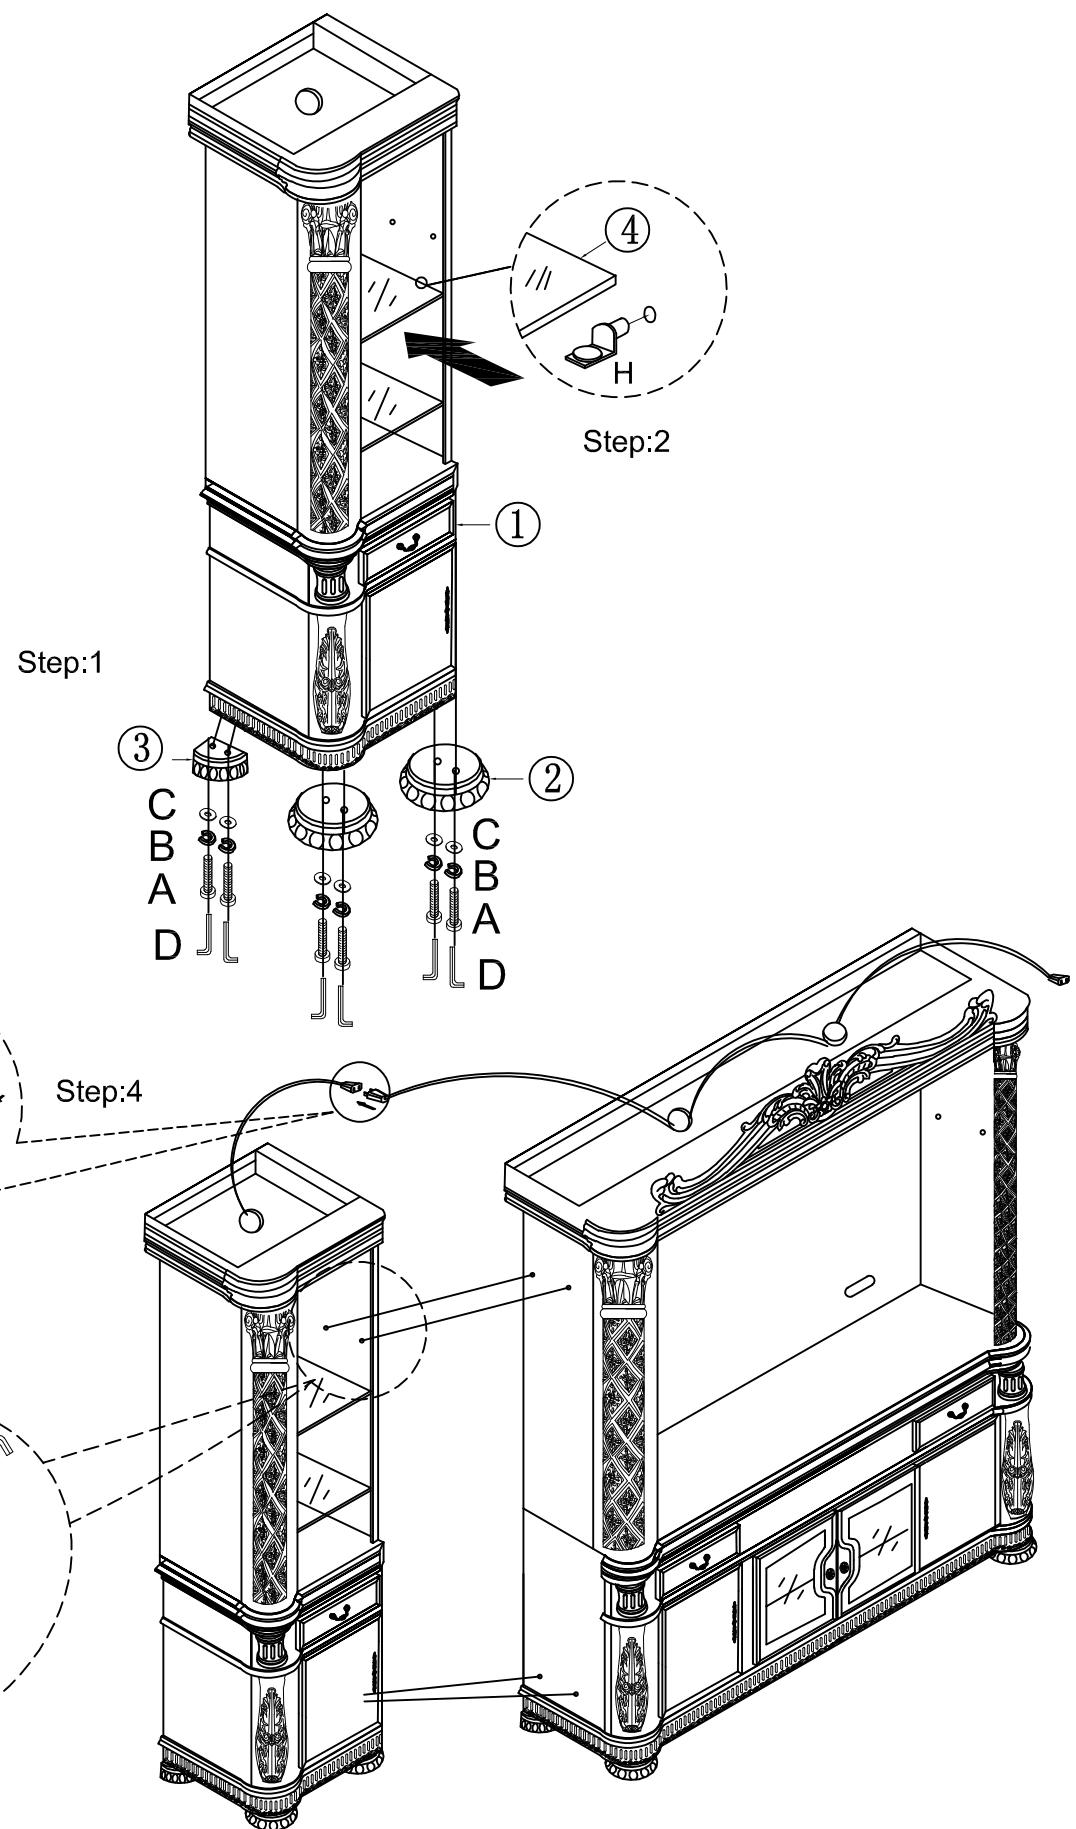


ASSEMBLY INSTRUCTION FOR ACME FURNITURE

MODEL#91311RP/#91316RP/#LV01520-2


Thank you for purchasing the quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with all parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

*** Do not fully tighten screws until fully assembled ***

| COMPONENT PARTS | | |
|-----------------|------------------------|--|
| DESCRIPTION | PART NAME | Q'TY (PCS) |
| ① | Ent. Center-Right Pier |  1 |
| ② | Front legs |  2 |
| ③ | Back legs |  2 |
| ④ | Glass Shelf |  2 |

HARDWARE REQUIRED


| | | | | |
|---|------------------------|--------------------|---|-----|
|  | Bolt | $\phi 5/16''*2''$ | 8 | PCS |
|  | Loch Washer | $\phi 5/16''*12mm$ | 8 | PCS |
|  | Flat Washer | $\phi 5/16''*22mm$ | 8 | PCS |
|  | Allen Wrench | 5mm | 1 | PC |
|  | Connecting Bolt | $\phi 13X23mm$ | 4 | PCS |
|  | Connecting Nut | $\phi 13X20mm$ | 4 | PCS |
|  | Allen Wrench | 4mm | 2 | PC |
|  | Layer board supporting | $\phi 6.2mm$ | 8 | PCS |

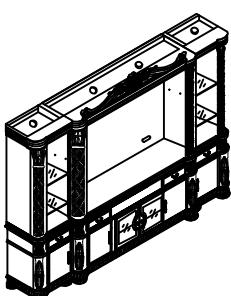

Attention

*** Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to ordering replacements.

How to assemble:

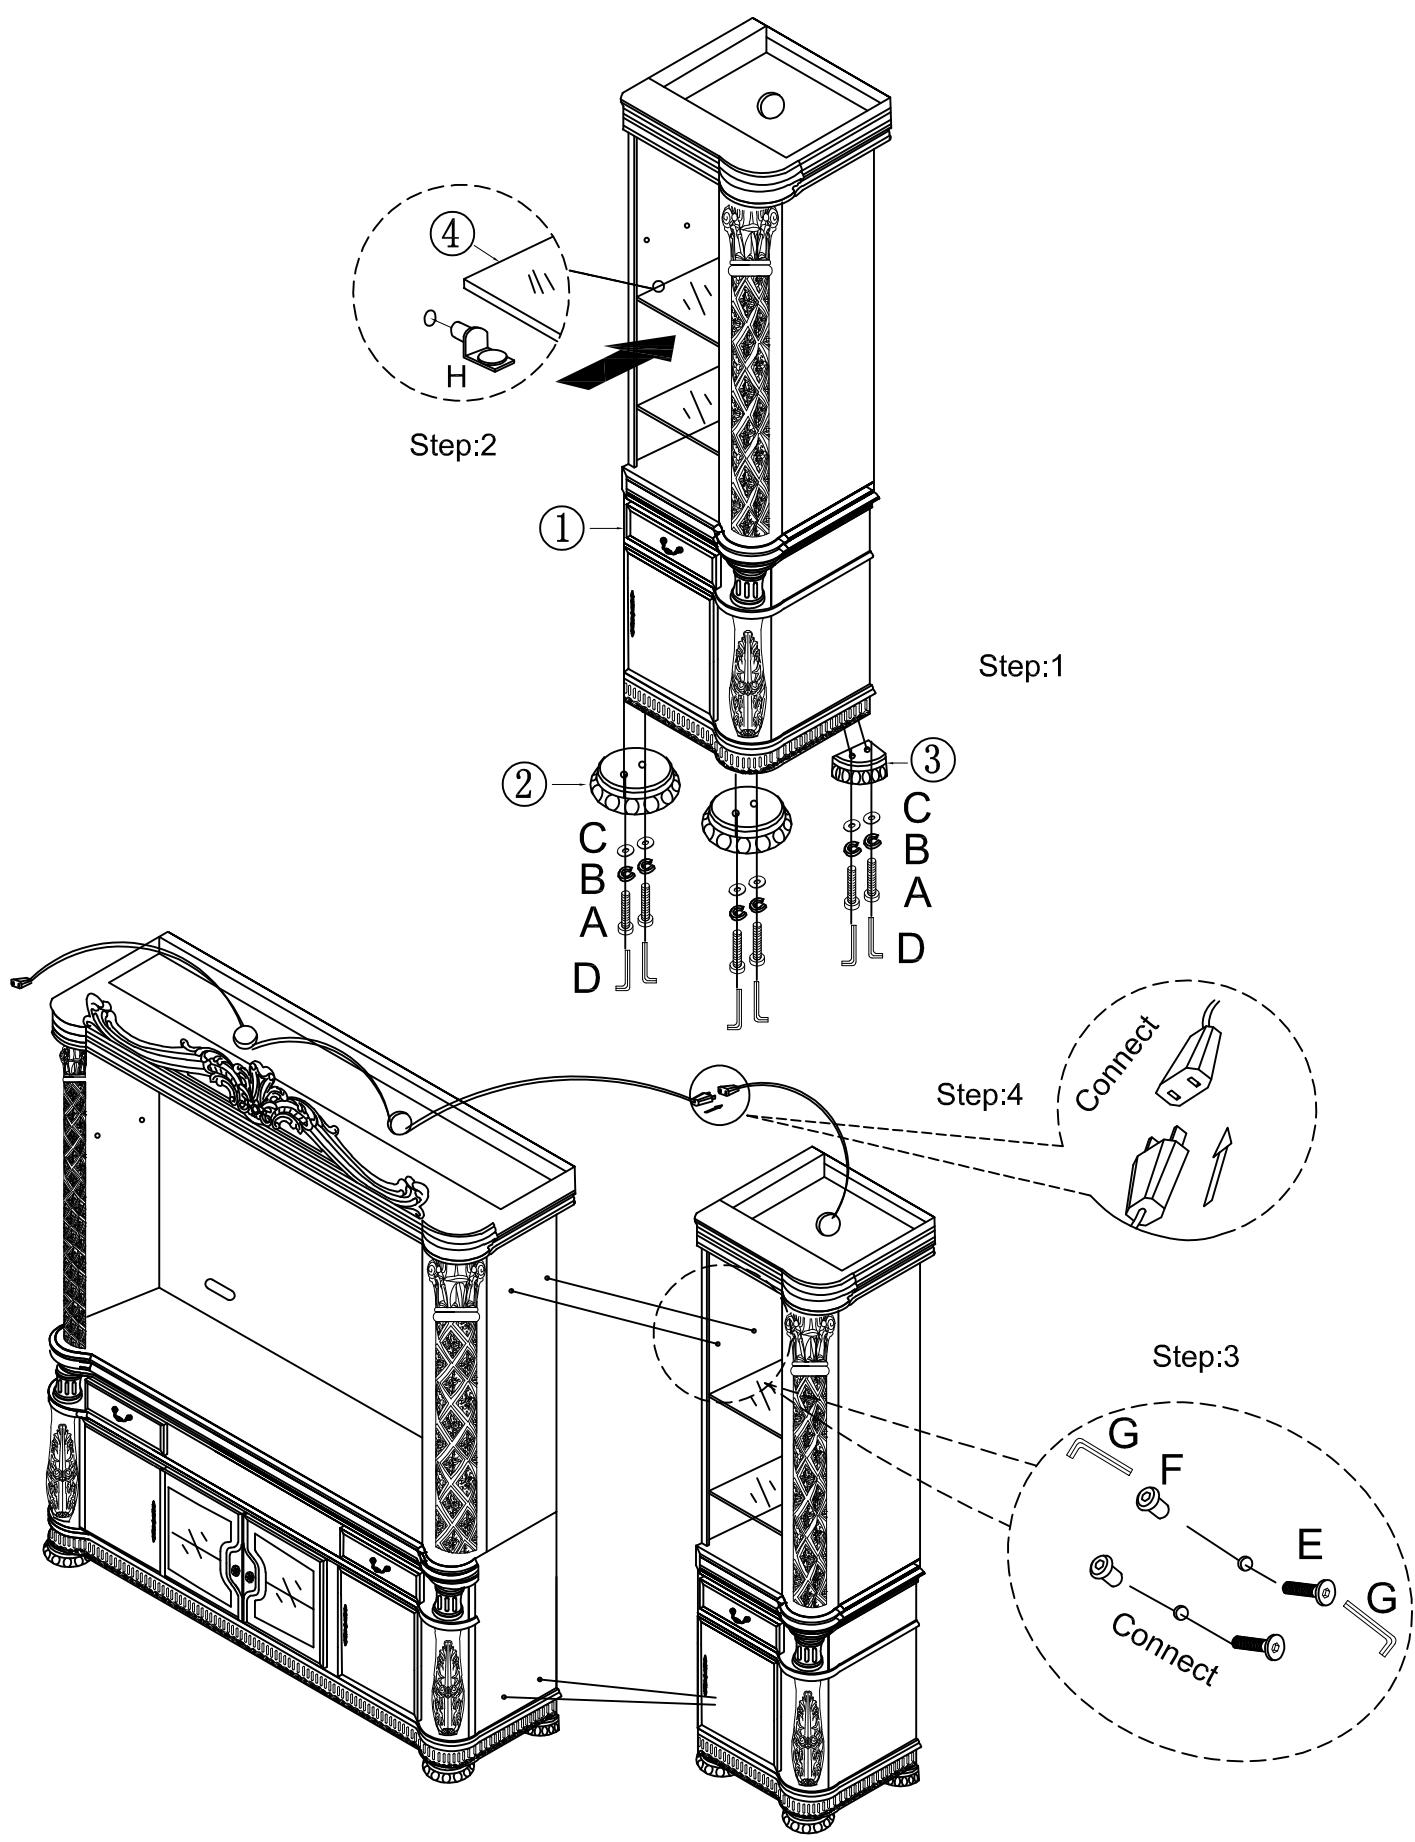


ASSEMBLY INSTRUCTION FOR ACME FURNITURE


MODEL#91312TOP/#91317TOP/#LV01520-3


Thank you for purchasing the quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with all parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

*** Do not fully tighten screws until fully assembled ***

| COMPONENT PARTS | | | |
|-----------------|-----------|--|---|
| DESCRIPTION | PART NAME | Q'TY (PCS) | |
| ① | Tv Top |  | 1 |
| ② | Crown |  | 1 |

HARDWARE REQUIRED

| | | | | | |
|---|---|--------------|--------------------|---|-----|
|  |  | Bolt | $\phi 5/16''*2''$ | 2 | PCS |
|  |  | Loch Washer | $\phi 5/16''*12mm$ | 2 | PCS |
|  |  | Flat Washer | $\phi 5/16''*19mm$ | 2 | PCS |
|  |  | Allen Wrench | 5mm | 1 | PC |
|  |  | Wooden Plug | $\phi 10X40mm$ | 1 | PC |

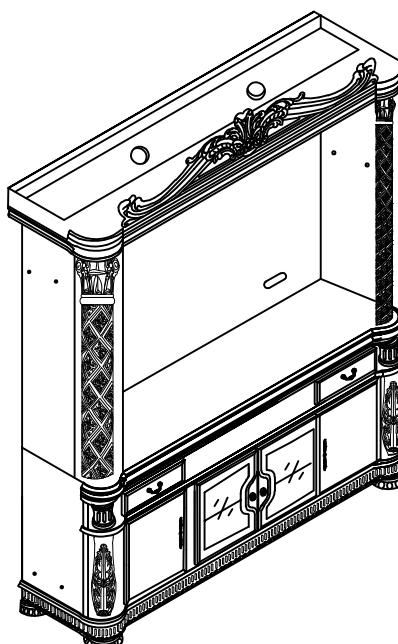

Attention

*** Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to ordering replacements.

How to assemble:

