

NEVIS PLATFORM TWIN/FULL/QUEEN/KING BED MODUS

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.

PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.


THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

D. CENTER SLAT	1 PC
E. SUPPORT LEG	4 PCS
F. SLAT ROLL	1 SET


- 4. ALLEN BOLT (6x40mm) 5. WOOD SCREW (8x30mm)
- 11 PCS 9 PCS


STEP 1 :

USE ALLEN KEY **(6)** TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

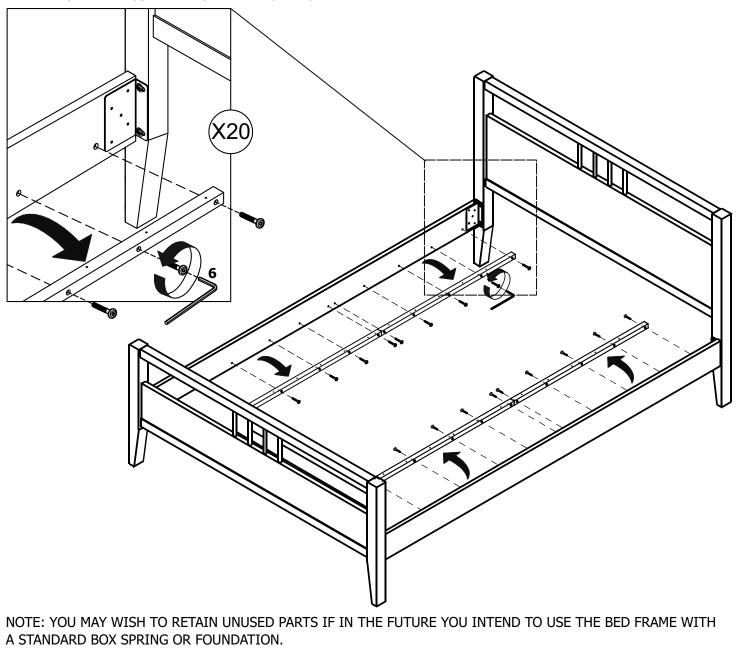

UPDATED : JUNE 15TH, 2020

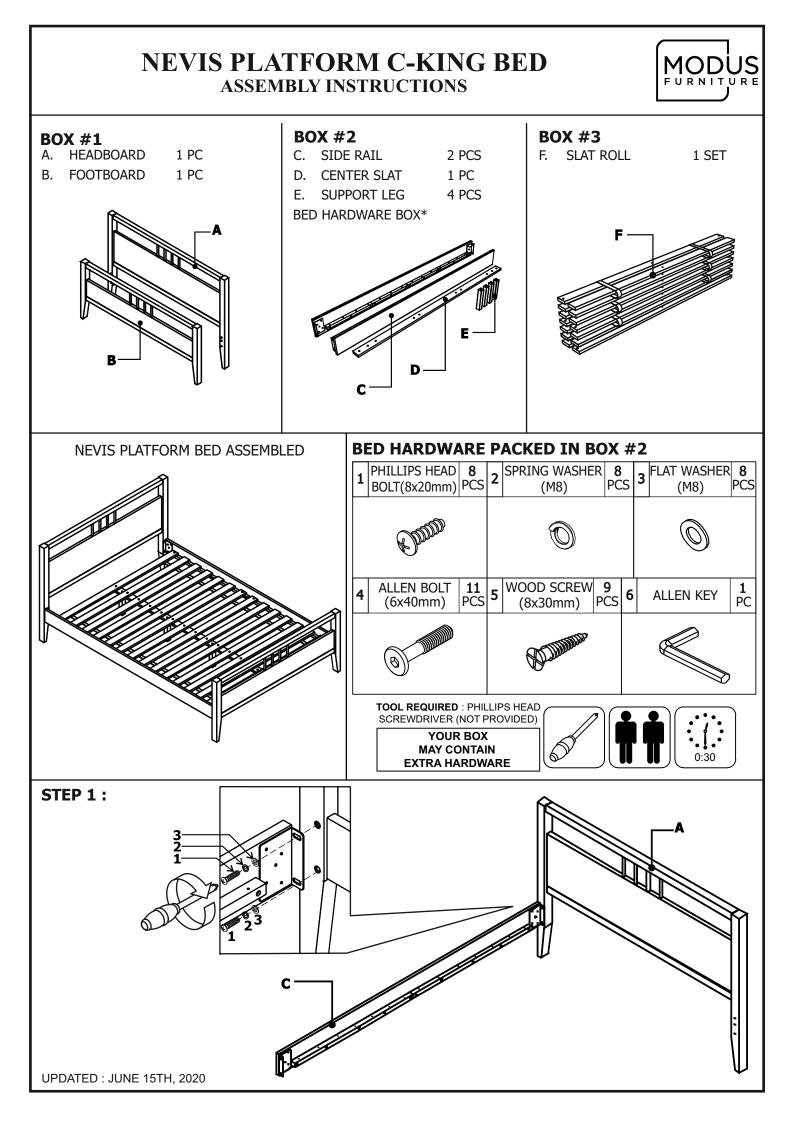

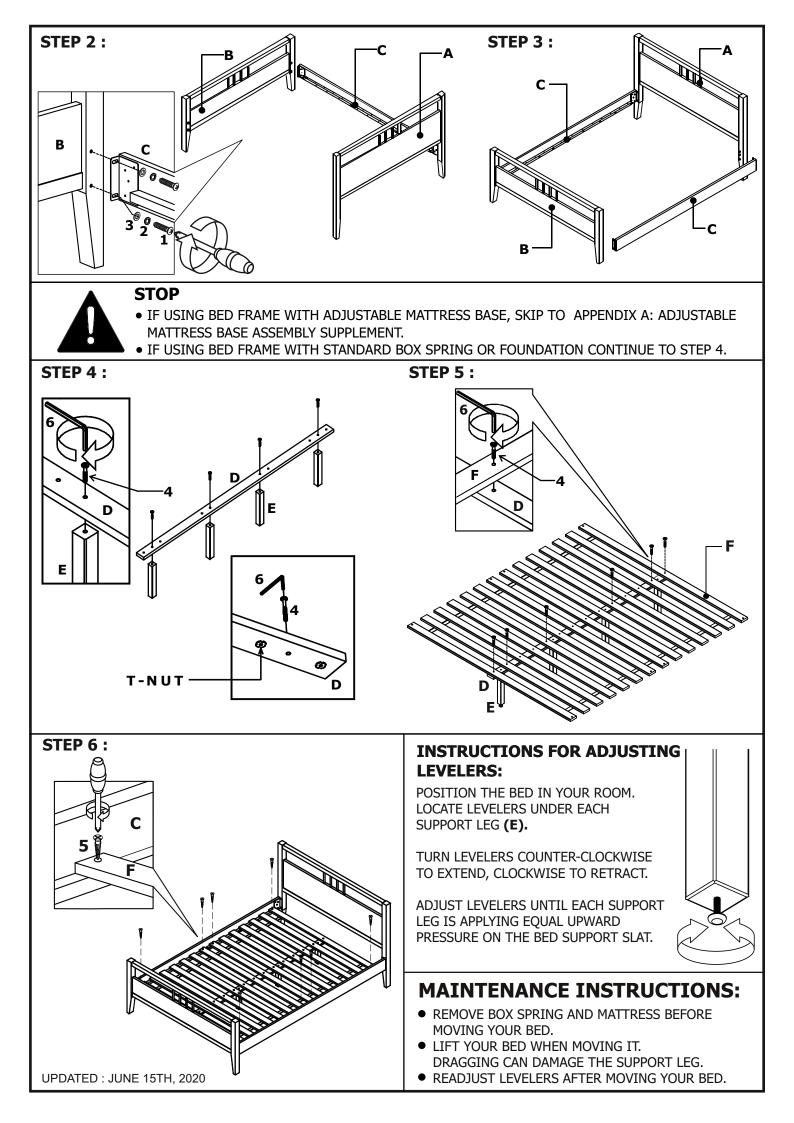

NEVIS PLATFORM C-KING BED APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.

PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.


THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

D. CENTER SLAT	
E. SUPPORT LEG	

- F. SLAT ROLL
- 1 PC 4 PCS 1 SET
- 4. ALLEN BOLT (6x40mm)
- 5. WOOD SCREW (8x30mm)
- 11 PCS 9 PCS

STEP 1 :

USE ALLEN KEY **(6)** TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

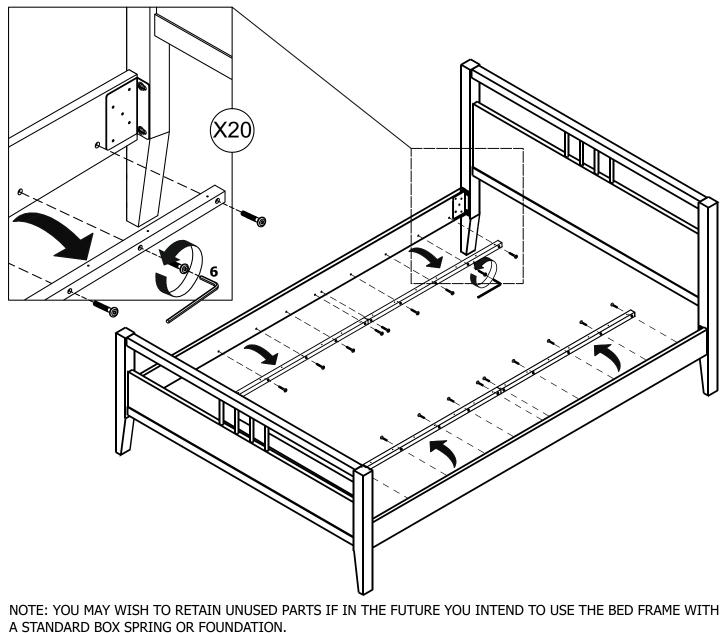

UPDATED : JUNE 15TH, 2020