


CROSLEY
FURNITURE


Outdoor Metal Bar Cart
CO7390



PART LIST


| | | | |
|---|---|---|--|
| <p>A</p>  | <p>B</p>  | <p>C</p>  | <p>D</p>  |
| <p>Side Panel 2 PCS</p> | <p>Shelf 2 PCS</p> | <p>Locking Caster 2 PCS</p> | <p>Swivel Caster 2 PCS</p> |

HARDWARE LIST

| | | |
|---|--|--|
| <p>#1</p>  <p>M6*15mm</p> | <p>#2</p>  <p>M6mm</p> | <p>#3</p>  |
| <p>Bolt 16 PCS (Extra 1)</p> | <p>Flat Washer 16 PCS (Extra 1)</p> | <p>Allen Wrench 1 PC</p> |

Step 1. Lay side panels (part A) down on a soft flat surface, such as carpet, as shown below. Attach shelf (part B) to side panels (part A) using bolts (part #1), flat washers (part #2) and allen wrench (part #3).


NOTE: Please do not fully tighten bolts until unit is fully assembled.

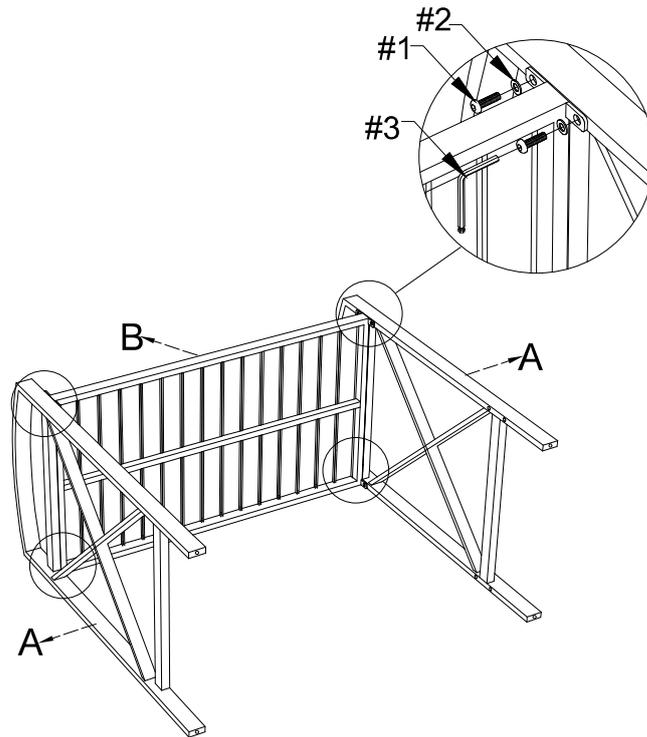

- | | | |
|----|---|----|
| #1 |  | x8 |
| #2 |  | x8 |
| #3 |  | x1 |


Step 2. Attach shelf (part B) to side panels (part A) using bolts (part #1), flat washers (part #2) and allen wrench (part #3).

NOTE: Please fully tighten all bolts at this time.

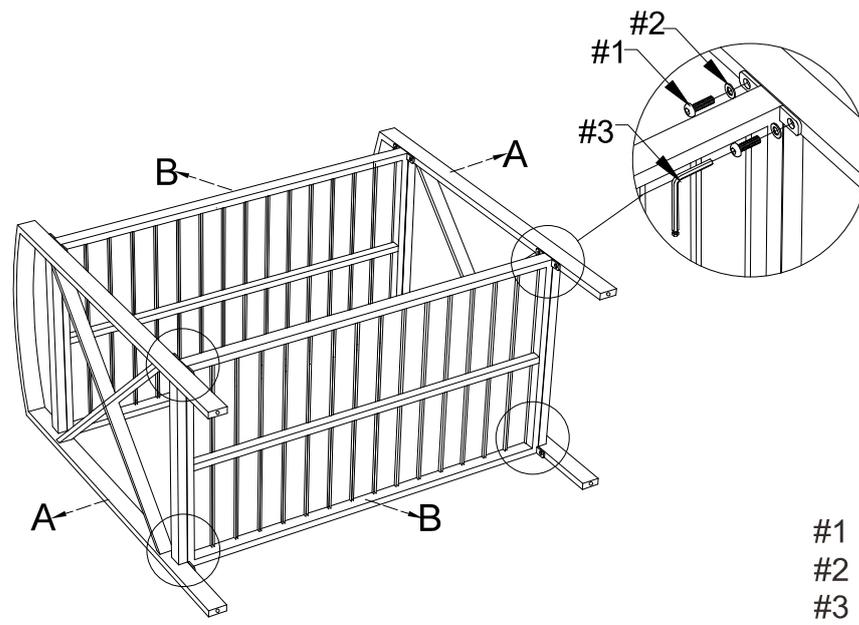

- | | | |
|----|---|----|
| #1 |  | x8 |
| #2 |  | x8 |
| #3 |  | x1 |

Step 3. Attach locking casters (part C) and swivel casters (part D) to side panels (part A).

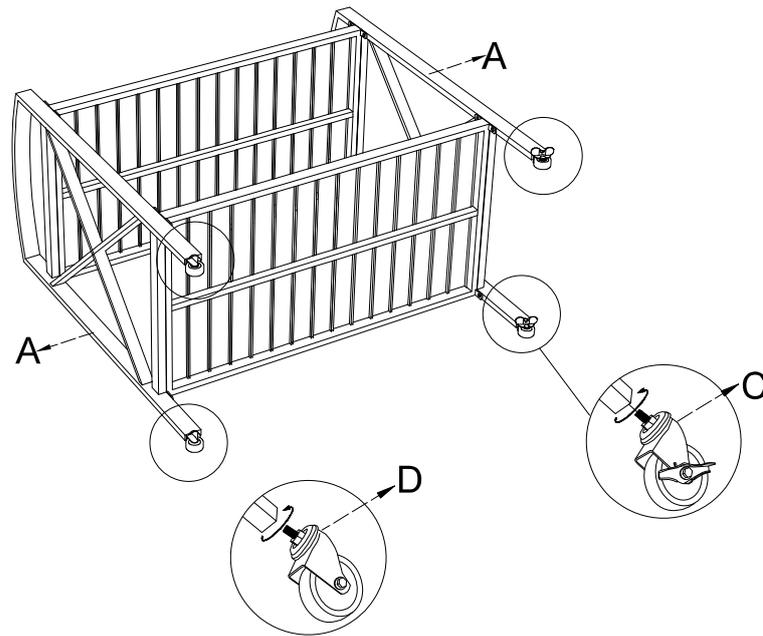

Step 4. Carefully turn unit upright.

