



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

224850Q (B1-B3) Queen Bed

REVISION 0 : 08/15/2024
REVISION 1 : 03/18/2025

ITEM: 224850Q(B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

25 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

AN HEADBOARD PANEL

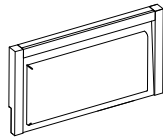

1PC

CN RIGHT
HEADBOARD LEG



1PC


BN LEFT
HEADBOARD LEG



1PC

B2 (BOX 2)

DN FOOTBOARD



1PC


EN ROLL SLAT (18PCS)



1SET

B3 (BOX 3)

FN STORAGE DRAWERS

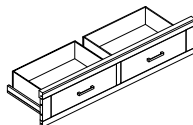


2SETS

GN DRAWERS SUPPORT
LEG WITH LEVELER



6PCS

HN CENTER RAIL




1PC

IN CENTER RAIL SUPPORT
WITH LEVELER




4PCS

HB 224850Q (B1)
FROM BOX 1
HEADBOARD
COMPLETE

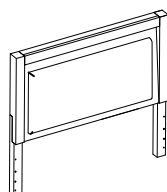

1PC

D 224850Q (B2)
FROM BOX 2
FOOTBOARD



1PC

ITEM: 224850Q(B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION


Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 224850Q(B1)

1	MEDIUM BOLT (5/16" x 45MM - BLK)		6PCS
2	BIG LOCK WASHER (5/16" x 12 x 2MM - BLK)		6PCS
3	BIG FLAT WASHER (5/16" x 19 x 2MM - BLK)		6PCS
4	ALLEN WRENCH (M4 x 58MM - BLK)		1PC

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 224850Q(B2)

5	SHORT BOLT (1/4" x 32MM - BLK)		12PCS
6	SMALL LOCK WASHER (1/4" x 10 x 2MM - BLK)		12PCS
7	SMALL FLAT WASHER (1/4" x 19 x 2MM - BLK)		12PCS
4	ALLEN WRENCH (M4 x 58MM - BLK)		1PC

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 224850Q(B3)


8	WOODEN DOWEL (10 x 40MM)		8PCS
9	THREADED BOLT (Ø5/16" x 90MM - BLK)		8PCS
10	HALF ROUND NUT (26 x 12 x 8MM - BLK)		8PCS
11	HEX NUT (Ø5/16 x 6MM - BLK)		8PCS
12	WRENCH (12MM - BLK)		1PC

ITEM: 224850Q(B1-B3)


ASSEMBLY INSTRUCTIONS



STEP 1

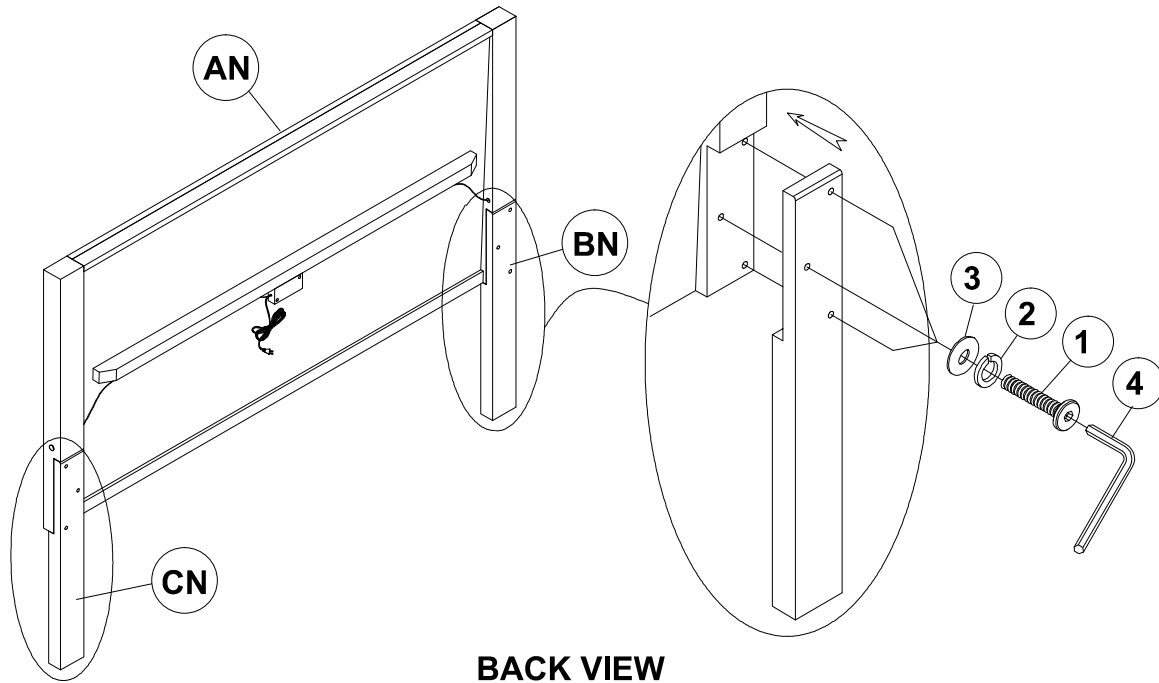

STEP 2

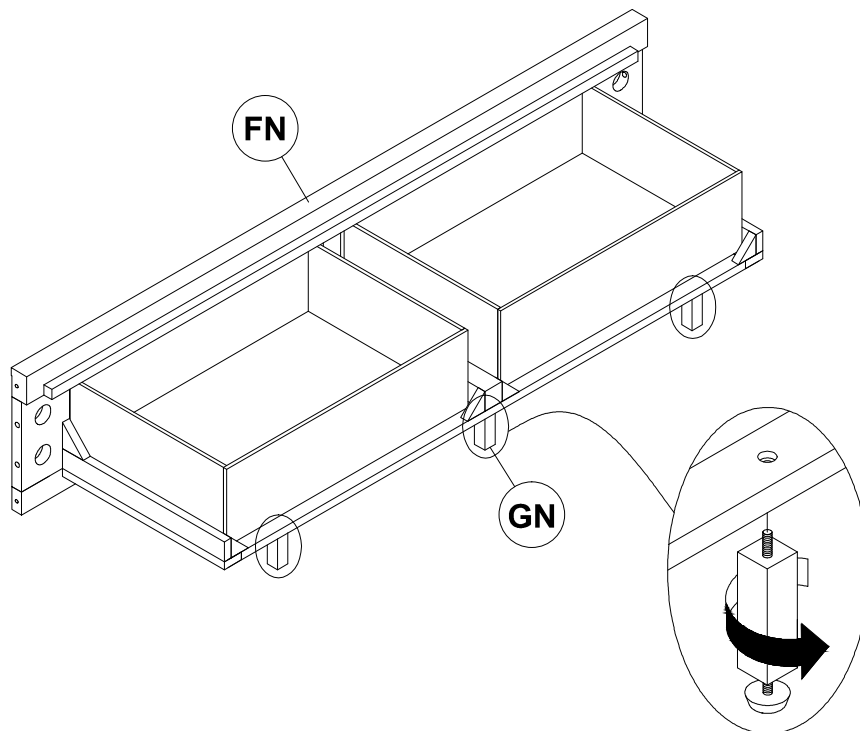


ITEM: 224850Q(B1-B3)


ASSEMBLY INSTRUCTIONS



STEP 3

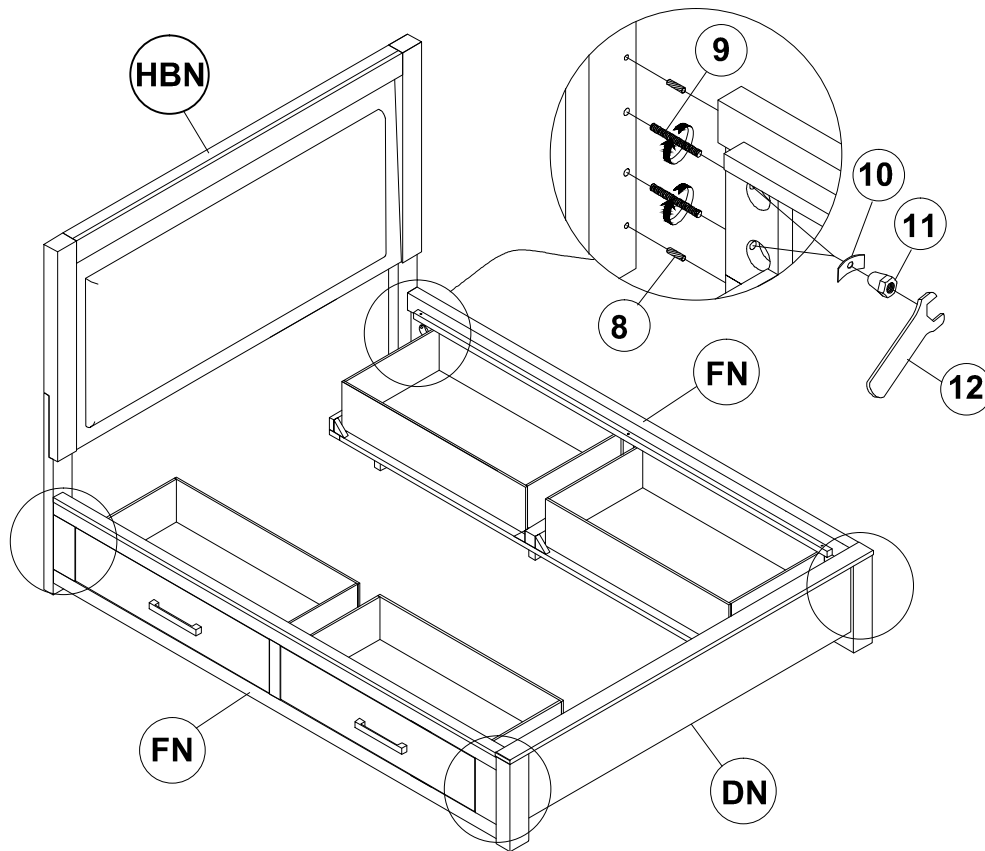

STEP 4

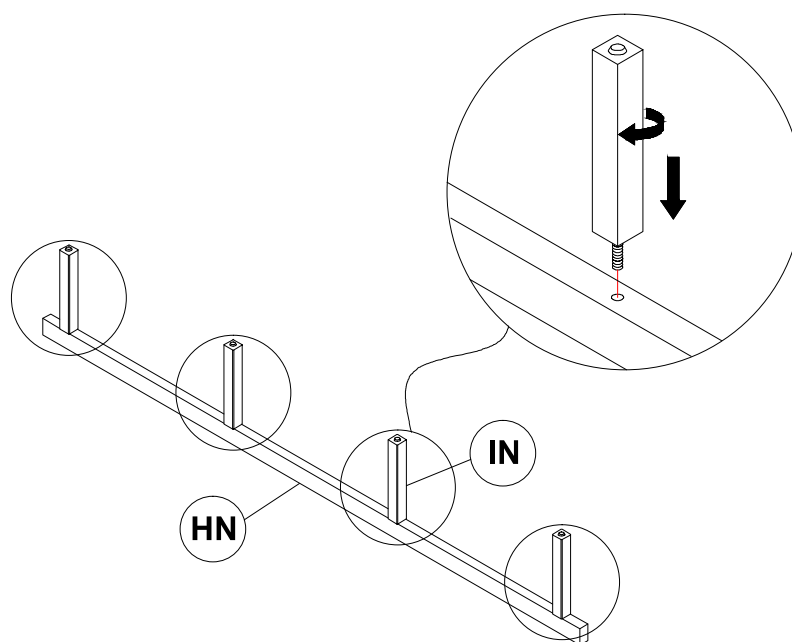


ITEM: 224850Q(B1-B3)

ASSEMBLY INSTRUCTIONS



STEP 5

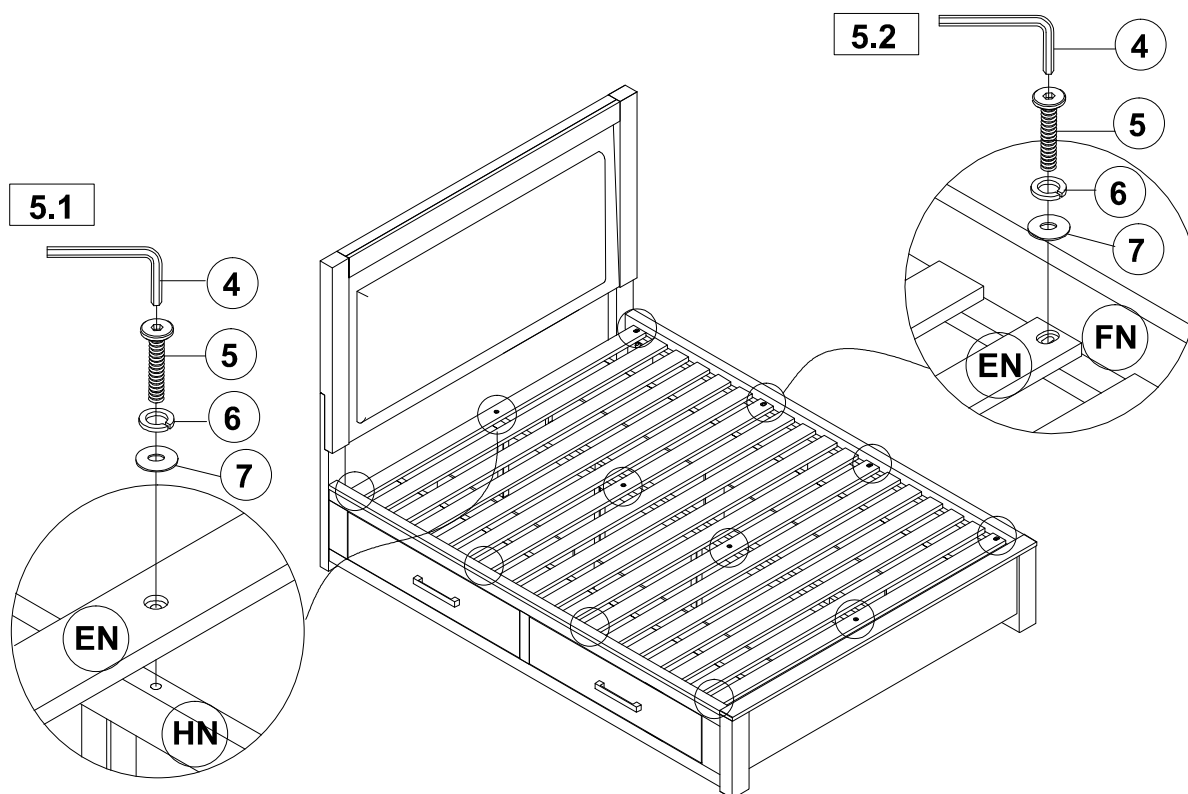



STEP 6 COMPLETE

★Attach the Adapter to the power source according to the instructions on the adapter.



Touched light location

Your Touch is the Switch
Touch 1-Night light
Touch 2-Energy saver light
Touch 3-Bright reading light
Touch 4-Off

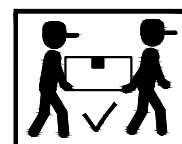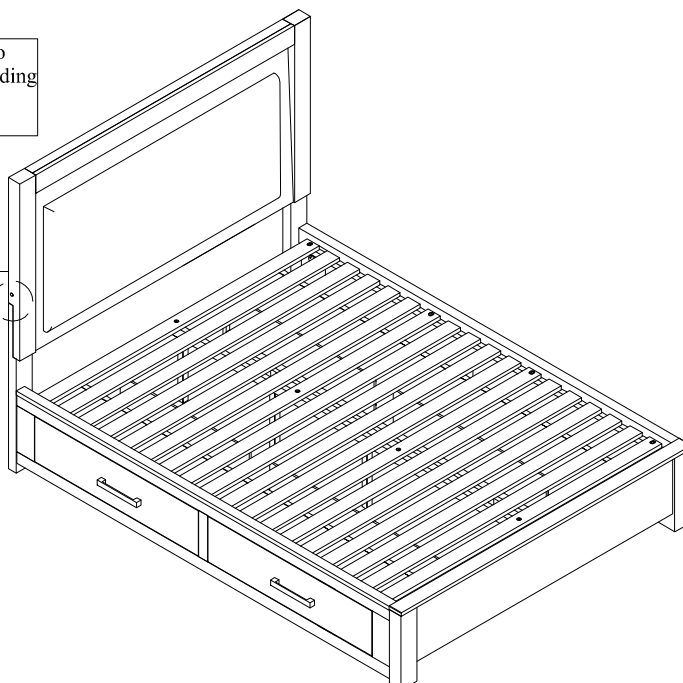


ITEM: **224850Q(B1-B3)**



Inner Size : 60.75"W X 82.00"D

Inner Size of Drawer : 33.50"W X 17.25"D X 6.25"H X 0.50"T

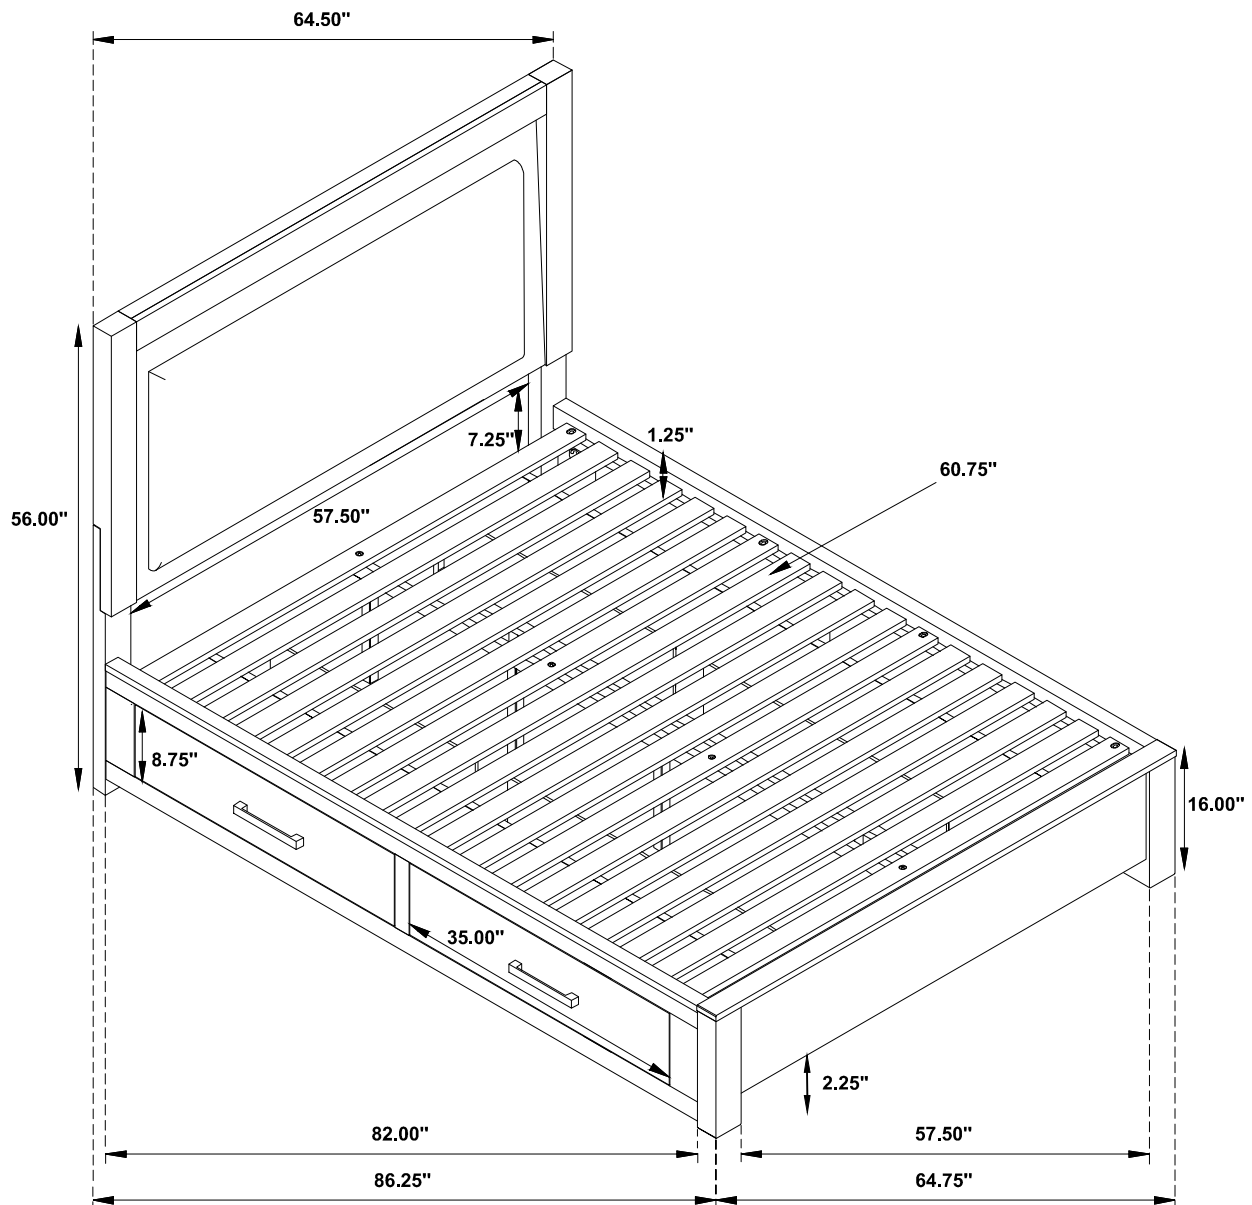

Note: Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

224852
Nightstand

REVISION 0 : 08/15/2024
REVISION 1 : 03/18/2025

PAGE 1 OF 2

COASTERFURNITURE.COM

ITEM: **224852**



ANTI-TIPPING INSTALLATION INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.




This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

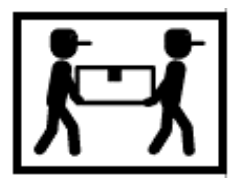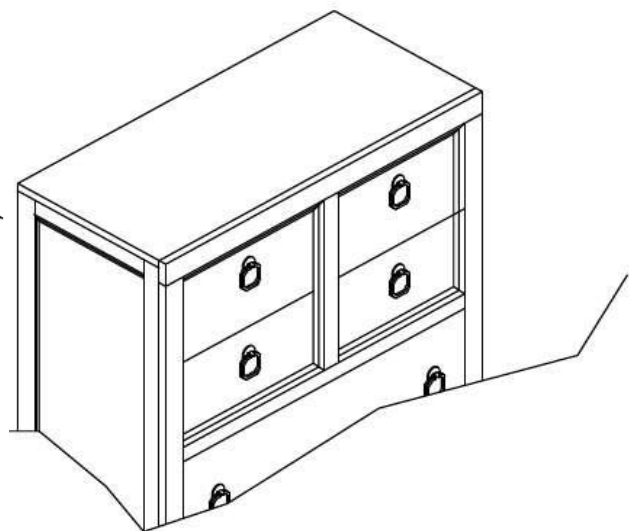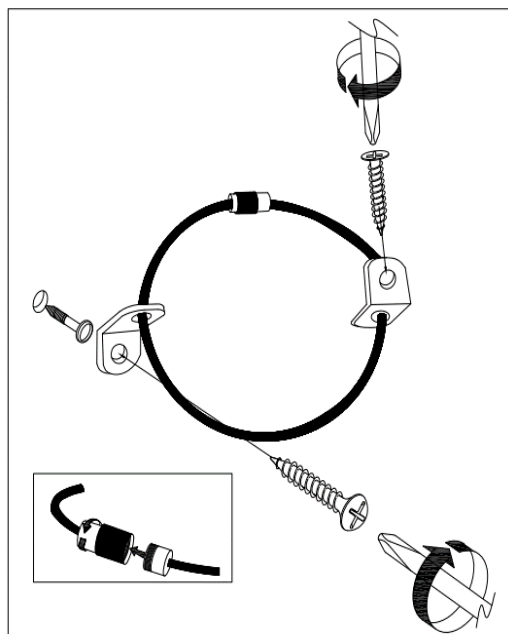

ITEM: **224852**



Inner Size of Drawer : 21.00"W X 12.75"D X 6.00"H X 0.50"T

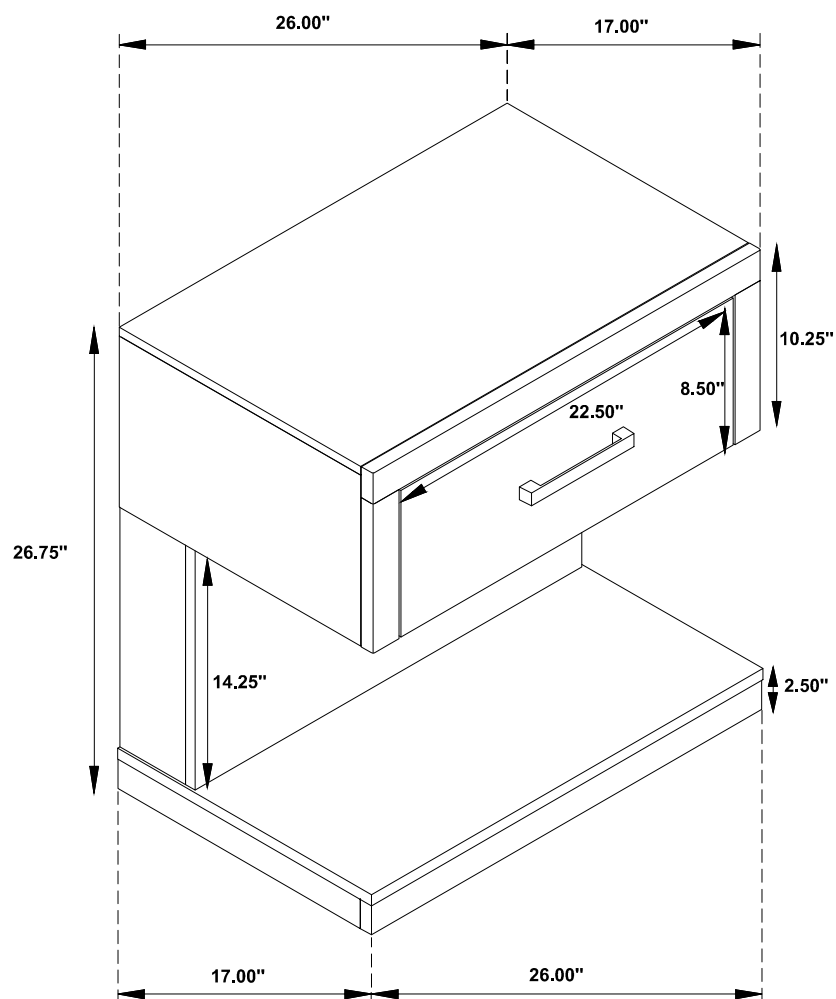

Note: Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

224853
Dresser

REVISION 0 : 08/15/2024
REVISION 1 : 03/18/2025

ITEM: **224853**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

AN DRESSER

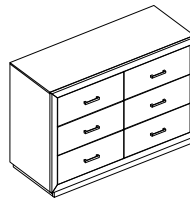

1PC

BN CENTER SUPPORT
LEG WITH LEVELER




1PC

ITEM: **224853**



ASSEMBLY INSTRUCTIONS



STEP 1

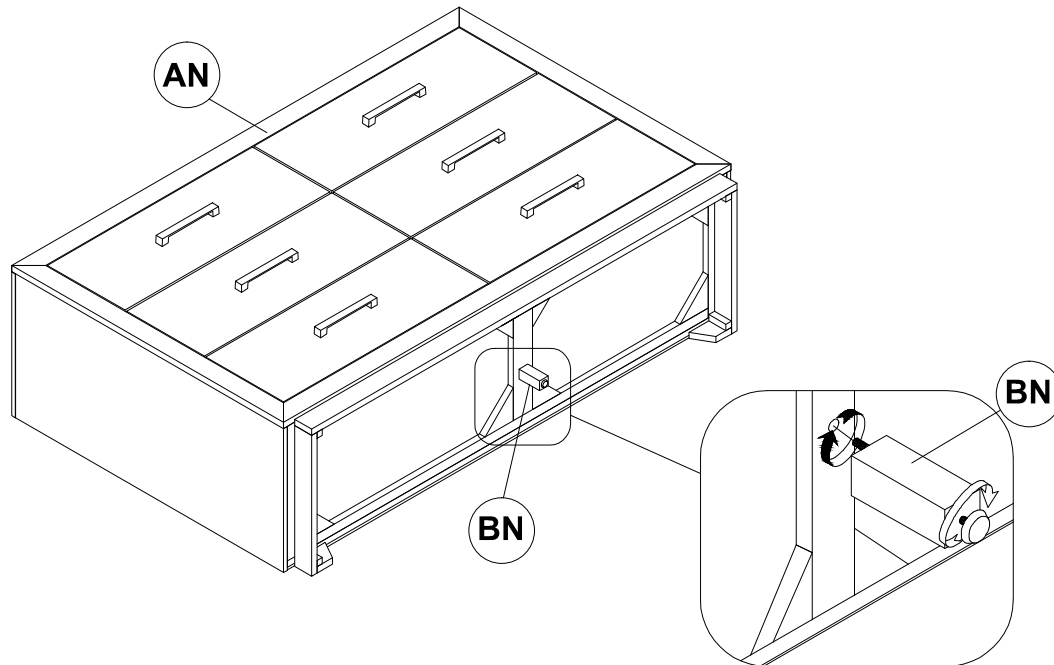

STEP 2 COMPLETE

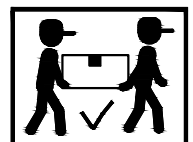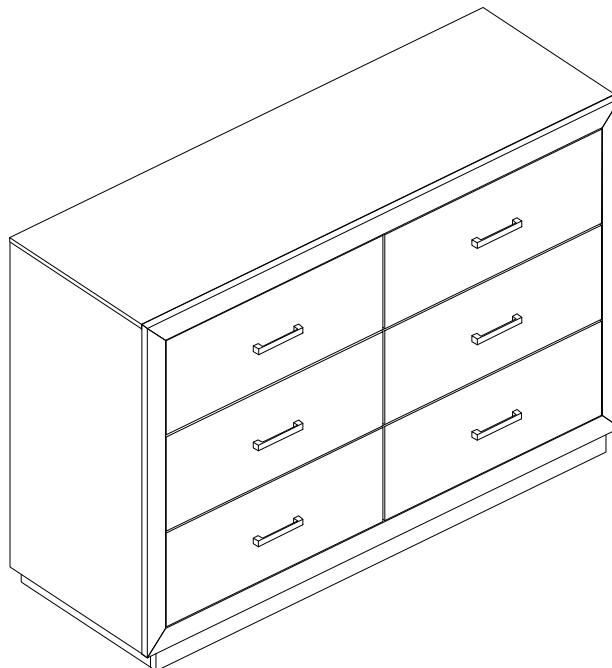

ITEM: **224853**



ANTI-TIPPING INSTALLATION INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.




This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

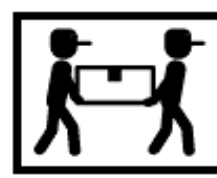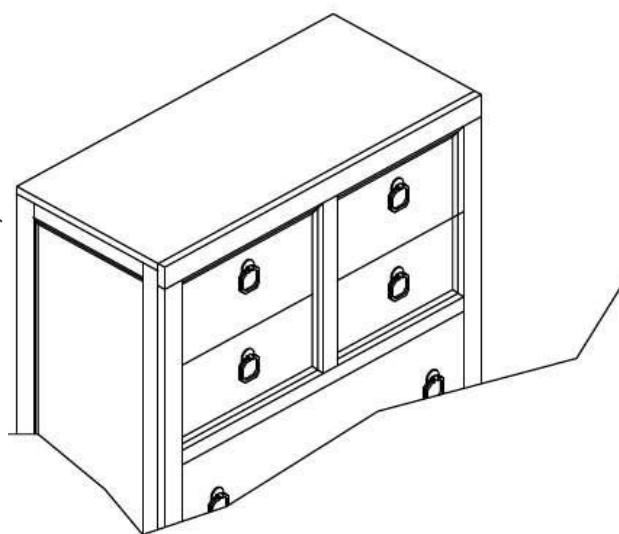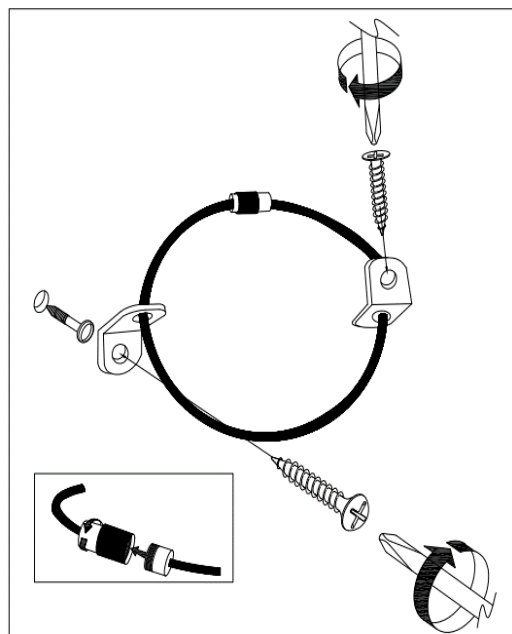

ITEM: **224853**



Inner Size of Drawer : 27.25"W X 12.75"D X 8.25"H X 0.50"T

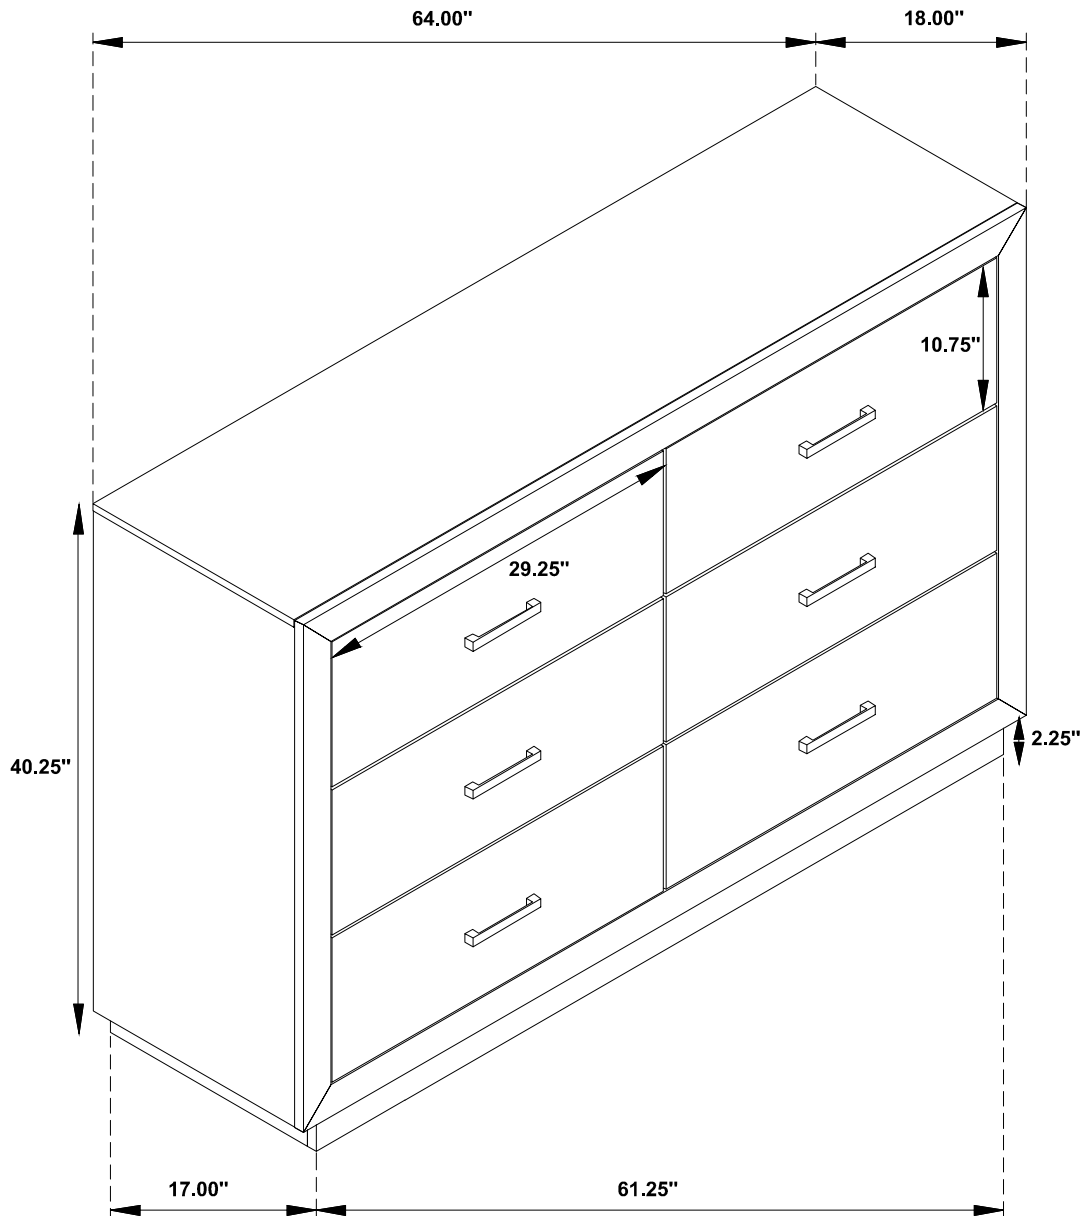

Note: Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

224854
Mirror

REVISION 0 : 08/15/2024
REVISION 1 : 03/18/2025

PAGE 1 OF 3

COASTERFURNITURE.COM

ITEM: **224854**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES


PARTS IDENTIFICATION

AN DRESSER
FROM BOX ITEM# 224853

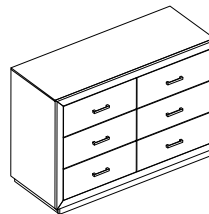


1PC

BN MIRROR

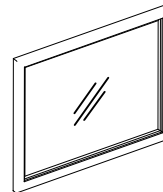

1PC


CN MIRROR SUPPORT
(PACKED WITH DRESSER)



2PCS

HARDWARE IDENTIFICATION

1 BOLT
(Ø1/4" x 32MM - BLK)



6PCS

2 LOCK WASHER
(Ø1/4" - BLK)



6PCS

3 FLAT WASHER
(Ø1/4" x 19 x 1.5MM - BLK)



6PCS

4 ALLEN WRENCH
(74 x 30 x 4MM - BLK)




1PC

ITEM: **224854**



ASSEMBLY INSTRUCTIONS




STEP 1

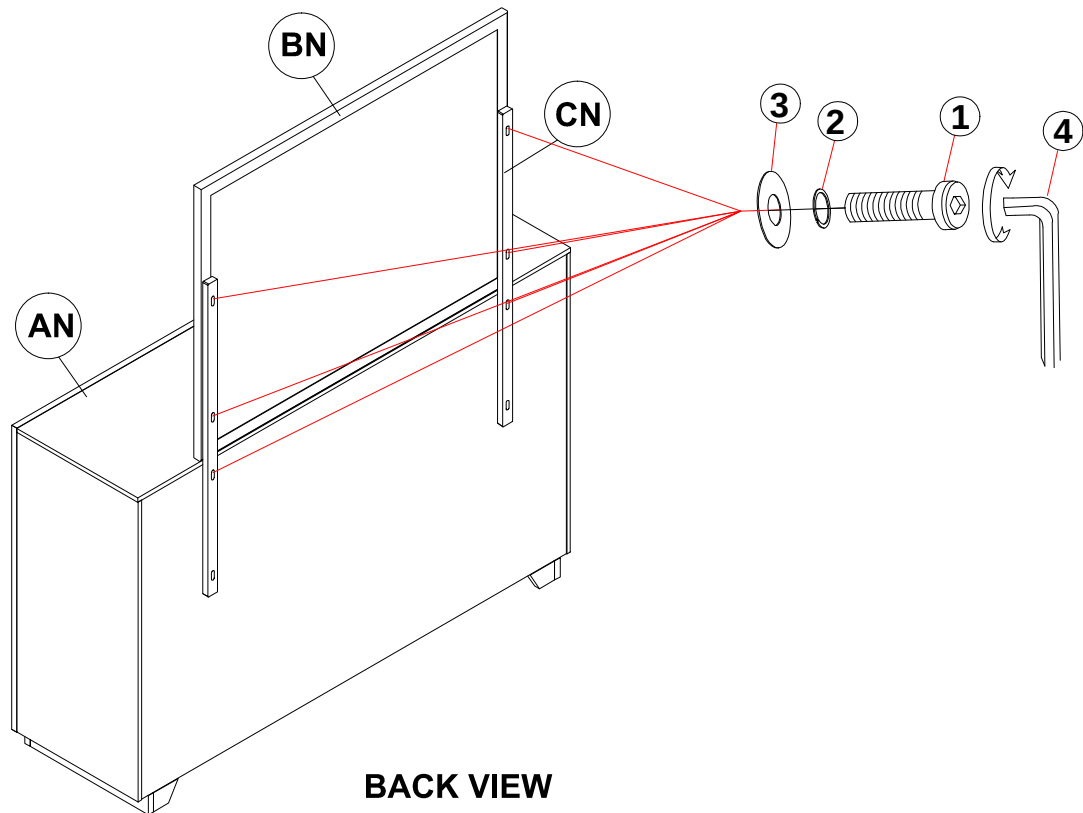

STEP 2 **COMPLETE**

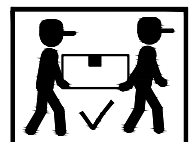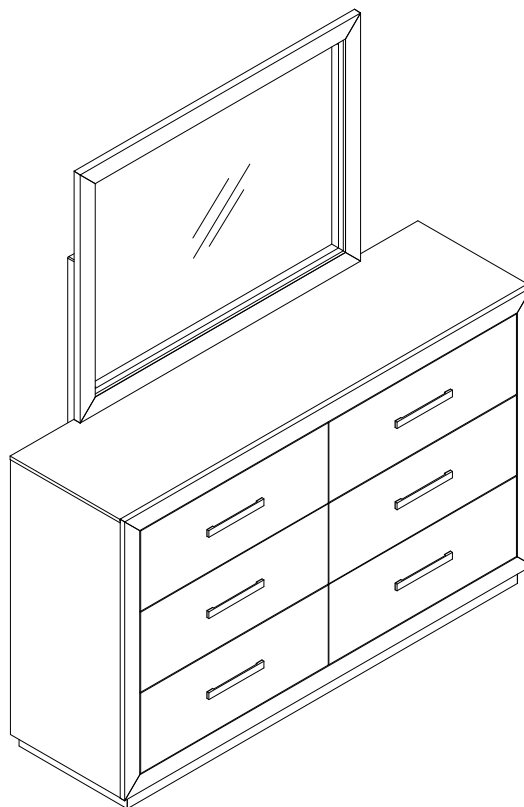

ITEM: **224854**

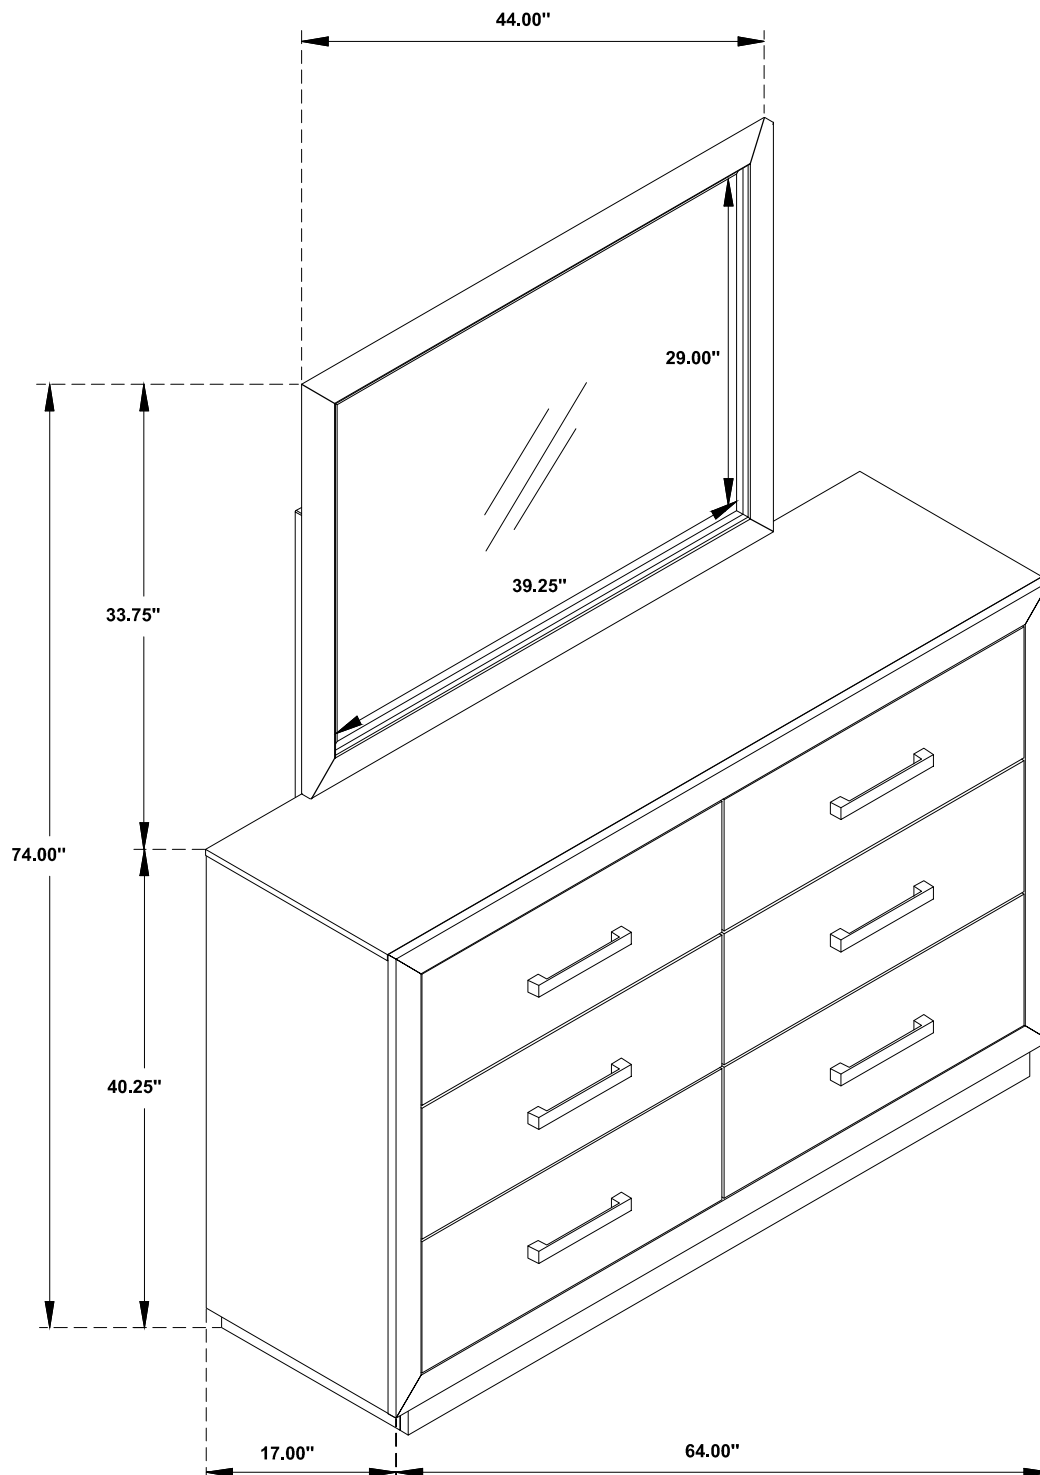

Note: Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

224855
Chest

REVISION 0 : 08/15/2024
REVISION 1 : 03/18/2025

PAGE 1 OF 2

COASTERFURNITURE.COM

ITEM: **224855**



ANTI-TIPPING INSTALLATION INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.




This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

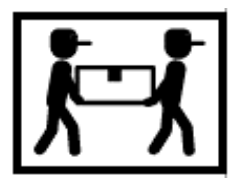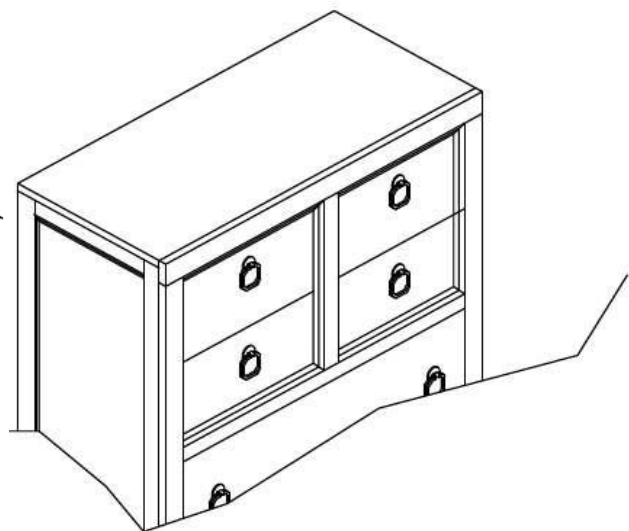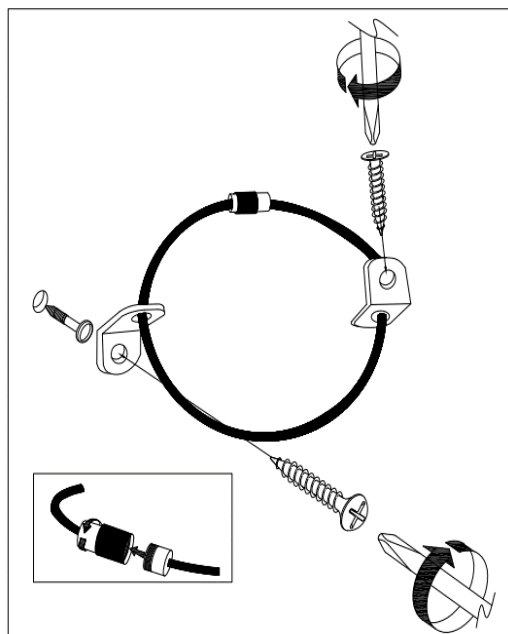

ITEM: **224855**



Inner Size of Drawer : 35.25"W X 12.75"D X 7.00"H X 0.50"T

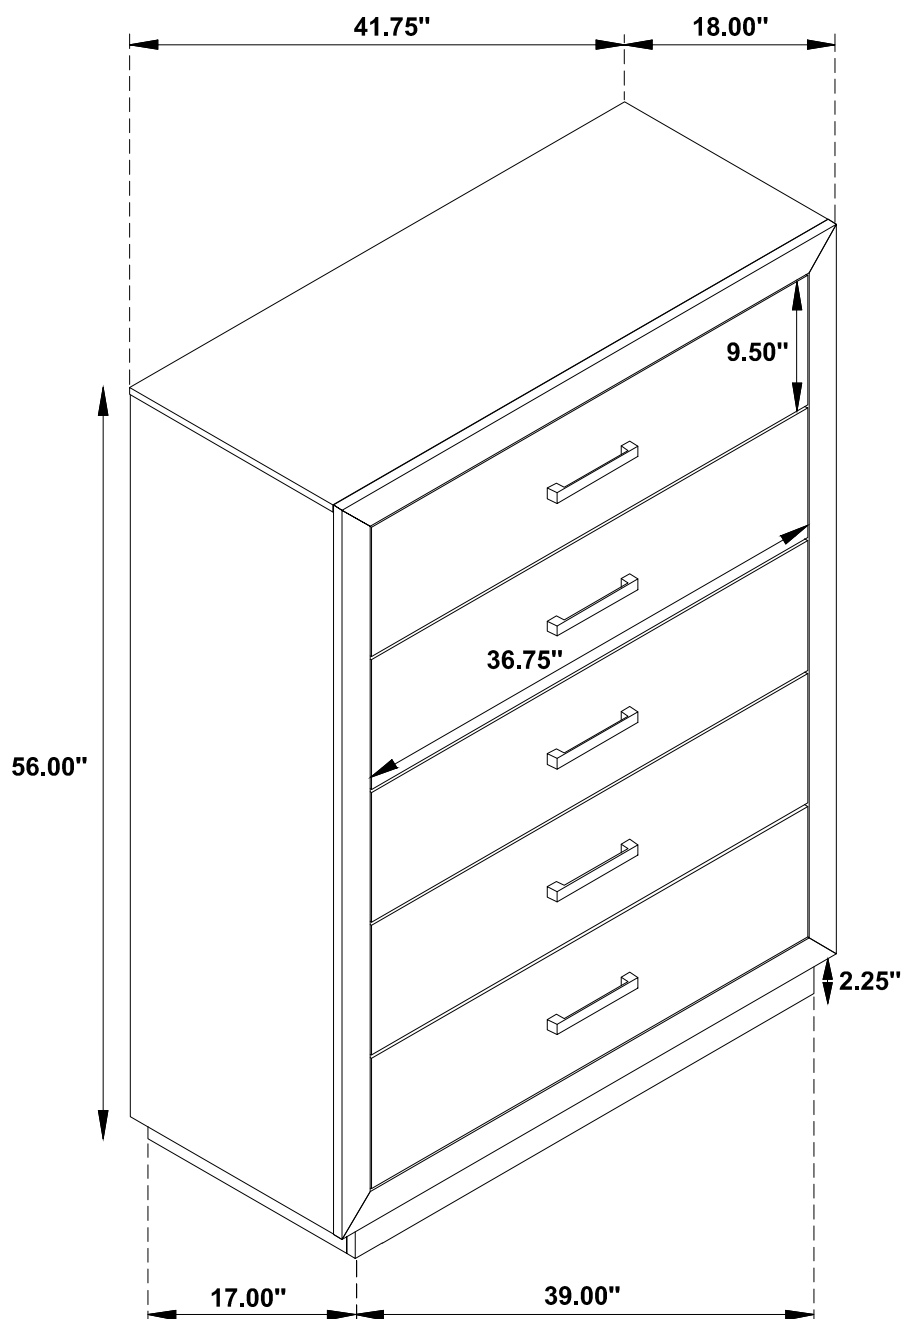

Note: Dimension tolerance $\pm 5\%$