

SEASIDE CASUAL FURNITURE

ENVIRO WOOD

(29) Adirondack End Table rev. A

Parts List:

- (1) Table Top Assembly
- (2) Legs
- (1) Leg Stretcher
- (2) Feet



Hardware:

- (4) 2-3/4" Connector Bolts
- (4) 2" Connector Bolts
- (4) 1-3/4" Phillip's Head Screws
- (8) Flat Washers
- (8) Lock Washers
- (8) Nuts

Tools Required:


- Phillip's Head Screwdriver
- 7 /16 Socket or Wrench
- 4MM Allen Wrench (Included)

Assembly Instructions

Step One: Set Up

READ ENTIRE INSTRUCTIONS BEFORE BEGINNING! Carefully remove contents from box. Make sure that all parts and hardware are included.

Step Two: Leg & Feet Assembly

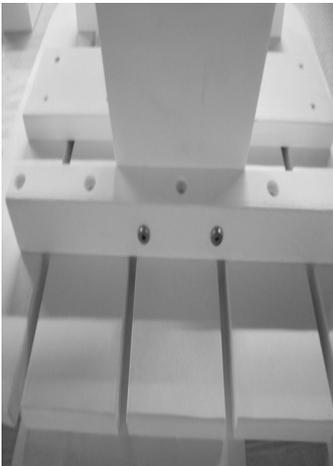

Place Leg in center of Table Top Leg Brace and align pre-drilled holes. Leg will be at an angle. Install (2) 2-3/4" connector bolts. Finger tighten flat & lock washers and nuts (Left Picture). Do not tighten at this time. Place Feet upside down and align pre-drilled holes onto the top of the leg. Feet should be on the outside of the leg. Install (2) 2-3/4" connector bolts. Finger tighten flat & lock washers and nuts (Right Picture). Do not tighten at this time. Repeat process on other side.



Step Three: Leg Stretcher Assembly

Place Leg Stretcher in between both Legs, while aligning angles and pre-drilled holes on the Leg Stretcher with the angle and pre-drilled holes of the legs. Attach using (2) 1-3/4" Phillip's Head Screws on both sides (Right Picture).



Step Four: Tightening of Hardware

Tighten all connections. **Do not over tighten!!! Over tightening of hardware can cause damage to the item.**