



ITEM NO: I07-415-1	King Panel HB
I07-404-1	King Sleigh HB
I07-406-1	King Rails
I07-410-1	Cal King Rails
I07-407-1	King Low Profile FB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.


WARNING! Before using this product, please read, understand, and follow these instructions. Failure to follow each of these assembly instructions precisely may result in damage to the product and / or injury to the consumer.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

OPTION 1: King/Cal King LP Panel Bed

I07-415-1

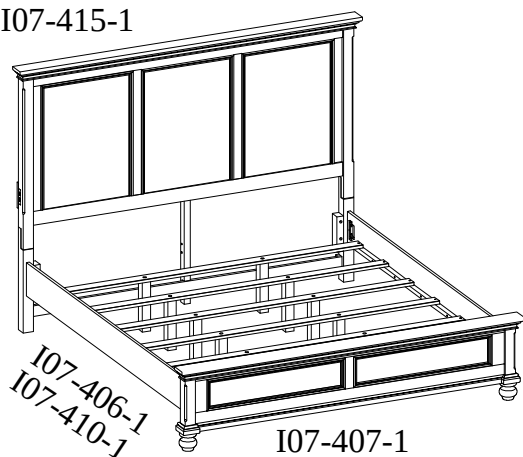


TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

OPTION 2: King/Cal king LP Sleigh Bed

I07-404-1

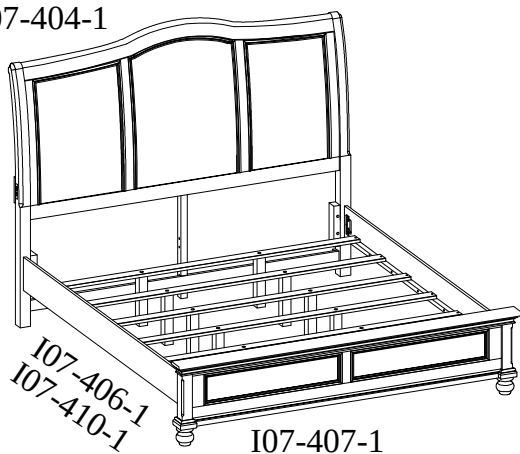

FOR INDOOR USE ONLY



ITEM NO: I07-415-1	King Panel HB
I07-404-1	King Sleigh HB
I07-406-1	King Rails
I07-410-1	Cal King Rails
I07-407-1	King Low Profile FB

HARDWARE LIST: I07-415-1

No.	Description	Sketch	Quantity
A	Bolt Ø5/16"*2"		6 PCS
B	Bolt Ø5/16"*1-9/16"		3 PCS
C	Bolt Ø5/16"*1-3/8"		4 PCS
D	Lock Washer Ø5/16"		13 PCS
E	Flat Washer Ø5/16" *3/4"		13 PCS
F	Allen Wrench 5mm		1 PC




HARDWARE LIST: I07-406-1/410-1

No.	Description	Sketch	Quantity
G	Wood Screw M4*1-3/16"		12 PCS
H	Hanger Bolt Ø5/16"*3-1/16"		8 PCS
I	Lock Washer Ø5/16"		8 PCS
J	Flat washer Ø5/16"*5/8"		8 PCS
K	Hex Nut Ø5/16"		8 PCS
L	Hex Wrench 90*25*2mm		1 PC
M	Wood Cap (Only for 410)		8 PCS

HARDWARE LIST: I07-404-1

No.	Description	Sketch	Quantity
N	Wood Dowel Ø3/8"*1-9/16"		8 PCS
O	Bolt Ø5/16"*1-9/16"		9 PCS
P	Bolt Ø5/16"*1-3/8"		4 PCS
Q	Lock Washer Ø5/16"		13 PCS
R	Flat Washer Ø5/16" *3/4"		13 PCS
S	Allen Wrench 5mm		1 PC


COMPONENTS LIST: I07-415-1

No.	Description	Sketch	Quantity
1	Headboard (HB)		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg		1 PC

COMPONENTS LIST: I07-406-1

No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		6 PCS


COMPONENTS LIST: I07-410-1

No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		6 PCS
3	Center rail (Long)		1 PC

COMPONENTS LIST: I07-407-1

No.	Description	Sketch	Quantity
1	Footboard (FB)		1 PC
2	Support leg (for slats)		12 PCS
3	Bun foot		2 PCS

COMPONENTS LIST: I07-404-1

No.	Description	Sketch	Quantity
1	Headboard (HB)		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg		1 PC



FOR INDOOR USE ONLY



ITEM NO: I07-415-1	King Panel HB
I07-404-1	King Sleigh HB
I07-406-1	King Rails
I07-410-1	Cal King Rails
I07-407-1	King Low Profile FB



OPTION 1: King/Cal King LP Panel Bed

STEP 1: Put the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 6 bolts(A), lock washers(D) and flat washers(E).

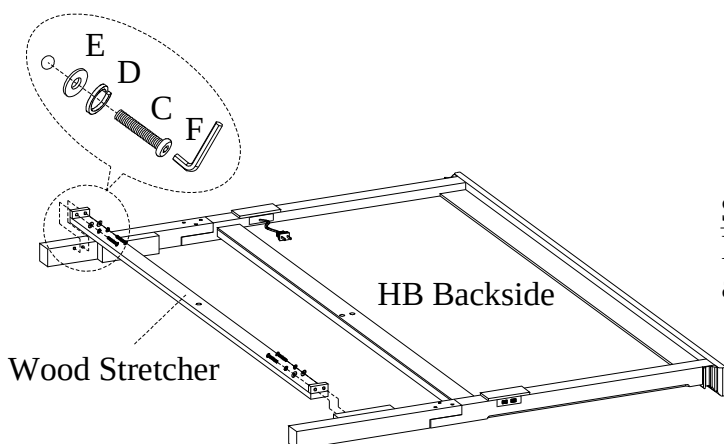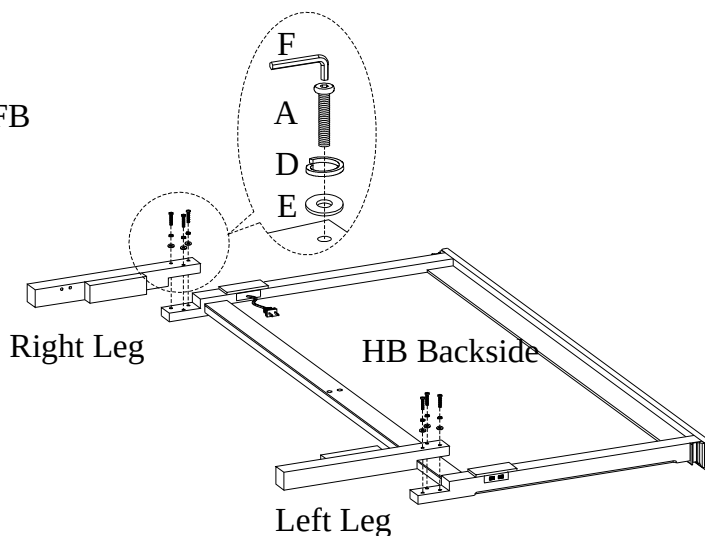


STEP 2: Attach the wood stretcher to the legs by using 4 bolts(C), lock washers(D) and flat washers(E).

STEP 3: Attach the center support leg to headboard and wood stretcher by using 3 bolts(B), lock washers(D) and flat washers(E).

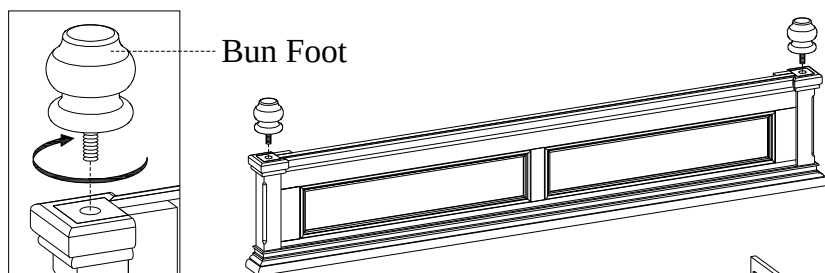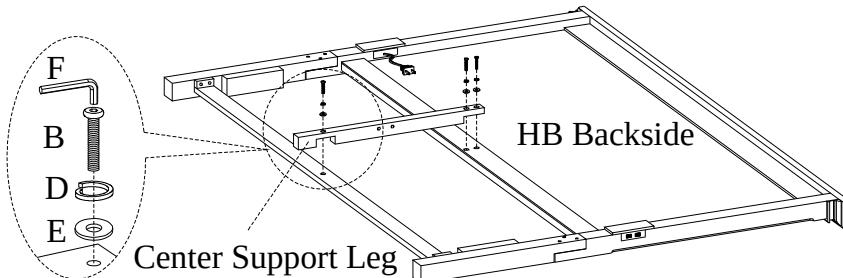


STEP 4: Put footboard upside down on a padded, clean surface. Attach bun feet to footboard. Turn footboard right side up.

STEP 5: The side rails may be used on either side. Arrange the side rails so the slat bearers are in LOWER POSITION prior to attachment in STEP 6.


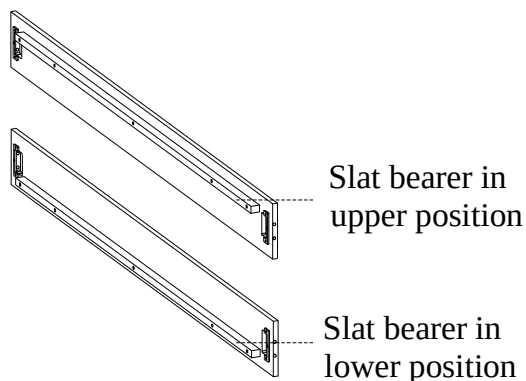


ITEM NO: I07-415-1	King Panel HB
I07-404-1	King Sleigh HB
I07-406-1	King Rails
I07-410-1	Cal King Rails
I07-407-1	King Low Profile FB

STEP 6: Screw the bolts(H) into HB & FB. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using flat washer(J), lock washers(I) and nuts (K). Then use a hex wrench(L) to tighten all the nuts.

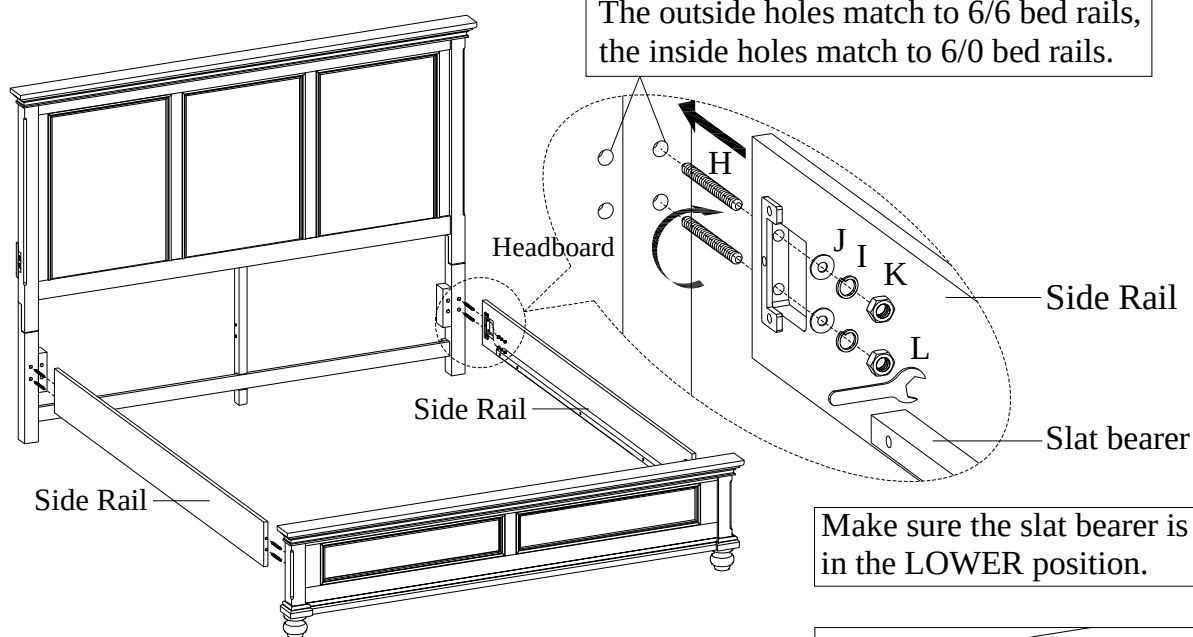


STEP 7: Attach the support legs with leveler to the slats. Adjust the levelers on bottom of support legs when necessary.

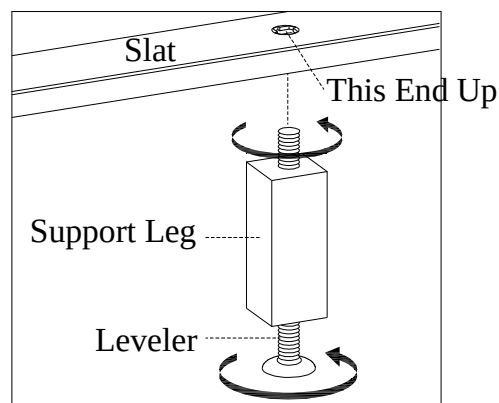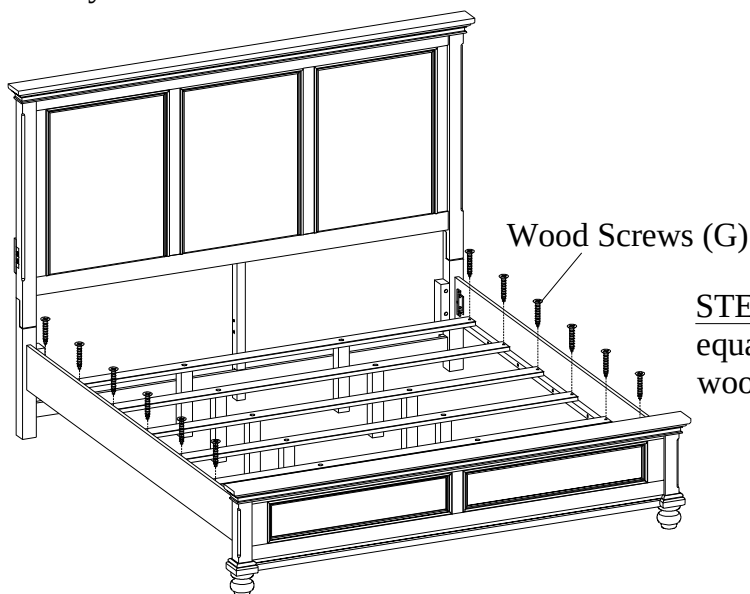

STEP 8: Arrange the slats on the slat bearer equally and attach to the slat bearer with wood screws(G).


STEP 9: For Cal King bed, insert wood caps(M) into the holes on headboard and footboard. For regular King bed, skip this step.

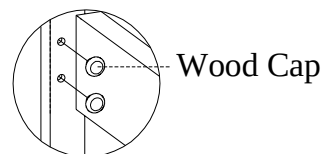


ITEM NO: I07-415-1	King Panel HB
I07-404-1	King Sleigh HB
I07-406-1	King Rails
I07-410-1	Cal King Rails
I07-407-1	King Low Profile FB

OPTION 2: King/Cal king LP Sleigh Bed


STEP 1: Put the headboard face down on a soft surface. Insert 8 wood dowels (N) into headboard, Then attach the left leg and right leg to headboard by using 6 bolts(O), lock washers(Q) and flat washers(R).

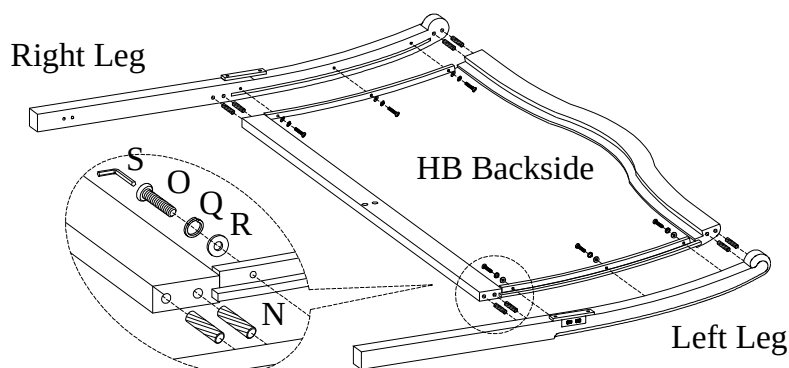

STEP 2: Attach the wood stretcher to the legs by using 4 bolts(P), lock washers(Q) and flat washers(R).

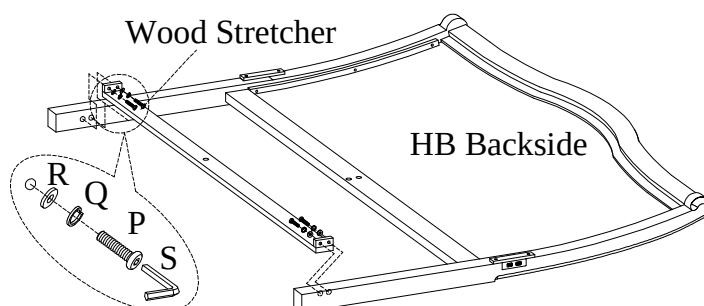

STEP 3: Attach the center support leg to headboard and wood stretcher by using 3 bolts(O), lock washers(Q) and flat washers(R). Completely tighten all bolts.


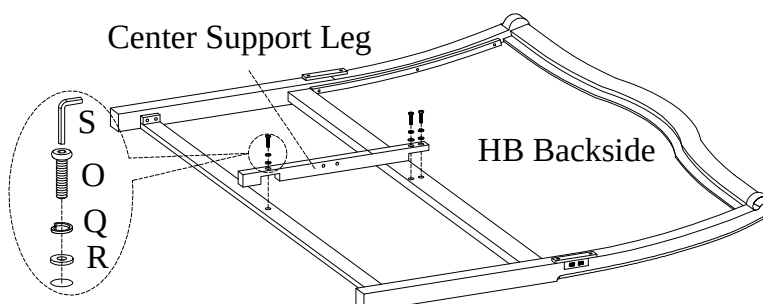


STEP 4 to STEP 19 are same as OPTION 1



ITEM NO: I07-415-1	King Panel HB
I07-404-1	King Sleigh HB
I07-406-1	King Rails
I07-410-1	Cal King Rails
I07-407-1	King Low Profile FB

FUNCTIONALITY INSTRUCTION

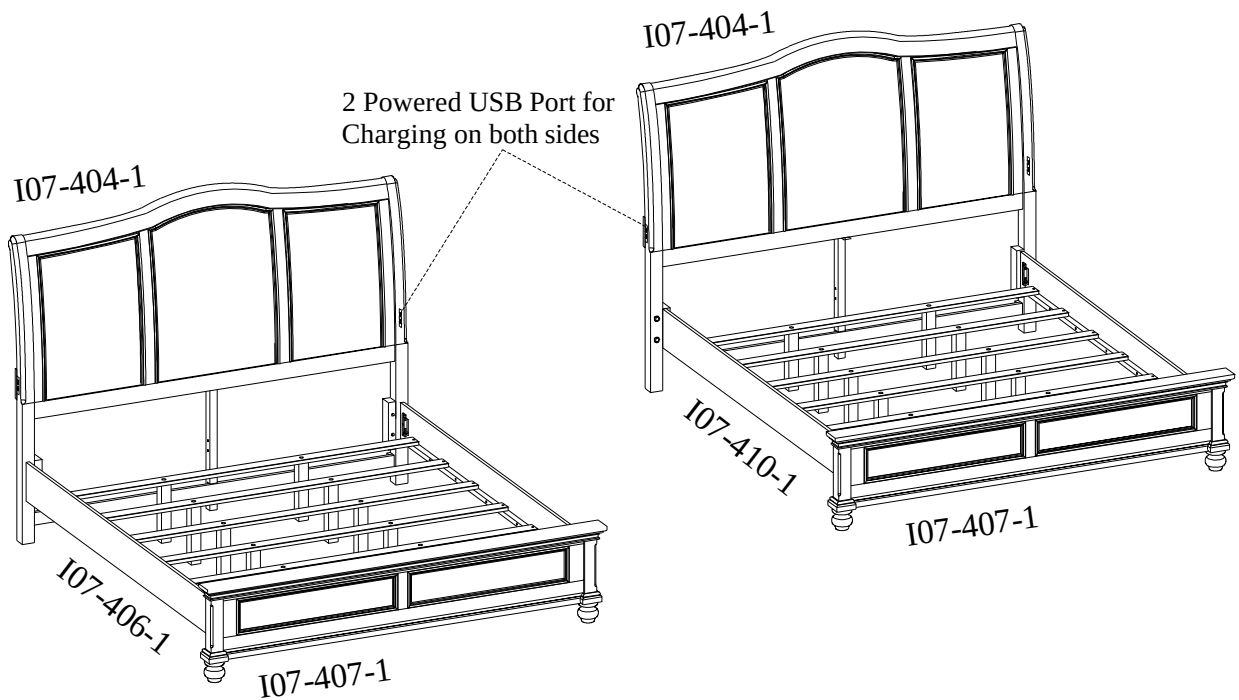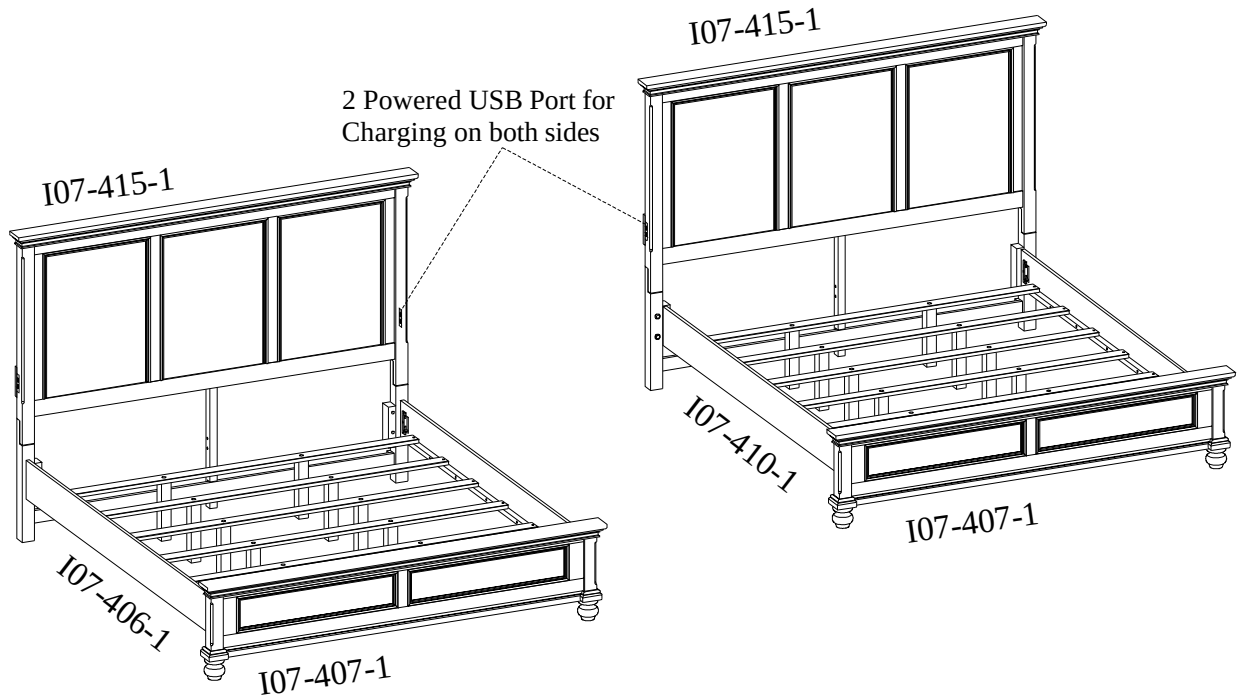



ITEM NO: I07-415-1 King Panel HB
I07-404-1 King Sleigh HB
I07-406-1 King Rails
I07-410-1 Cal King Rails
I07-407D-1 King Storage FB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.


WARNING! Before using this product, please read, understand, and follow these instructions. Failure to follow each of these assembly instructions precisely may result in damage to the product and / or injury to the consumer.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

OPTION 1: King/Cal King Storage Panel Bed

I07-415-1

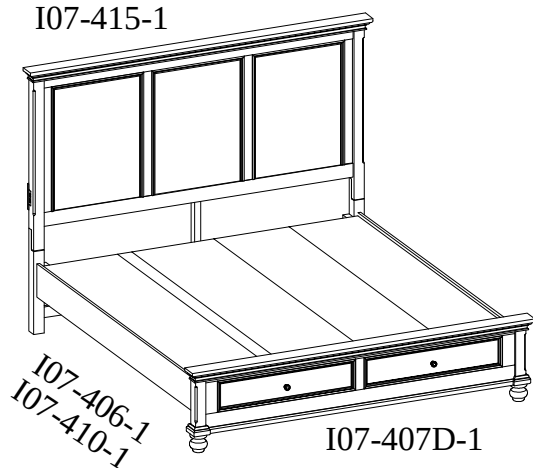

TOOLS REQUIRED (NOT PROVIDED)


PHILLIPS SCREWDRIVER

UTILITY KNIFE (FOR CAL KING)

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

OPTION 2: King/Cal king Storage Sleigh Bed

I07-404-1

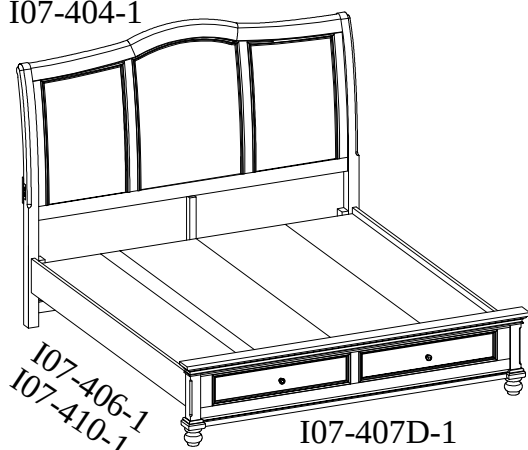

FOR INDOOR USE ONLY



ITEM NO: I07-415-1 King Panel HB
I07-404-1 King Sleigh HB
I07-406-1 King Rails
I07-410-1 Cal King Rails
I07-407D-1 King Storage FB

HARDWARE LIST: I07-415-1

No.	Description	Sketch	Quantity
A	Bolt Ø5/16"*2"		6 PCS
B	Bolt Ø5/16"*1-9/16"		3 PCS
C	Bolt Ø5/16"*1-3/8"		4 PCS
D	Lock Washer Ø5/16"		13 PCS
E	Flat Washer Ø5/16"*3/4"		13 PCS
F	Allen Wrench 5mm		1 PC

HARDWARE LIST: I07-406-1/410-1

No.	Description	Sketch	Quantity
G	Wood Screw M4*1-3/16"		12 PCS
H	Hanger Bolt Ø5/16"*3-1/16"		8 PCS
I	Lock Washer Ø5/16"		8 PCS
J	Flat washer 5/16"*5/8"		8 PCS
K	Hex Nut Ø5/16"		8 PCS
L	Hex Wrench 90*25*2mm		1 PC
M	Wood Cap (Only for 410)		8 PCS

HARDWARE LIST: I07-407D-1

No.	Description	Sketch	Quantity
N	Wood Screw M4*1		6 PCS
O	Bolt Ø5/16"*1-3/16"		8 PCS
P	Lock Washer Ø5/16"		8 PCS
Q	Flat washer Ø5/16"*3/4"		8 PCS
R	Allen Wrench 5mm		1 PC

HARDWARE LIST: I07-404-1

No.	Description	Sketch	Quantity
S	Wood Dowel Ø3/8"*1-9/16"		8 PCS
T	Bolt Ø5/16"*1-9/16"		9 PCS
U	Bolt Ø5/16"*1-3/8"		4 PCS
V	Lock Washer Ø5/16"		13 PCS
W	Flat Washer Ø5/16" *3/4"		13 PCS
X	Allen Wrench 5mm		1 PC

COMPONENTS LIST: I07-415-1

No.	Description	Sketch	Quantity
1	Headboard (HB)		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg		1 PC

COMPONENTS LIST: I07-406-1

No.	Description	Sketch	Quantity
1	Bed rails		2 PC
2	Slats		6 PC

COMPONENTS LIST: I07-410-1

No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		6 PCS
3	Center rail (Long)		1 PC

COMPONENTS LIST: I07-407D-1

No.	Description	Sketch	Quantity
1	Footboard (FB)		1 PC
2	Support Leg (for center rail)		2 PCS
3	Support leg (for pedestal)		3 PCS
4	Decking		4 PCS
5	Center rail (Short)		1 PCS
6	Filler		1 PCS
7	Bun foot		2 PCS

COMPONENTS LIST: I07-404-1



No.	Description	Sketch	Quantity
1	Headboard (HB)		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg		1 PC

FOR INDOOR USE ONLY

ITEM NO: I07-415-1 King Panel HB
 I07-404-1 King Sleigh HB
 I07-406-1 King Rails
 I07-410-1 Cal King Rails
 I07-407D-1 King Storage FB


OPTION 1: King/Cal King Storage Panel Bed

STEP 1: Put the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 6 bolts(A), lock washers(D) and flat washers(E).

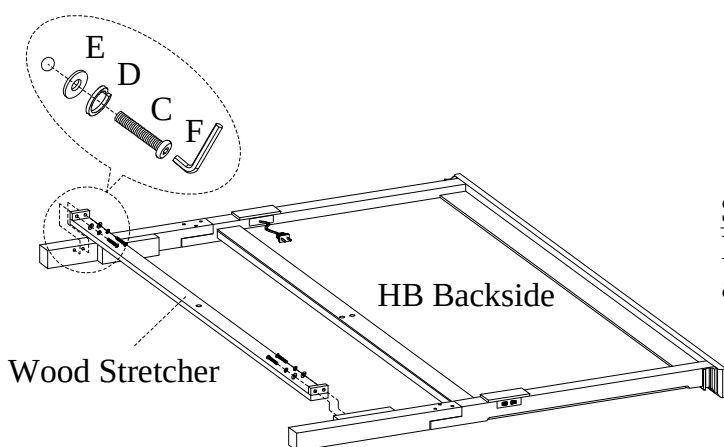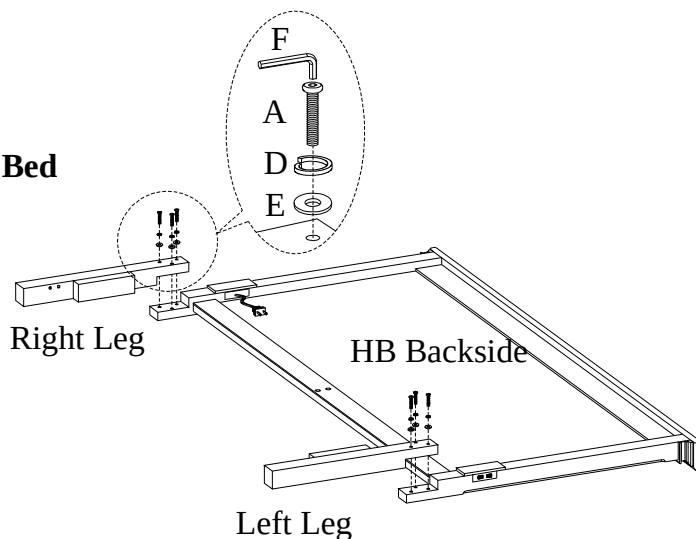


STEP 2: Attach the wood stretcher to the legs by using 4 bolts(C), lock washers(D) and flat washers(E).



STEP 3: Attach the center support leg to headboard and wood stretcher by using 3 bolts(B), lock washers(D) and flat washers(E). Completely tighten all bolts.

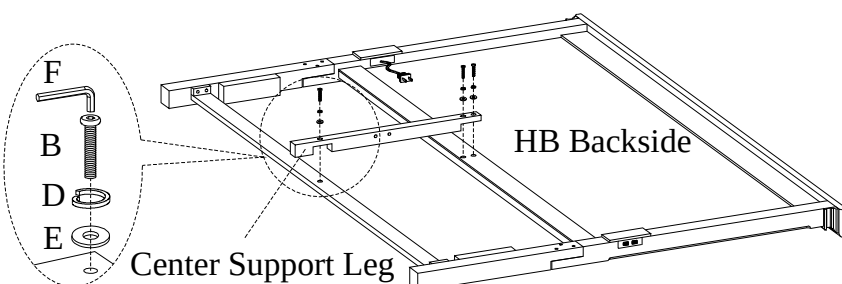

STEP 4: Put footboard upside down on a padded, clean surface. Attach support legs (for pedestal) and bun feet to footboard. Turn footboard right side up.

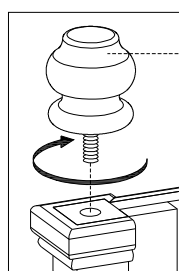

Bun Foot

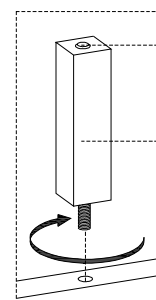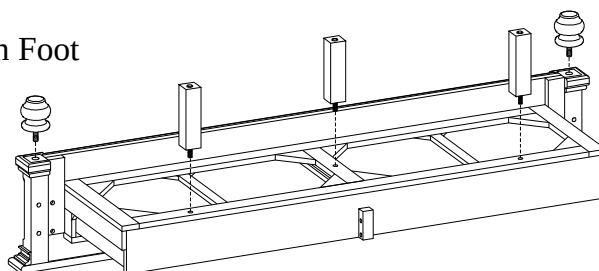


Leveler

Support Leg




ITEM NO: I07-415-1	King Panel HB
I07-404-1	King Sleigh HB
I07-406-1	King Rails
I07-410-1	Cal King Rails
I07-407D-1	King Storage FB


STEP 5: The side rails may be used on either side. Arrange the side rails so the slat bearers are in **UPPER POSITION** prior to attachment in STEP 6.

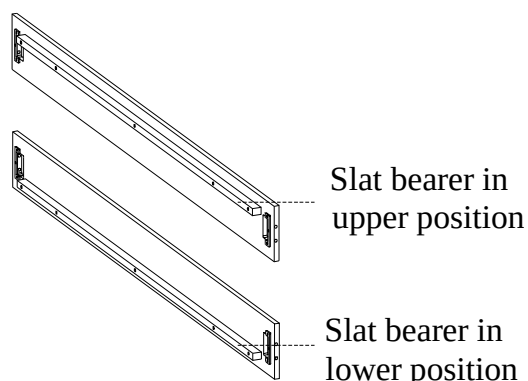

STEP 6: Screw the bolts(H) into HB & FB. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using flat washer(J), lock washers(I) and nuts (K). Then use a hex wrench(L) to tighten all the nuts.

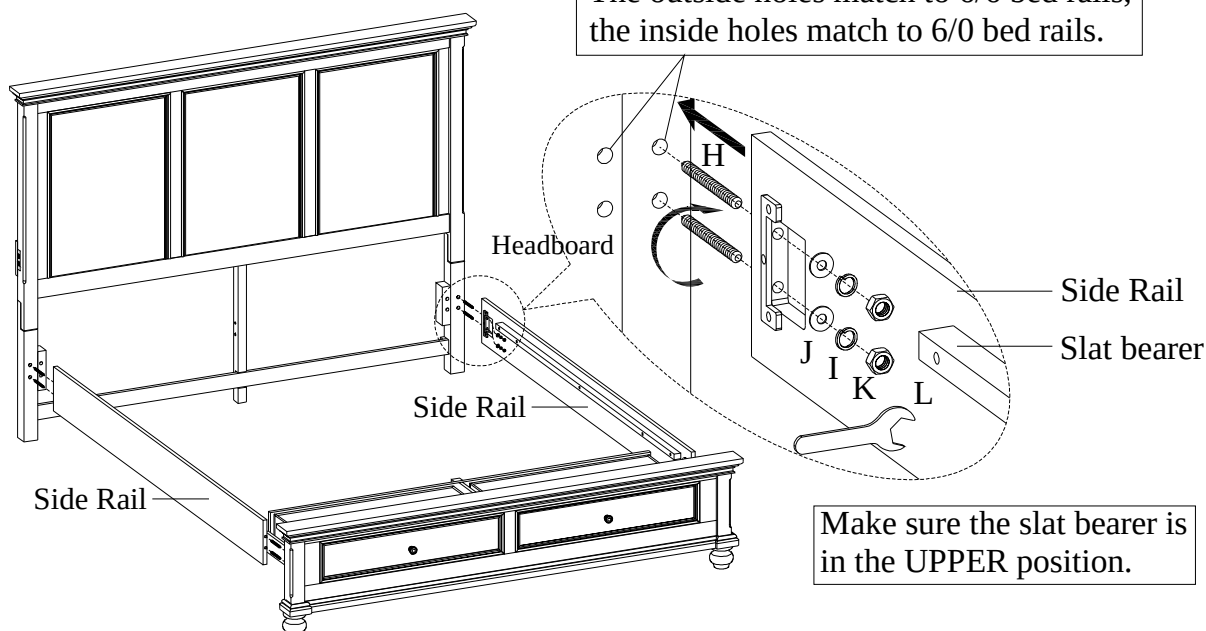



STEP 7: Attach center rail to the footboard and center support leg of headboard using 4 bolts(O), lock washers(P) and flat washers(Q).

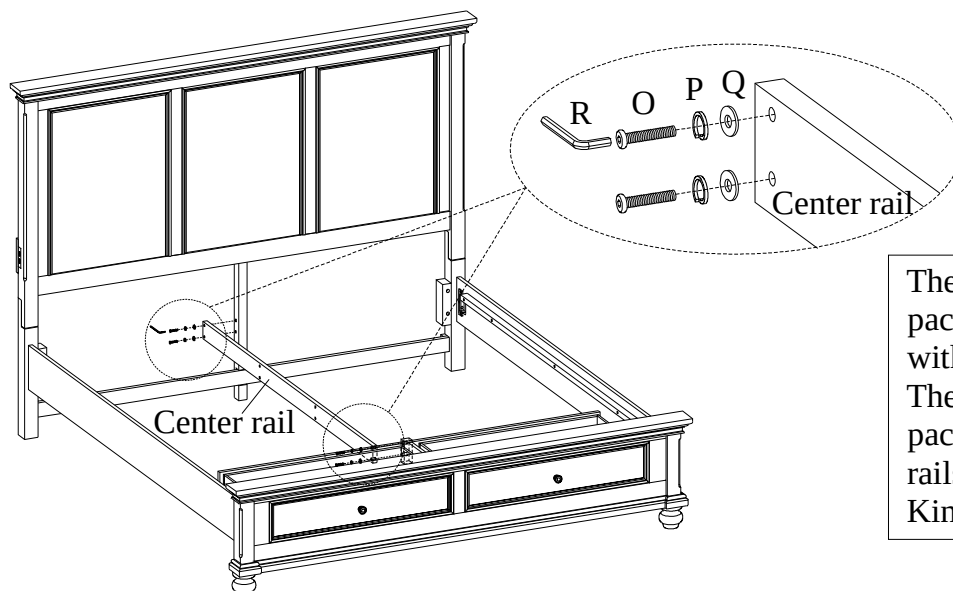

The short center rail that is packed in storage FB works with -406 King rails(6/6); The Long center rail that is packed in Cal King side rails works with -410 Cal King rails(6/0).


ITEM NO: I07-415-1 King Panel HB
 I07-404-1 King Sleigh HB
 I07-406-1 King Rails
 I07-410-1 Cal King Rails
 I07-407D-1 King Storage FB

STEP 8: Attach 2 support legs (for center rail) to the center rail using 4 bolts(O), lock washers(P) and flat washers(Q). Use the Allen Wrench (R) to tighten all of the bolts.

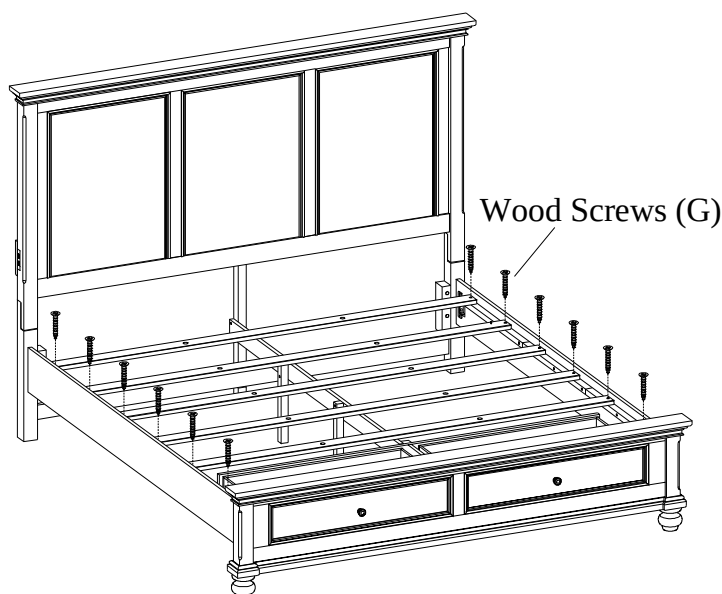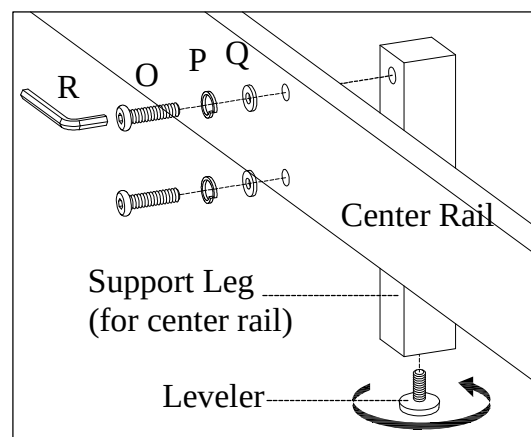


STEP 9: Arrange slats on the slat bearers and then lay the decking on top of the slats. Make sure the top and bottom slats are situated underneath the pre-drilled holes as shown below in STEP 11. Remove the decking and attach slats to the slat bearers with wood screws(G).


STEP 10: For Cal King bed, use a utility knife to cut off the small piece at the notch and discard. For regular King bed, skip this step.

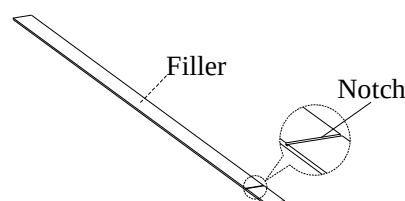

STEP 11: Put the decking over the slats, secure decking to the slats with wood screws(N) through the pre-drilled holes in the decking as shown below.

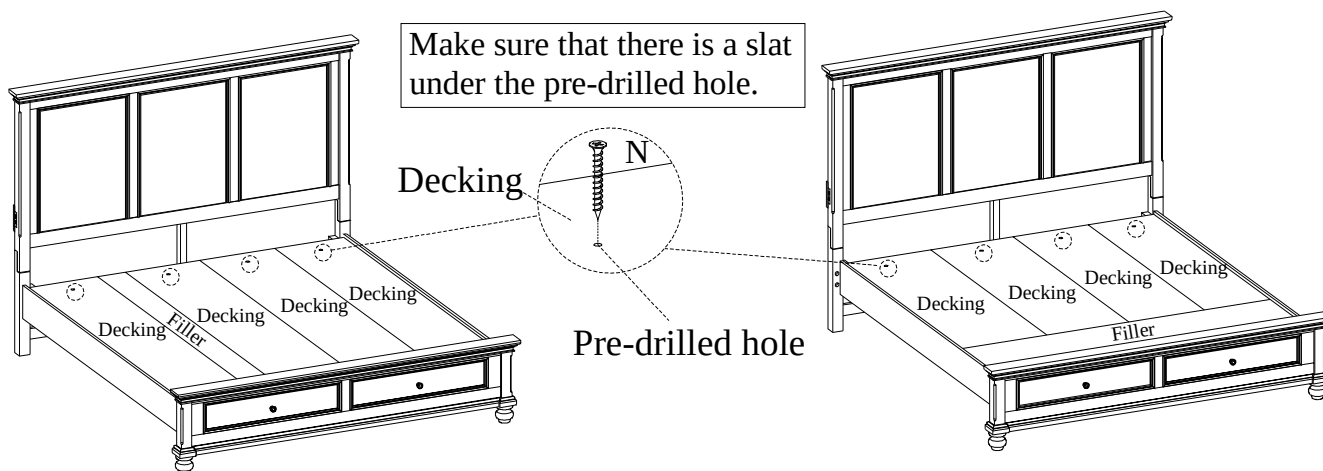


STEP 12: For Cal King bed, insert wood caps(M) into the holes on headboard and footboard. For regular King bed, skip this step.

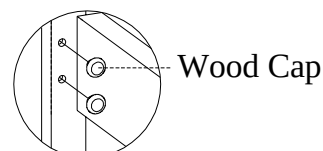


ITEM NO: I07-415-1	King Panel HB
I07-404-1	King Sleigh HB
I07-406-1	King Rails
I07-410-1	Cal King Rails
I07-407D-1	King Storage FB

OPTION 2: King/Cal king Storage Sleigh Bed


STEP 1: Put the headboard face down on a soft surface. Insert 8 wood dowels (S) into headboard, Then attach the left leg and right leg to headboard by using 6 bolts(T), lock washers(V) and flat washers(W).

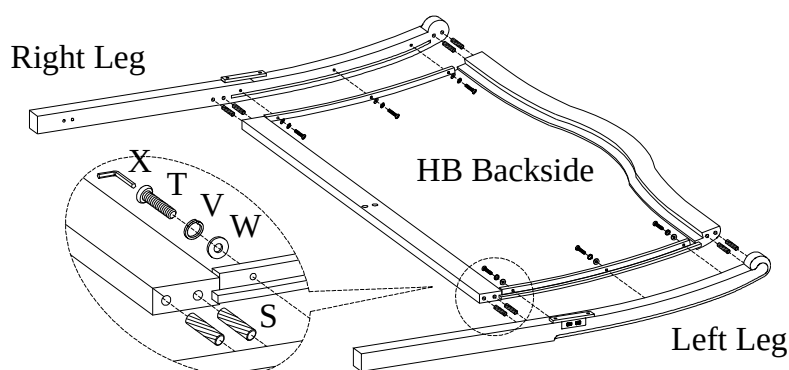

STEP 2: Attach the wood stretcher to the legs by using 4 bolts(U), lock washers(V) and flat washers(W).

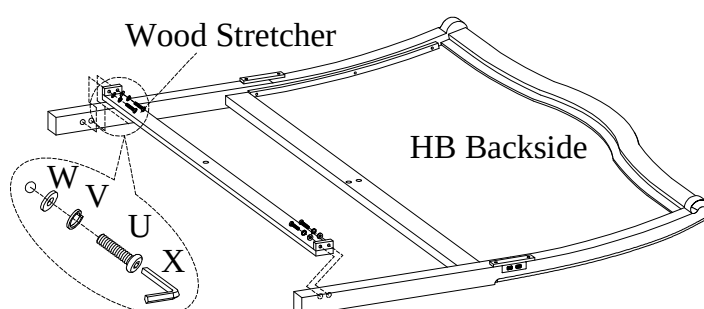

STEP 3: Attach the center support leg to headboard and wood stretcher by using 3 bolts(T), lock washers(V) and flat washers(W). Completely tighten all bolts.

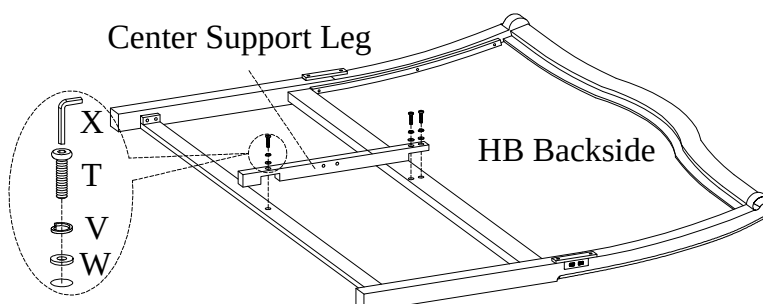

STEP 4 to STEP 12 are same as OPTION 1



ITEM NO: I07-415-1 King Panel HB
I07-404-1 King Sleigh HB
I07-406-1 King Rails
I07-410-1 Cal King Rails
I07-407D-1 King Storage FB

FUNCTIONALITY INSTRUCTION

