
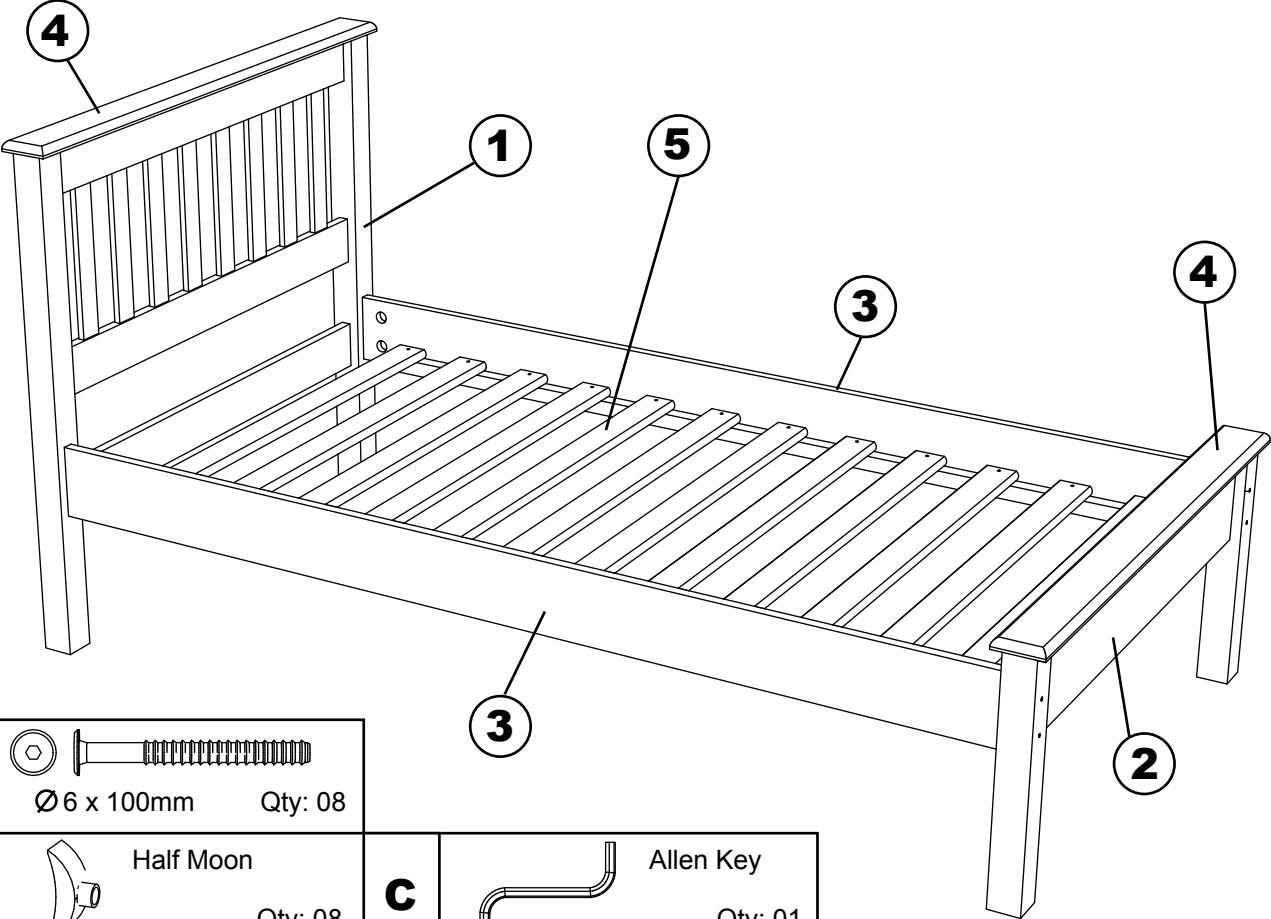



ASSEMBLY INSTRUCTIONS - TWIN CONTEMPO BED





A		
	Ø 6 x 100mm	Qty: 08

B		Half Moon
		Qty: 08


C		Allen Key
		Qty: 01


D		Spacer
	Ø10 x 40mm	Qty: 08

E		
	Ø 4 x 30mm	Qty: 30

F		Spacer
		Qty: 02

Step: 1

D		Spacer
	Ø10 x 40mm	Qty: 04

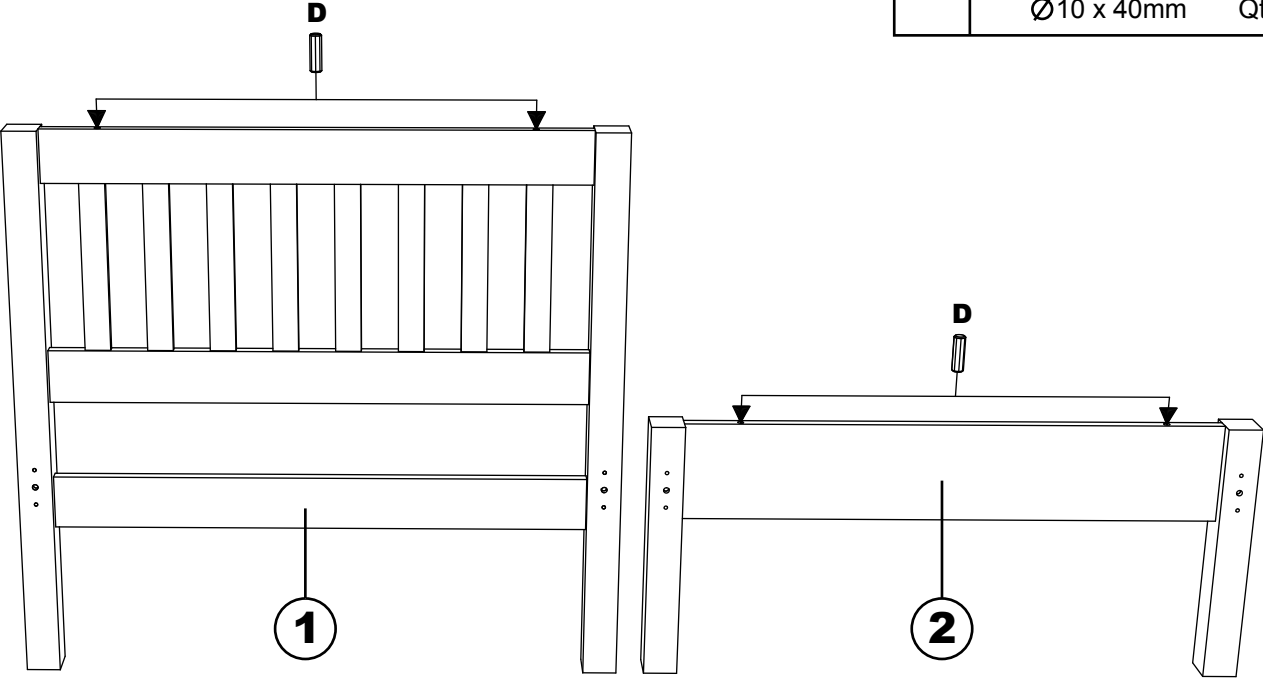



Step: 2

E




Ø 4 x 30mm

Qty: 06

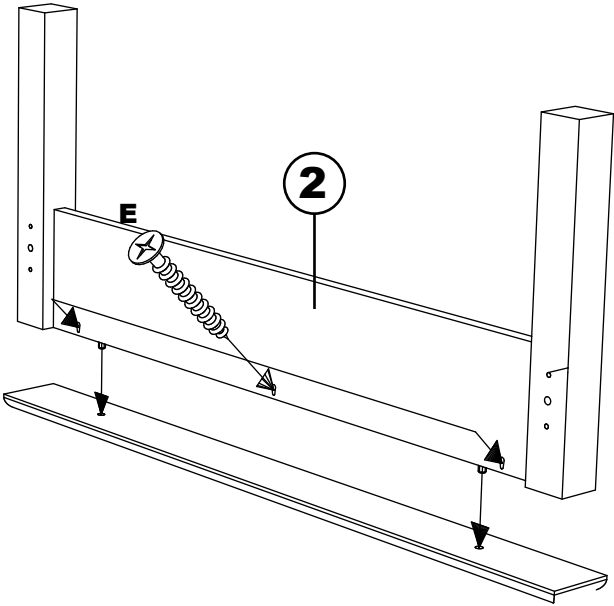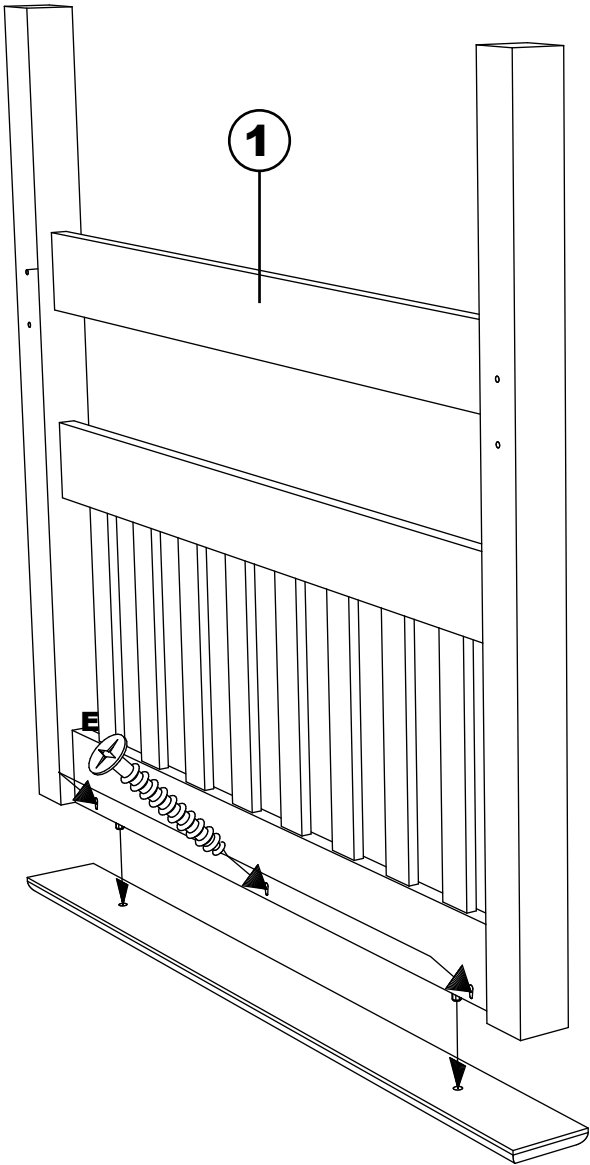


Step: 3

D



Ø 10 x 40mm

Qty: 04

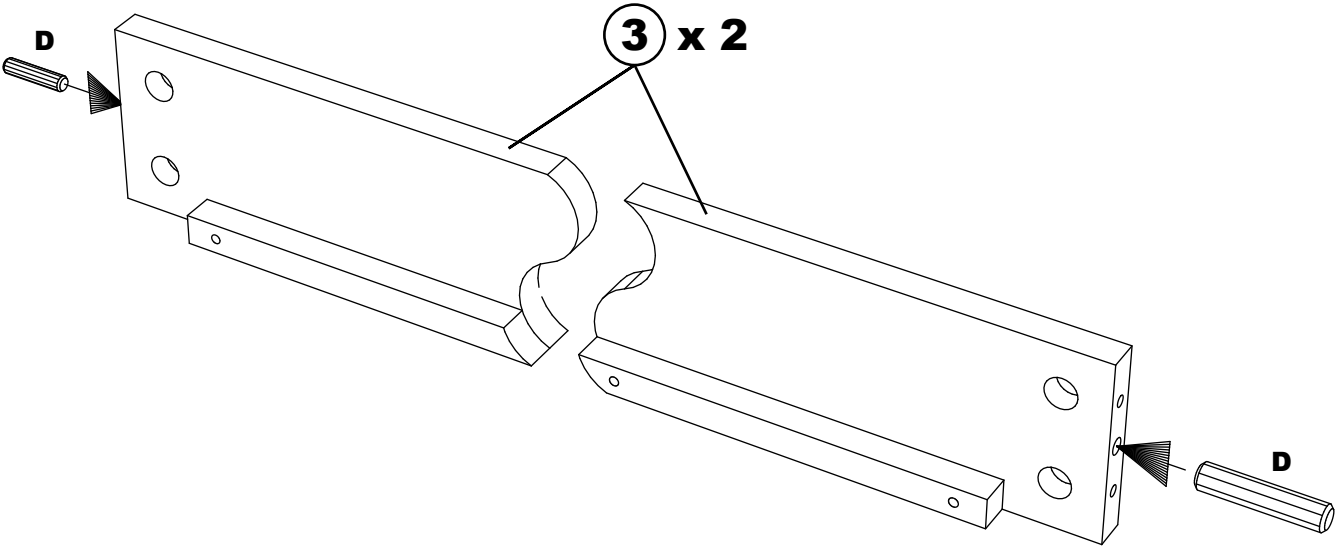

Step: 4

Diagram illustrating the assembly of the headboard (1) to the bed frame (3) using screws (C-A).

The diagram shows the headboard (1) being attached to the bed frame (3) using screws (C-A). The headboard (1) is shown with a slatted design. The bed frame (3) is shown with a slatted design. The screws (C-A) are used to secure the headboard (1) to the bed frame (3).

An inset diagram shows a close-up of the headboard (1 & 2) being attached to the frame (3) using screws (A) and (B). The inset also shows the frame (3) being secured with screws (3x2).

4

1

③

4

2


A=

A-

&


3

A

**B**

Half Moon

C



Allen Key

C-

C-A

A

B

Step: 5

Diagram illustrating the assembly of the headboard. The headboard (4) is shown being attached to the bed frame (1) using screws (E). The bottom part of the diagram shows a close-up of the headboard (3) being secured to the frame (5) using screws (F) and spacers.

4

5



3

4

2

3

E

**F**

Qty: 02

3

F**F****F**

5